



BS009 5 Tiers Installation Instruction

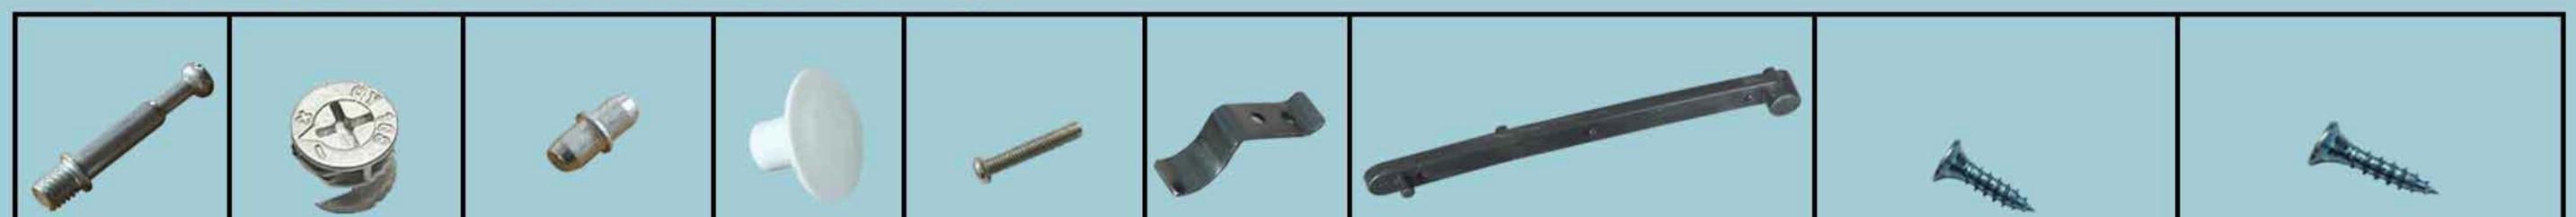



Eccentric screw	Eccentric Bolt	metal pin	handle	handle screw	hook up		supporting item		ping screw	long self-tapping screw	
A*52	B*52	C*10	D*5	E*5	F*10		G*10	H*20		I *30	
Kind tips: When installing, tighten the screws seven times,											
Eccentric installation principle : Wait until everything is done before tightening! air hole, J*5 ^{3.5CM self-tapping screw} , K										(*4	
Stew the ecentric screw onto the board Find the corresponding board to insert											
		2.2.2.4.4.4.4.4.4.4.4.4.4.4.4.4.4.4.4.4							*		

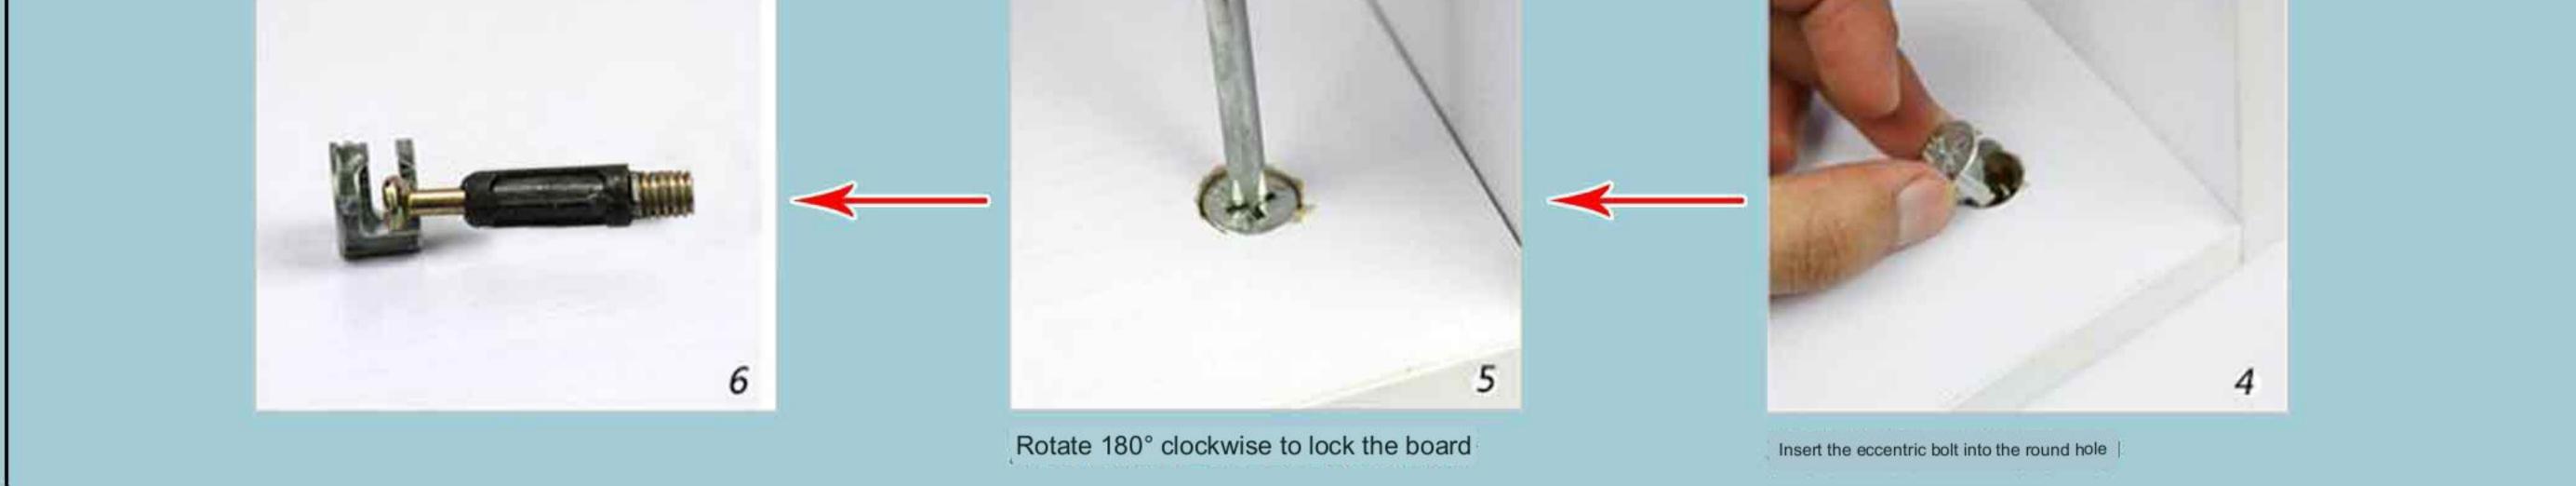


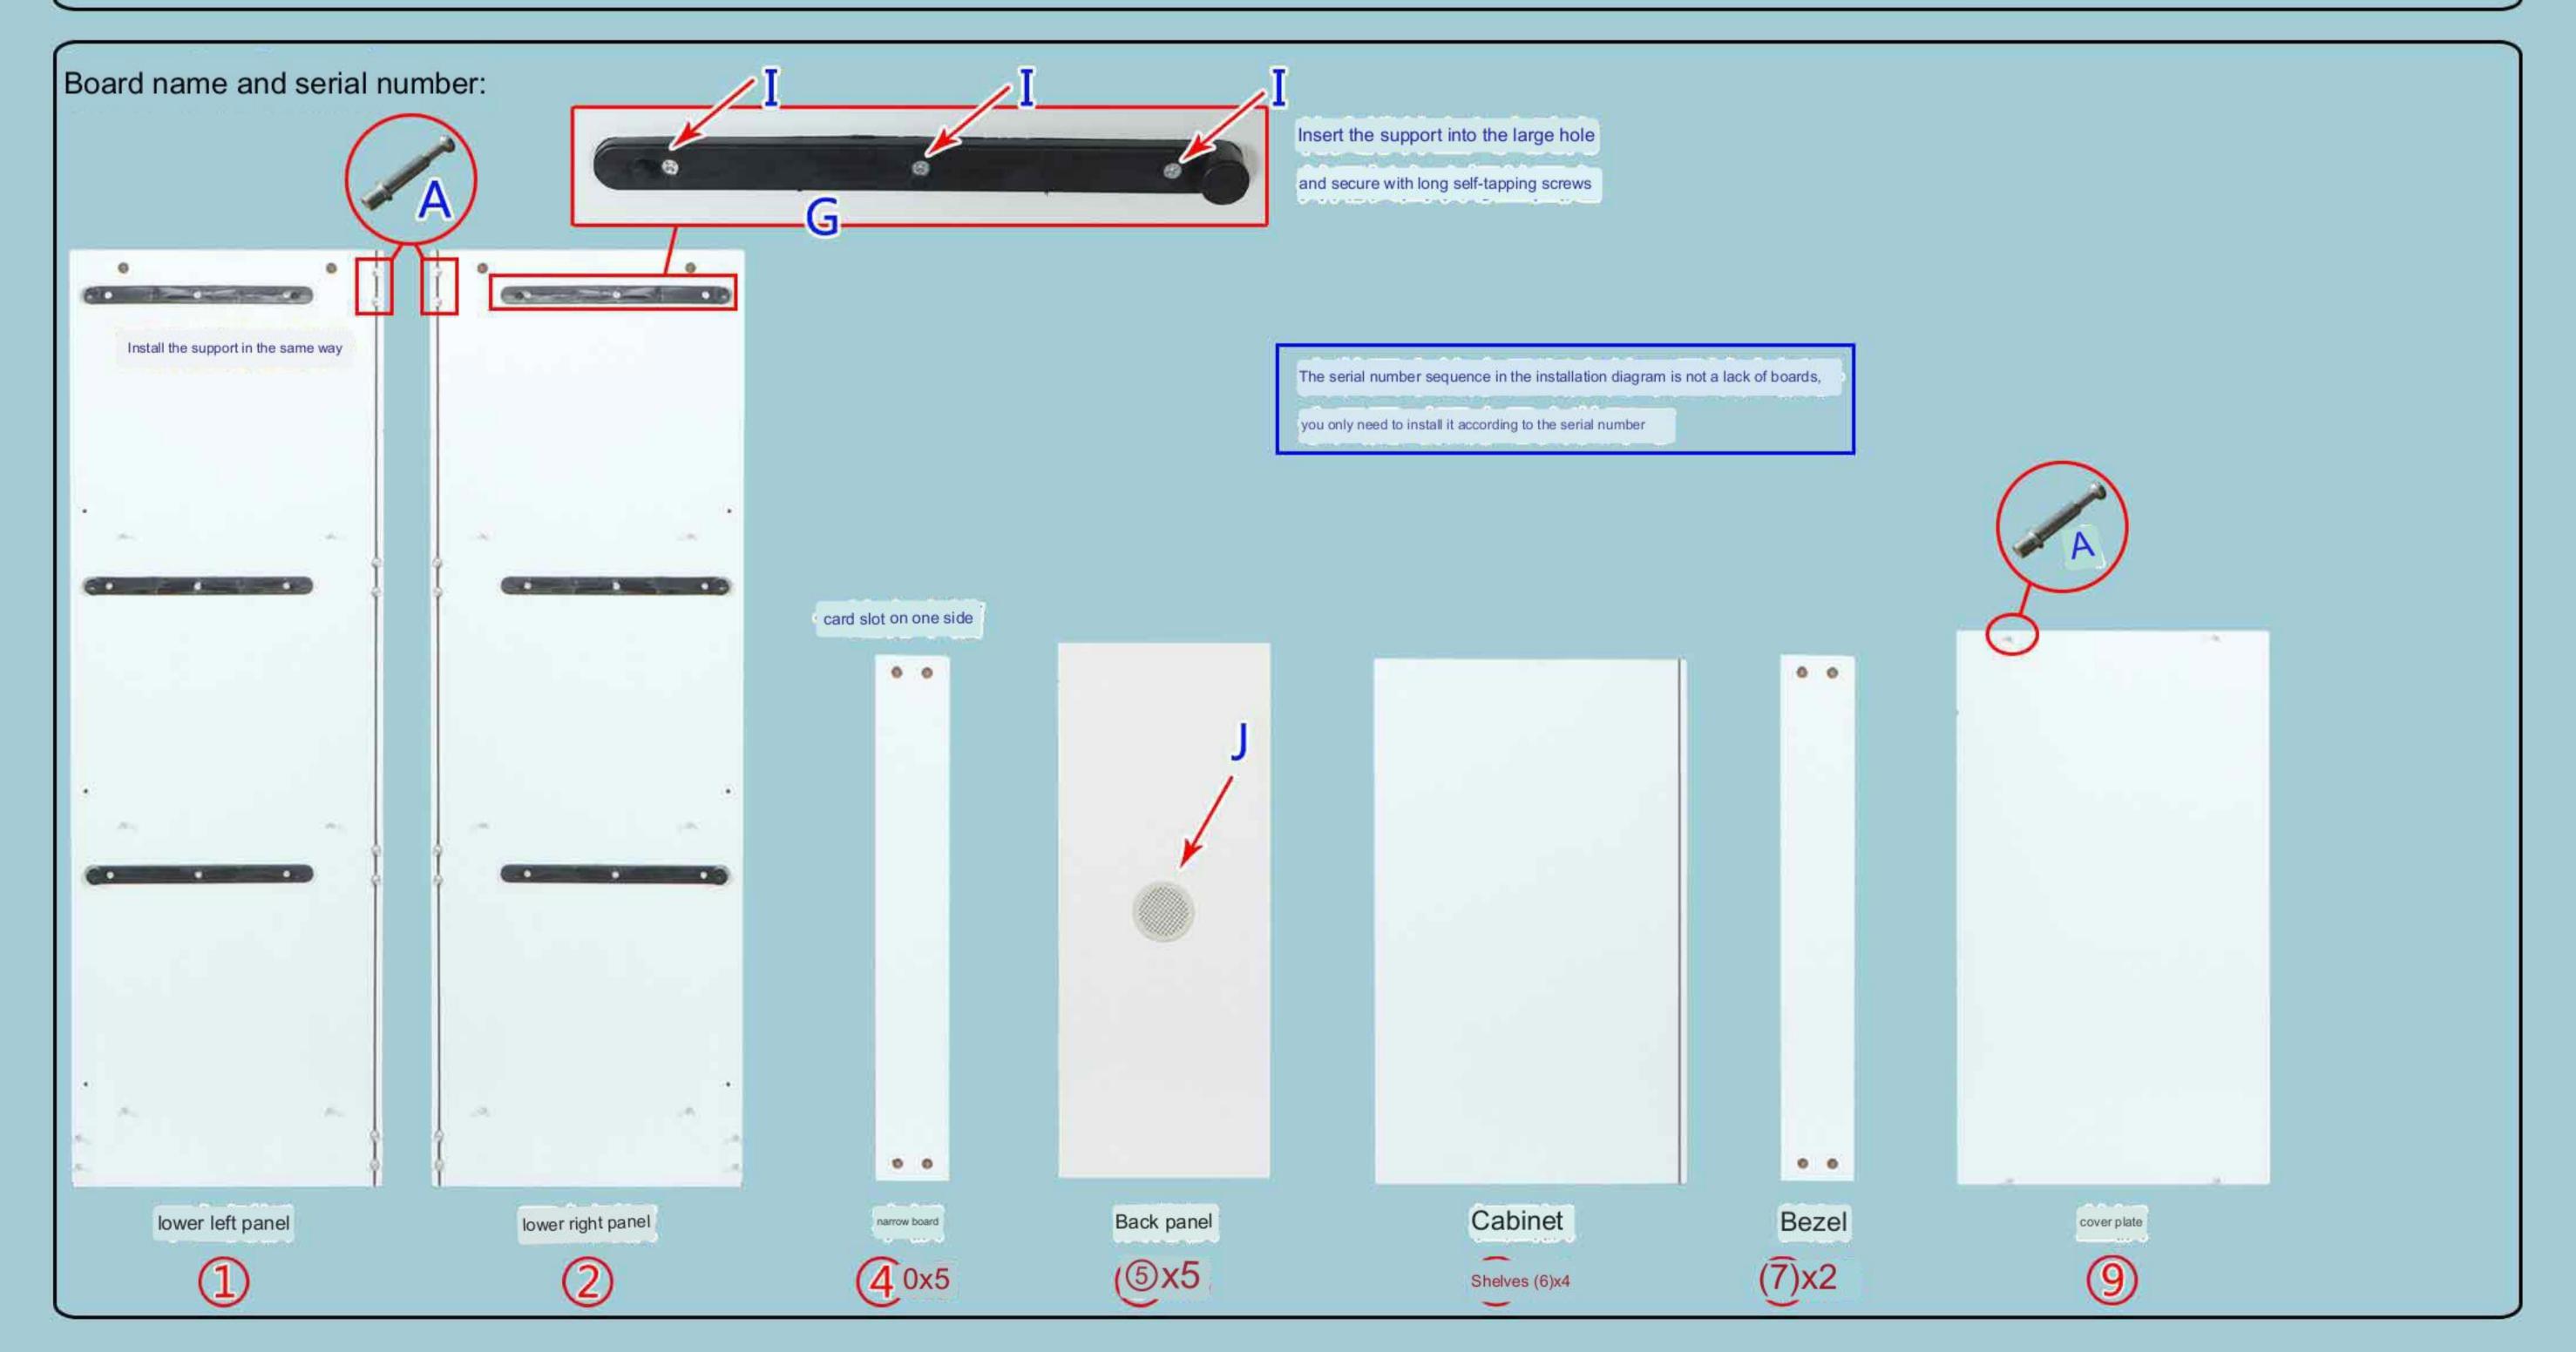


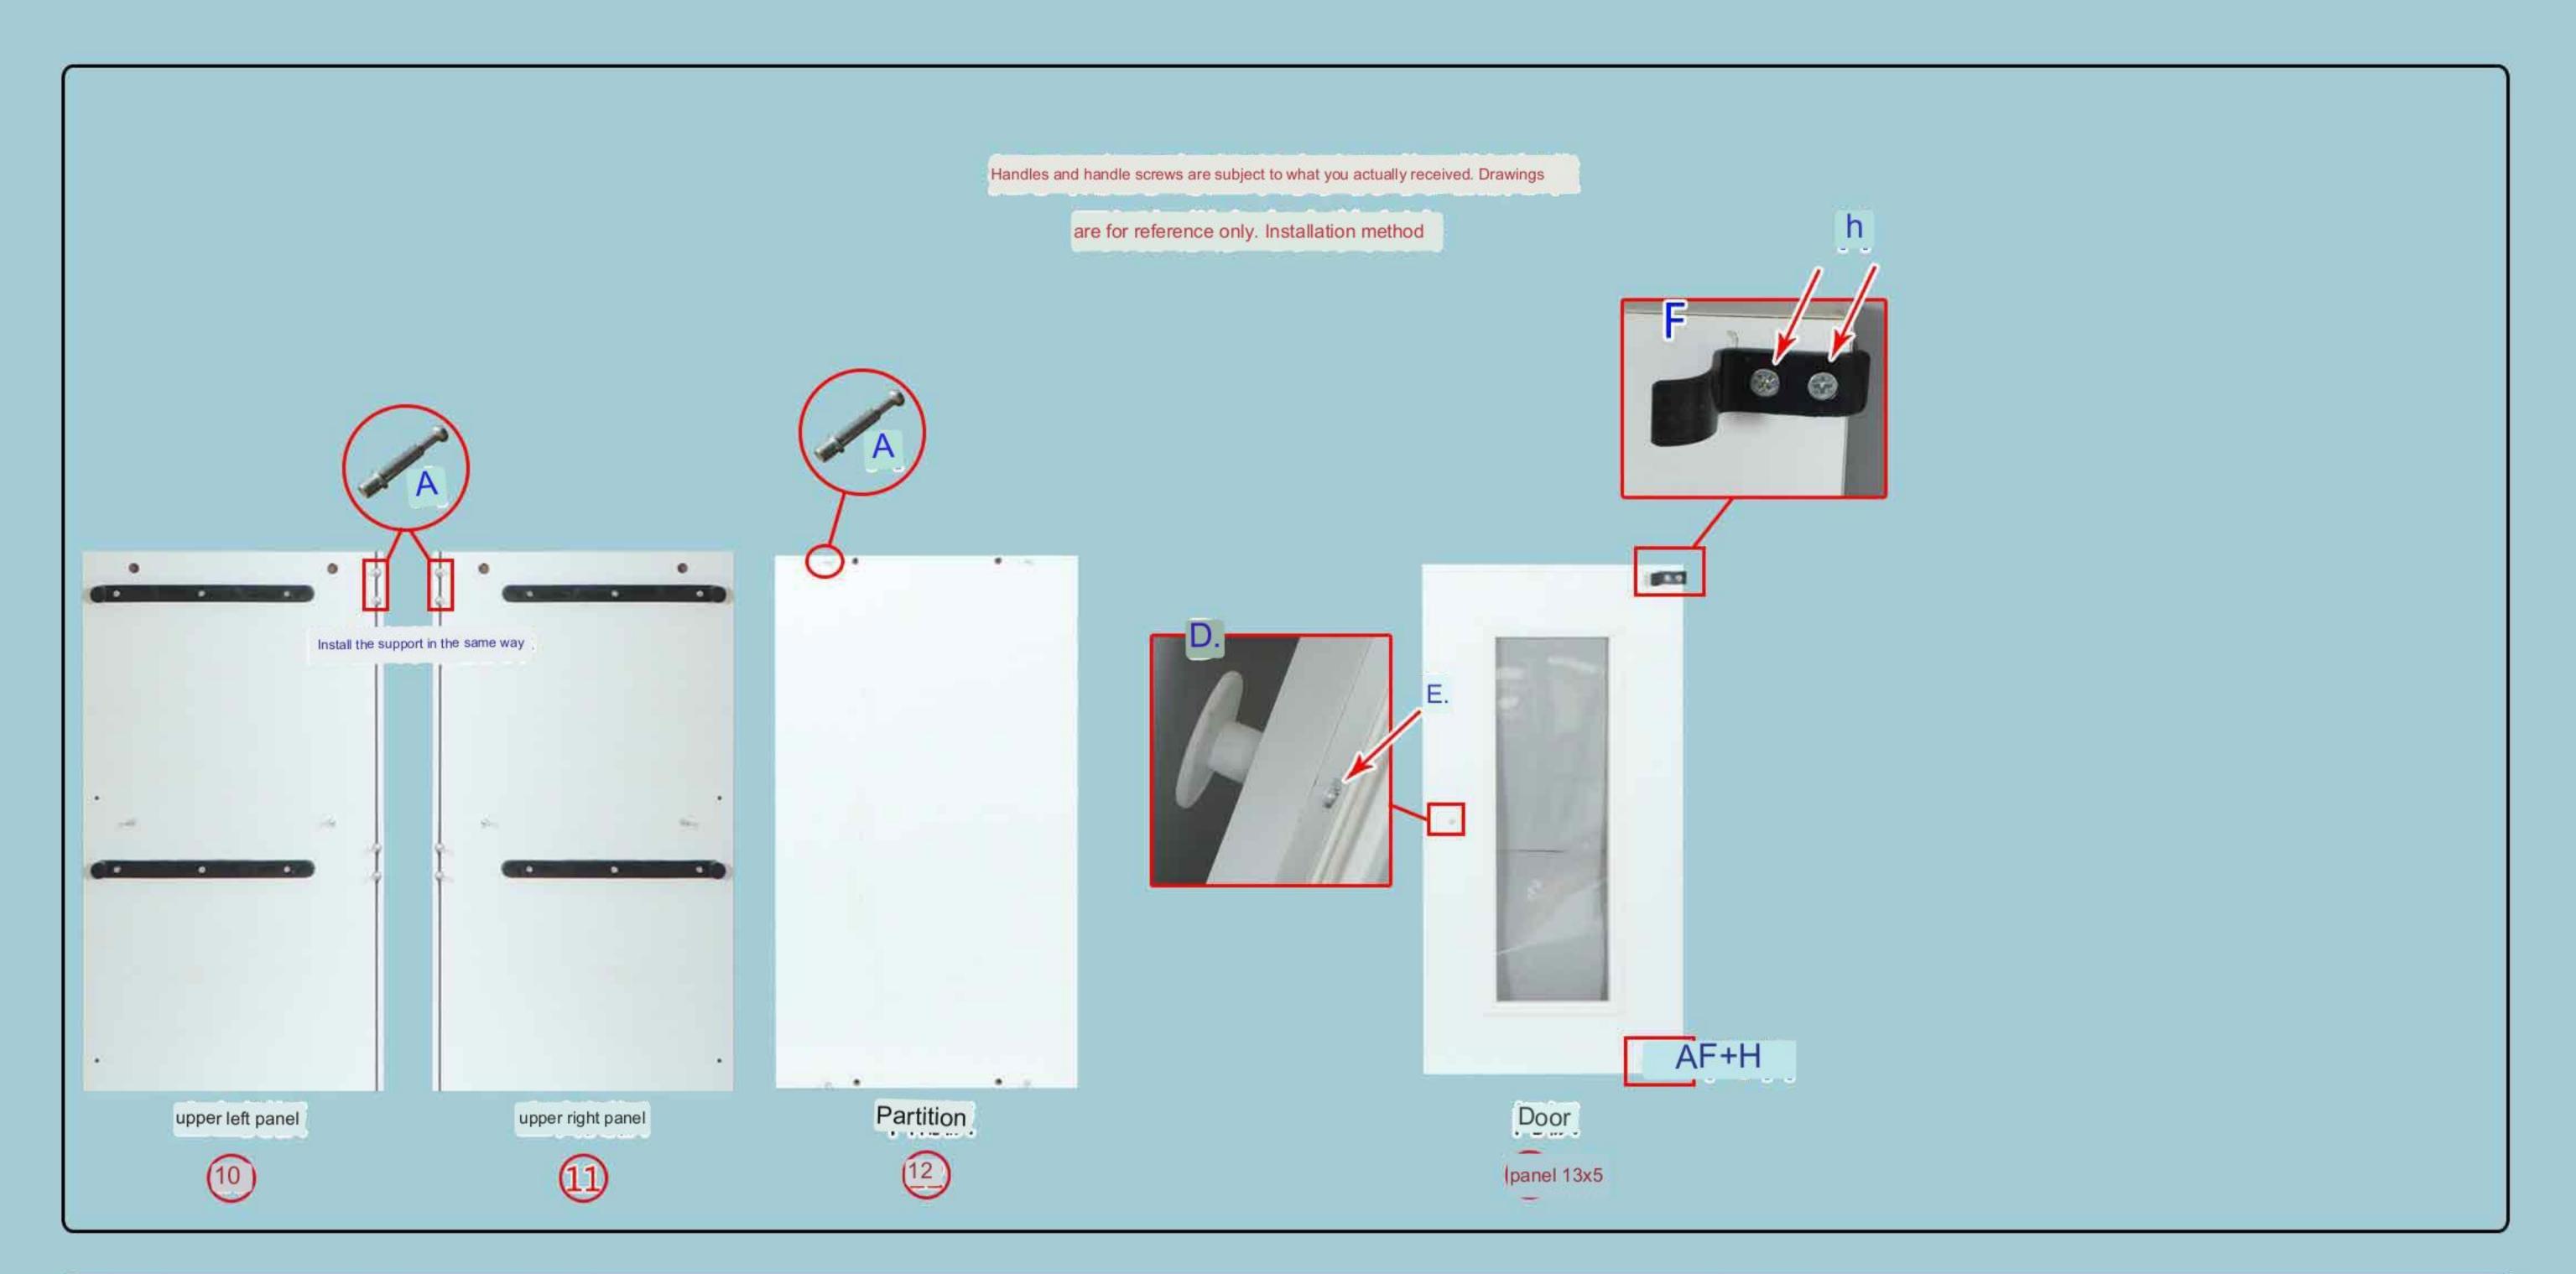


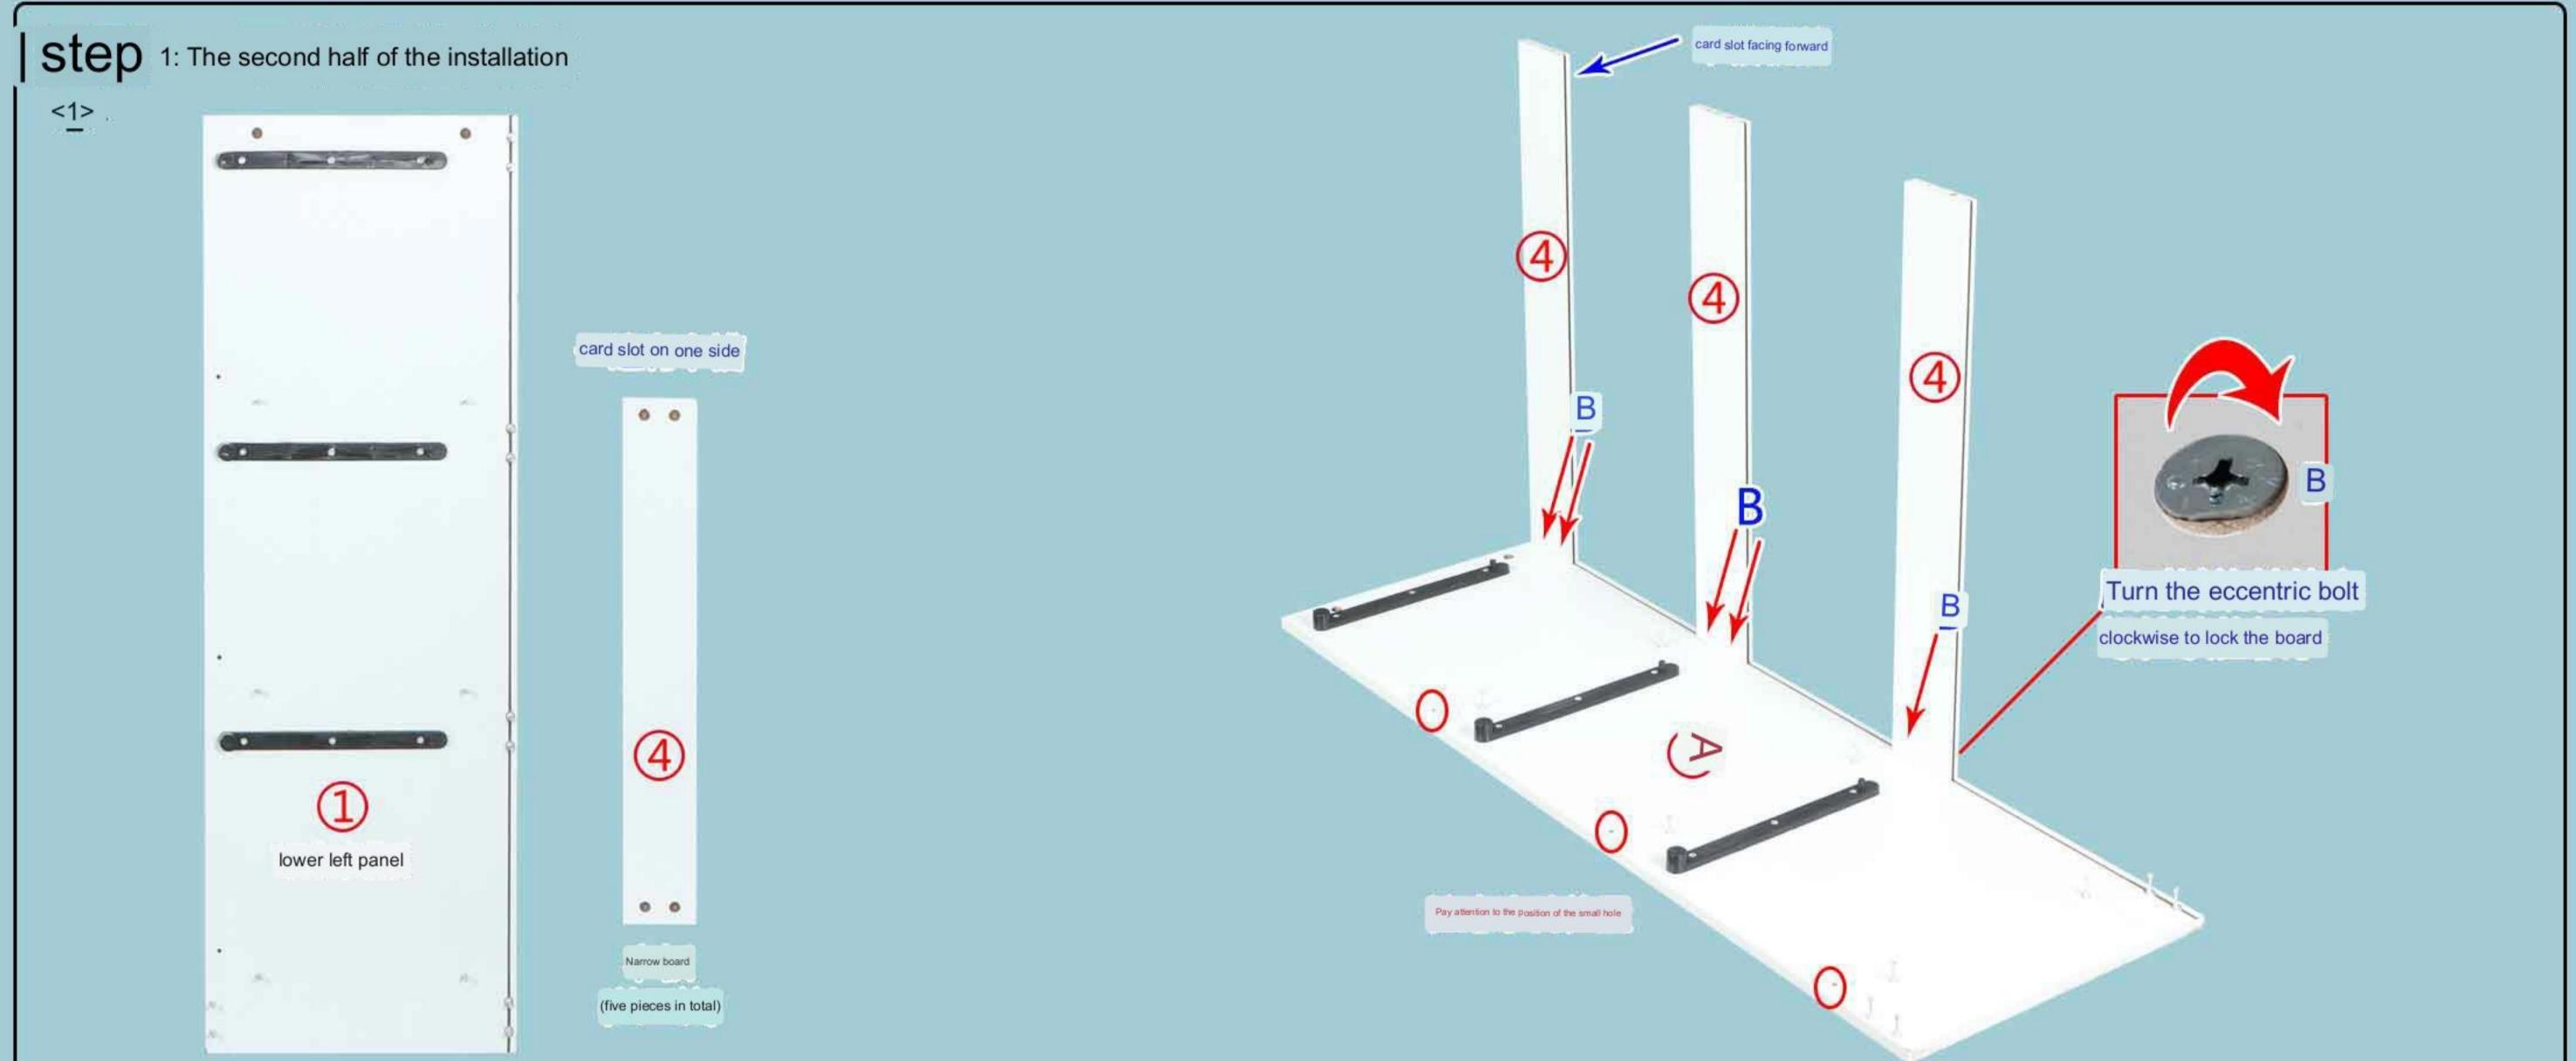


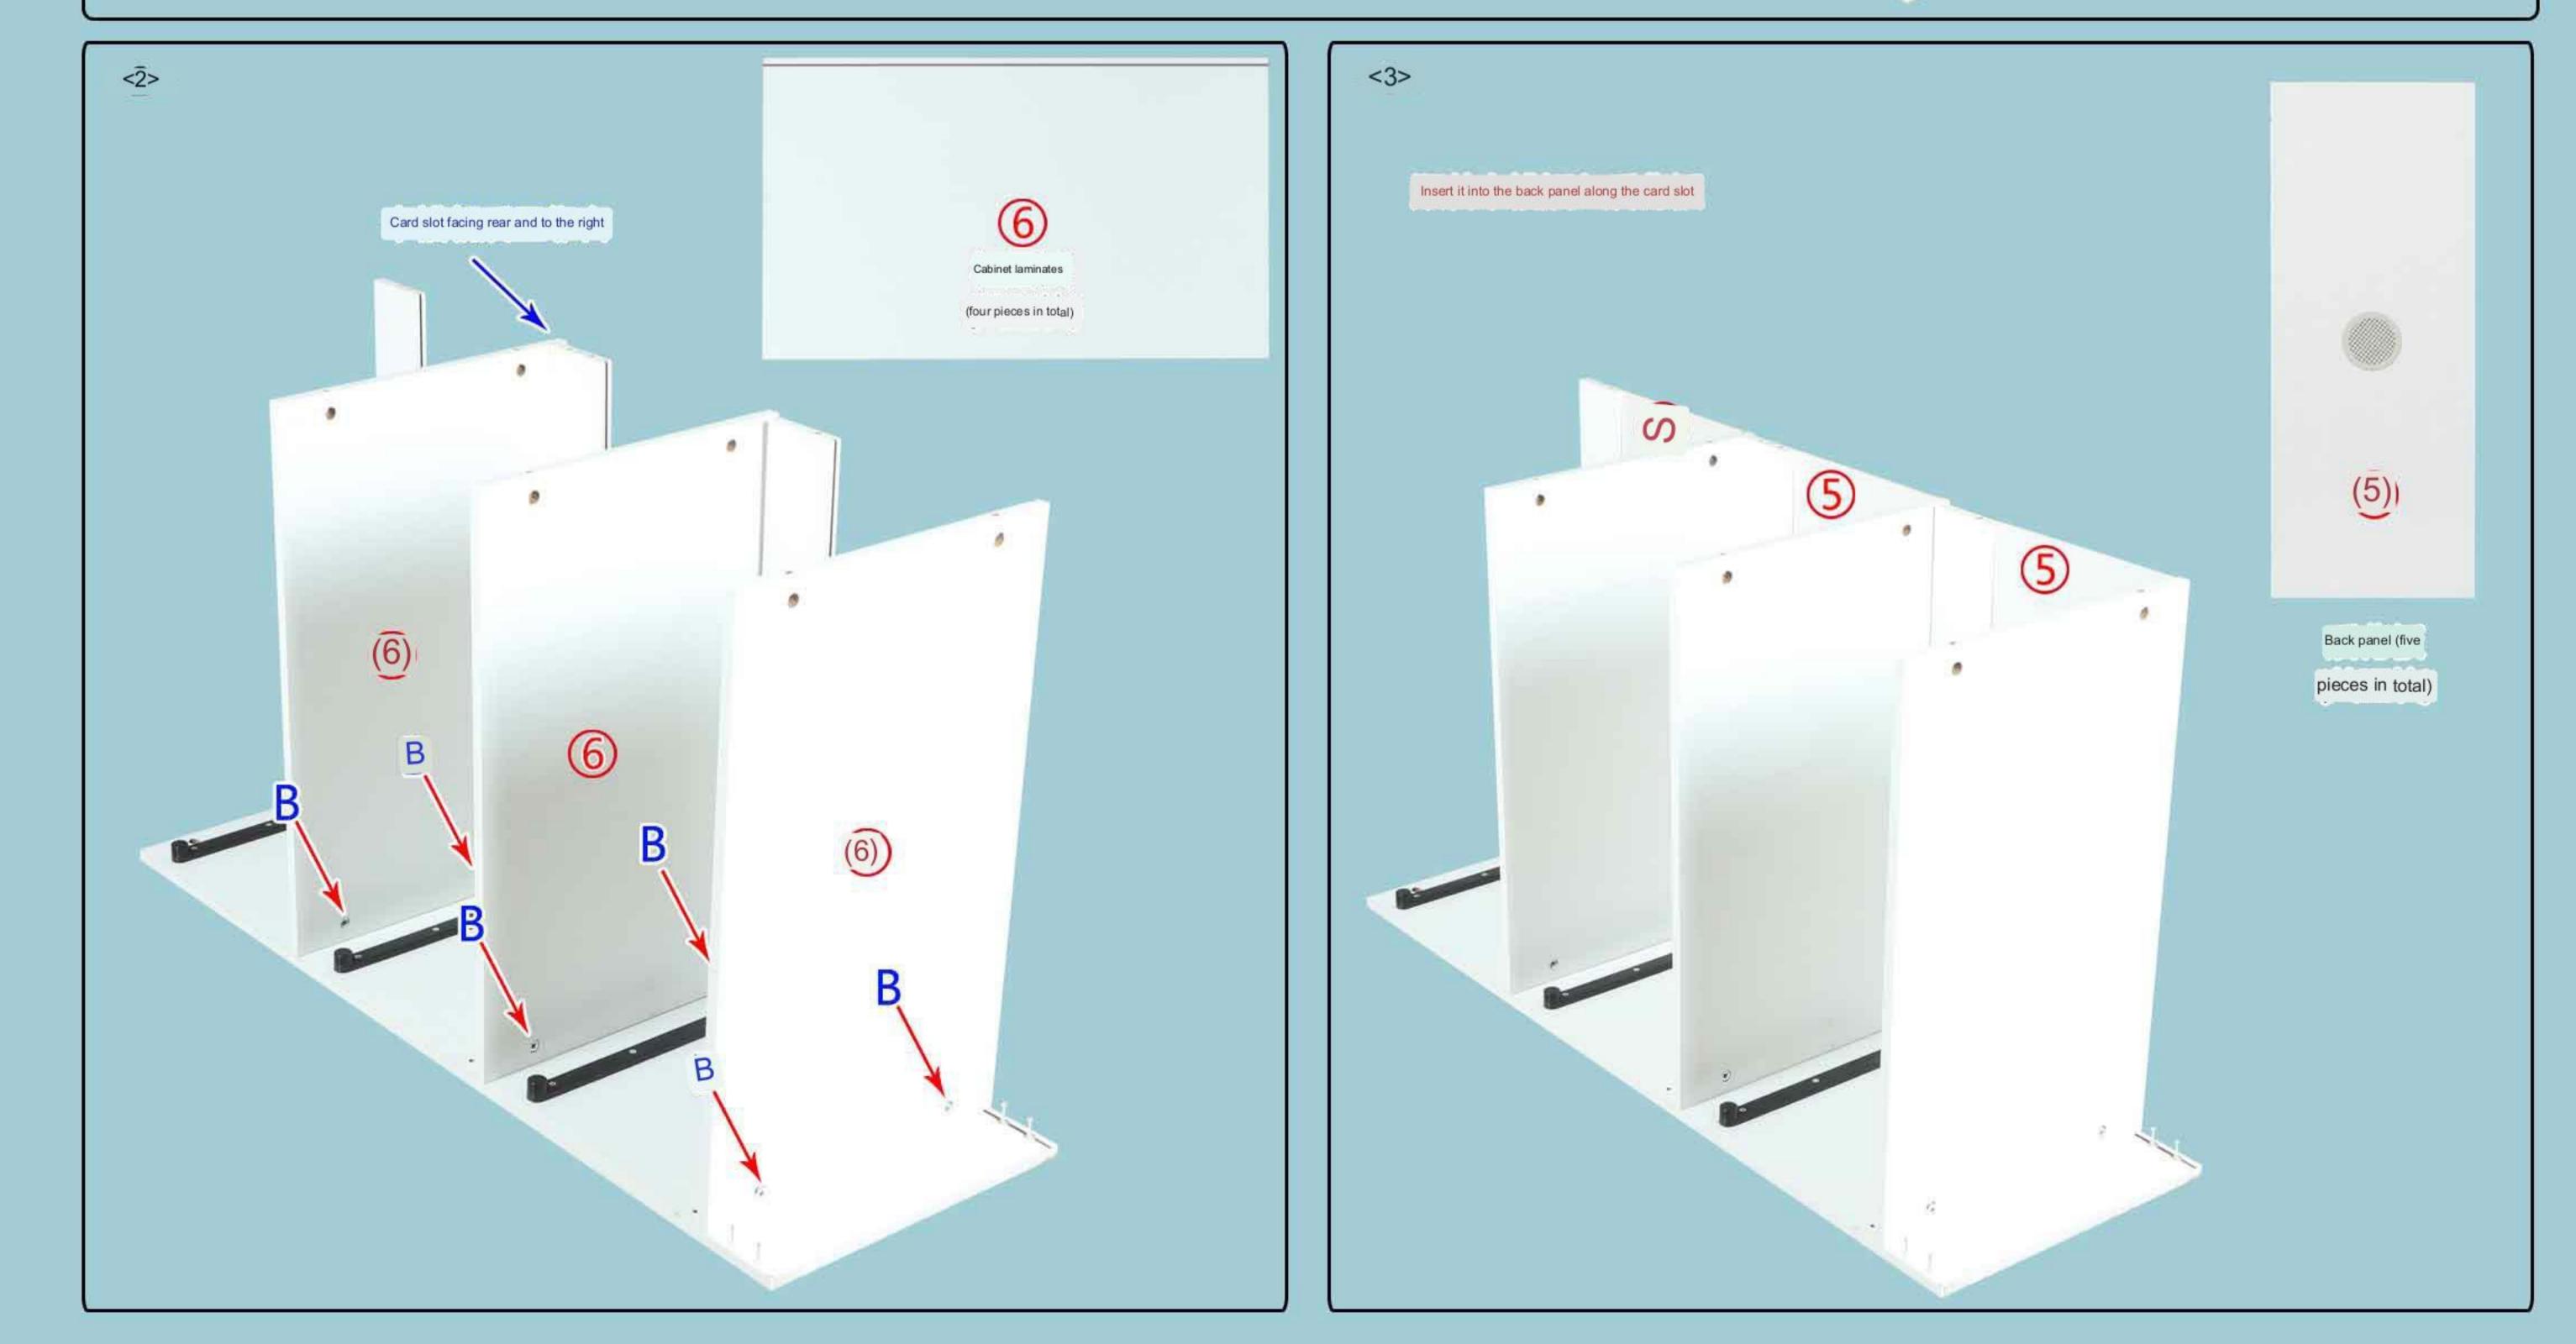


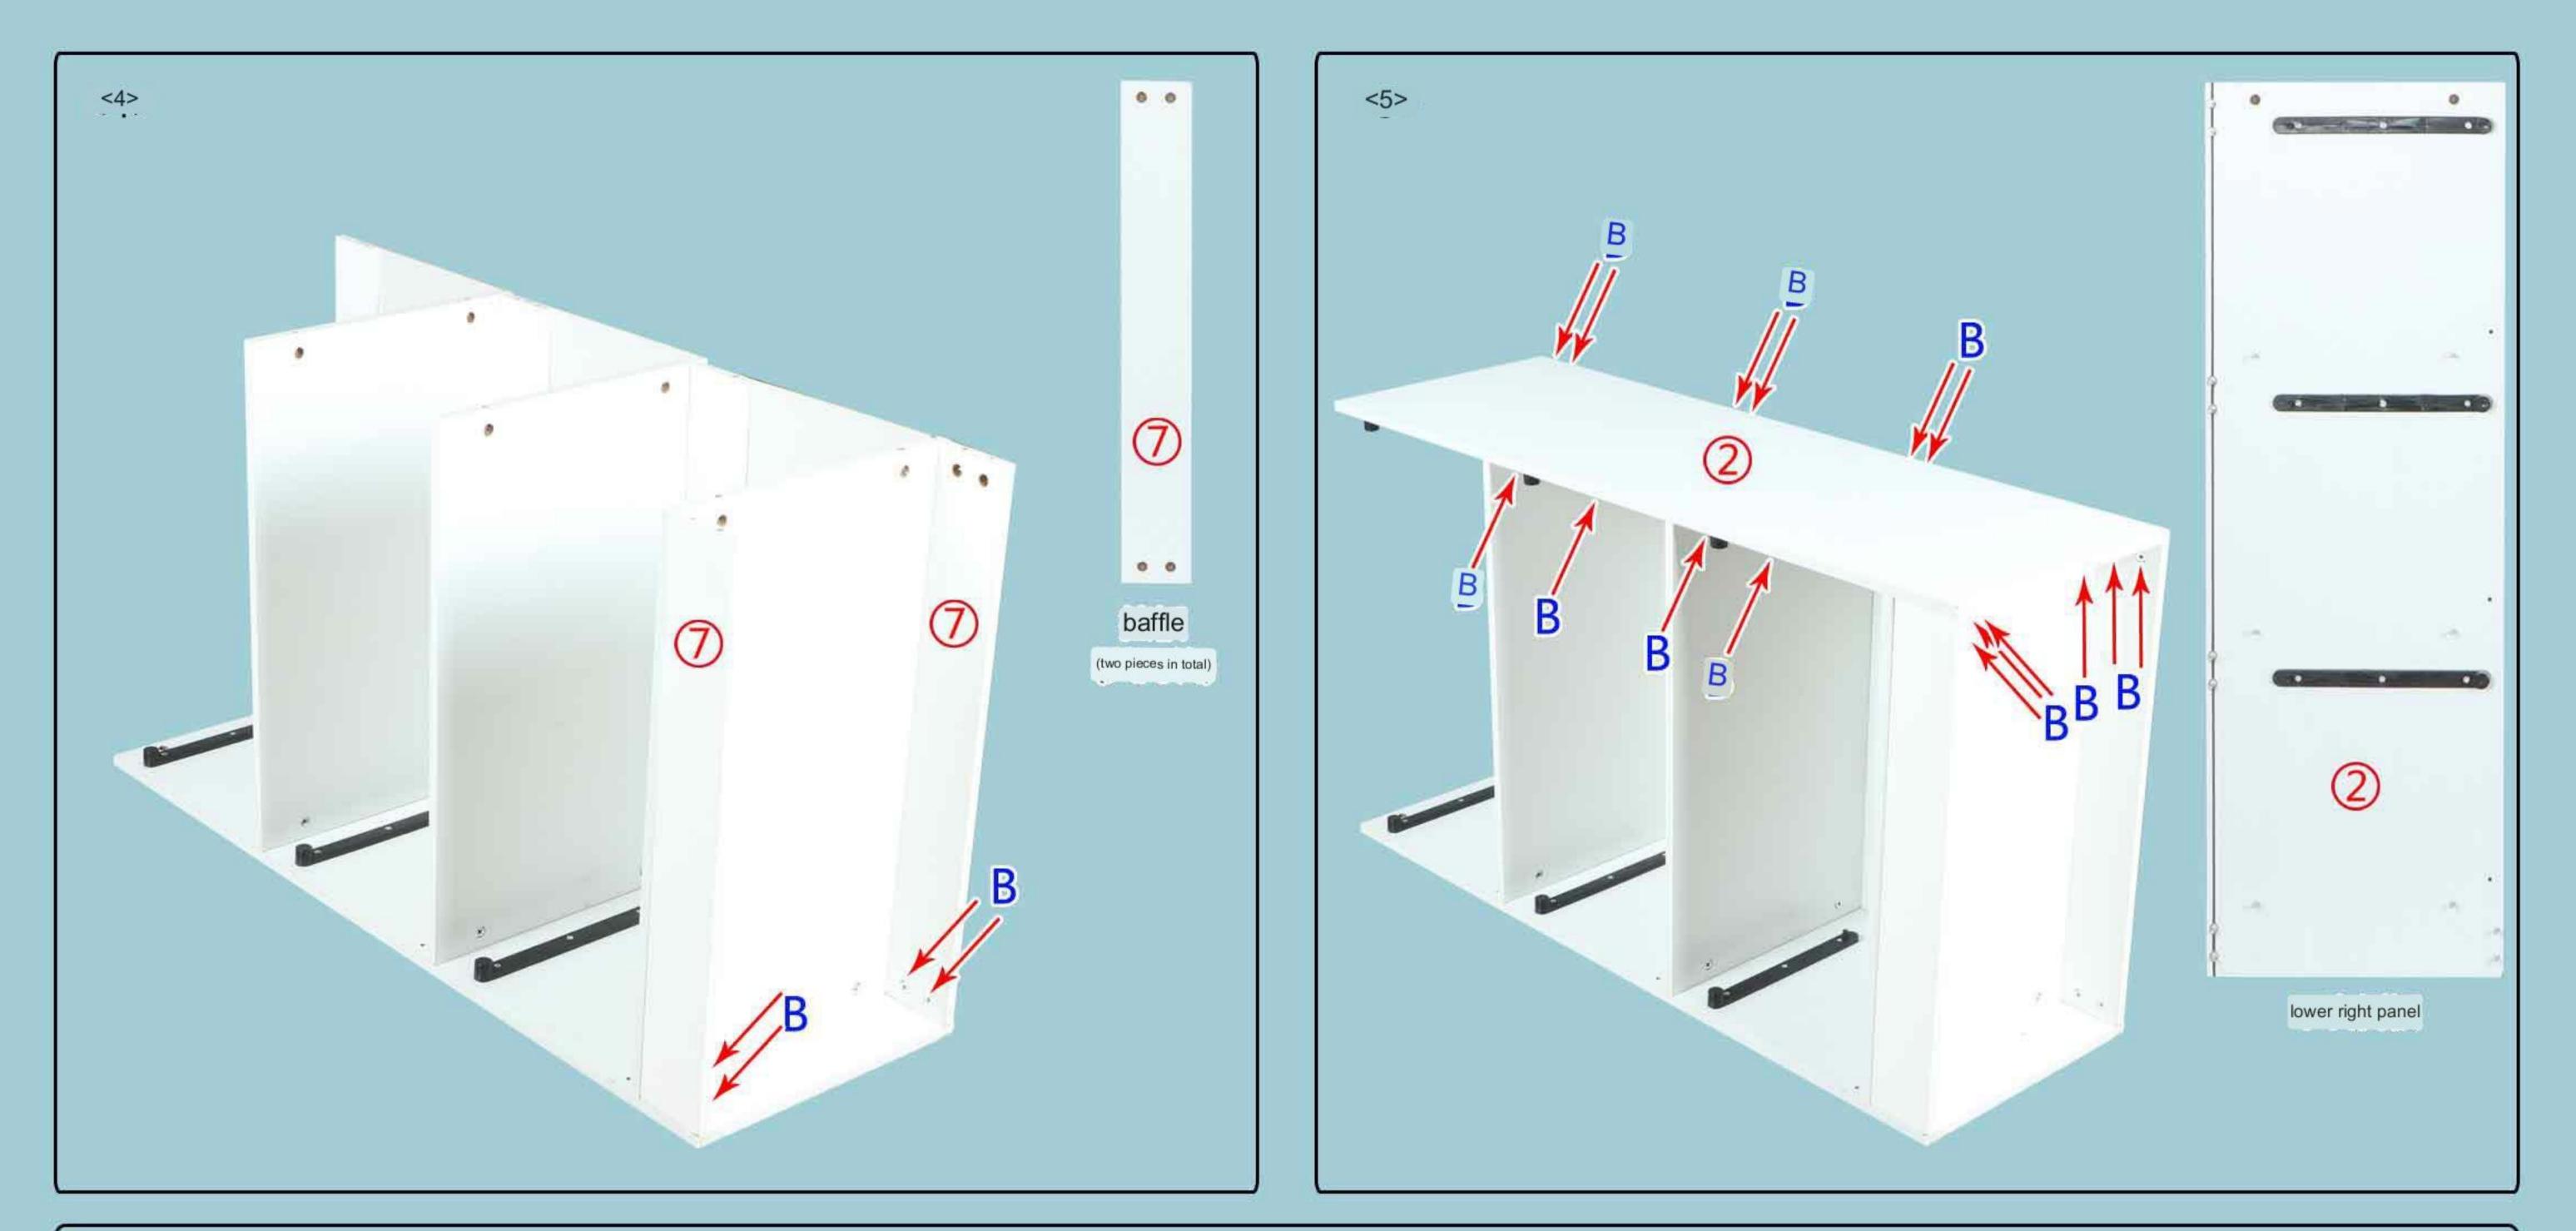

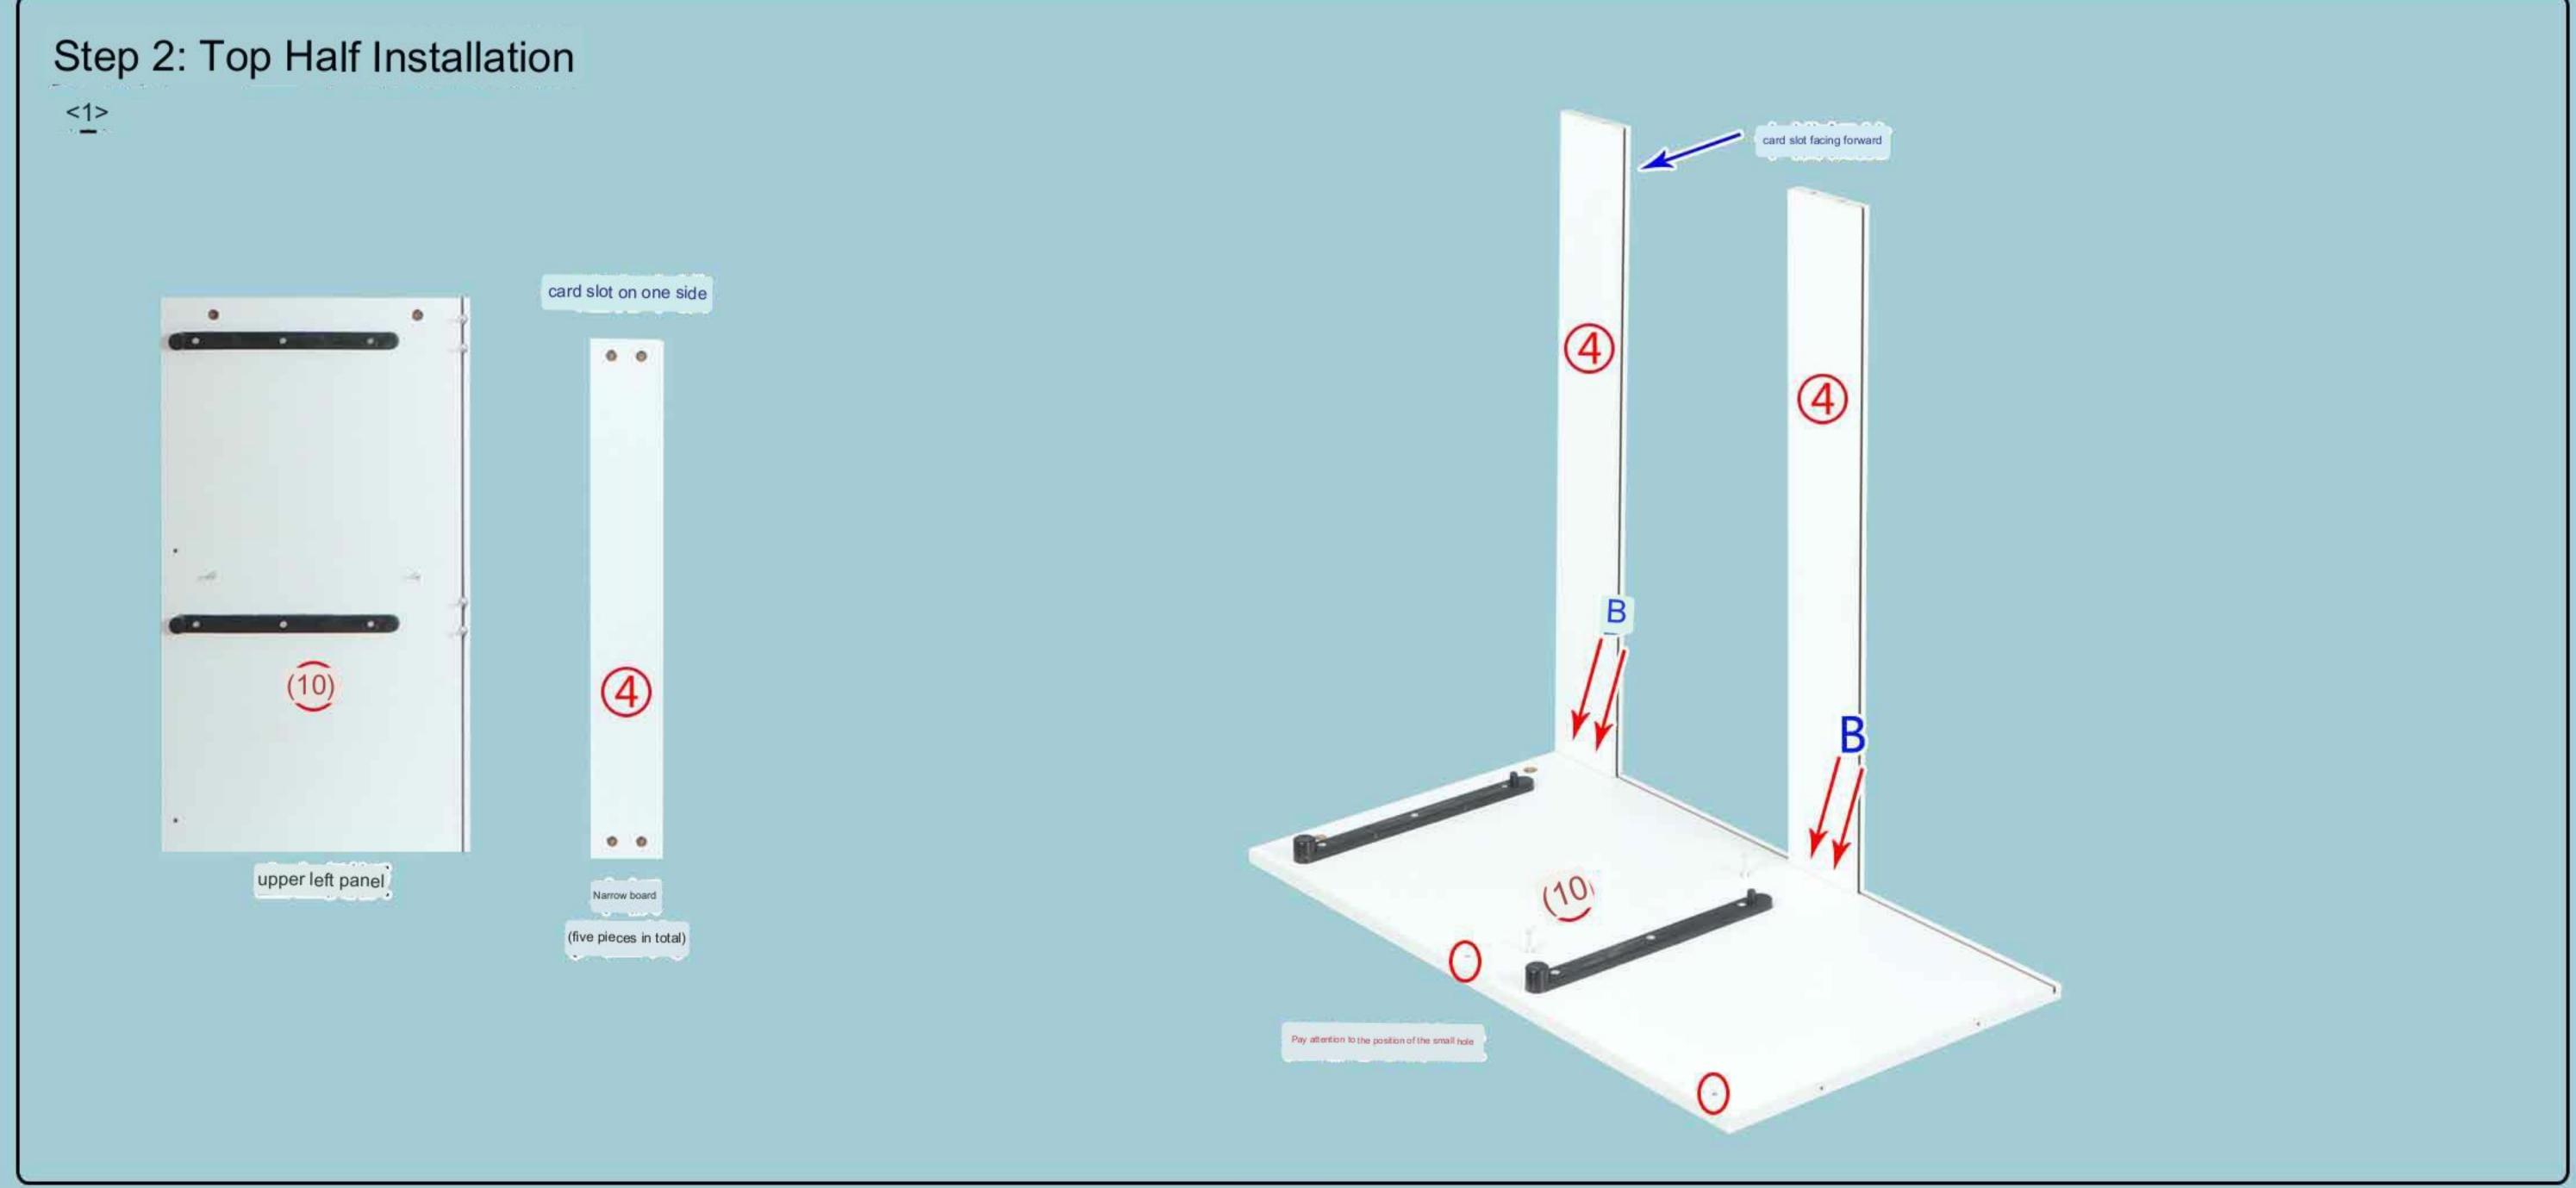

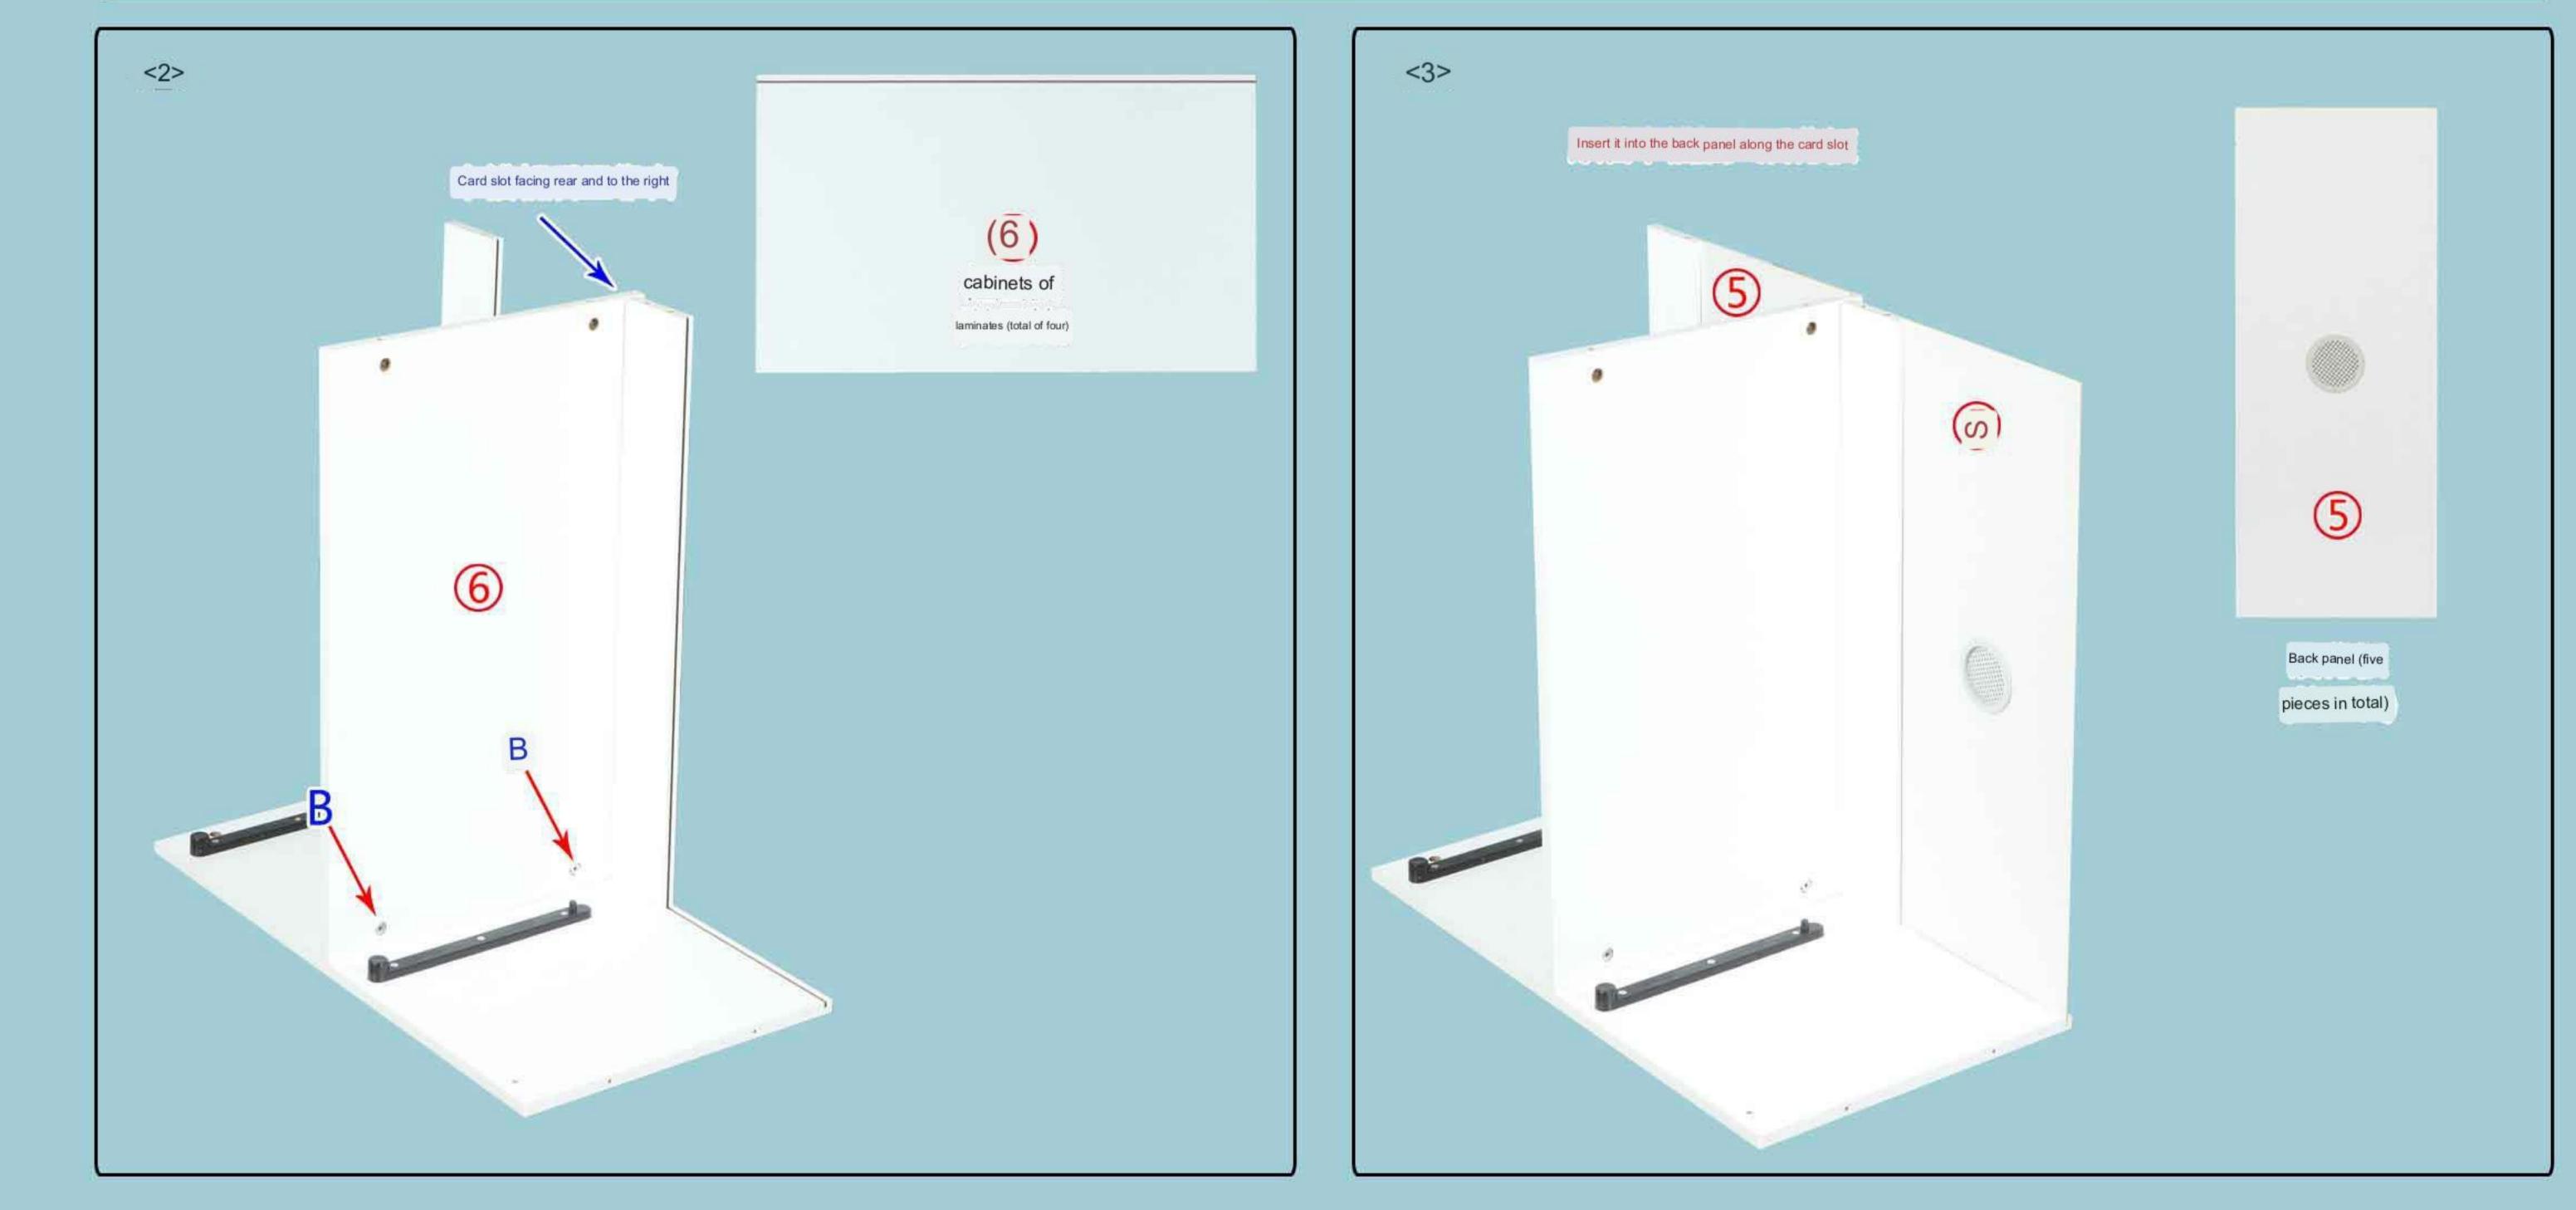

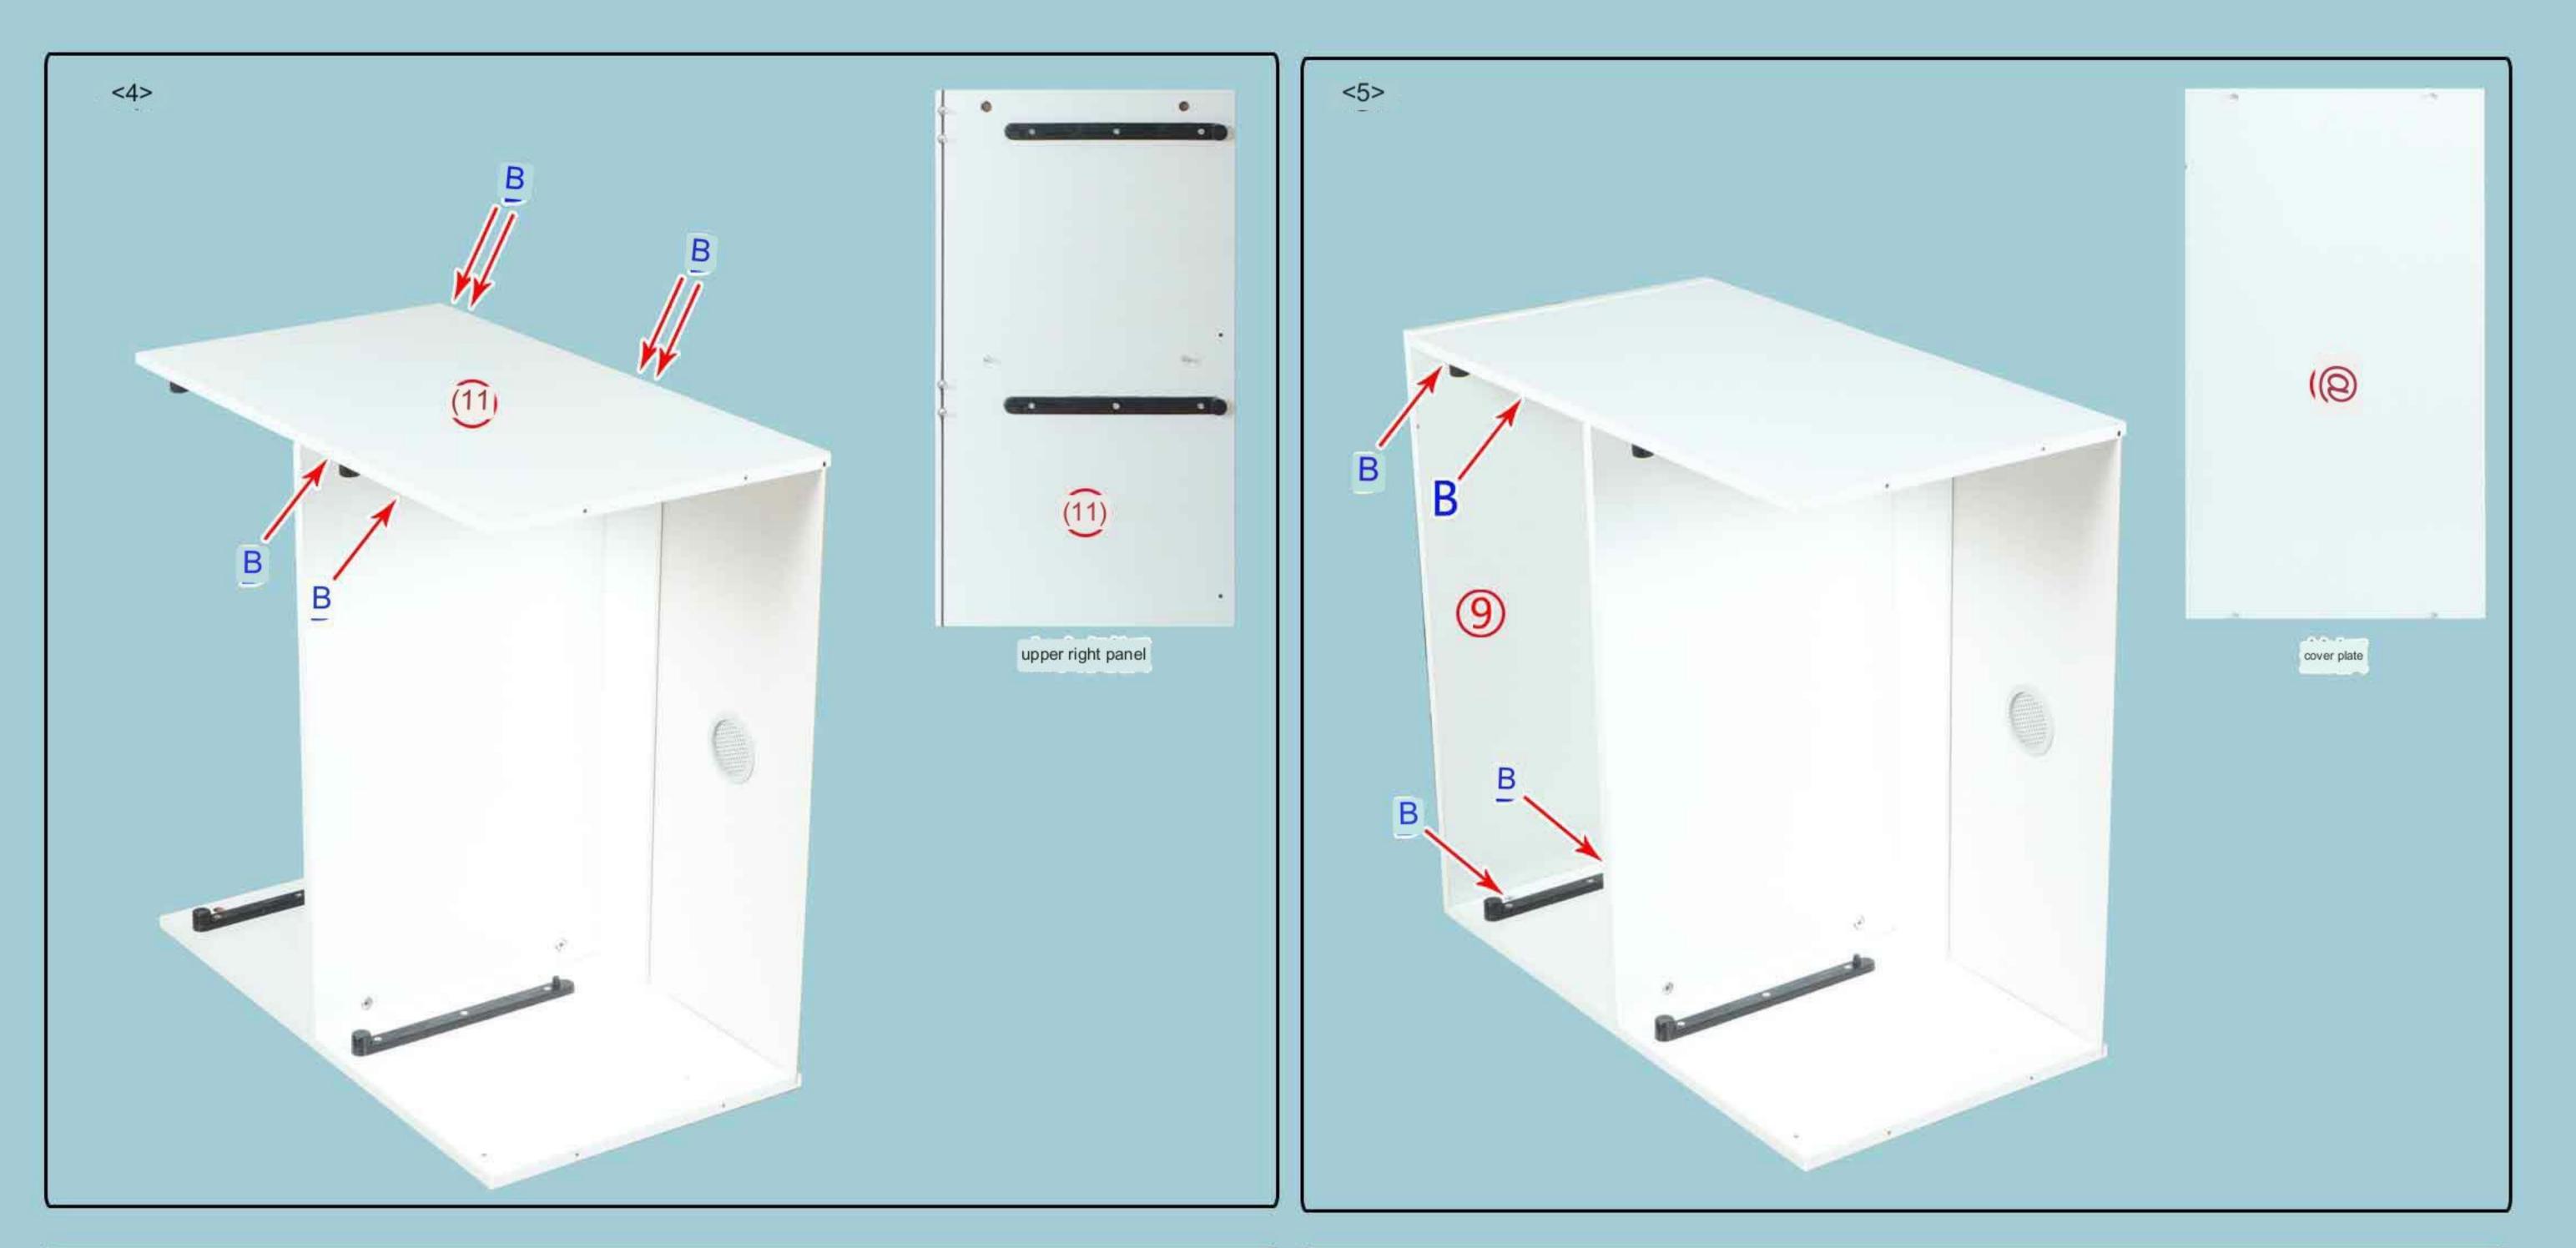

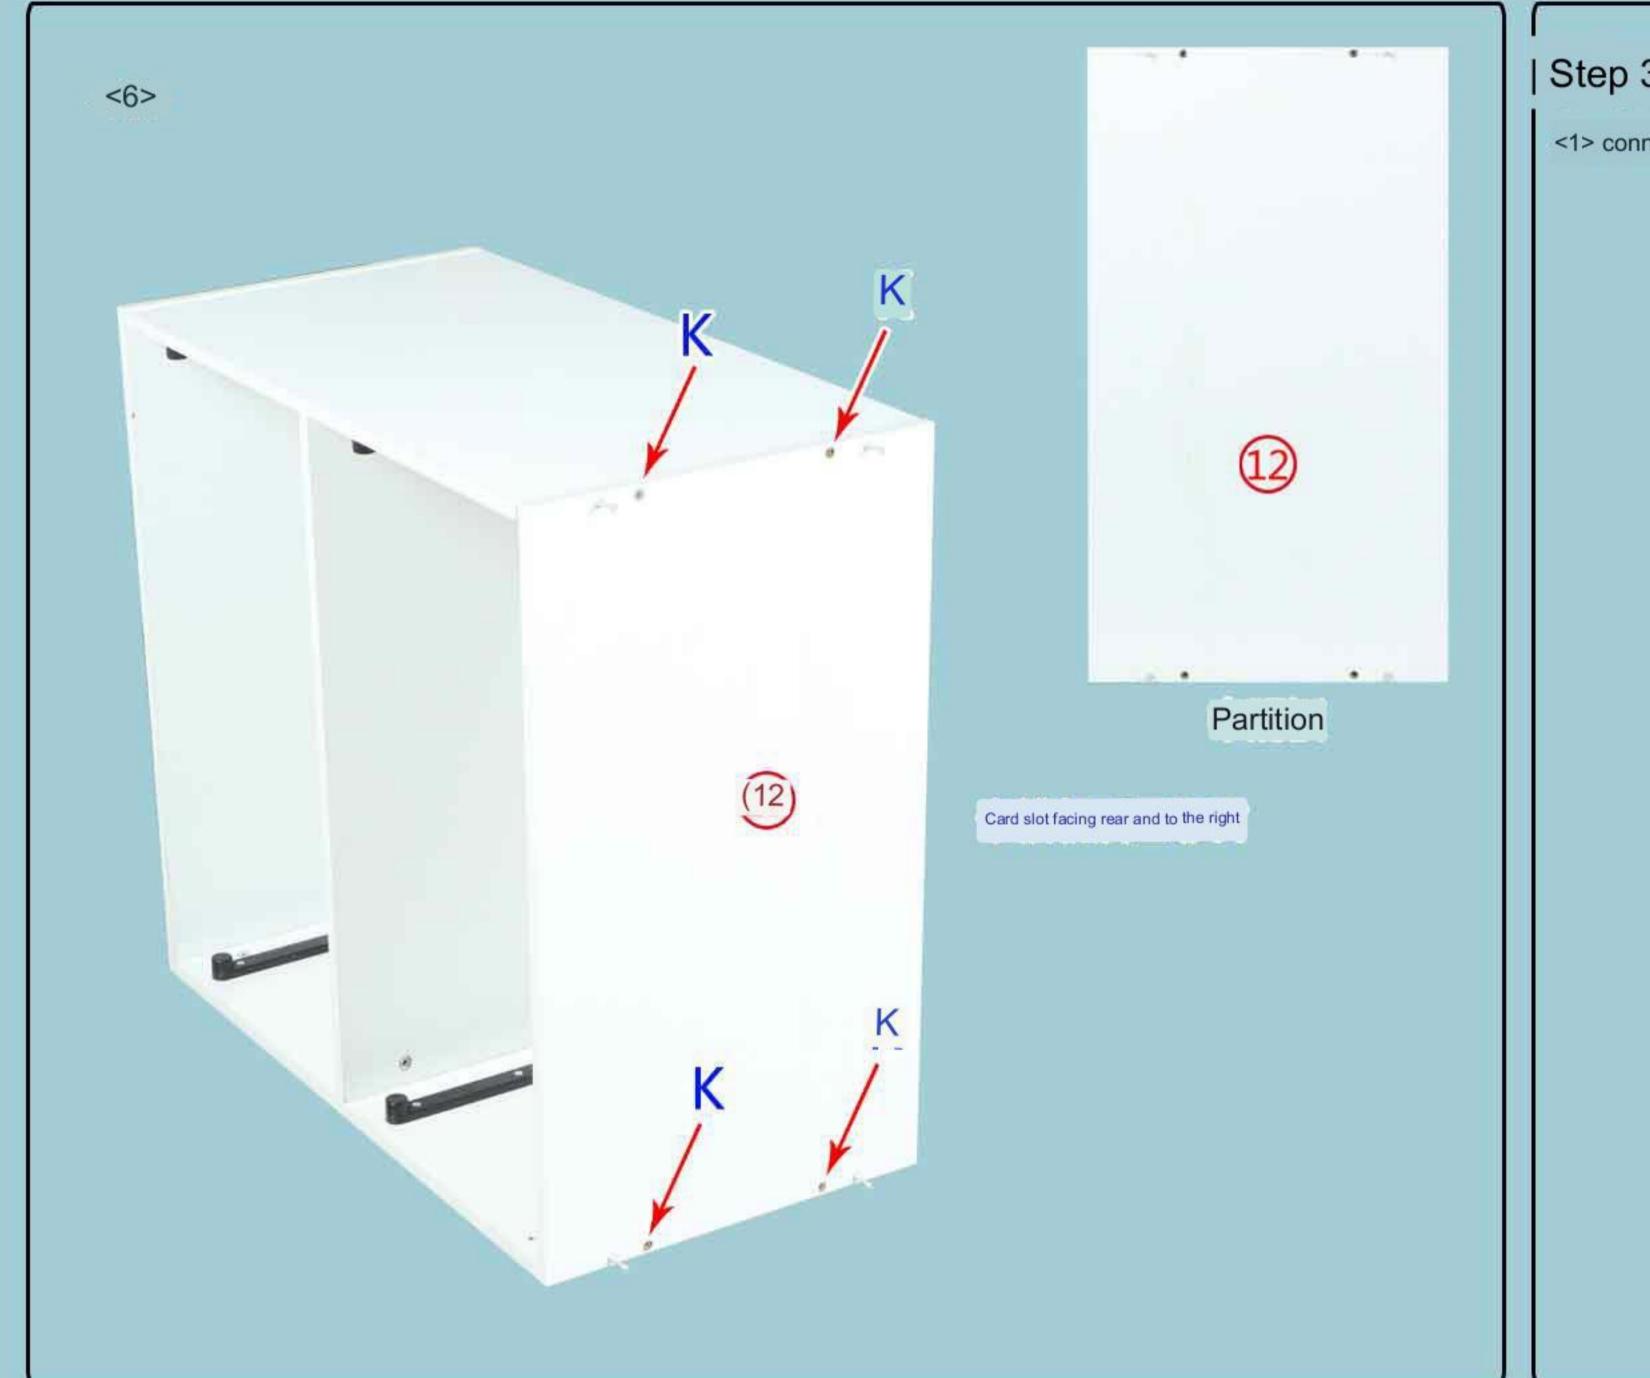

| Step 3: Installation of the whole part

<1> connect the upper and lower parts





