


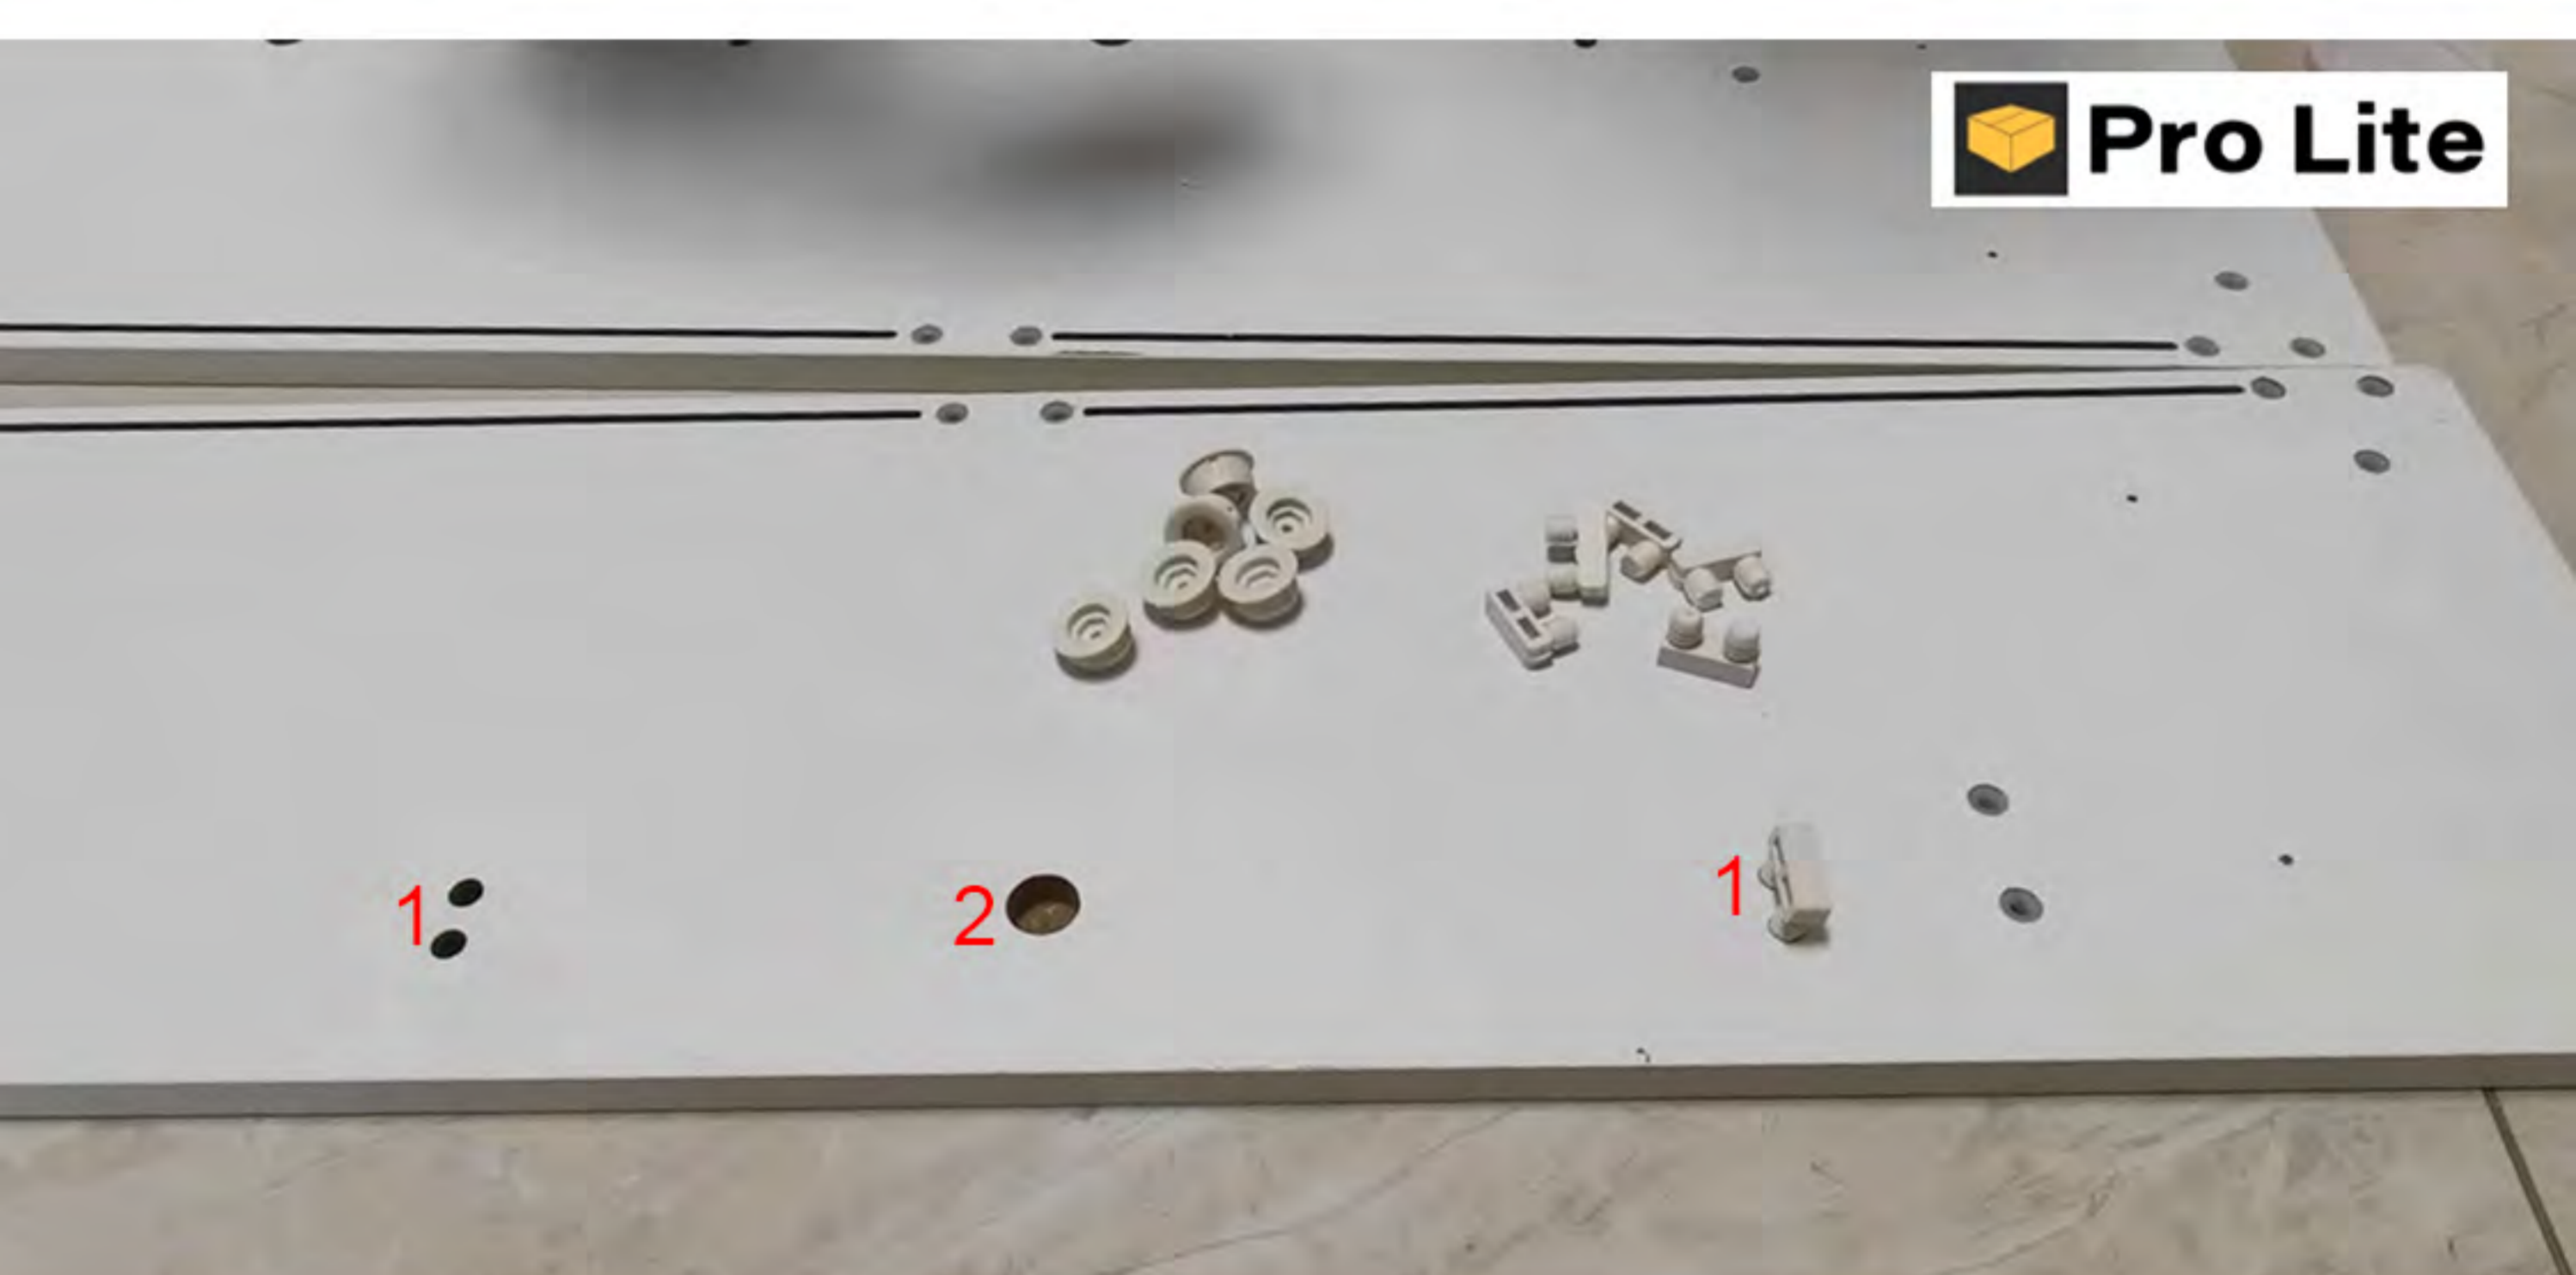
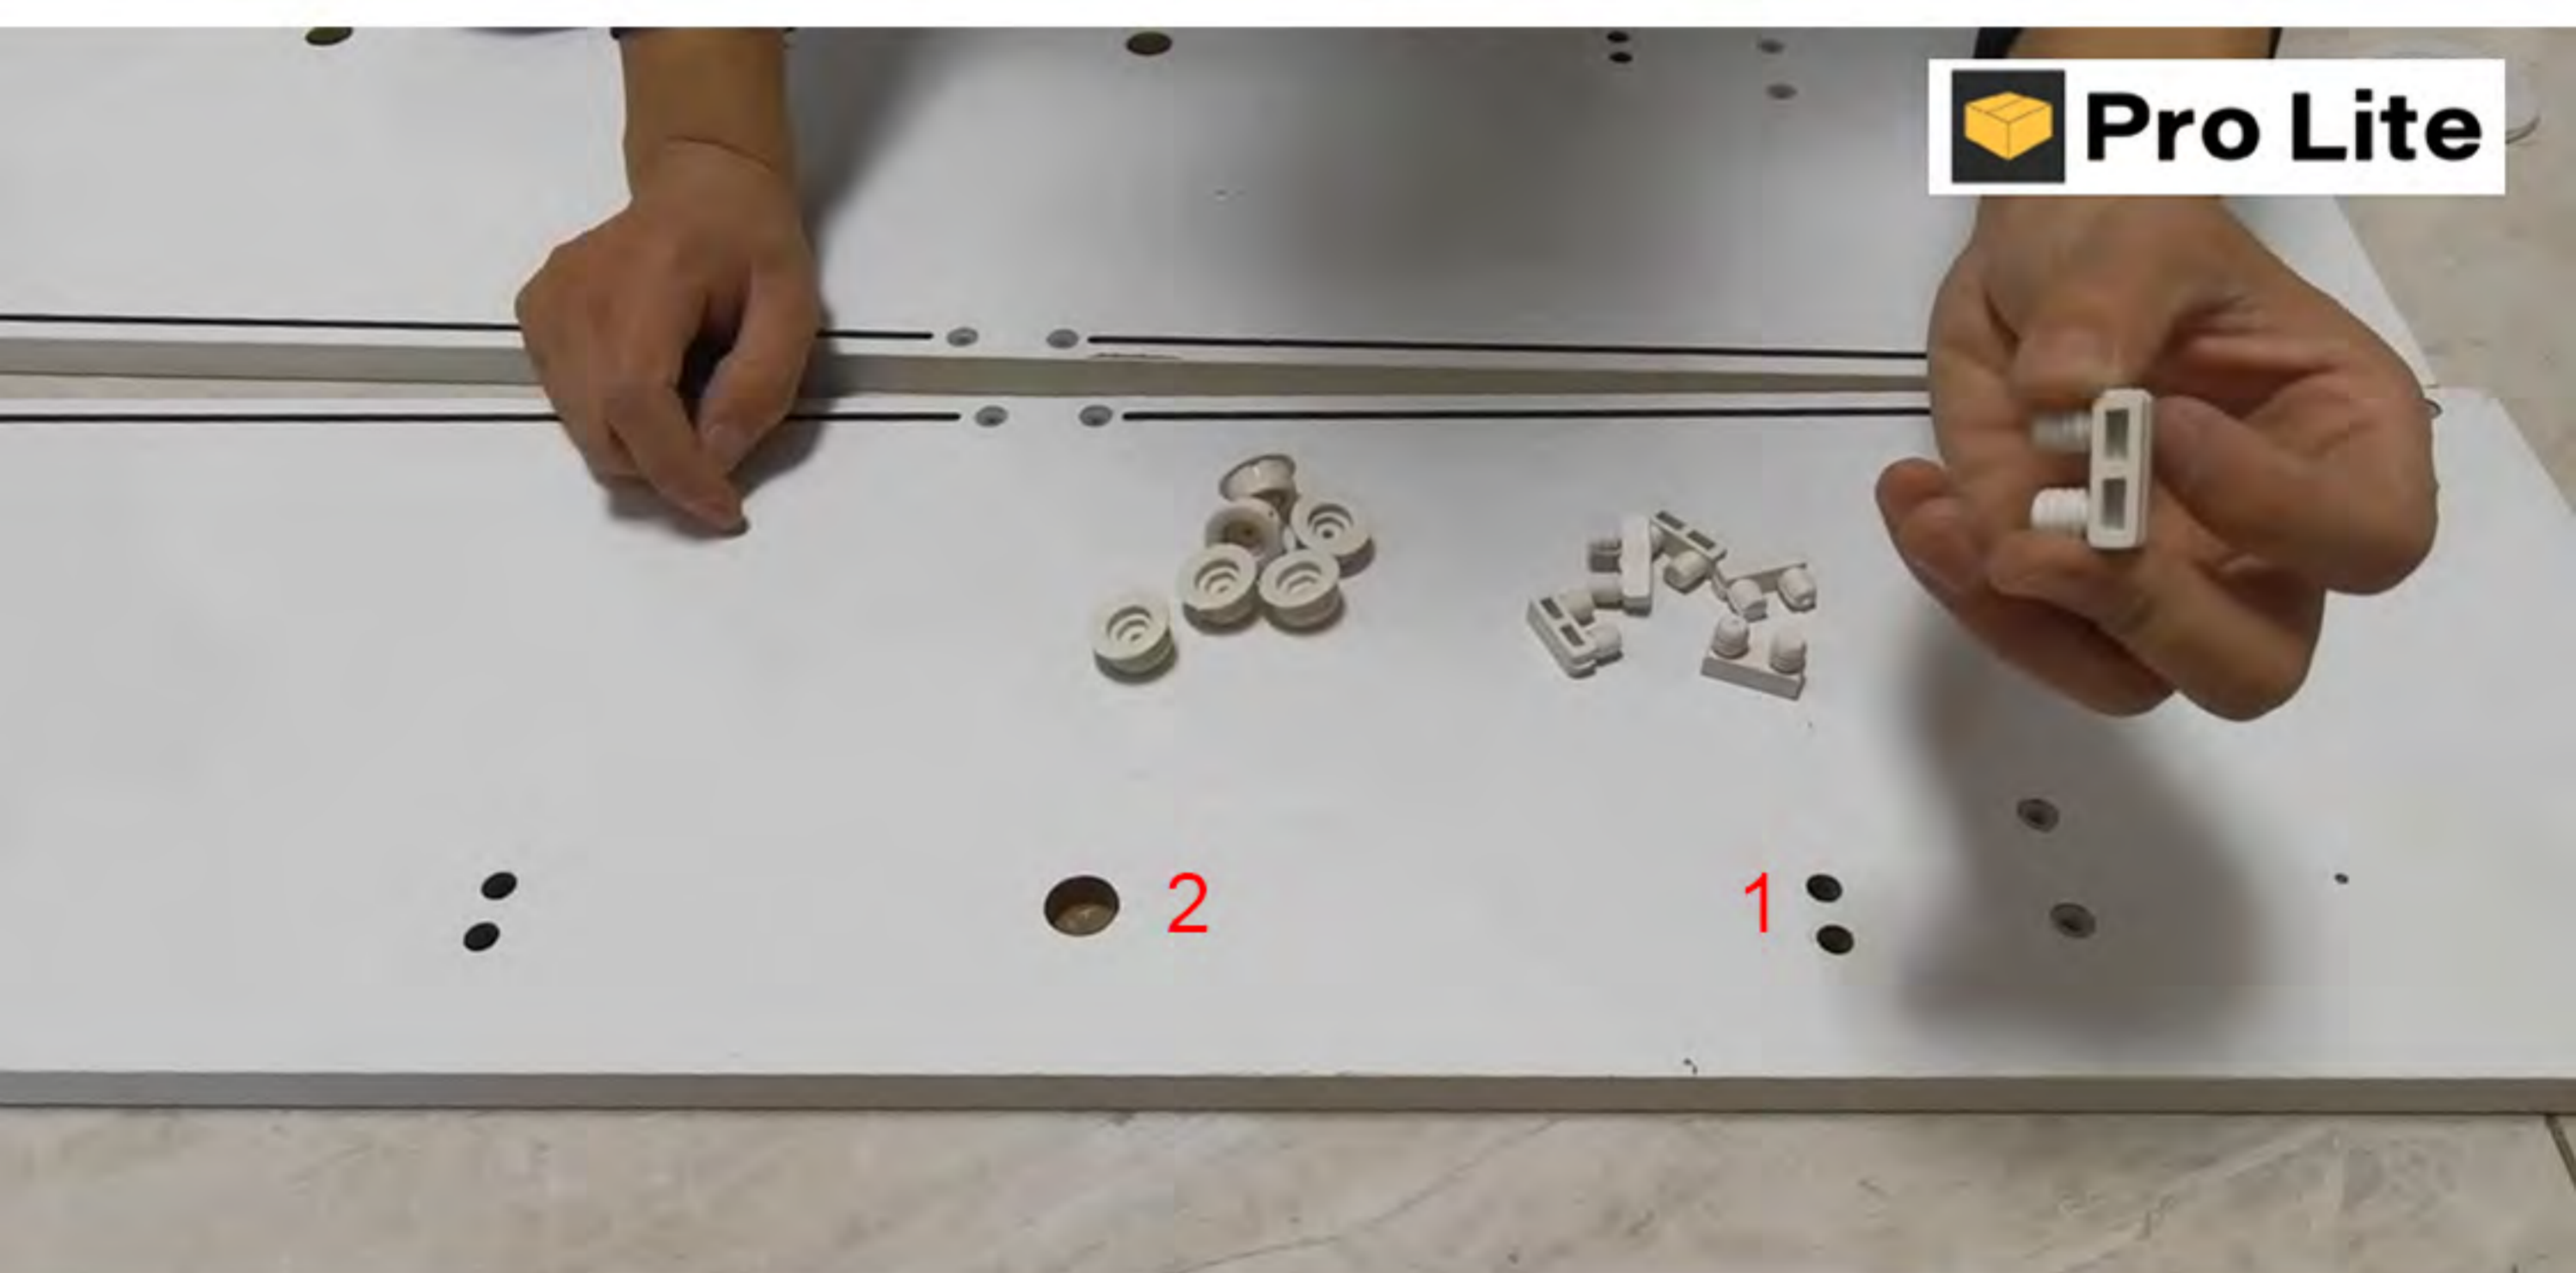
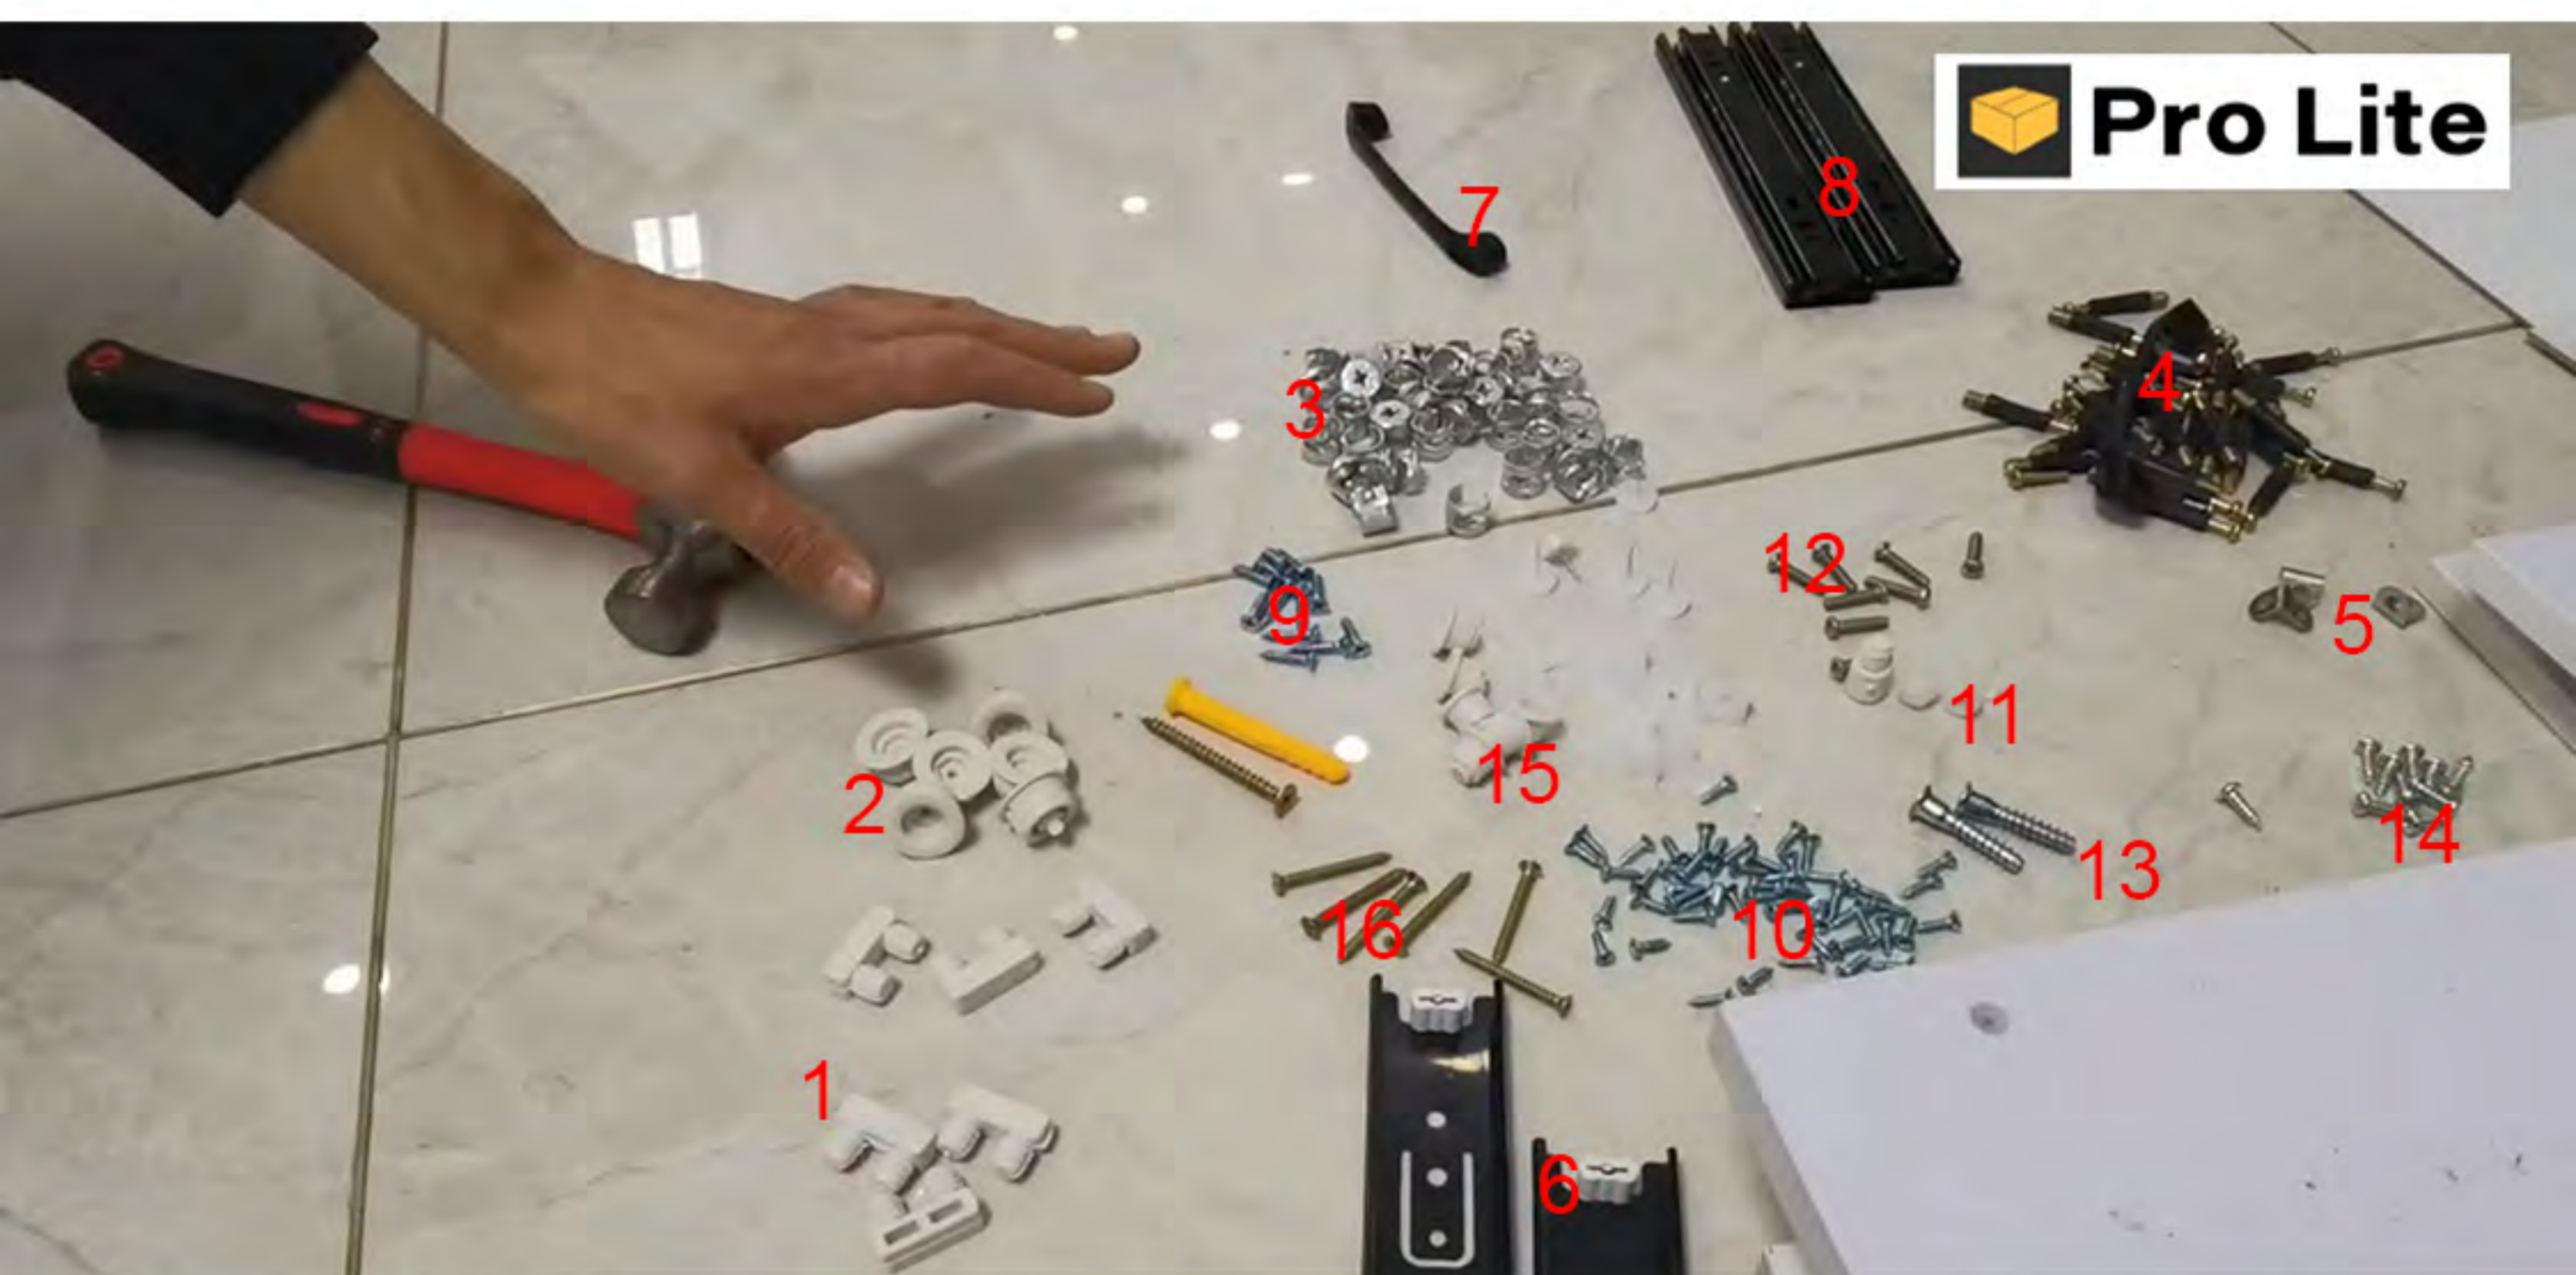




SOCE009-50x24CM



Please be sure to use a manual screwdriver and refrain from using an electric drill.






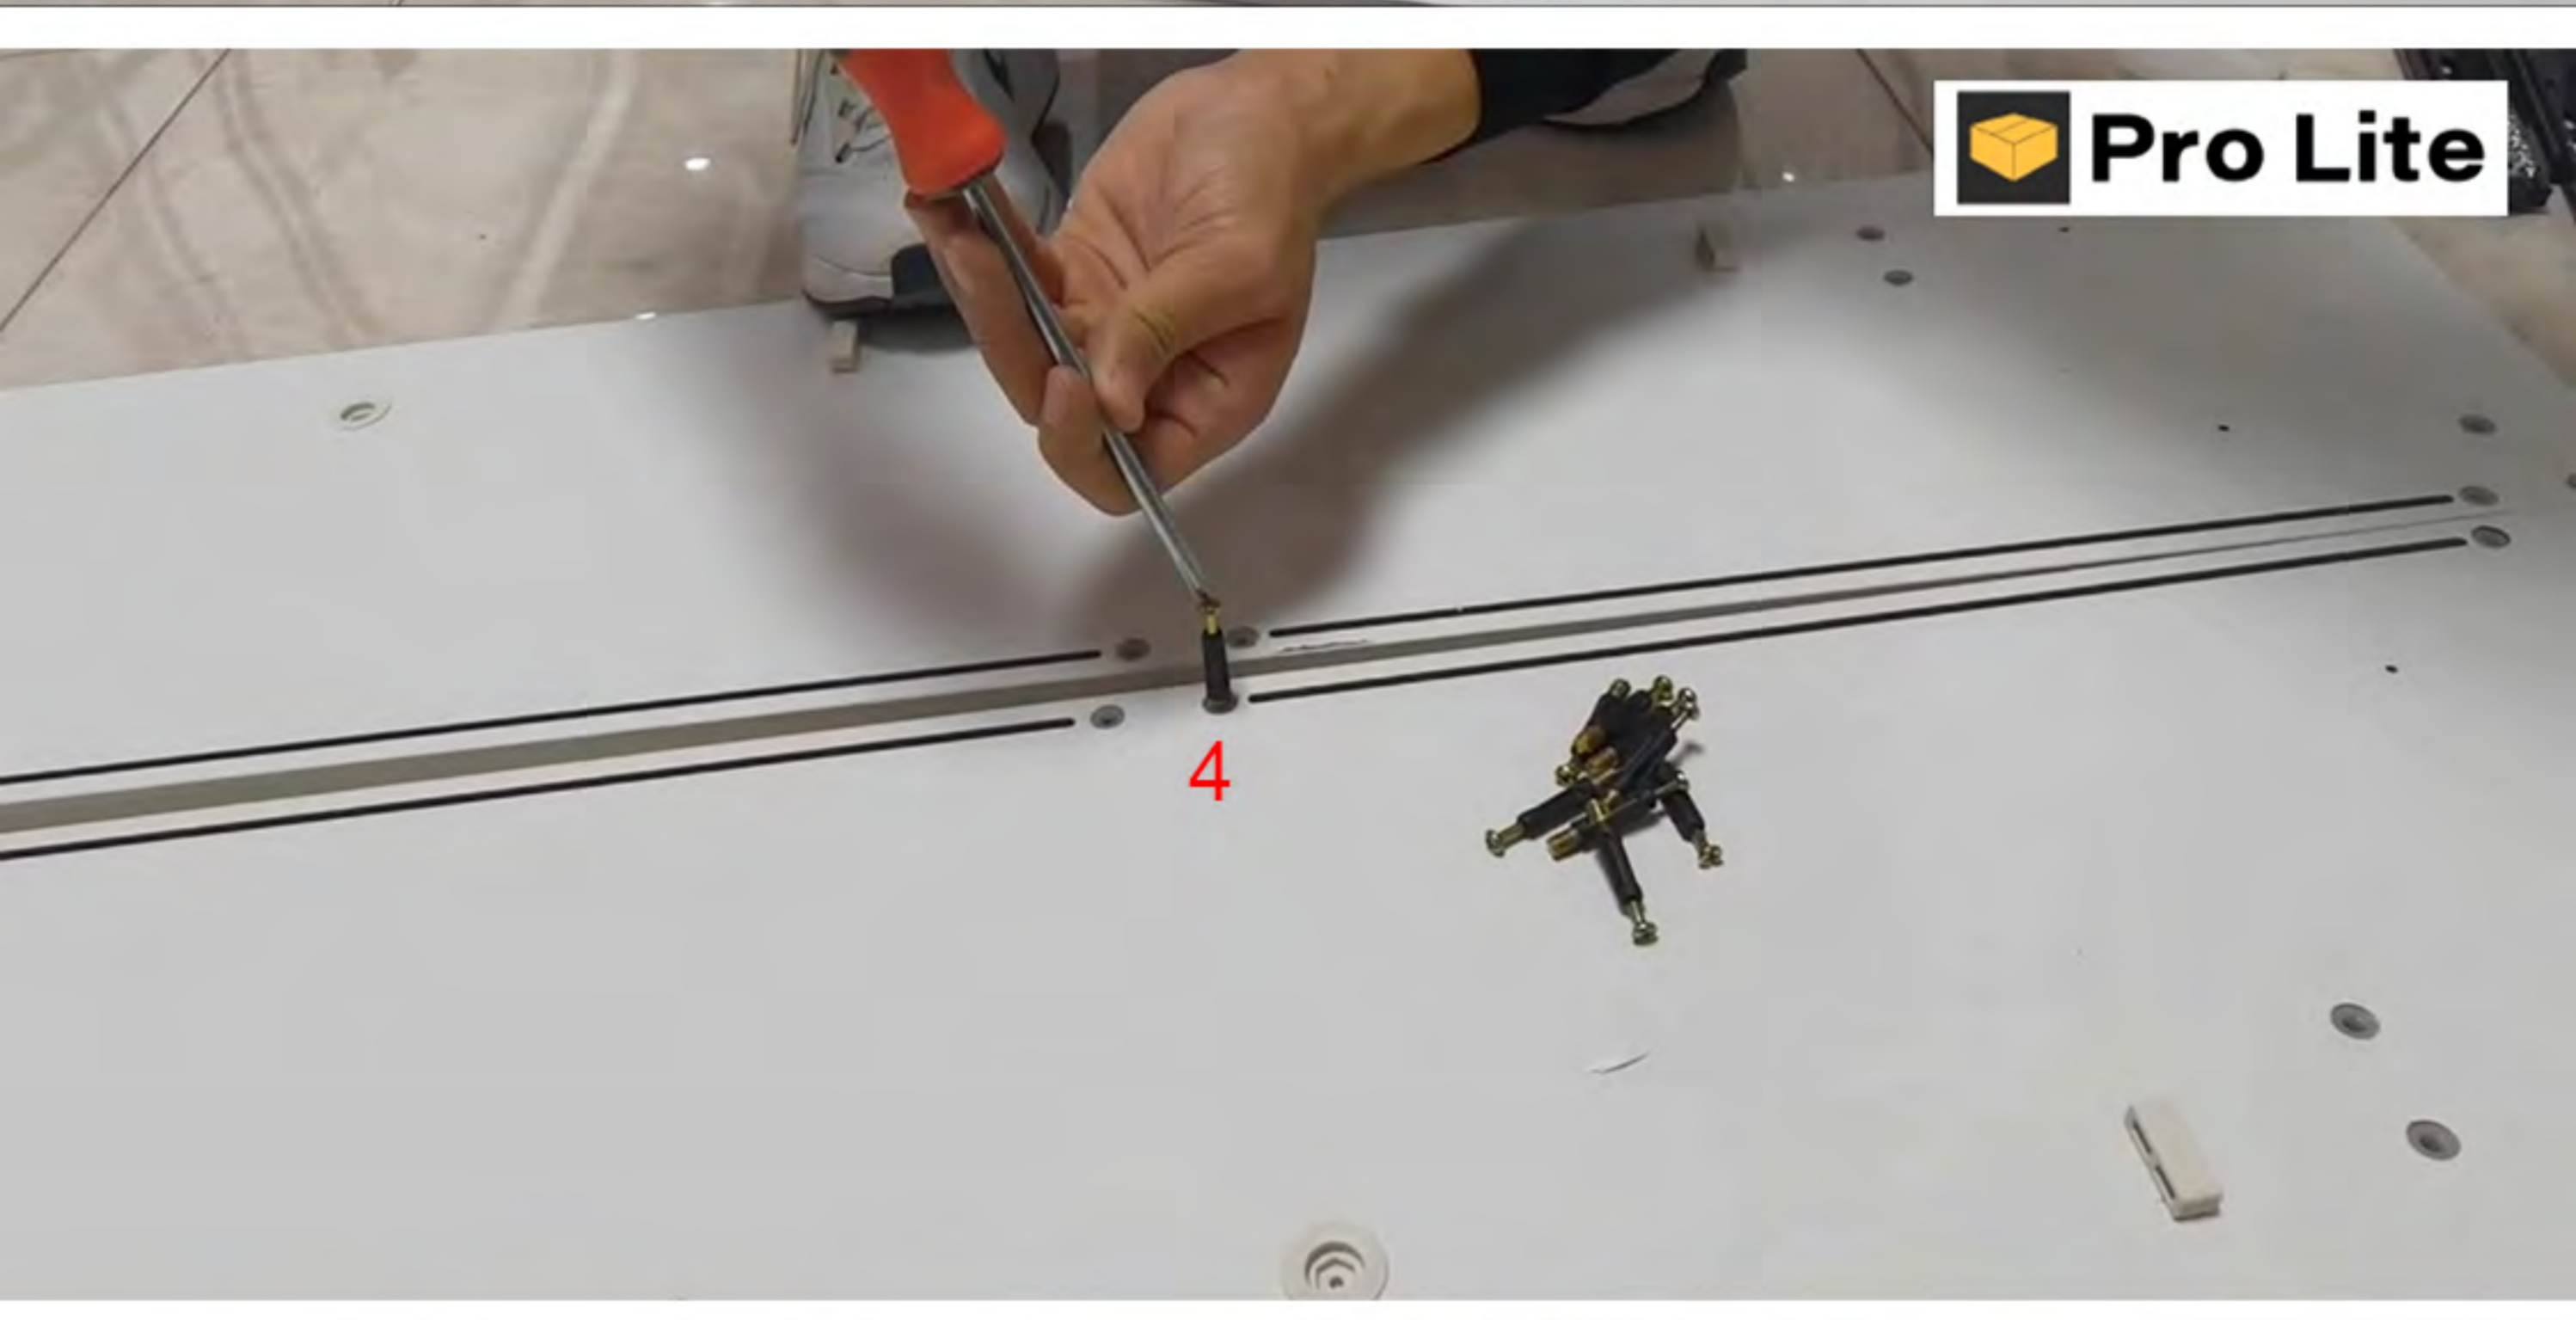


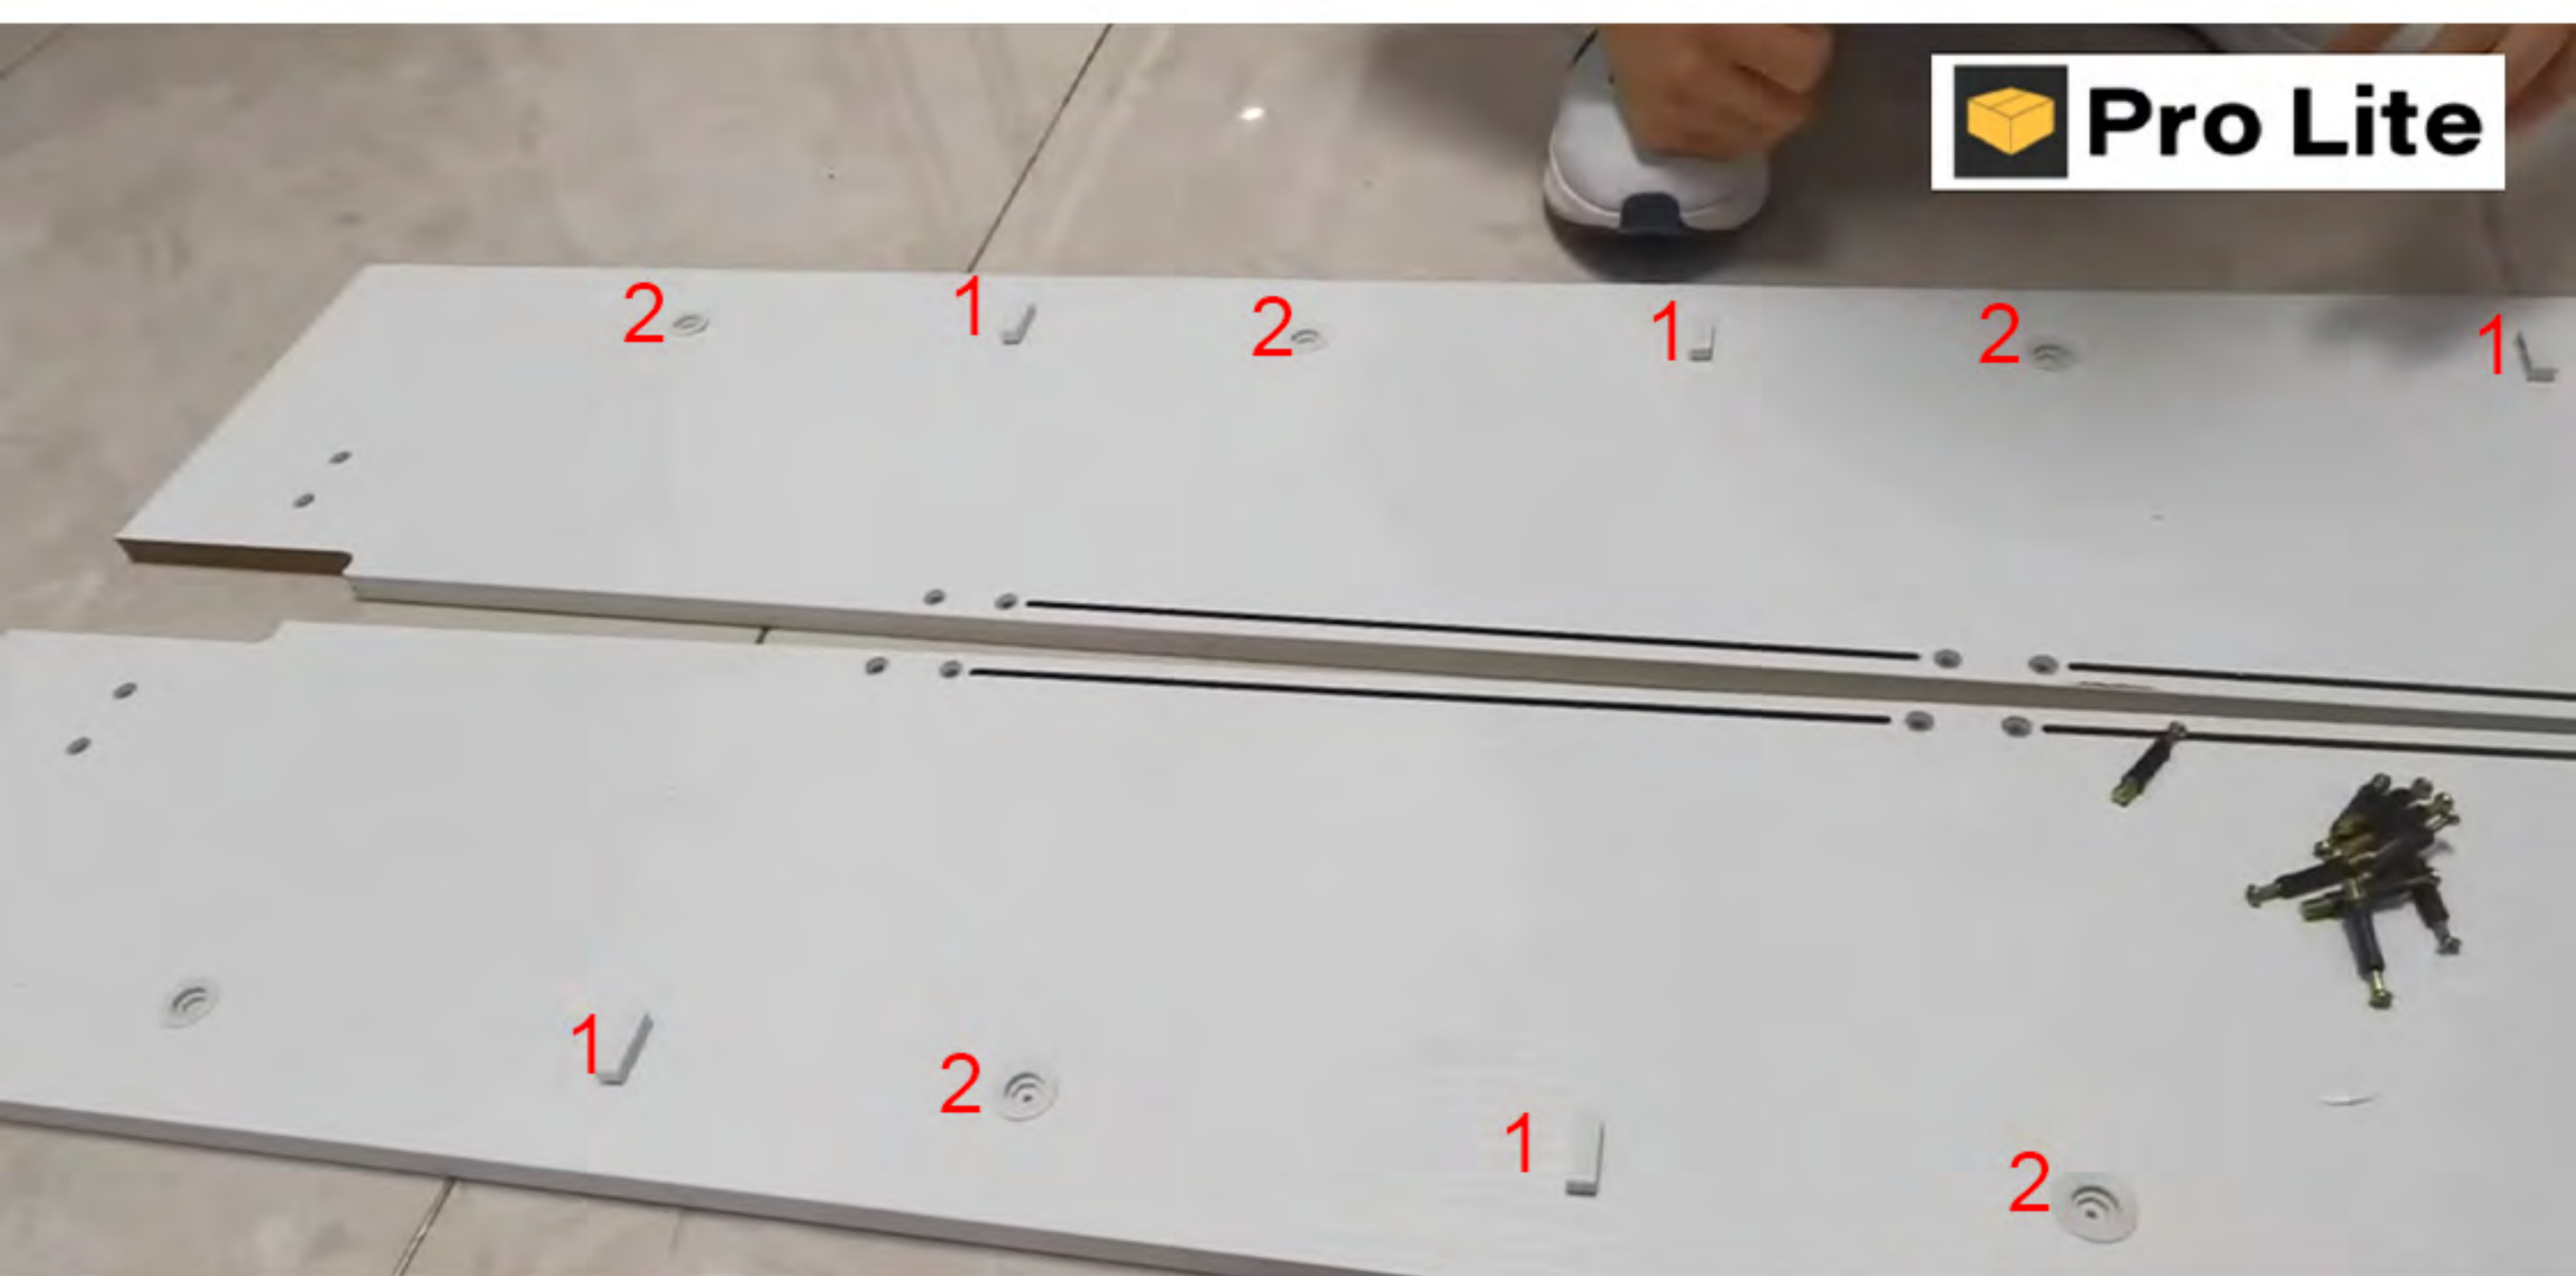


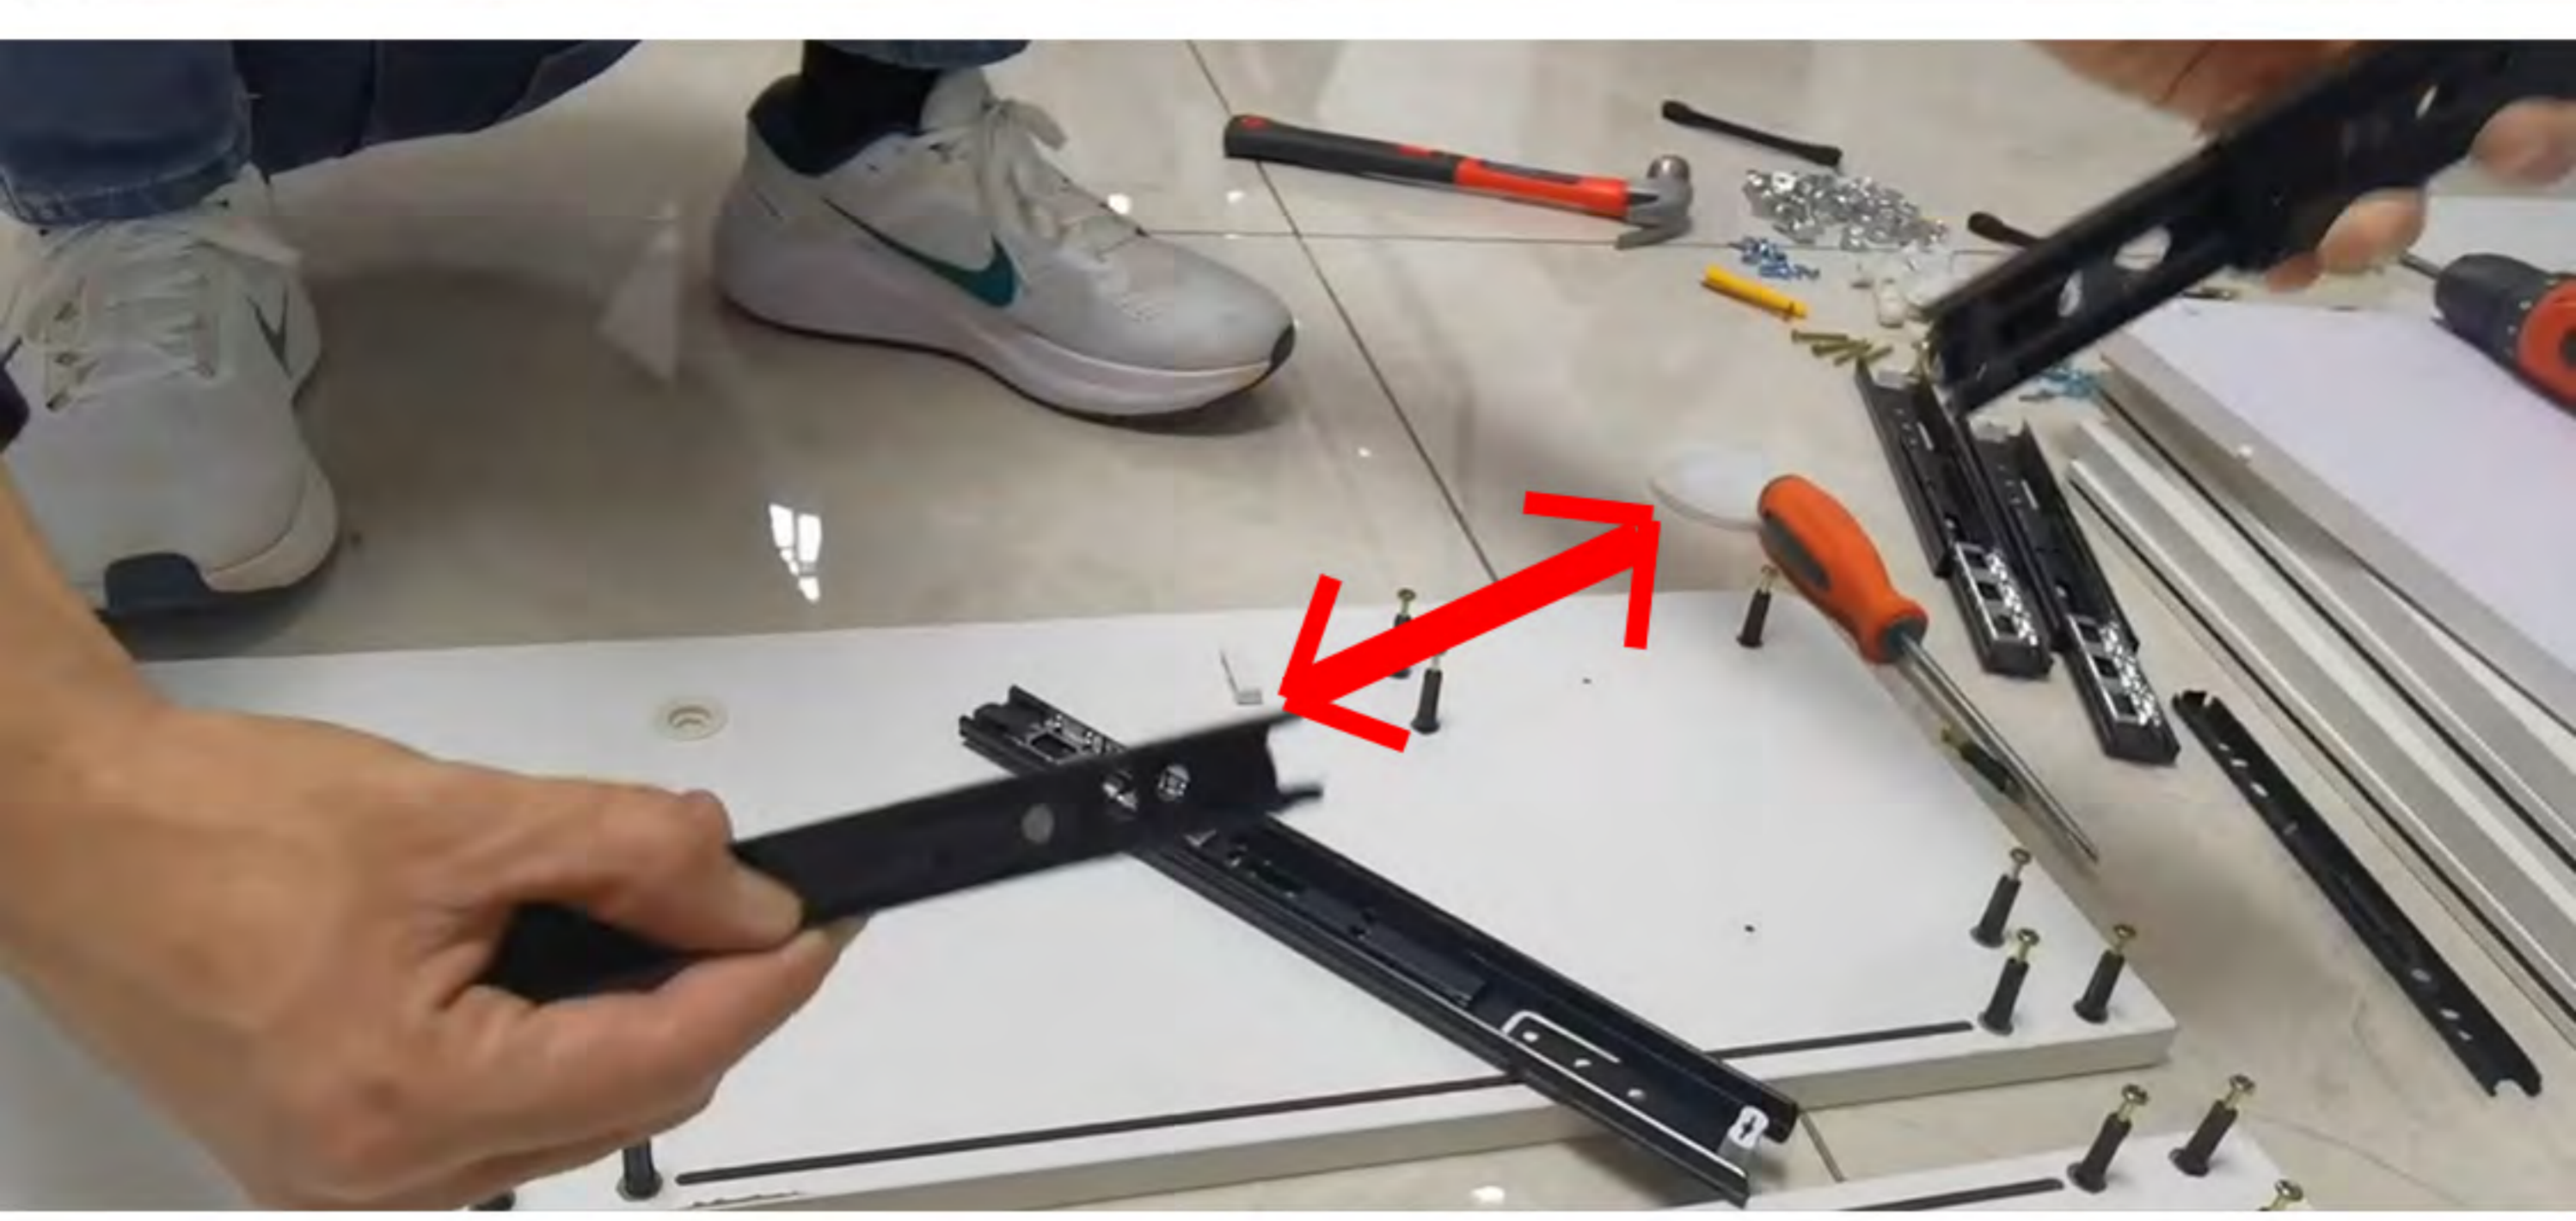


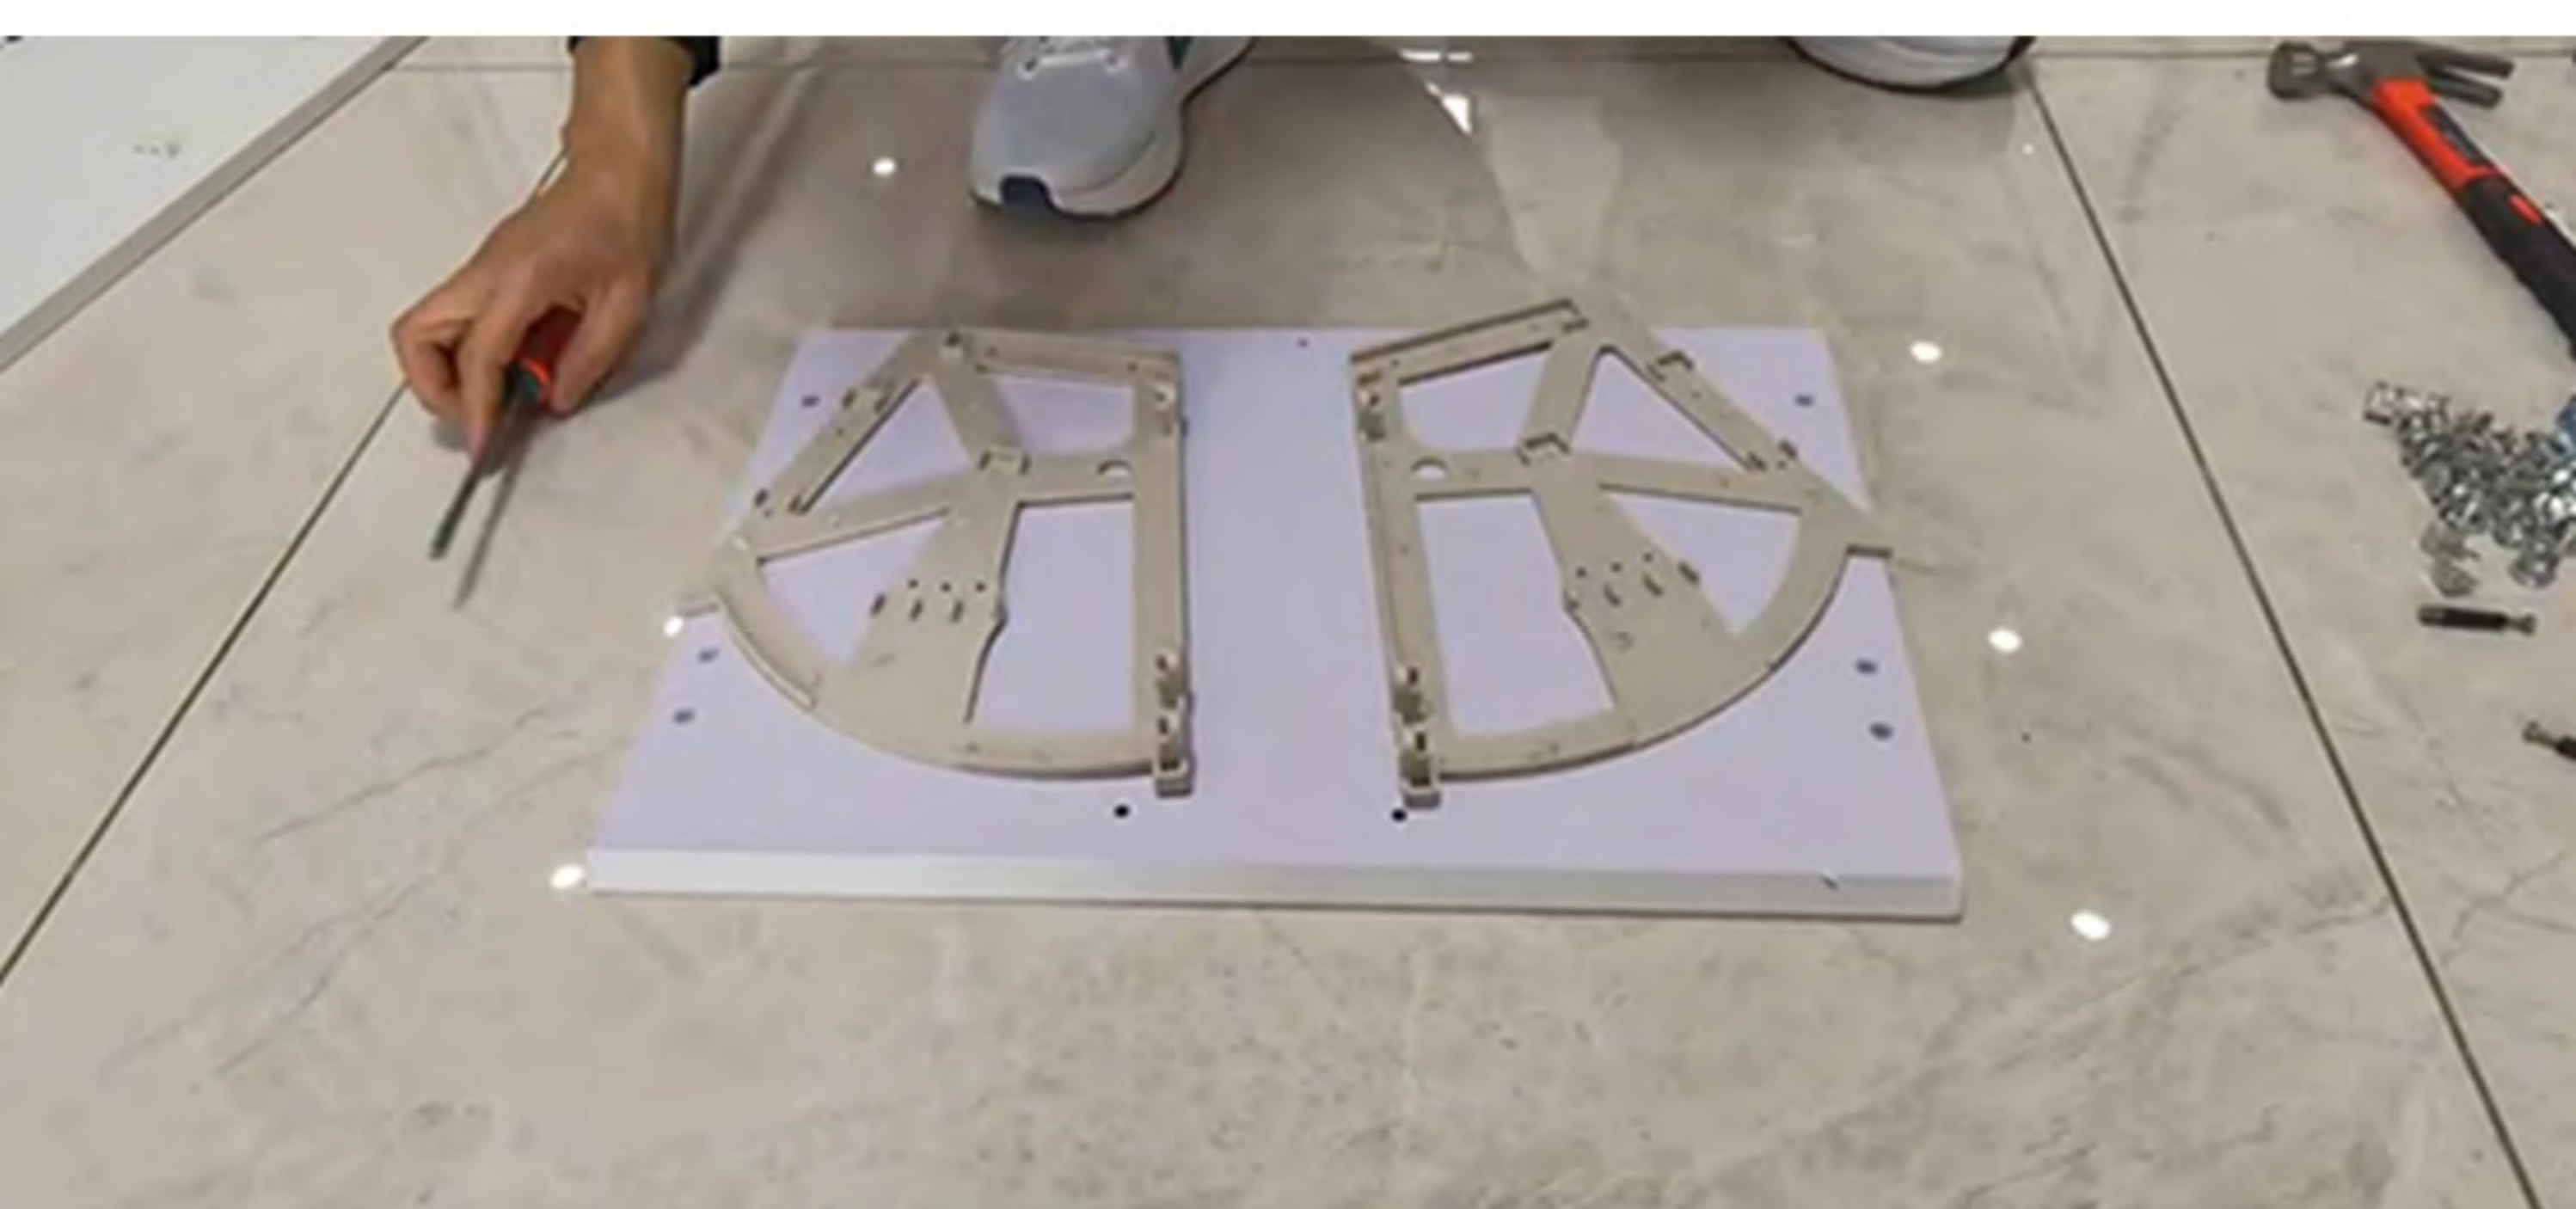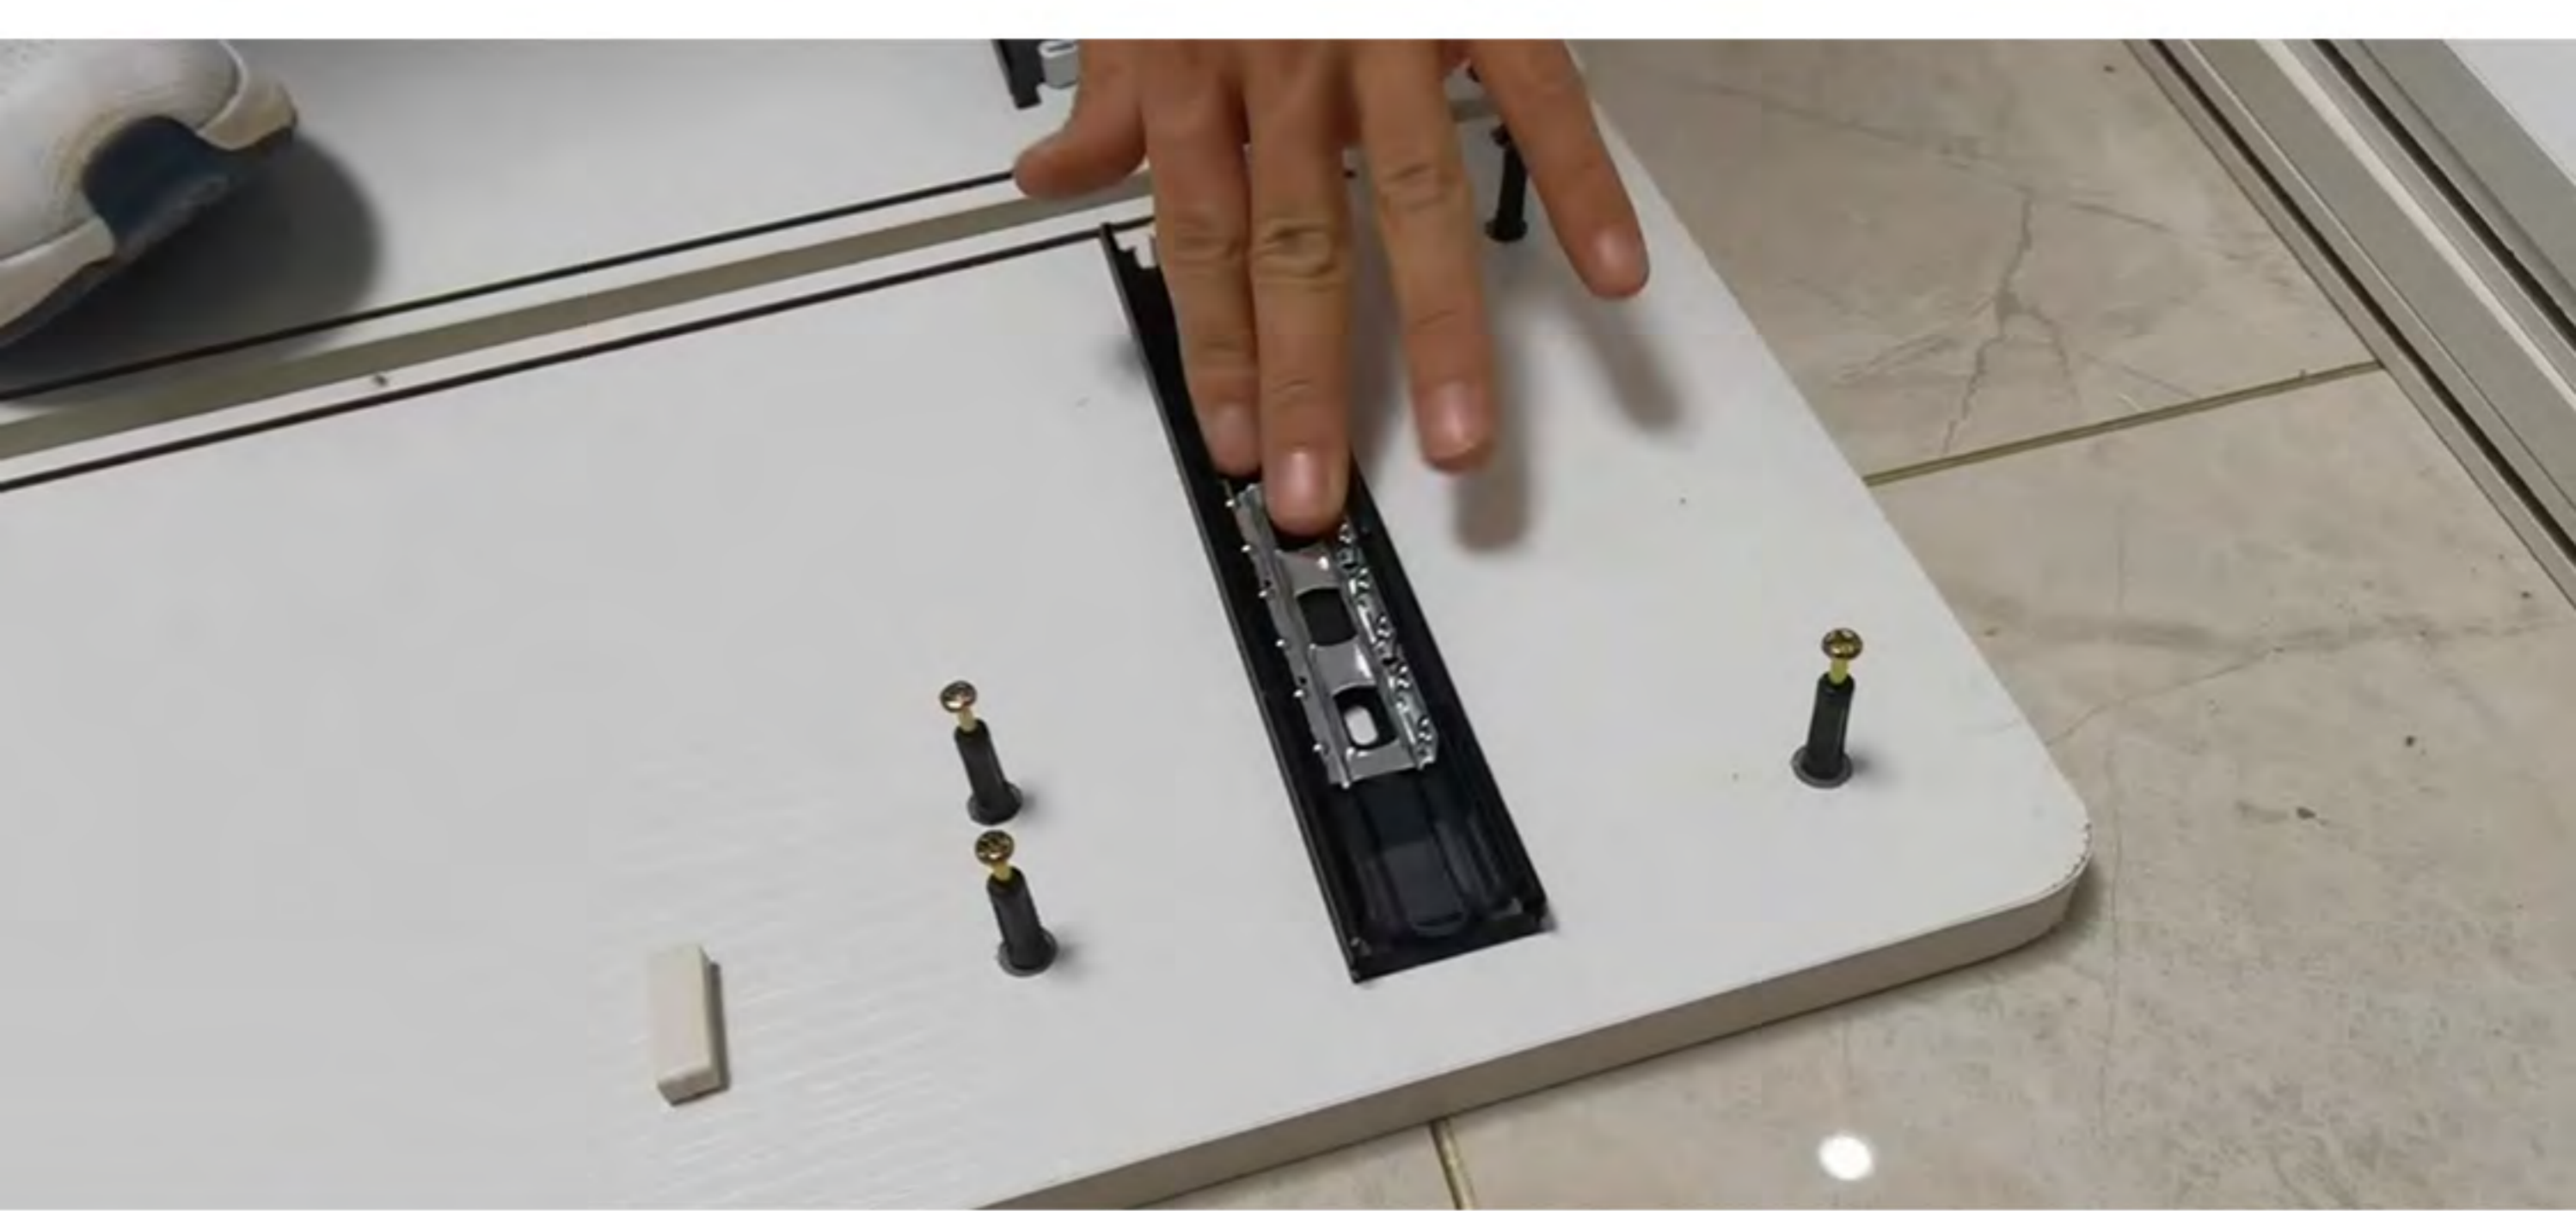


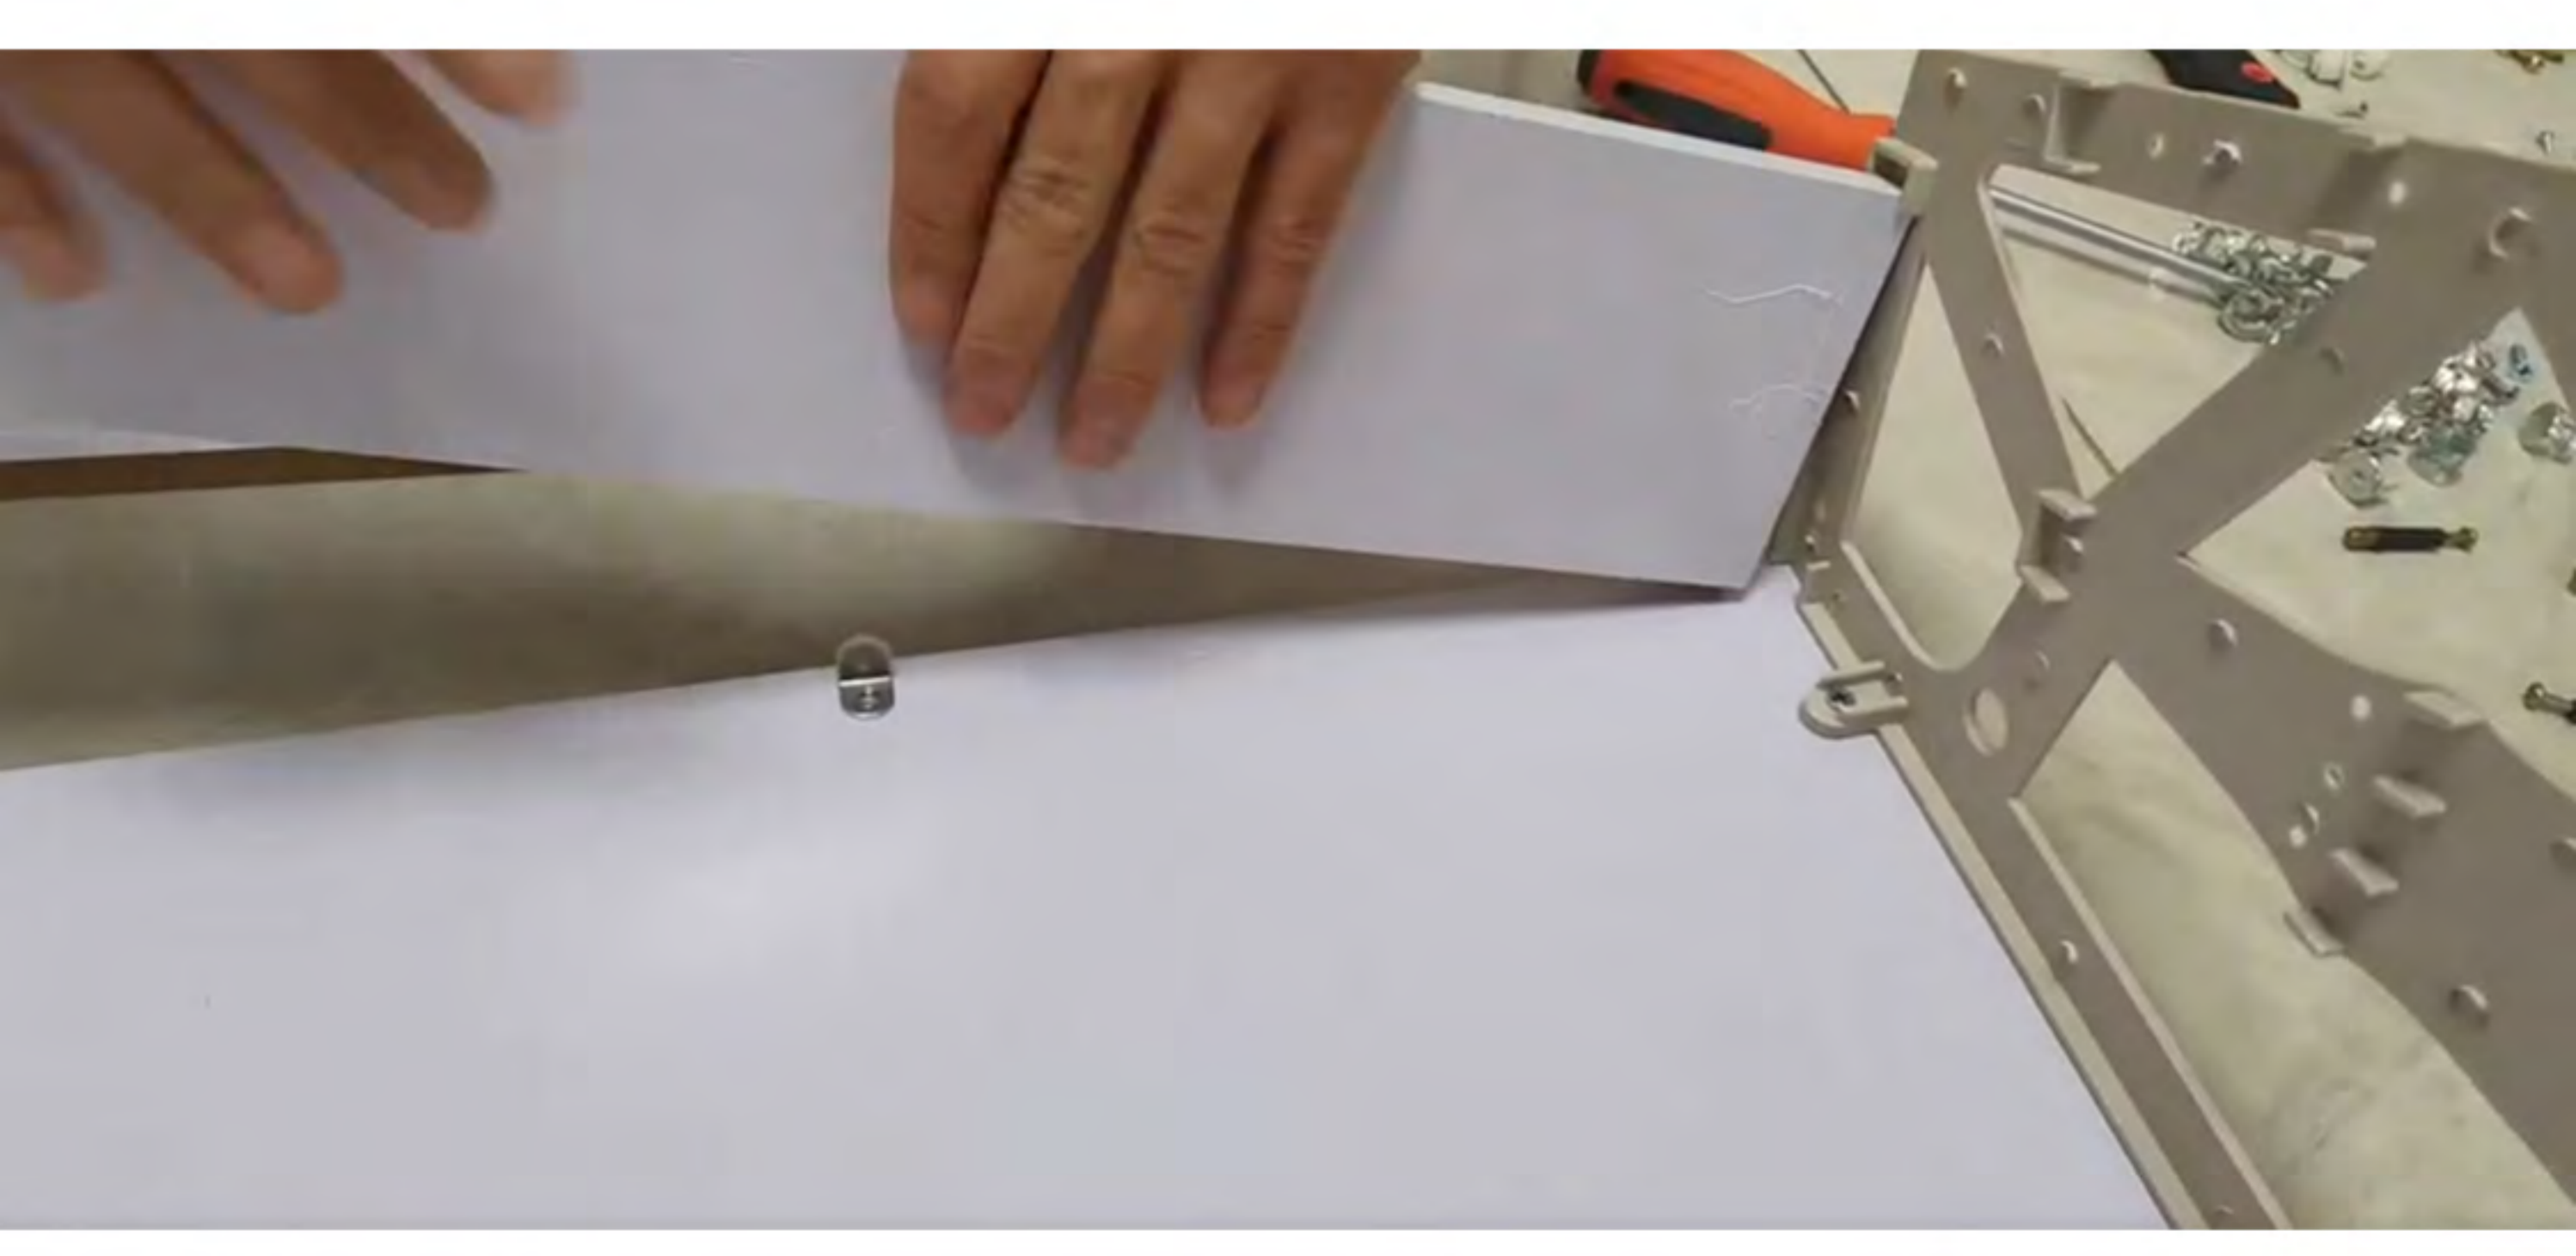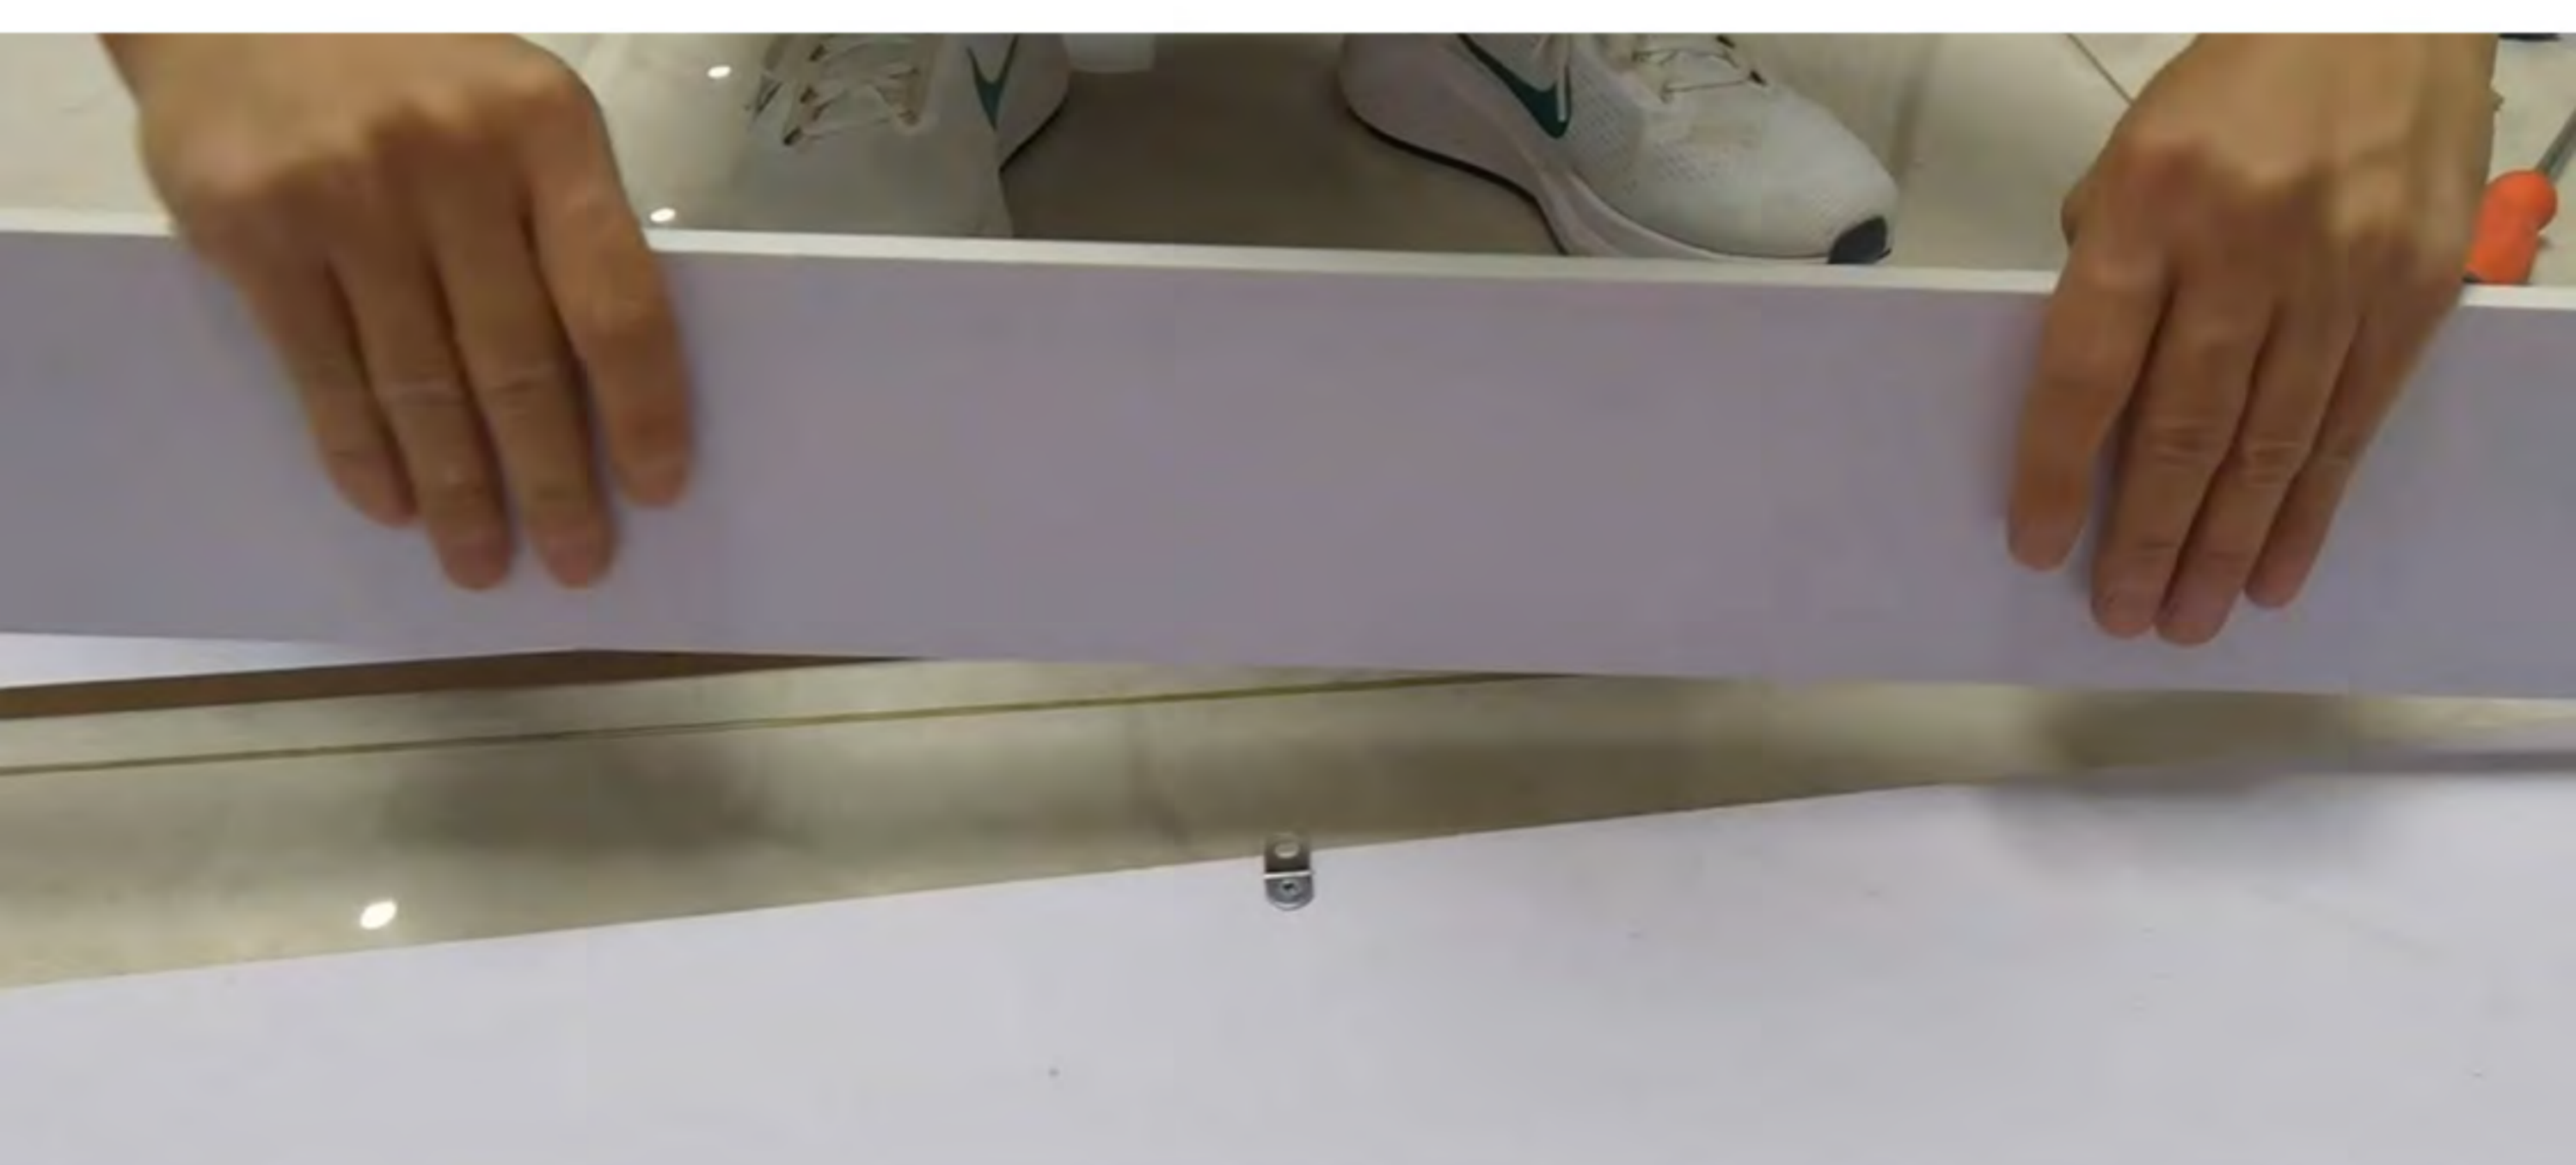

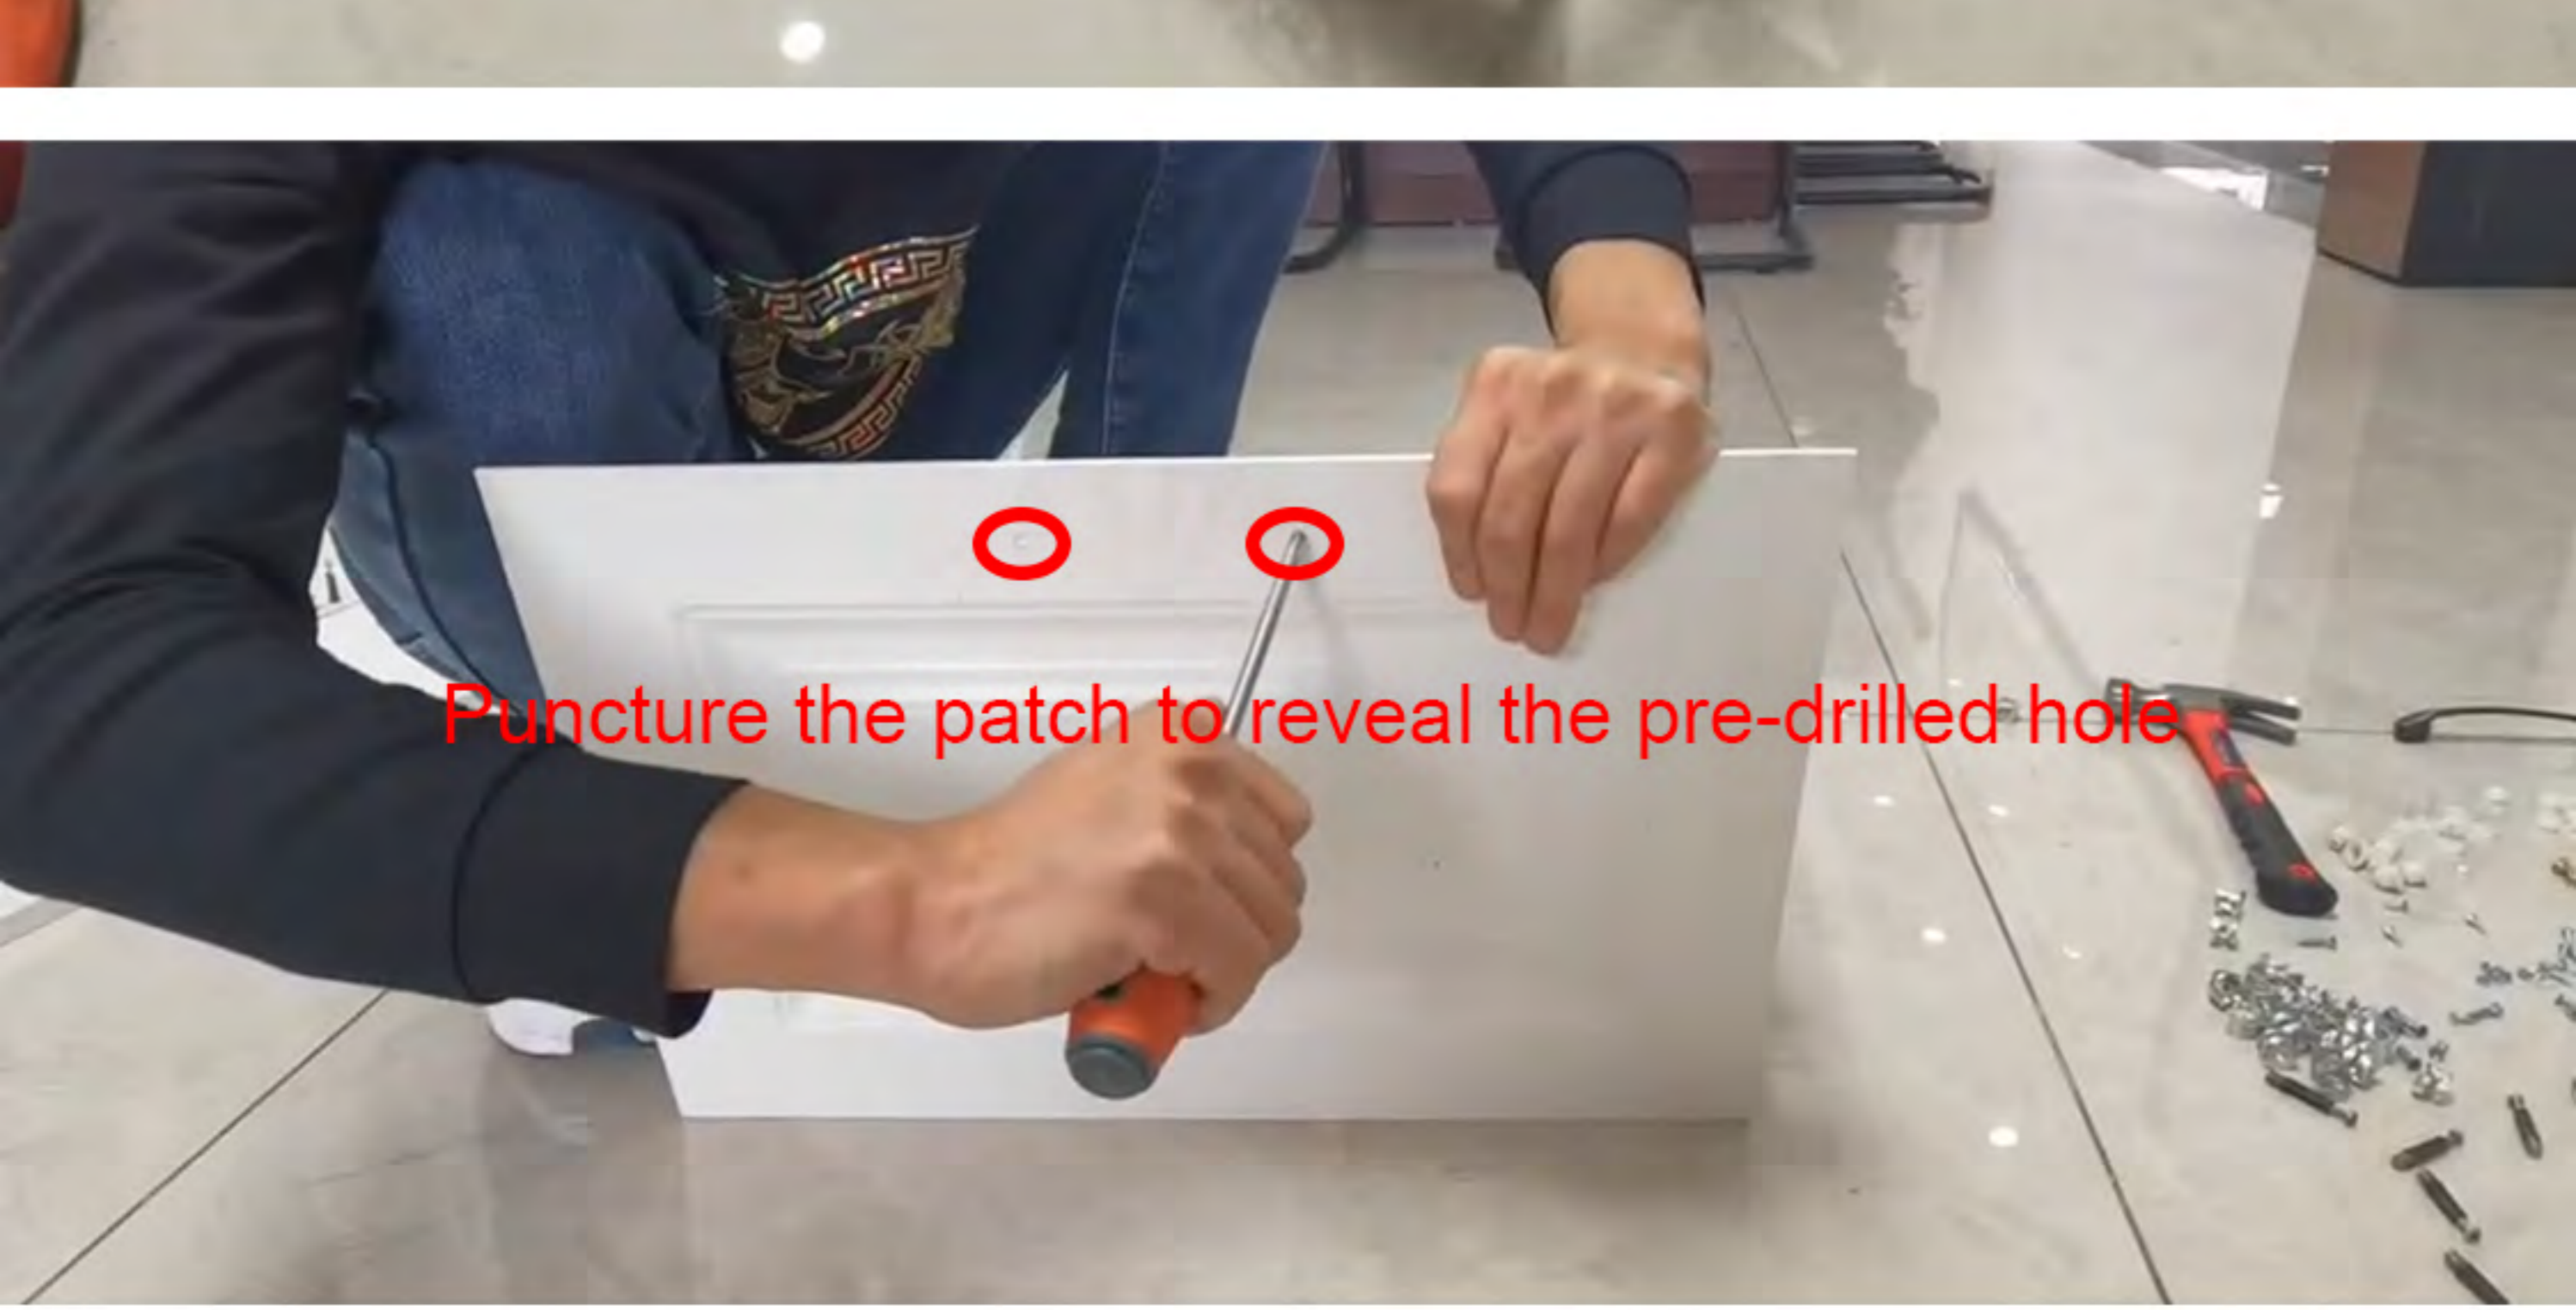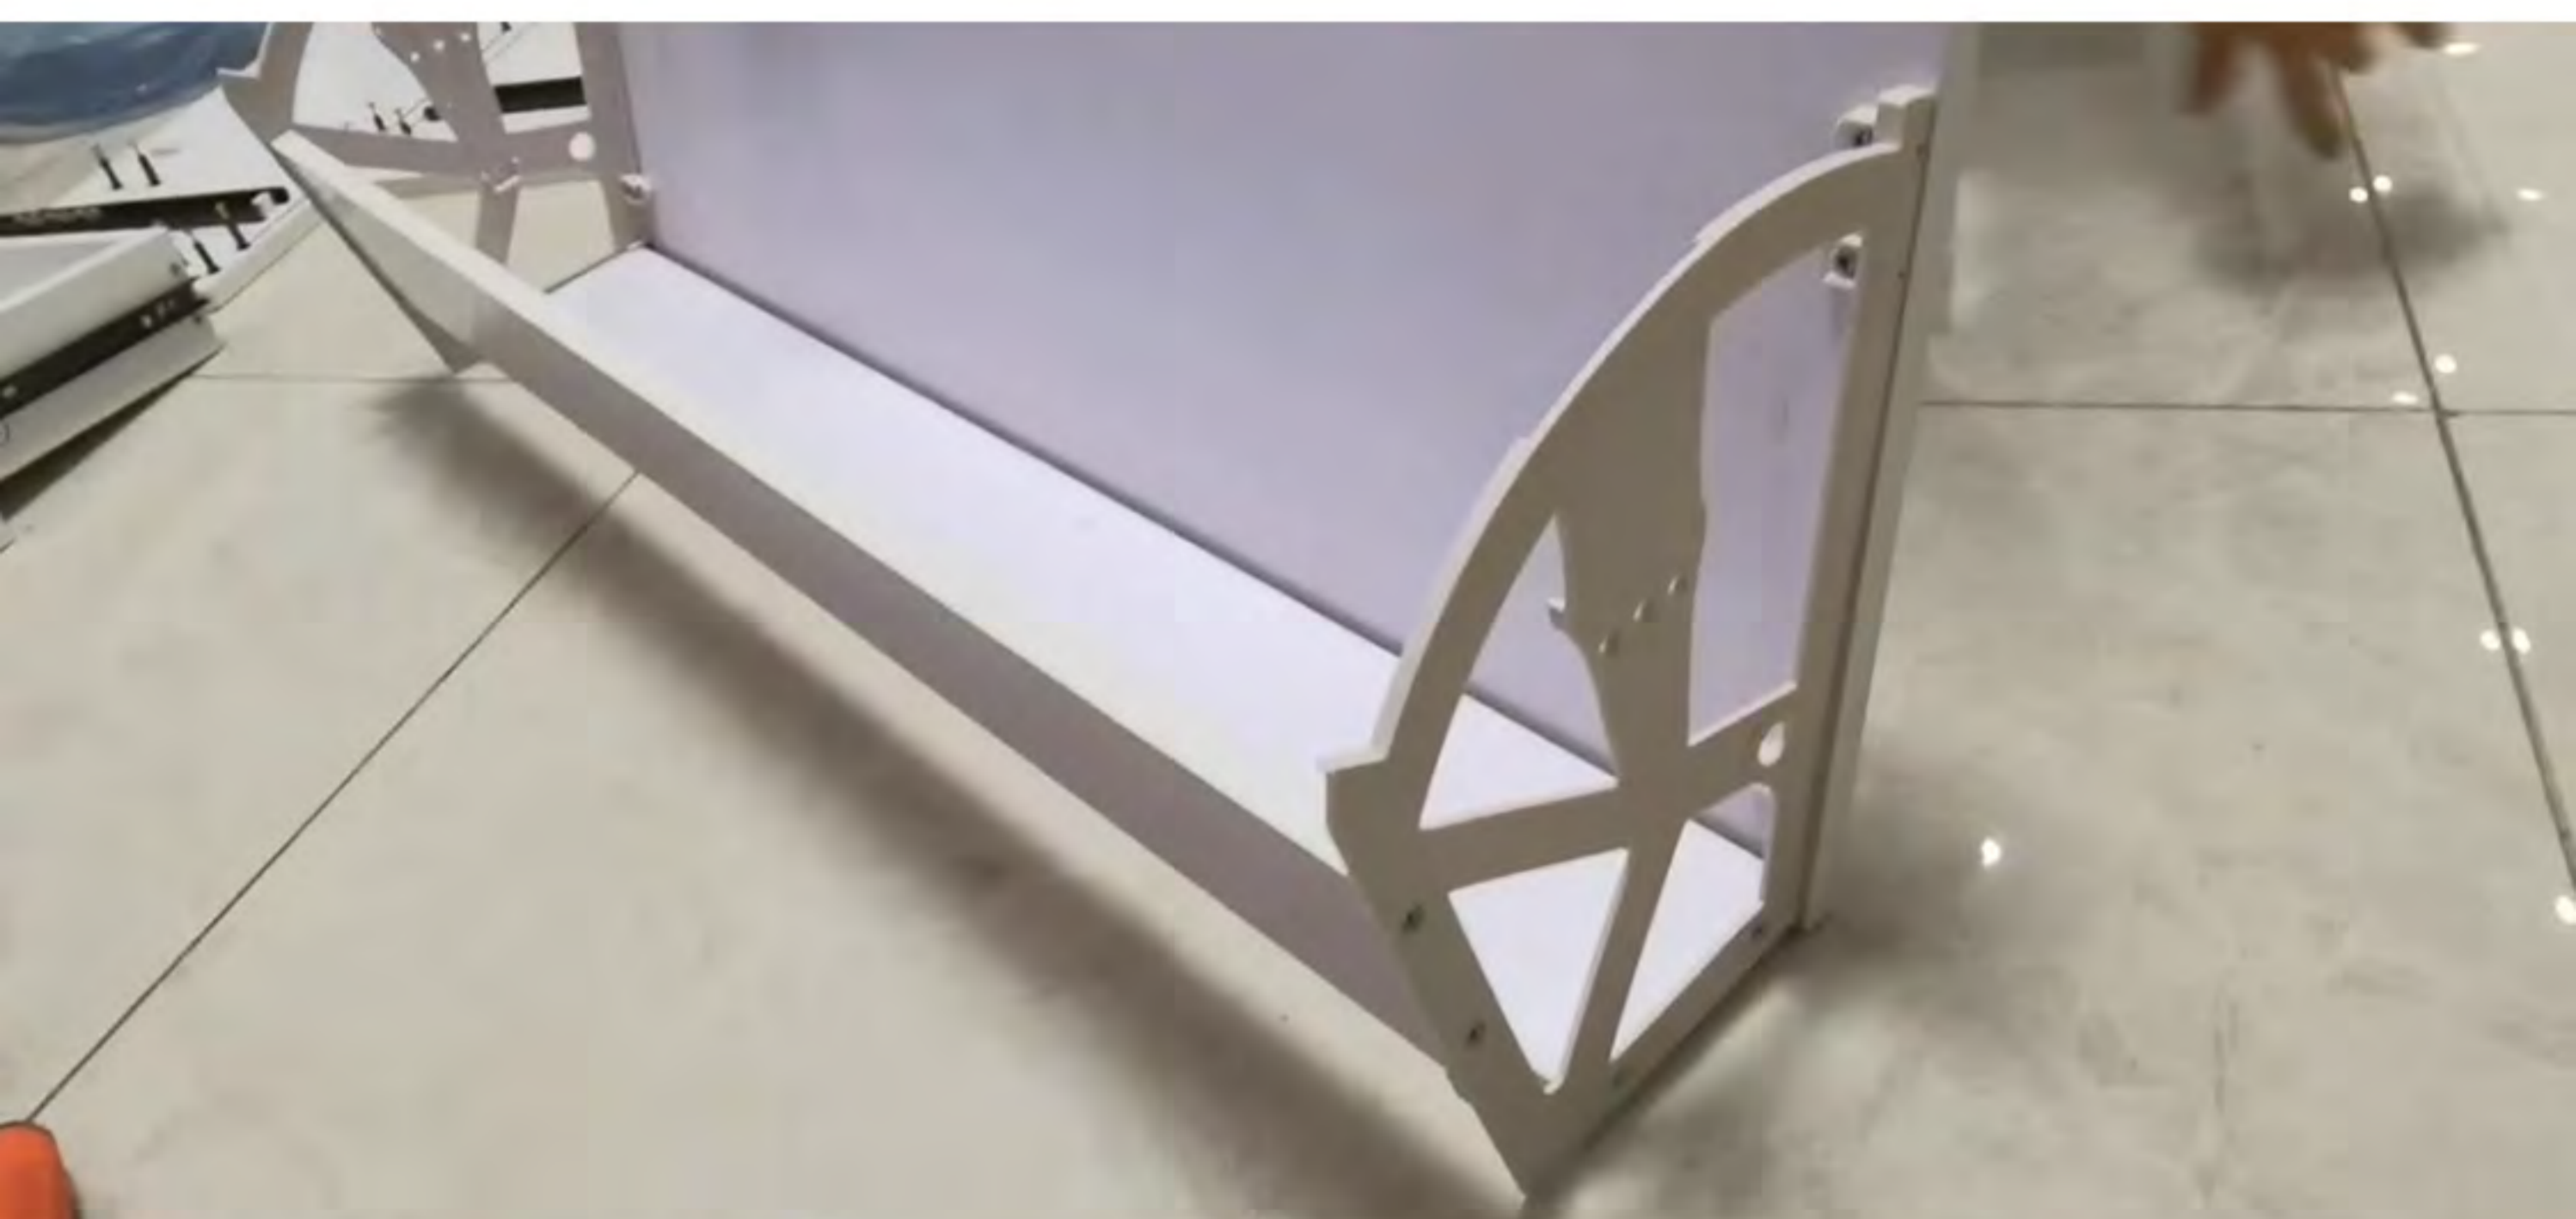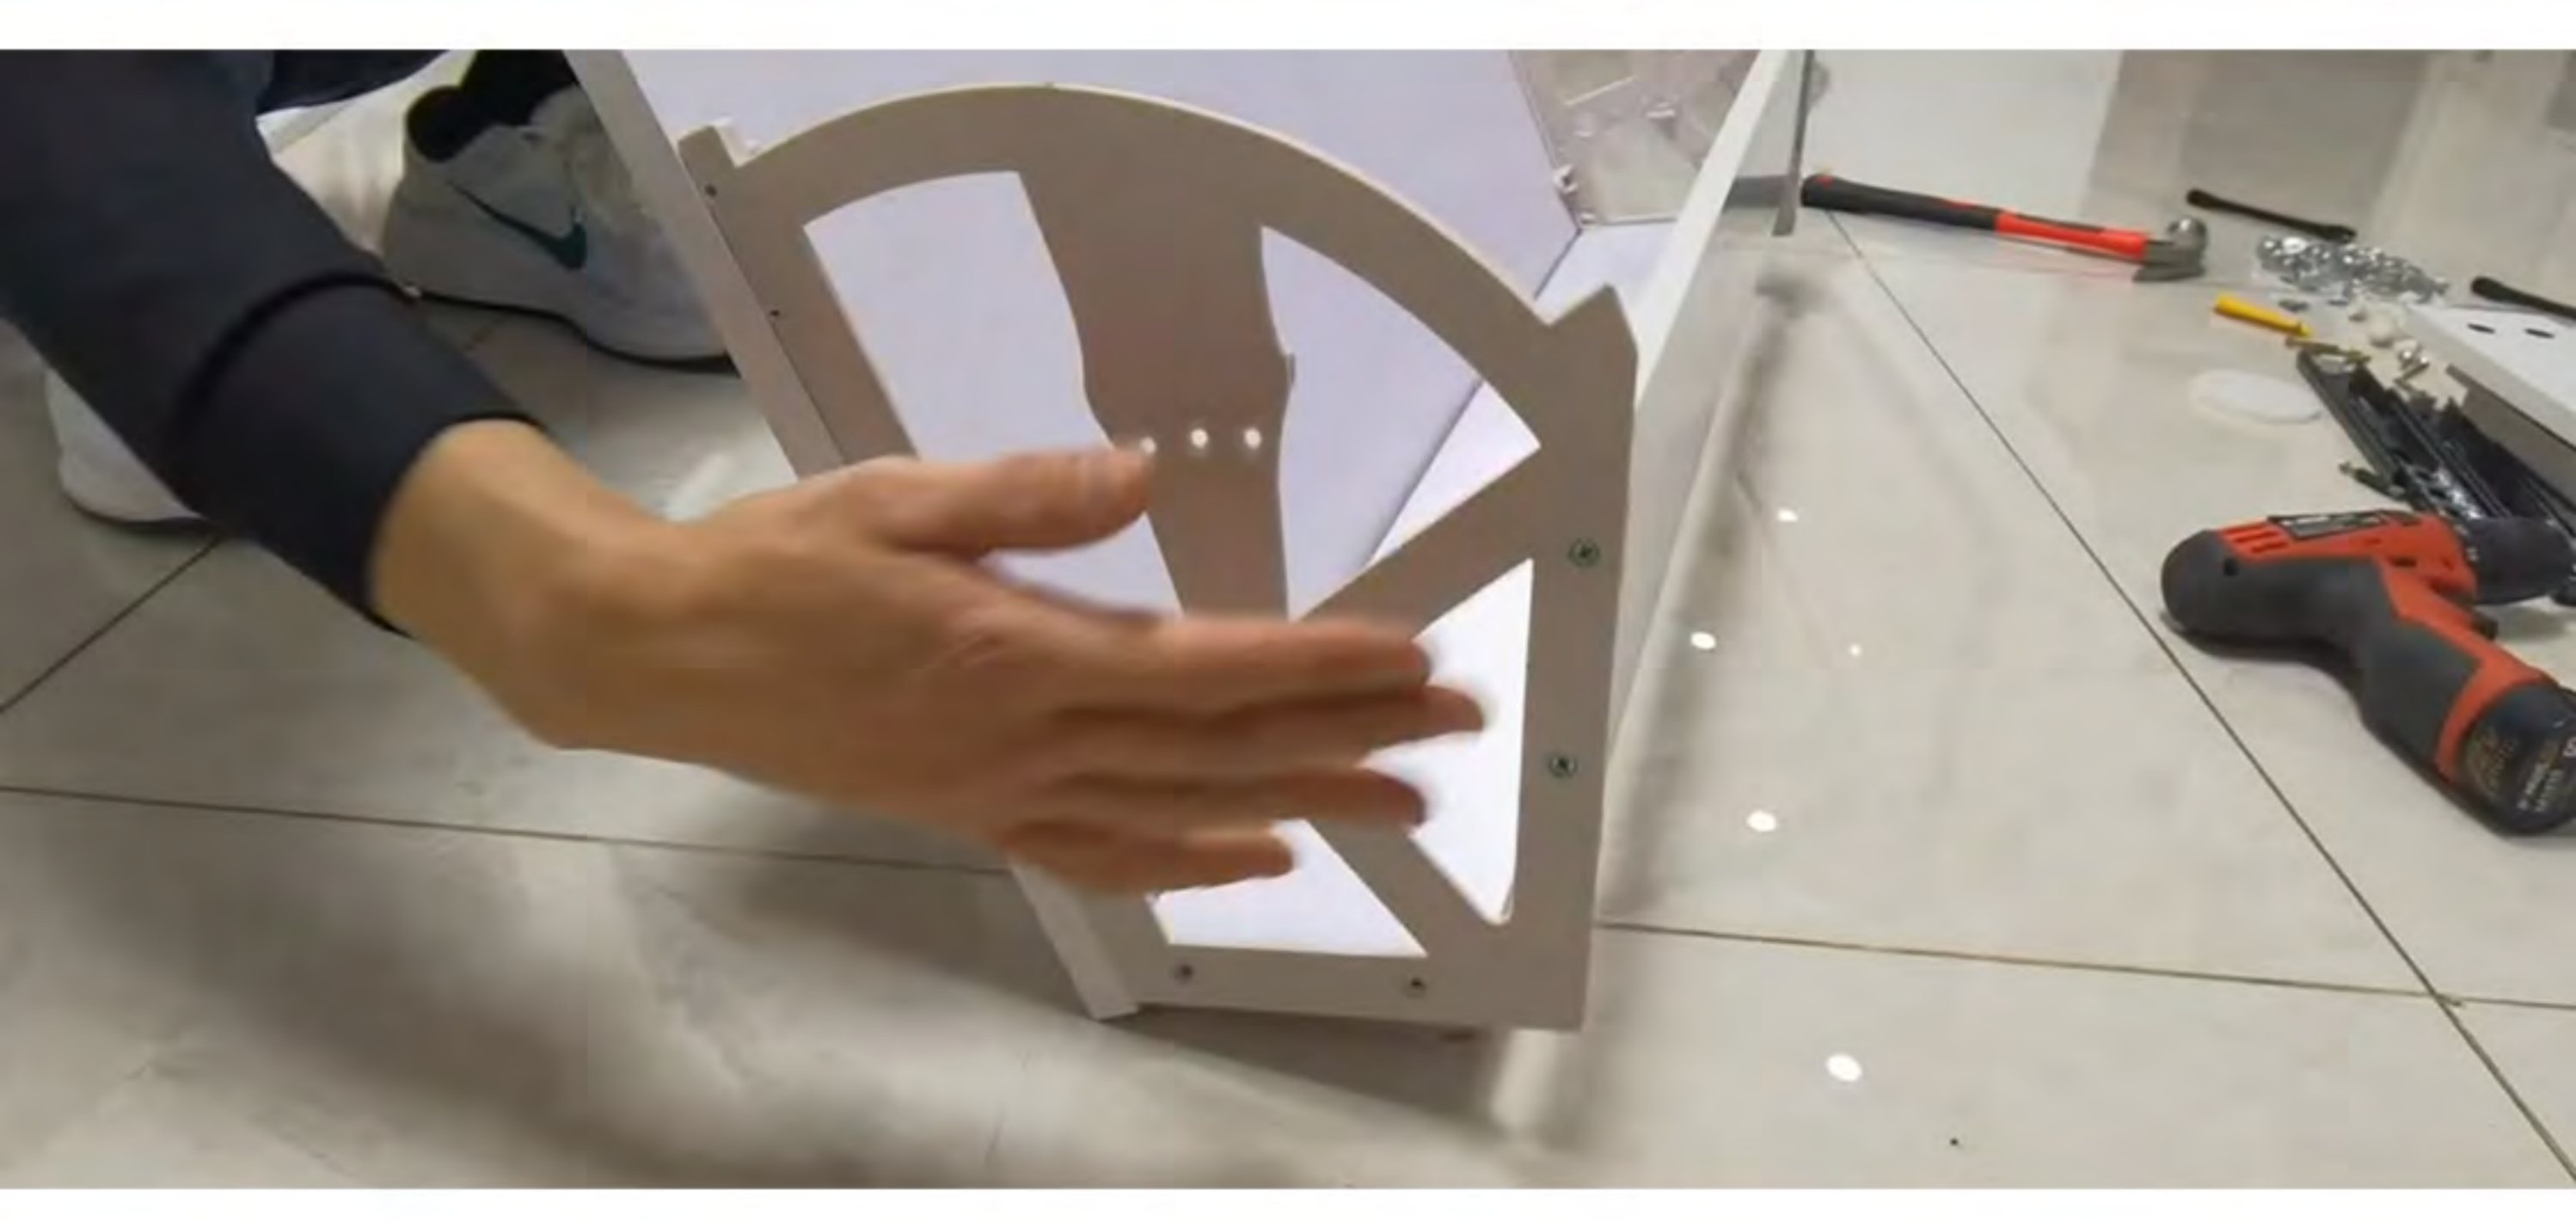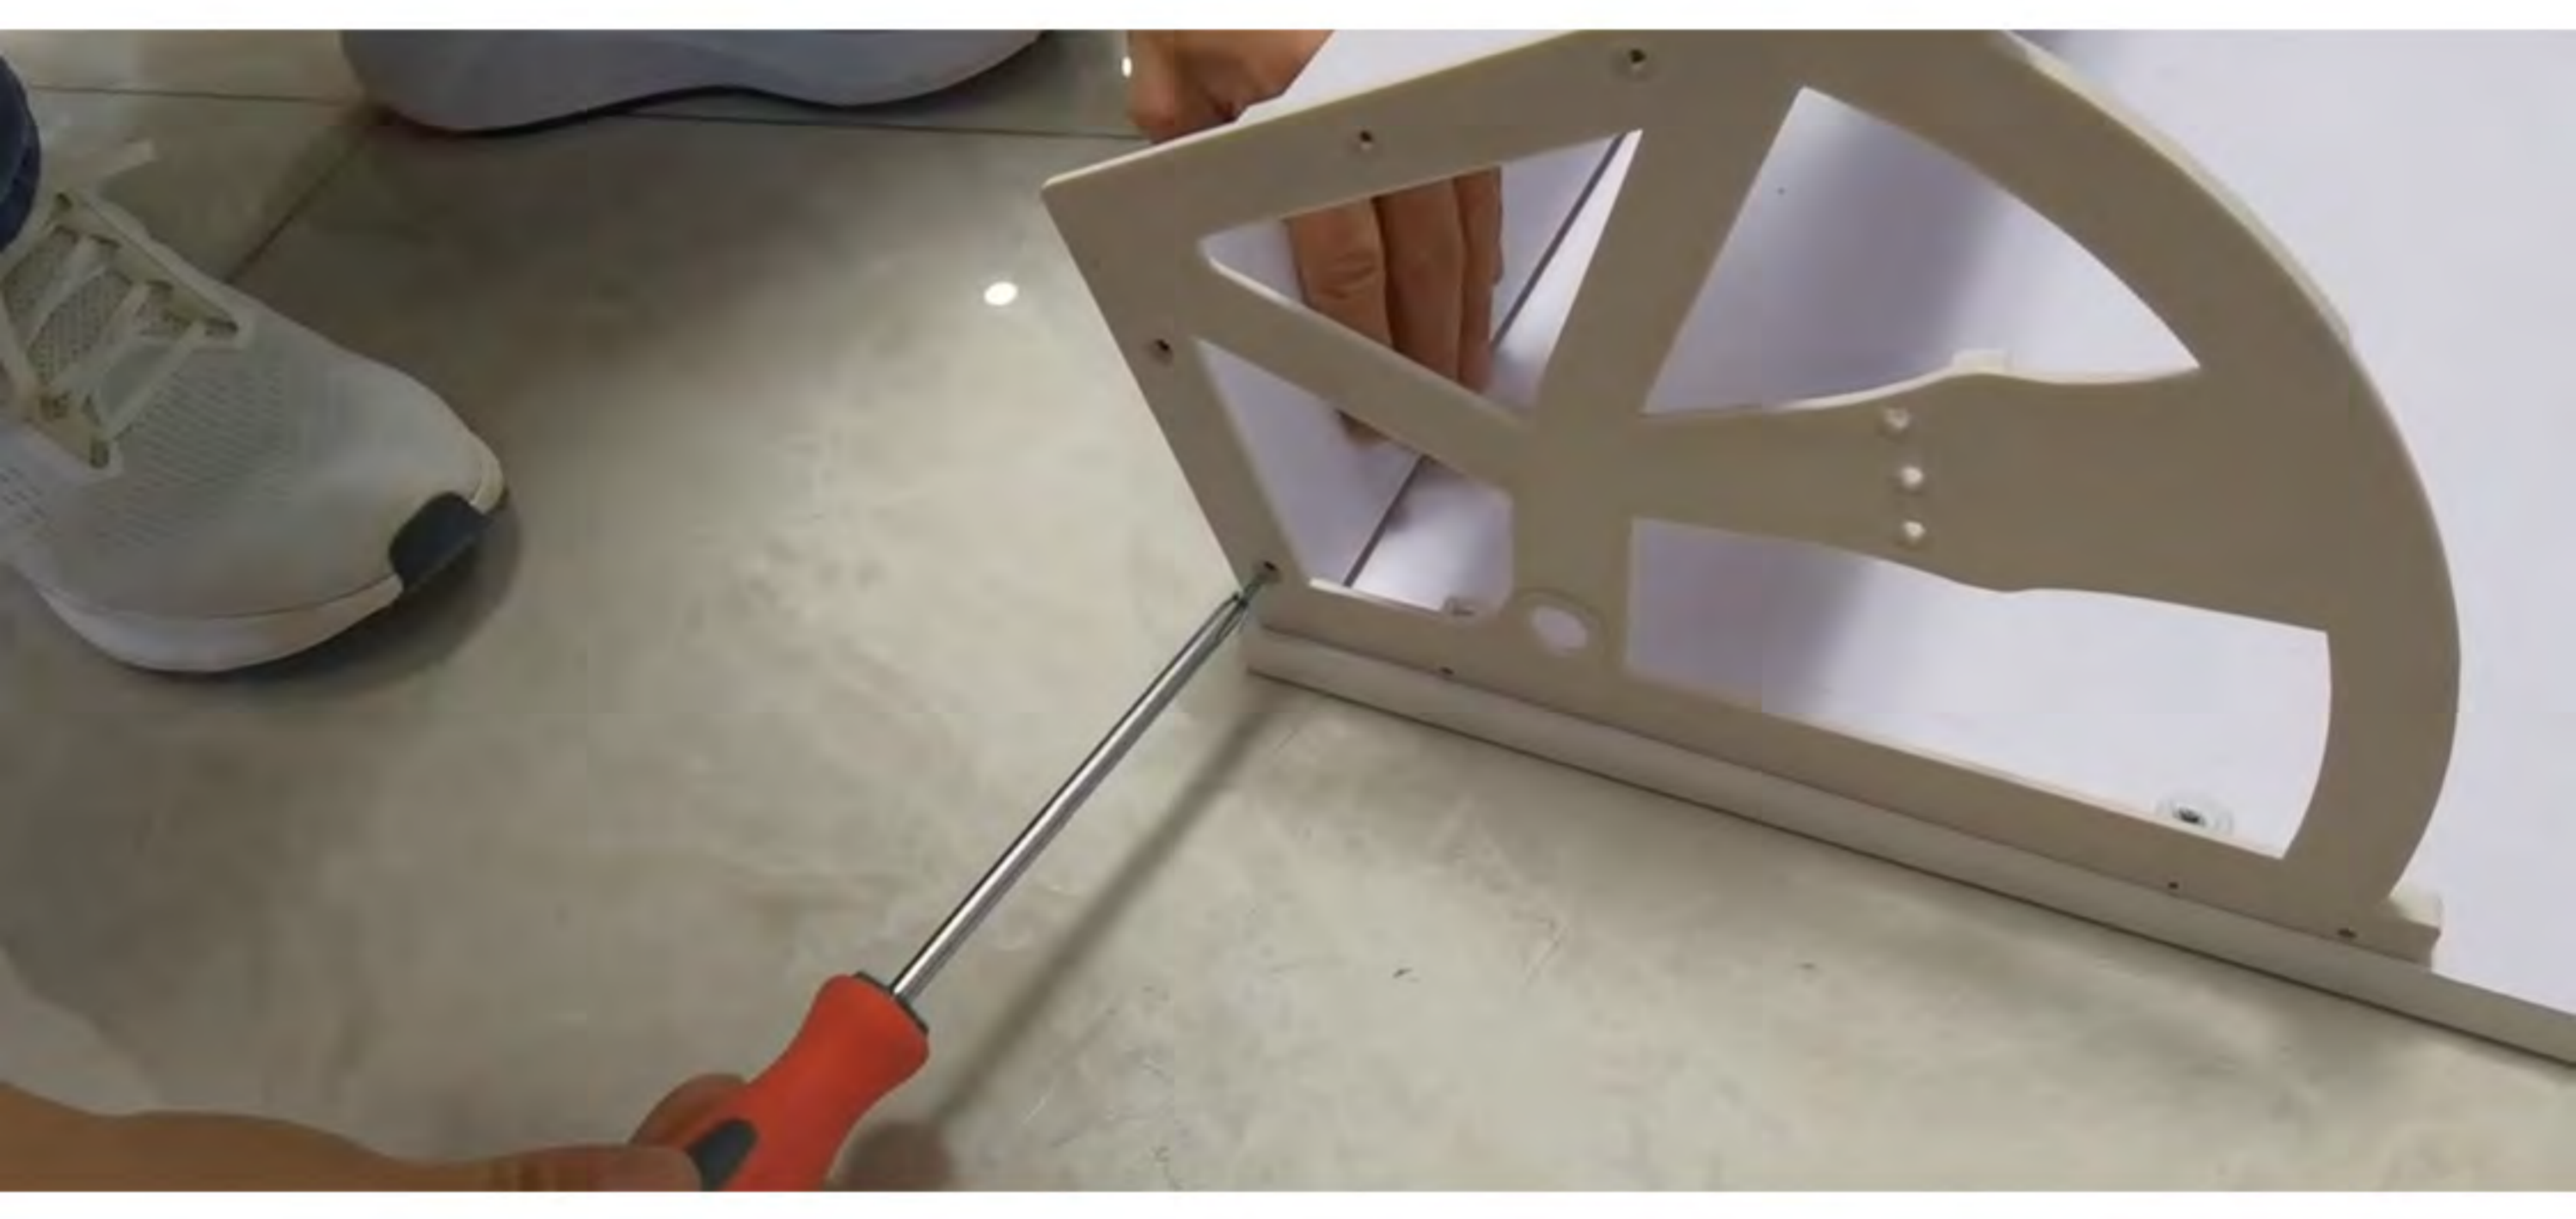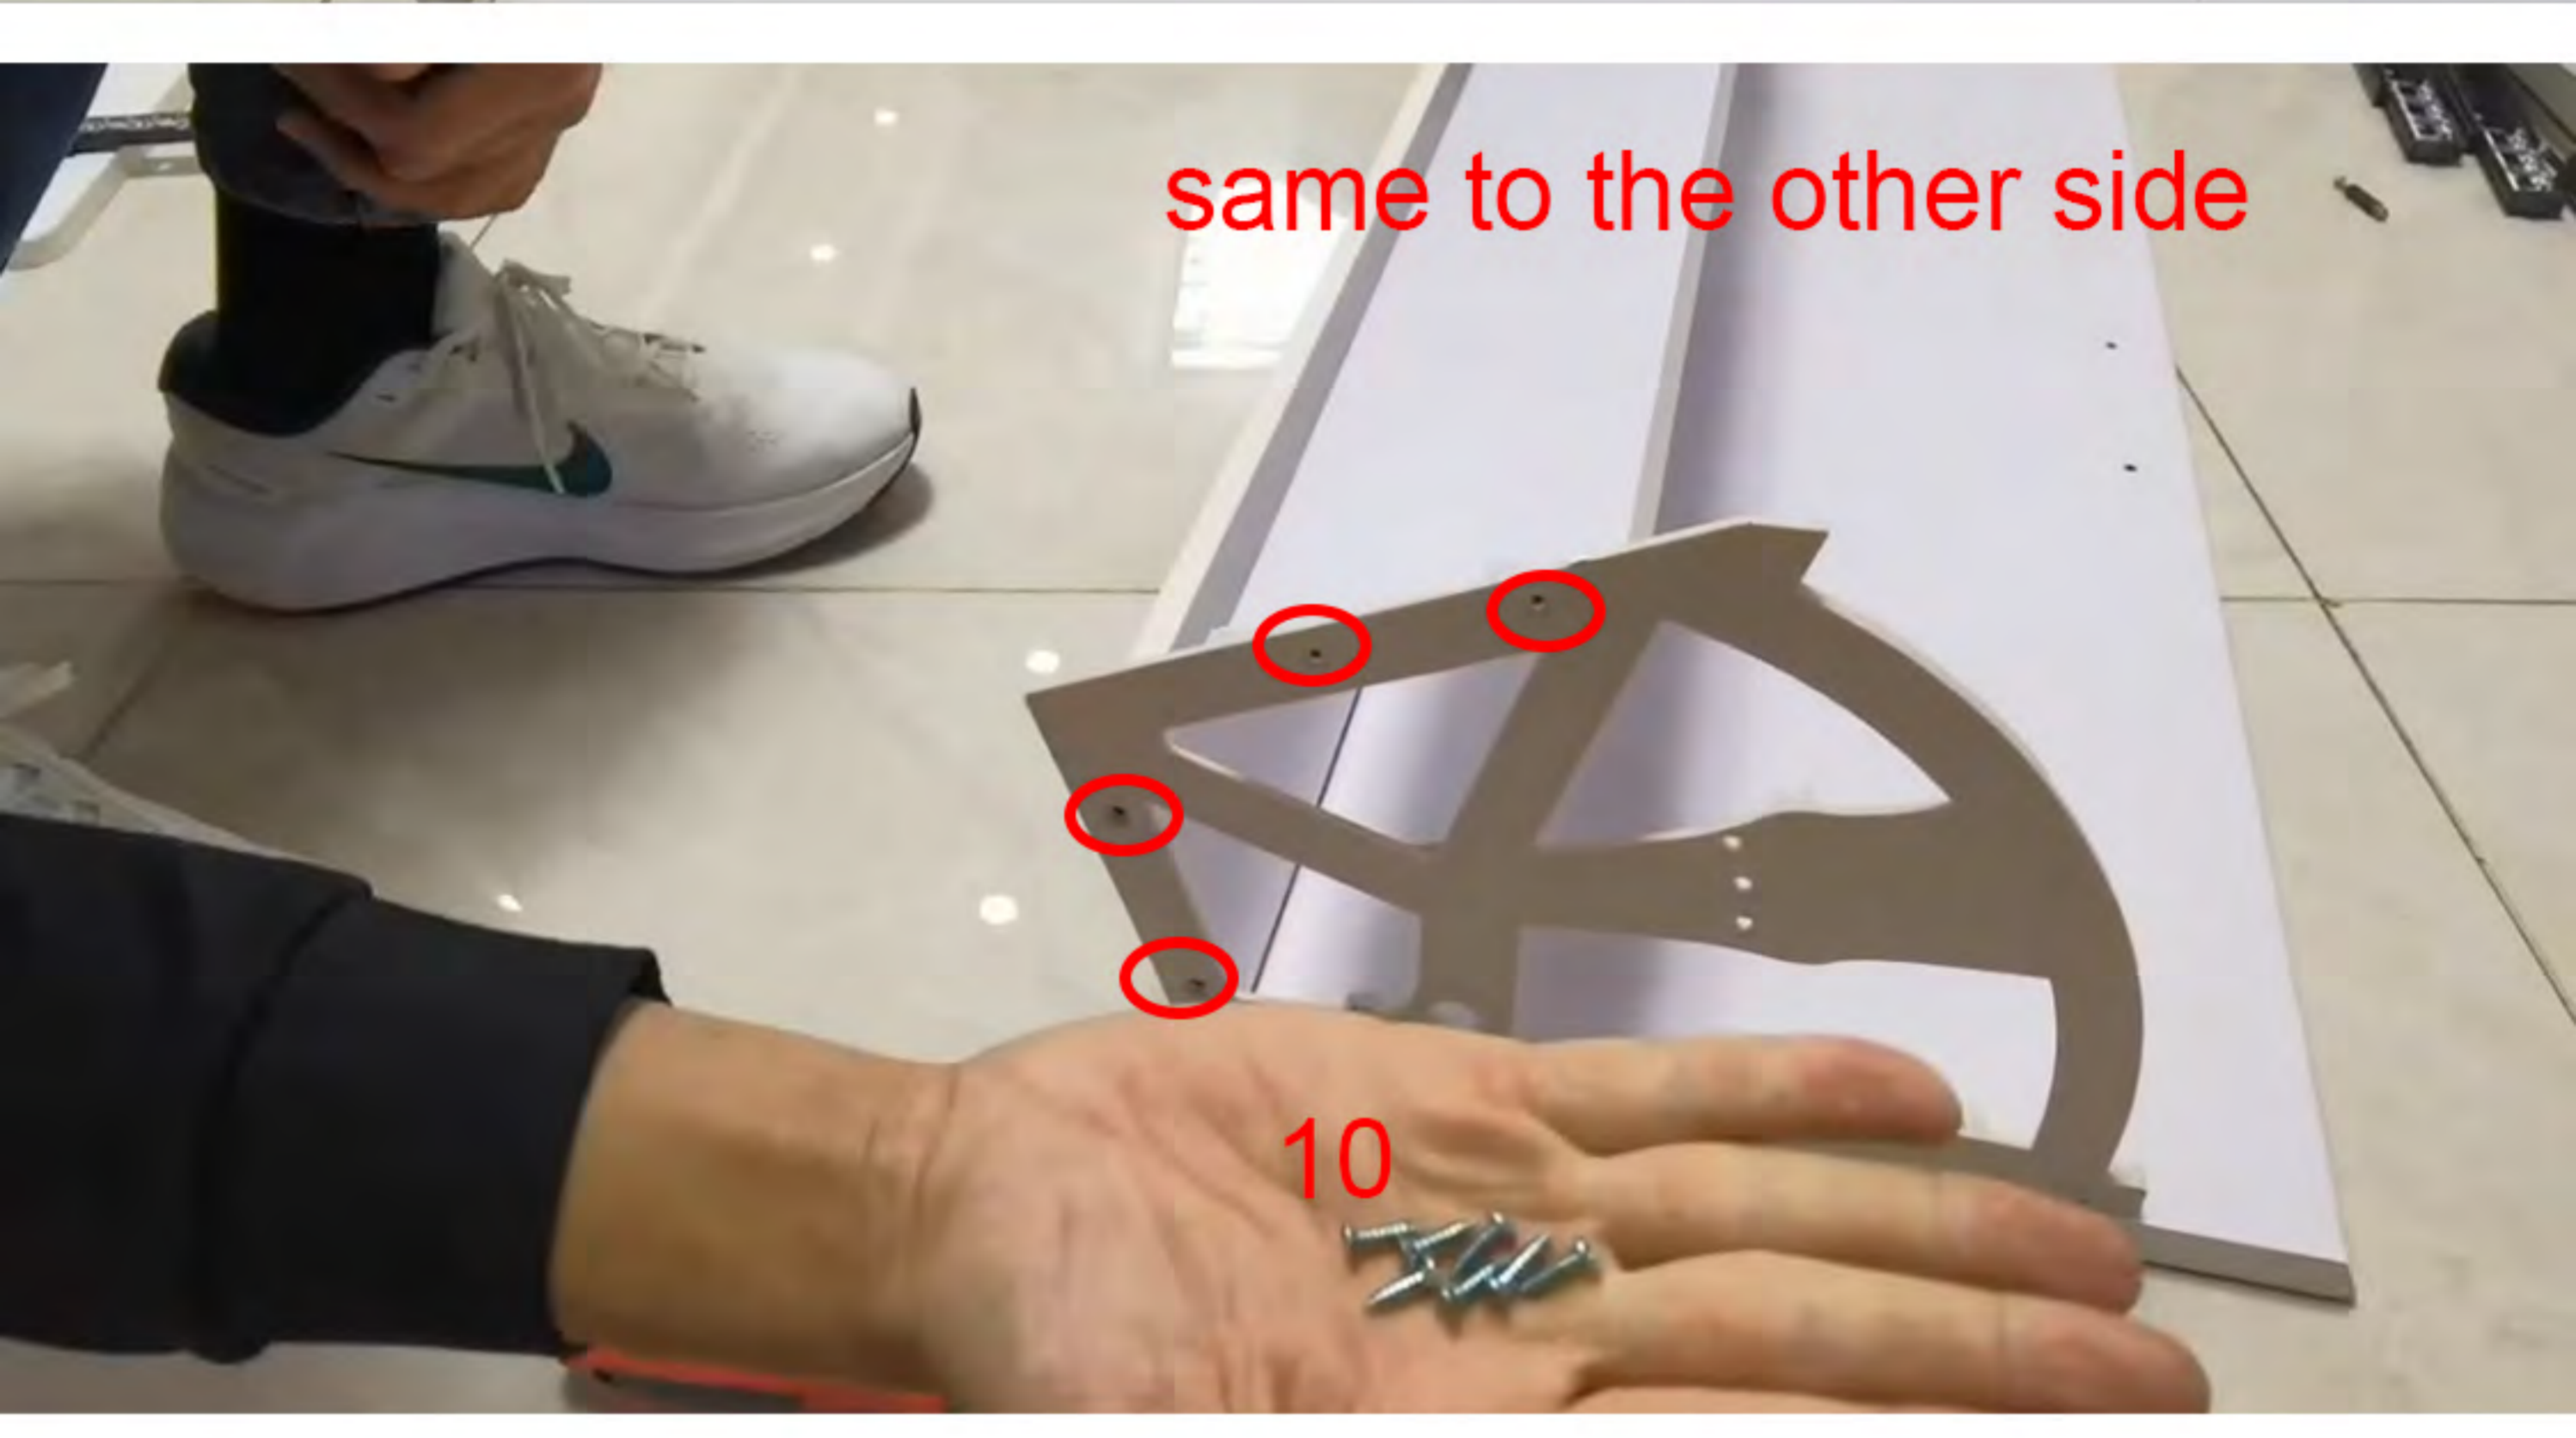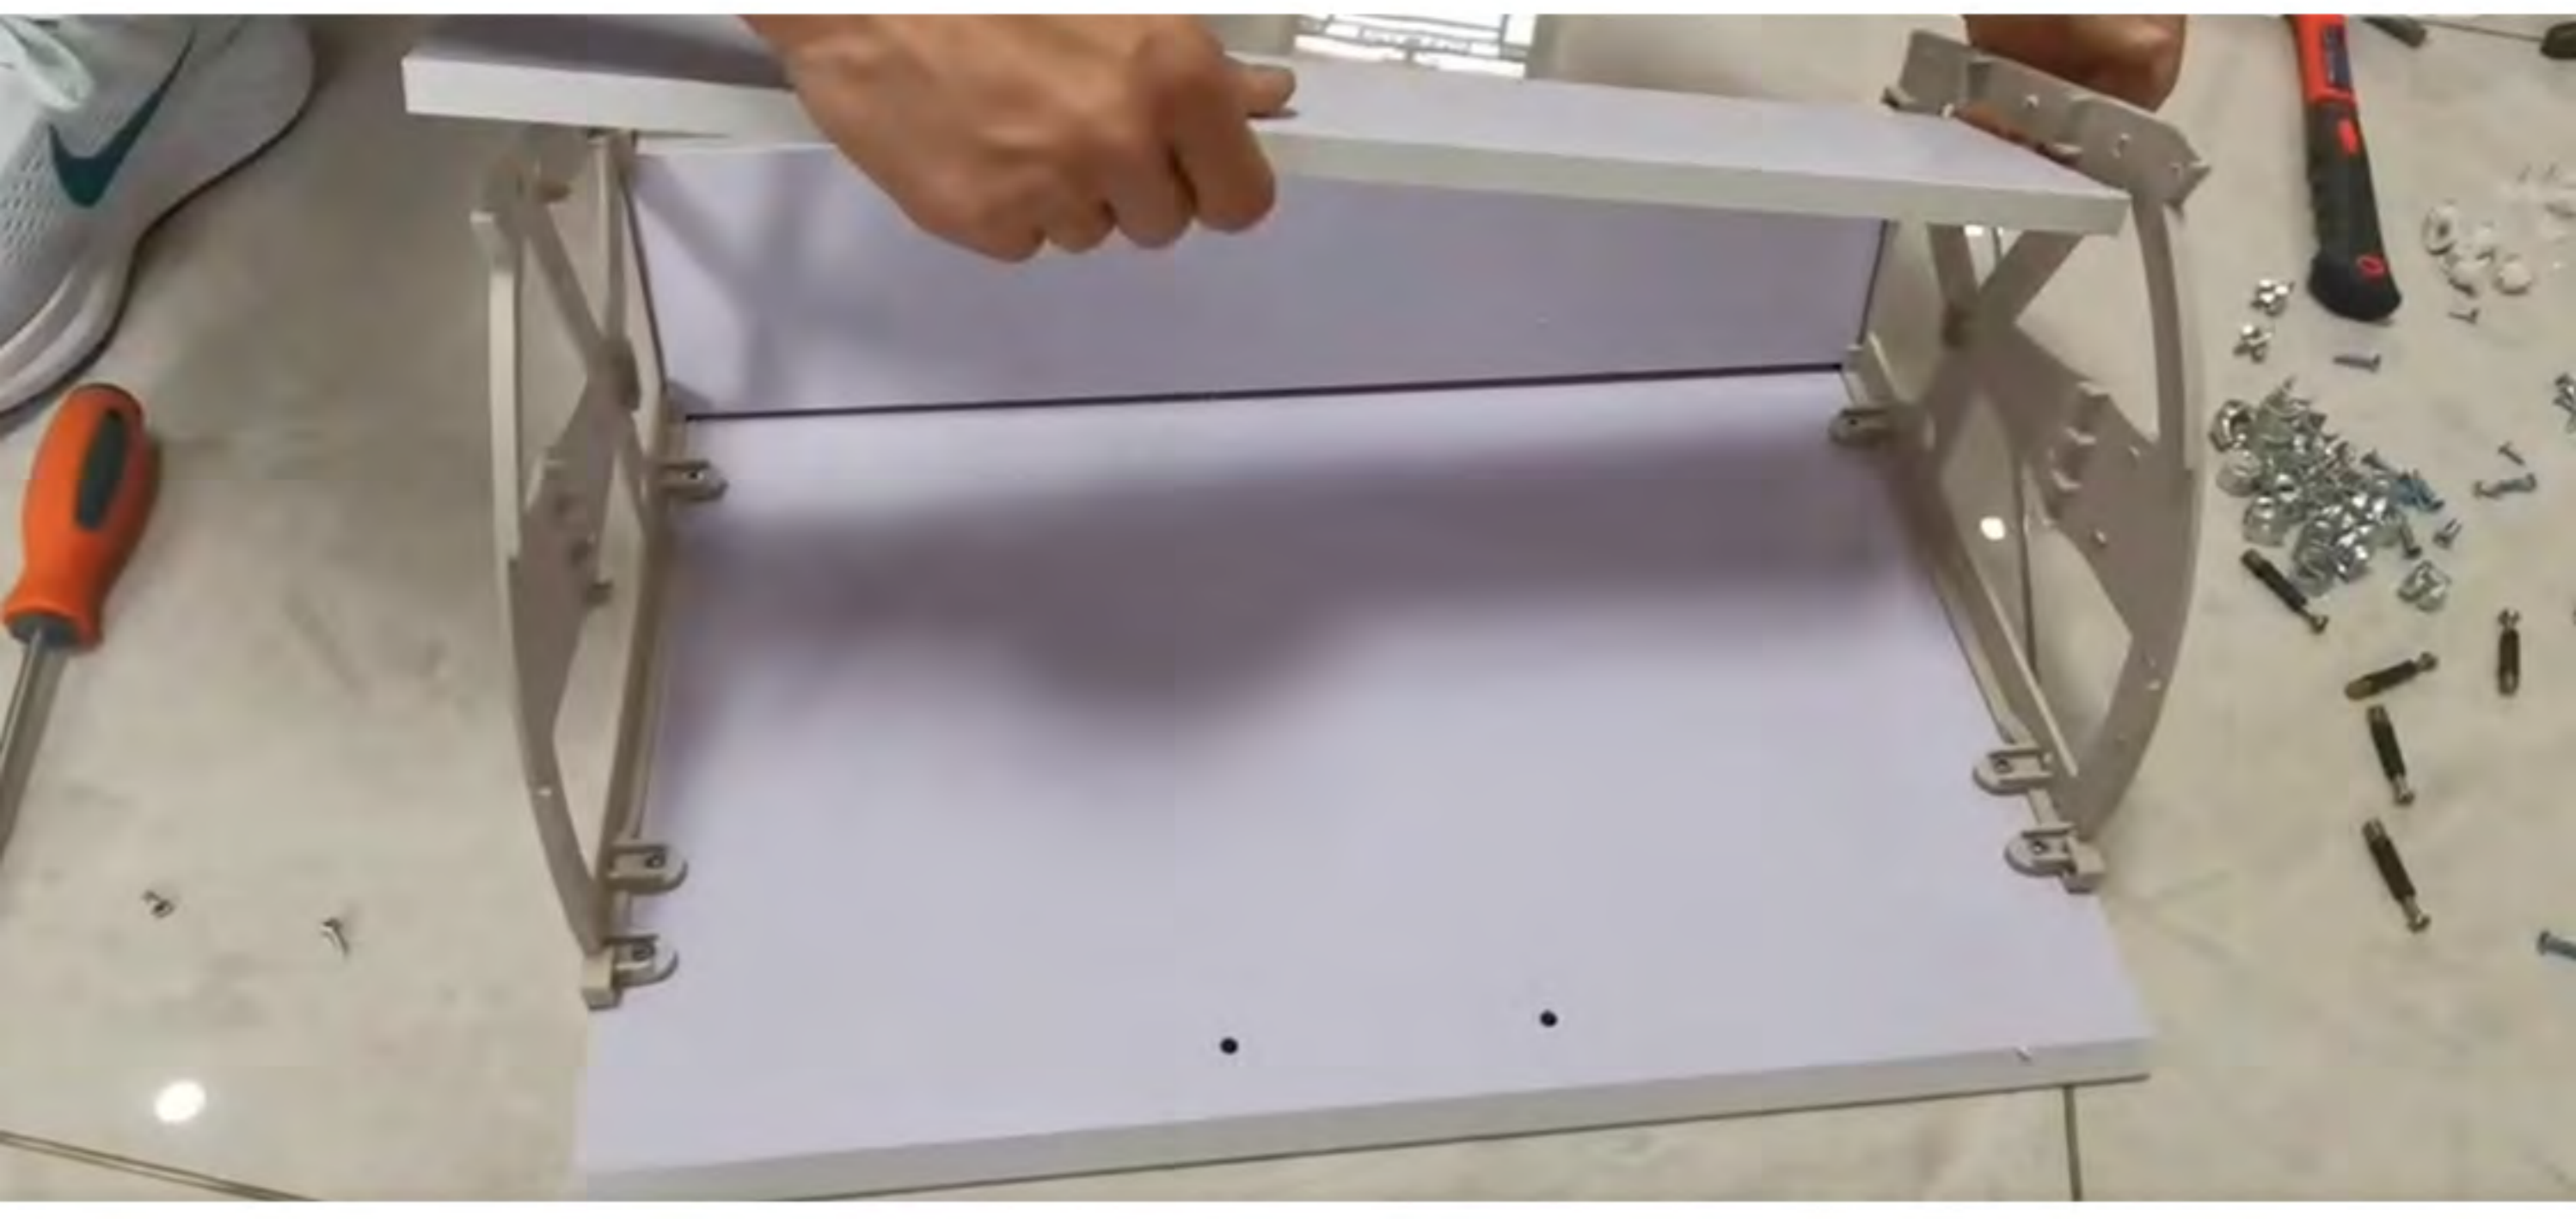




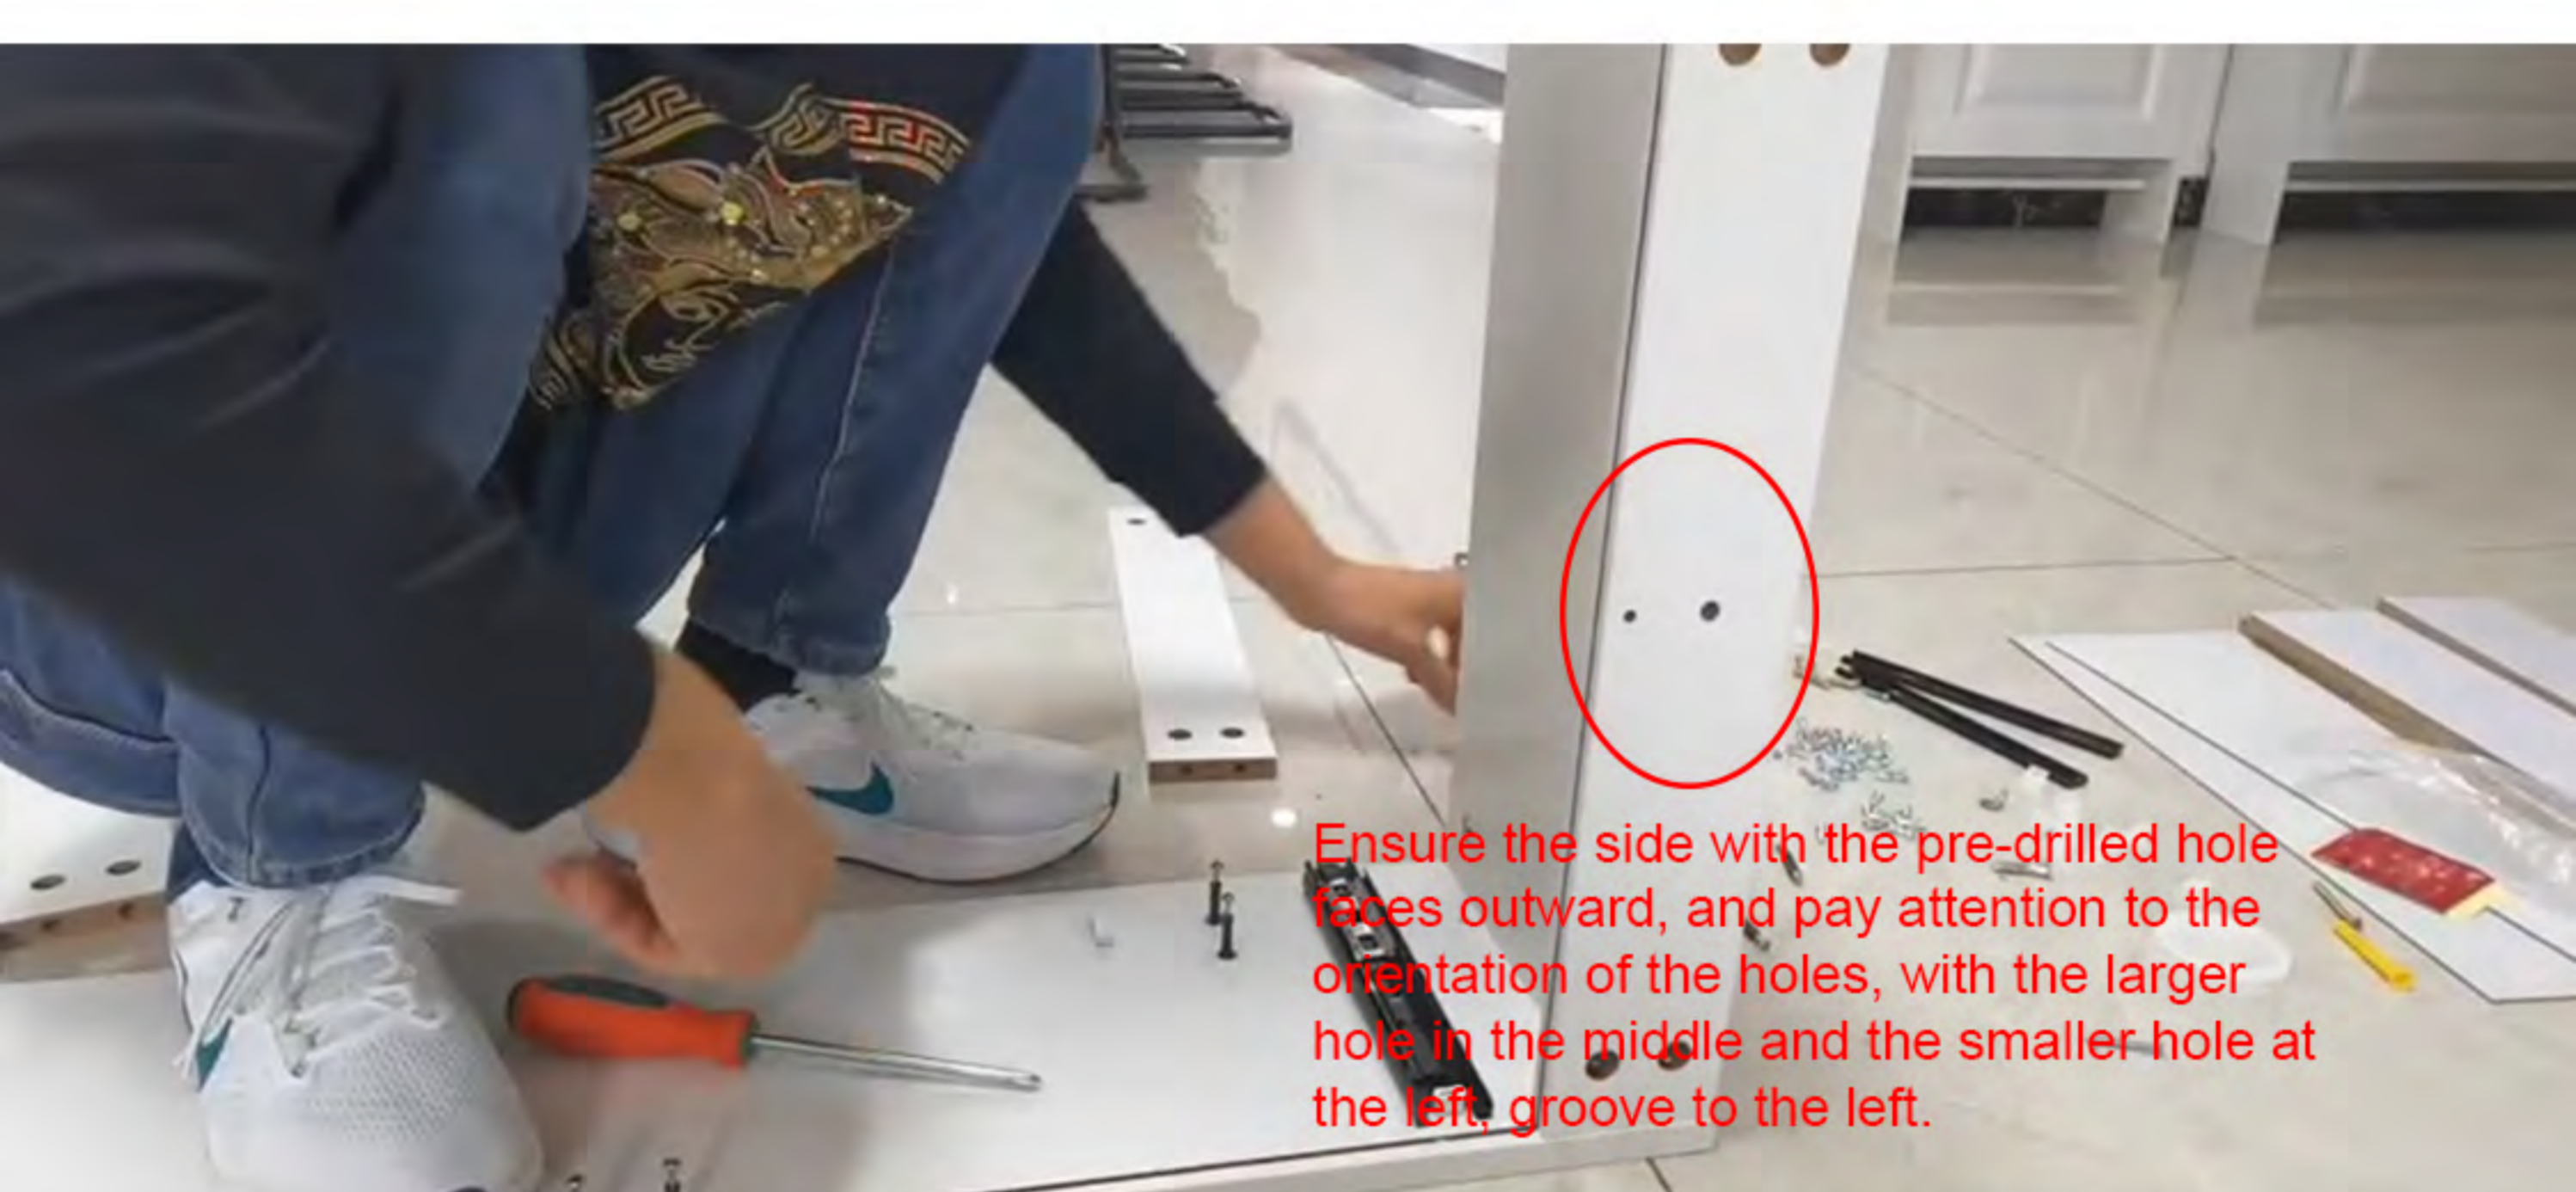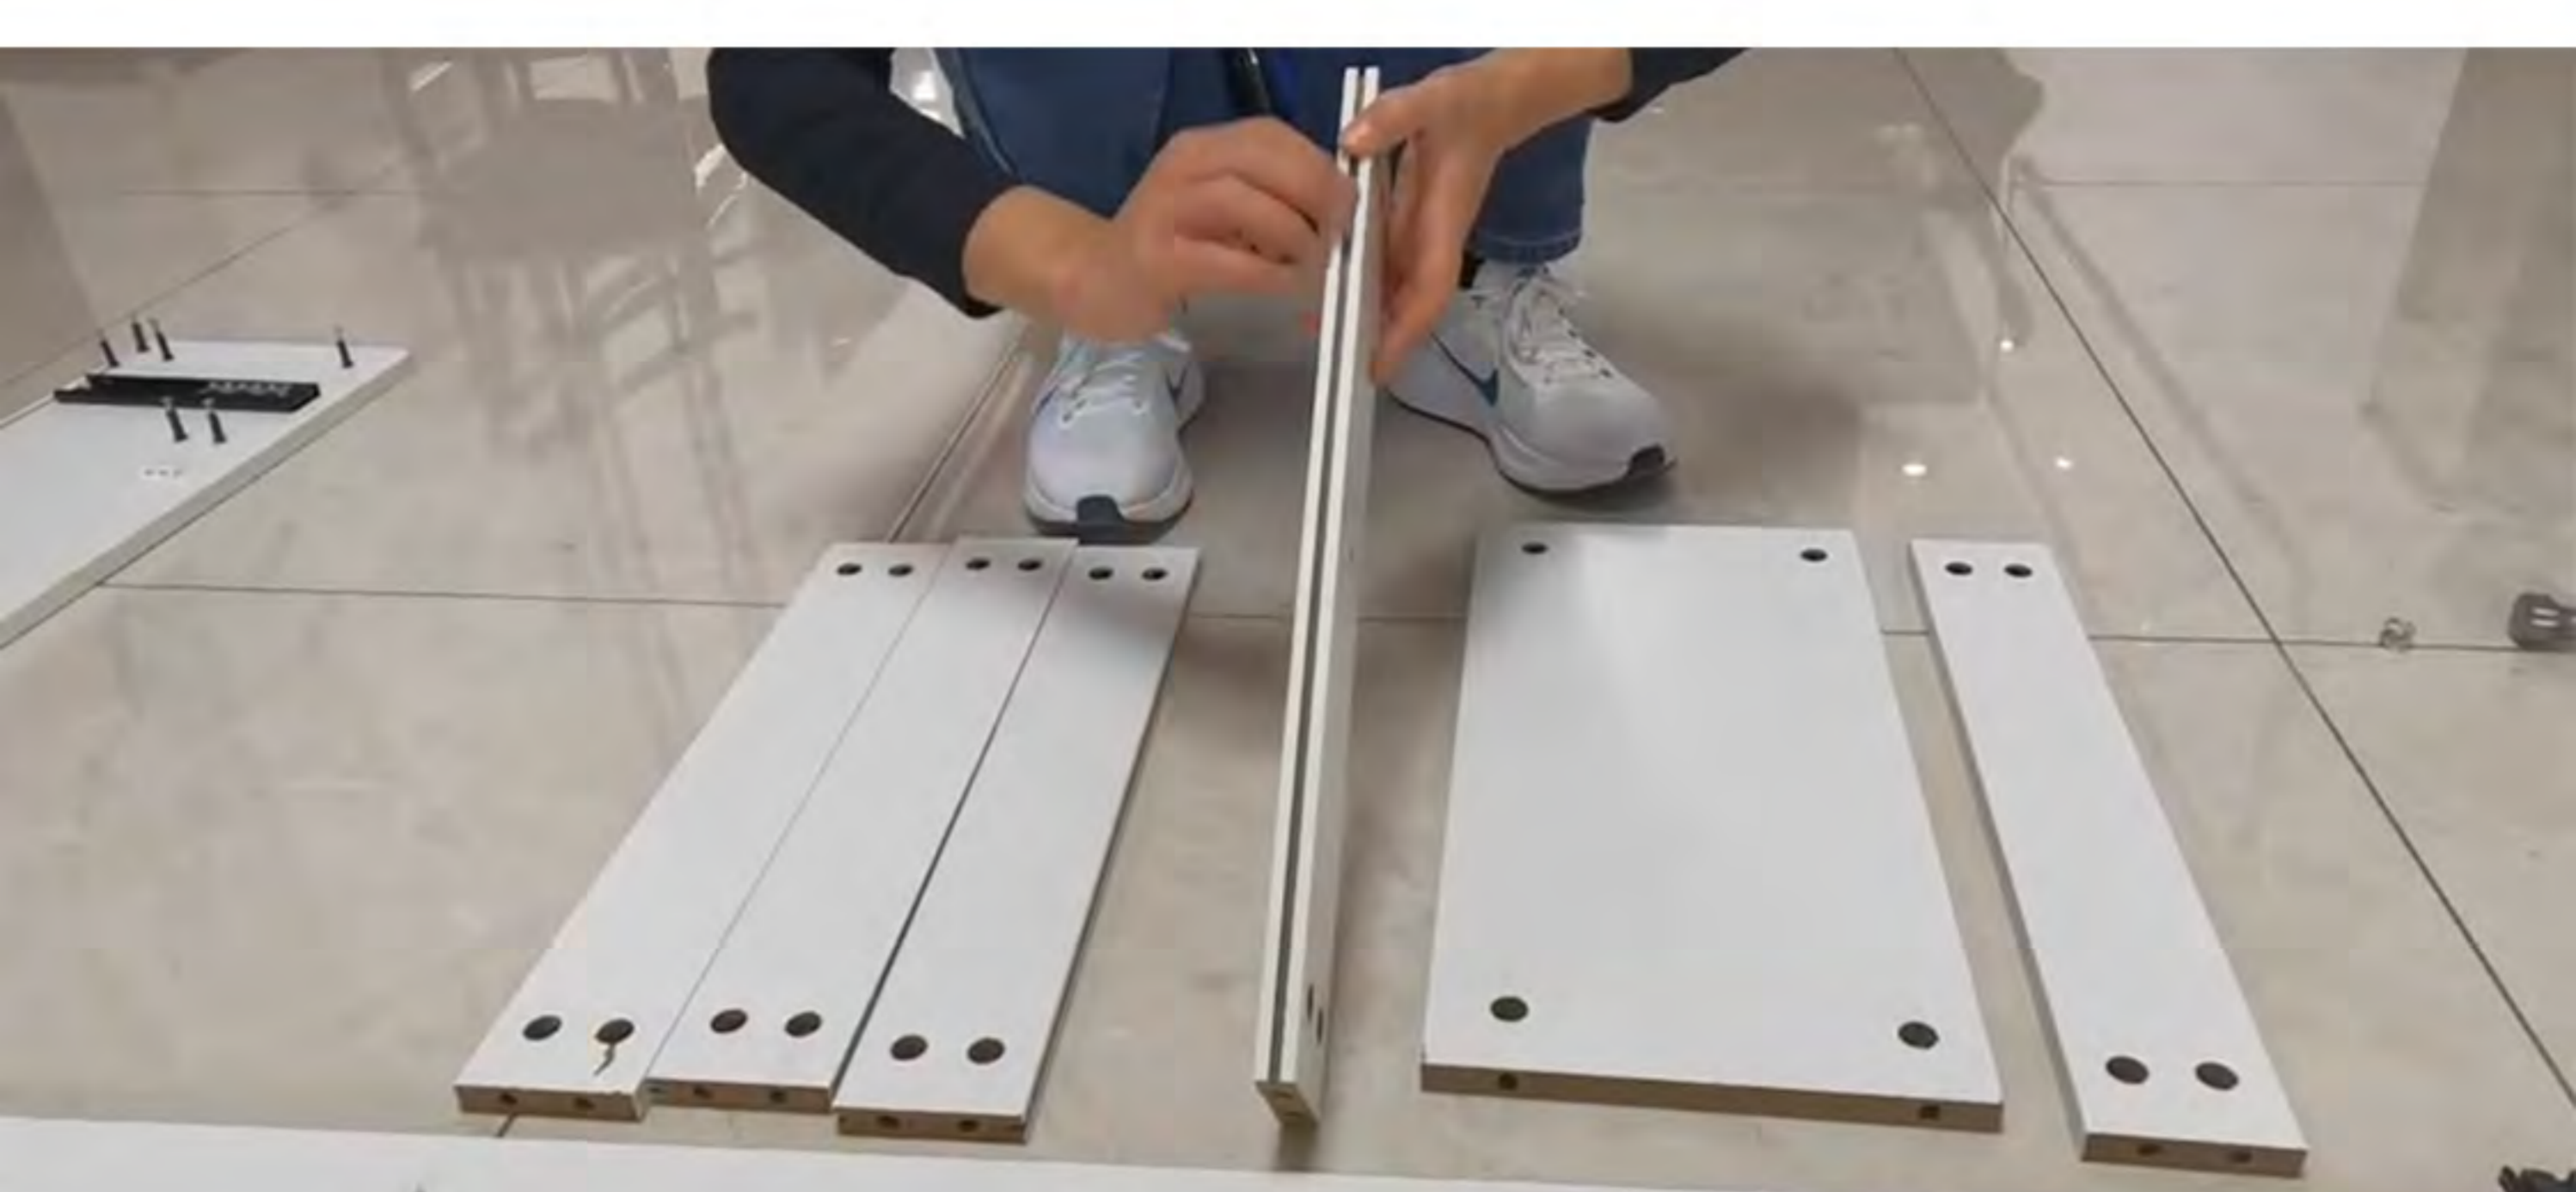

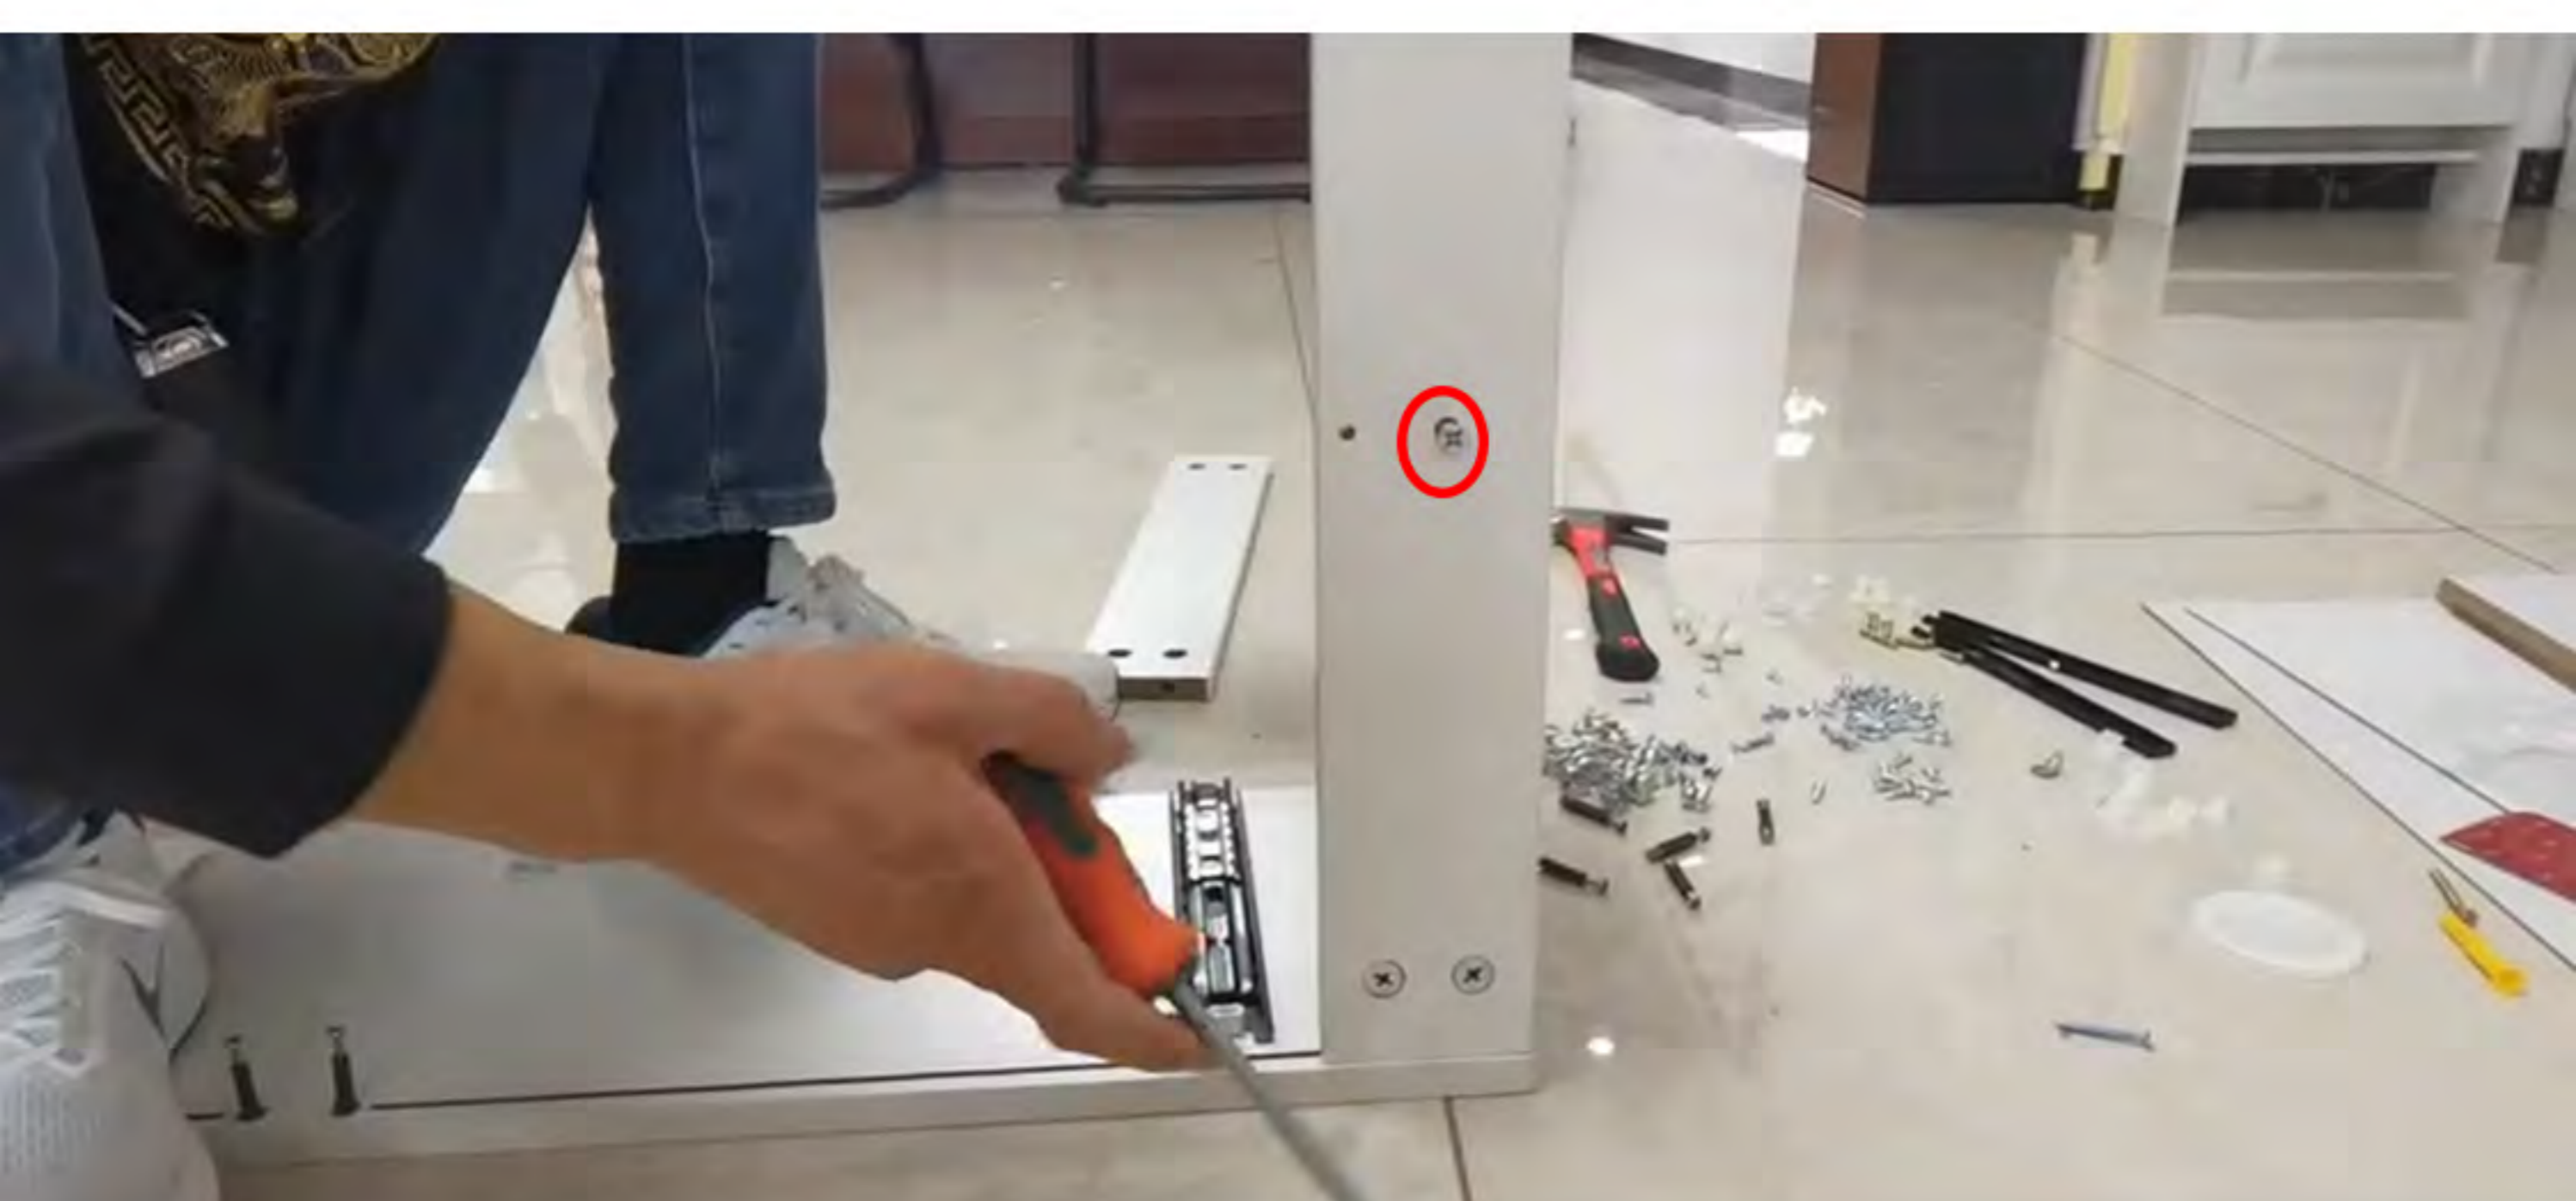


Align all the holes, including those on the side panels.

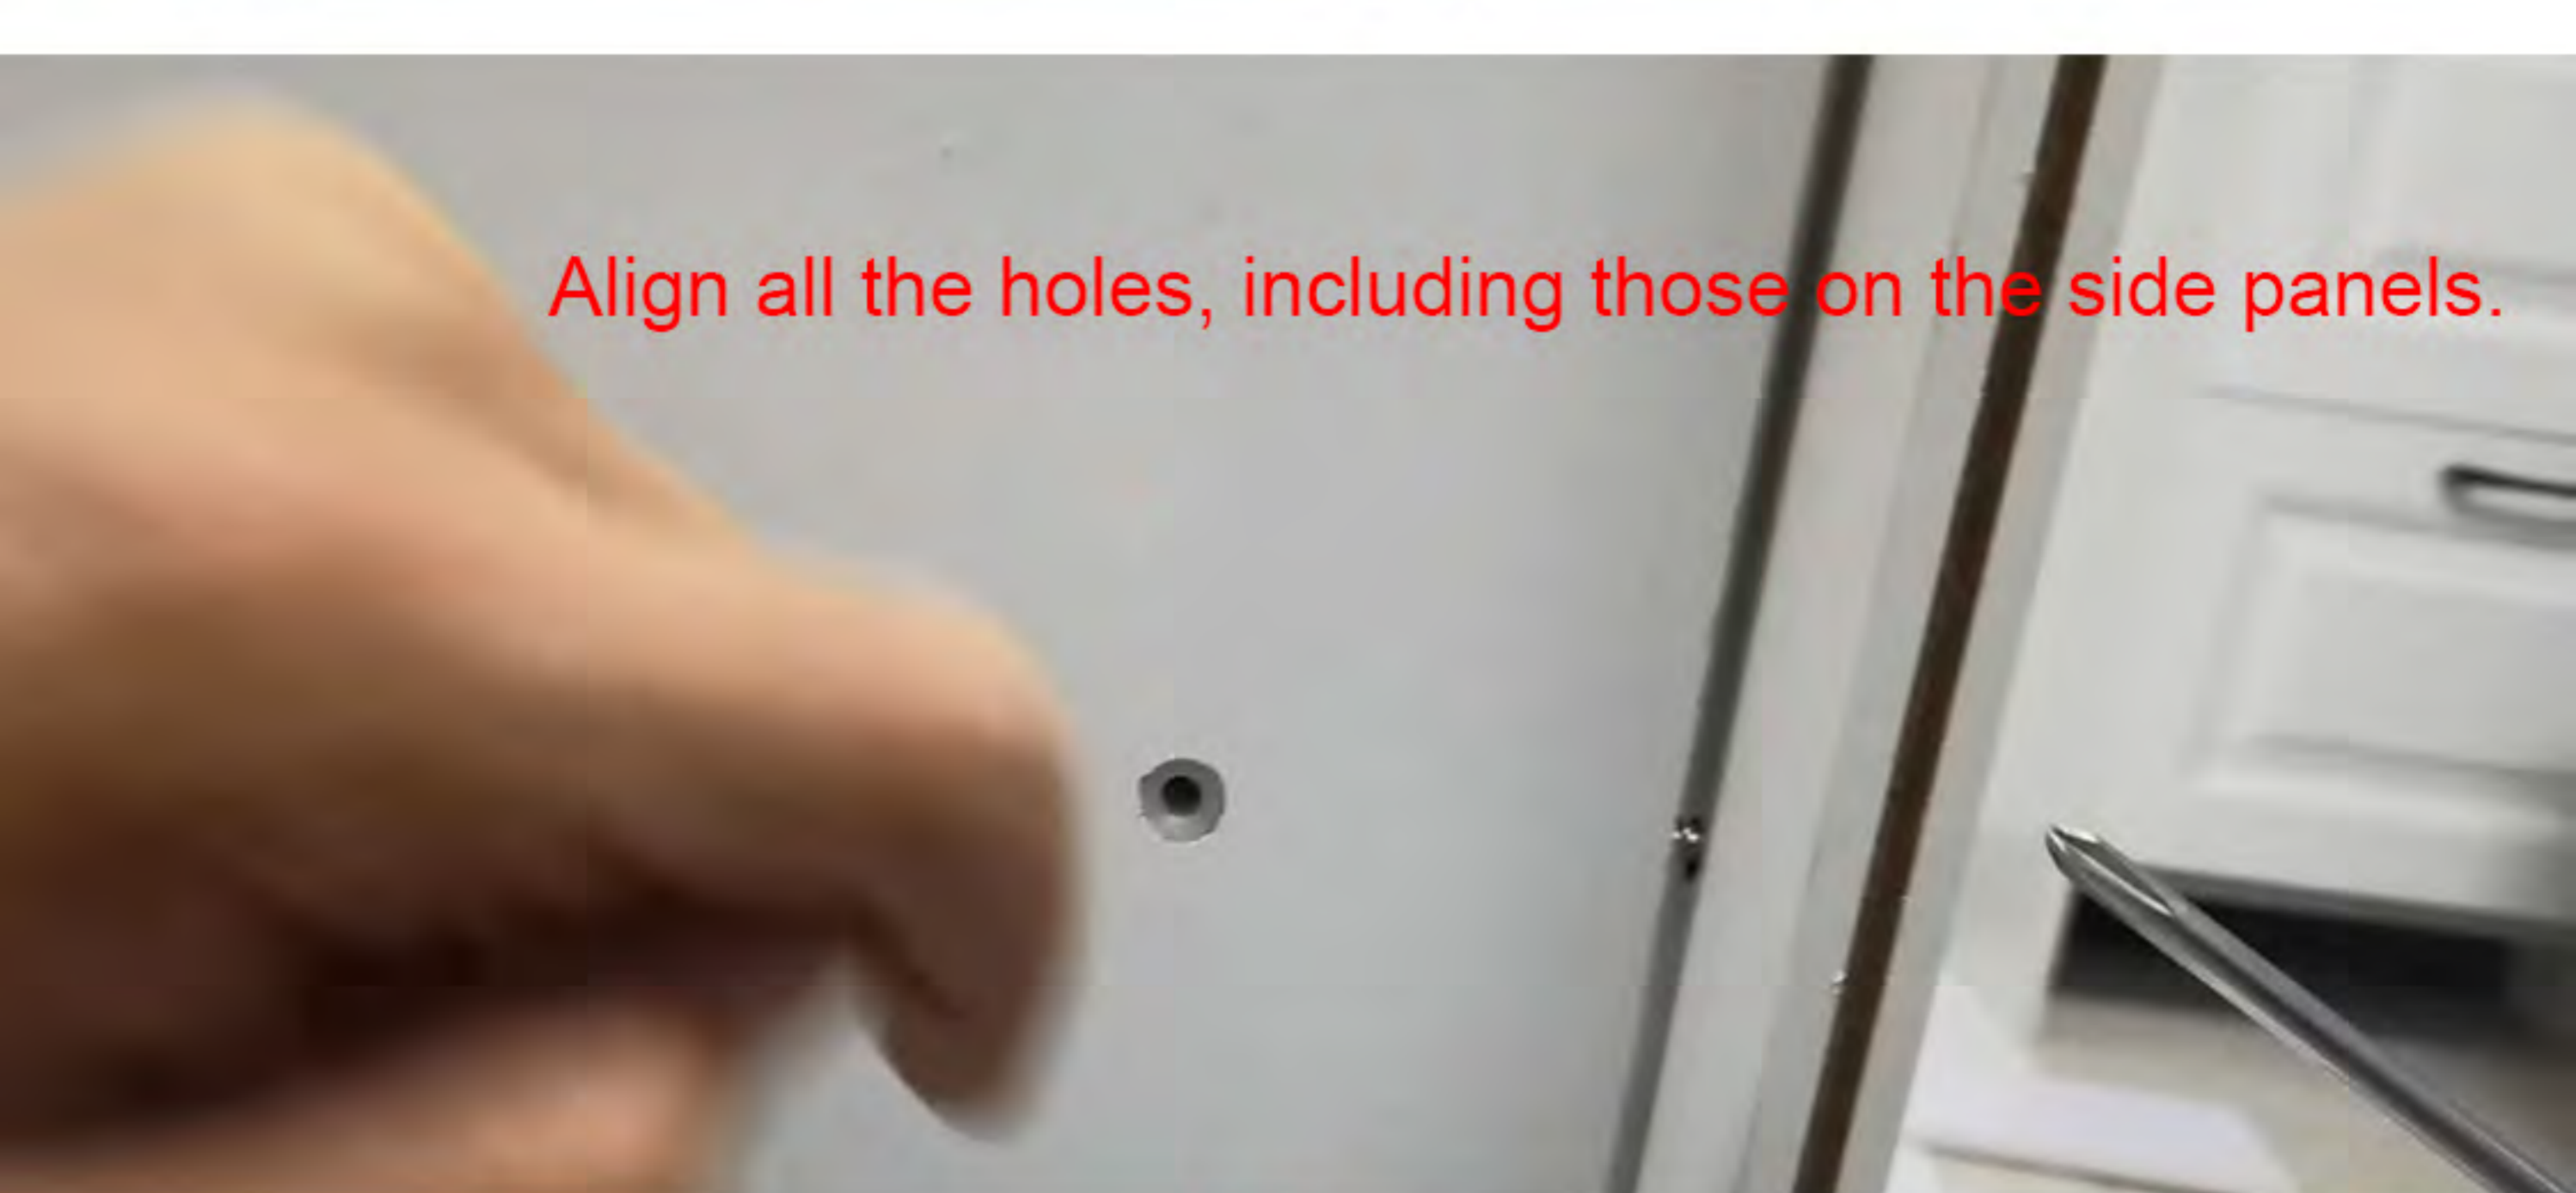


This long board has grooves on both sides




This long board has grooves on both sides

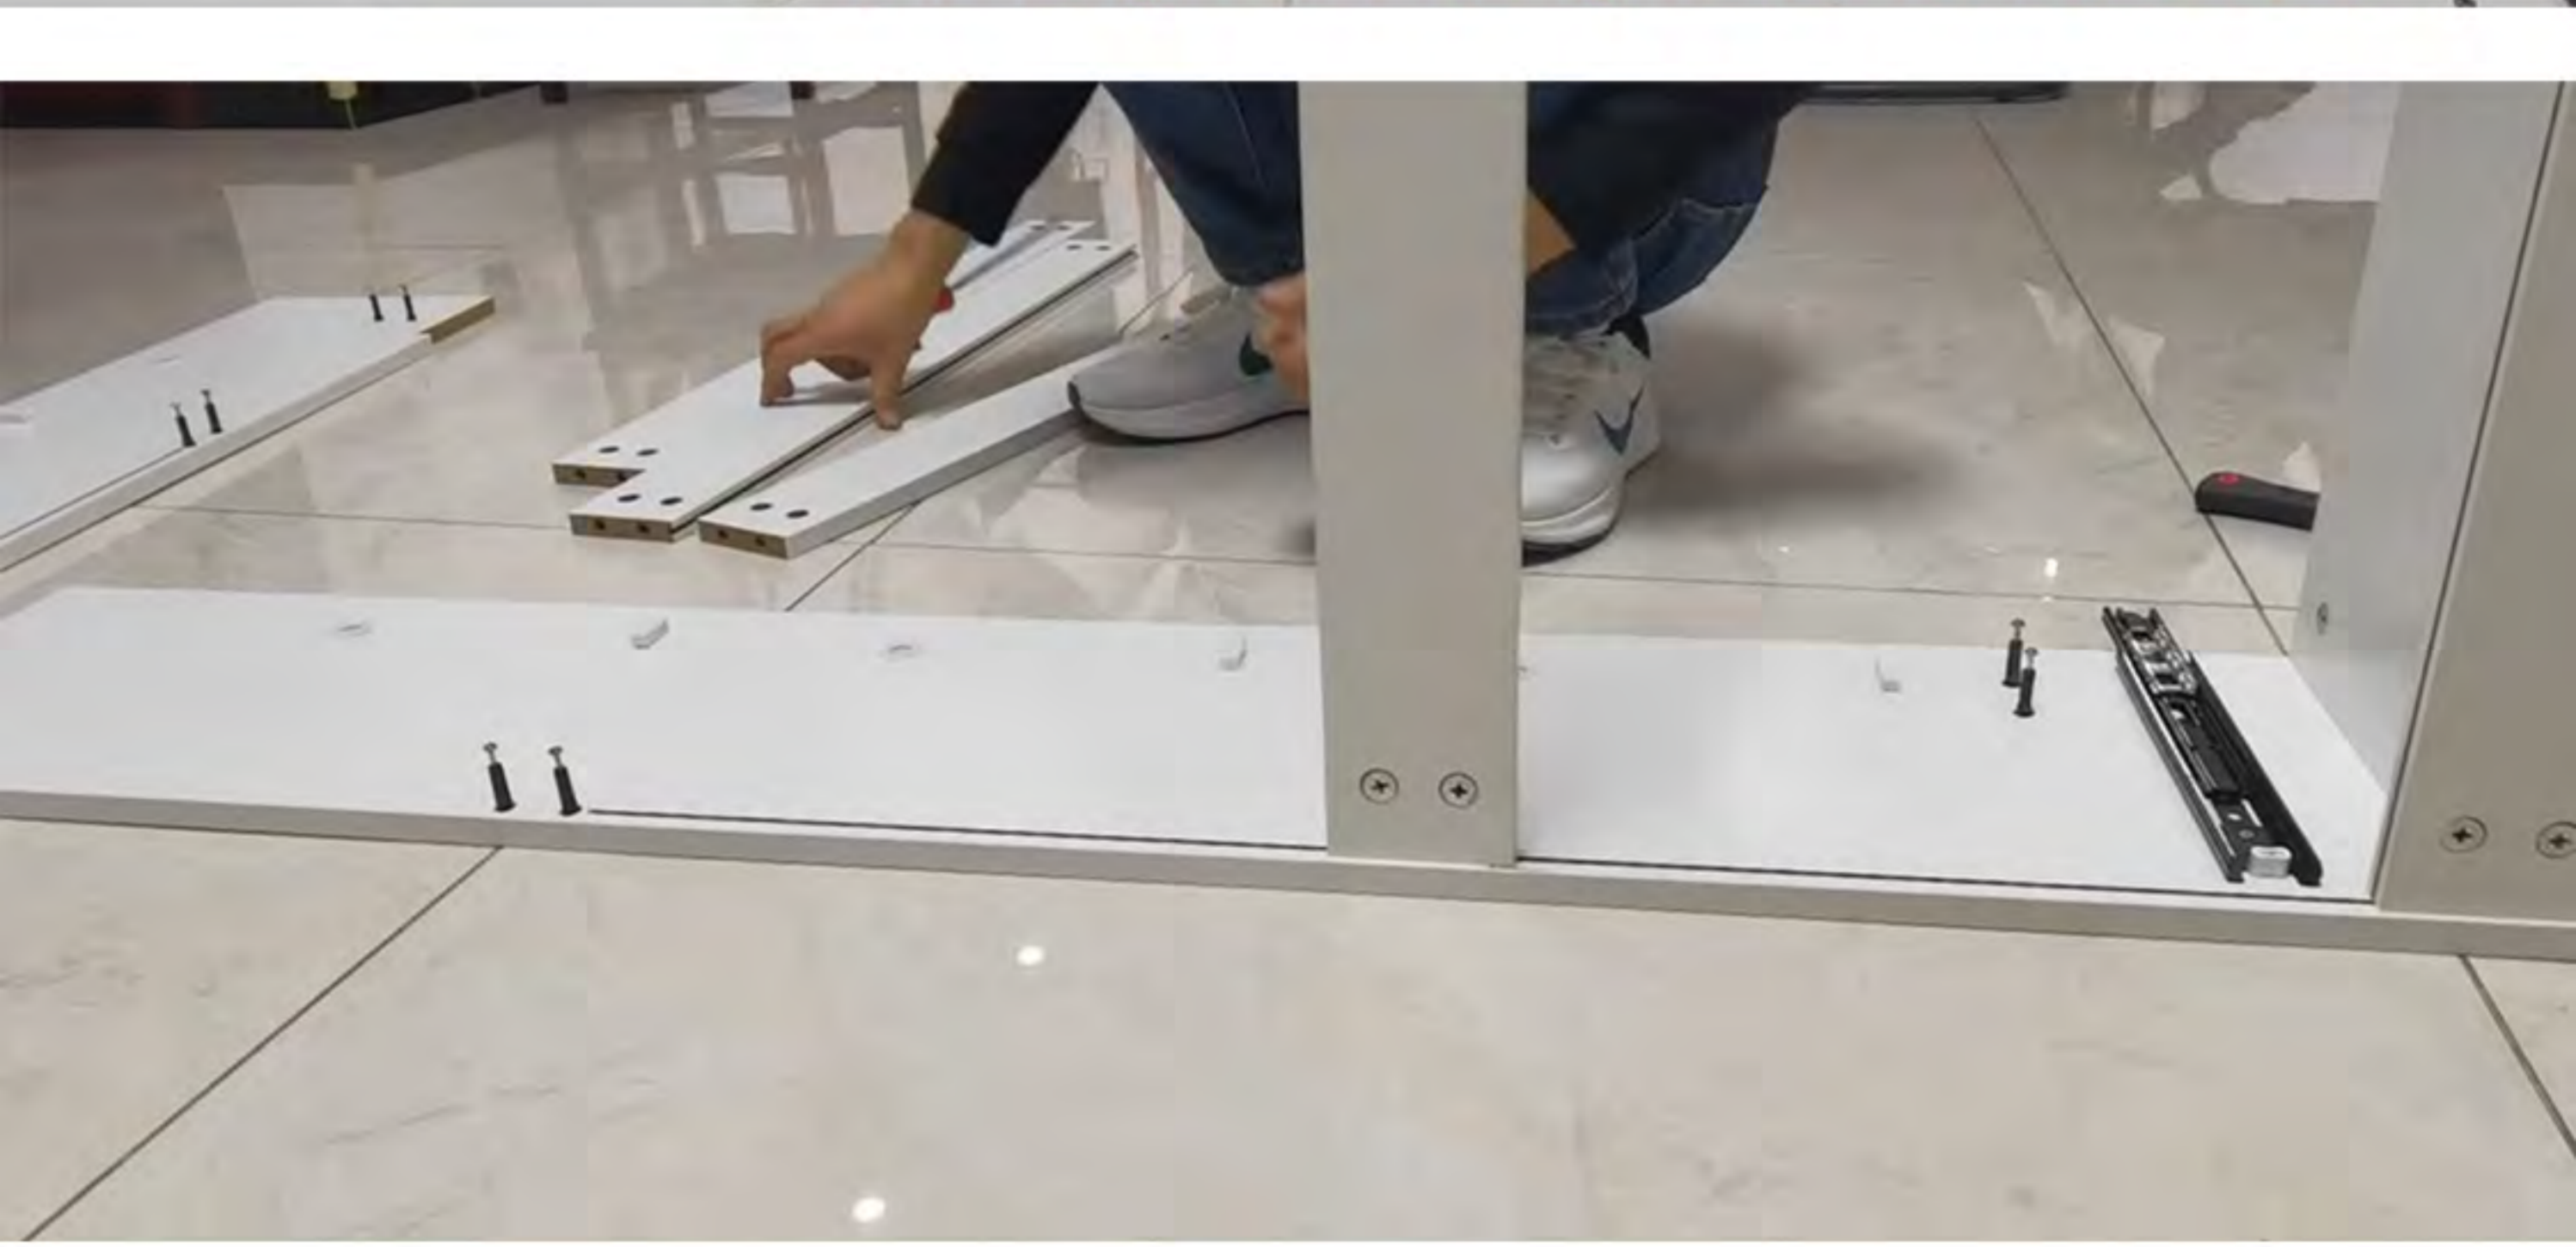

Note that this long board only has grooves on the right side.

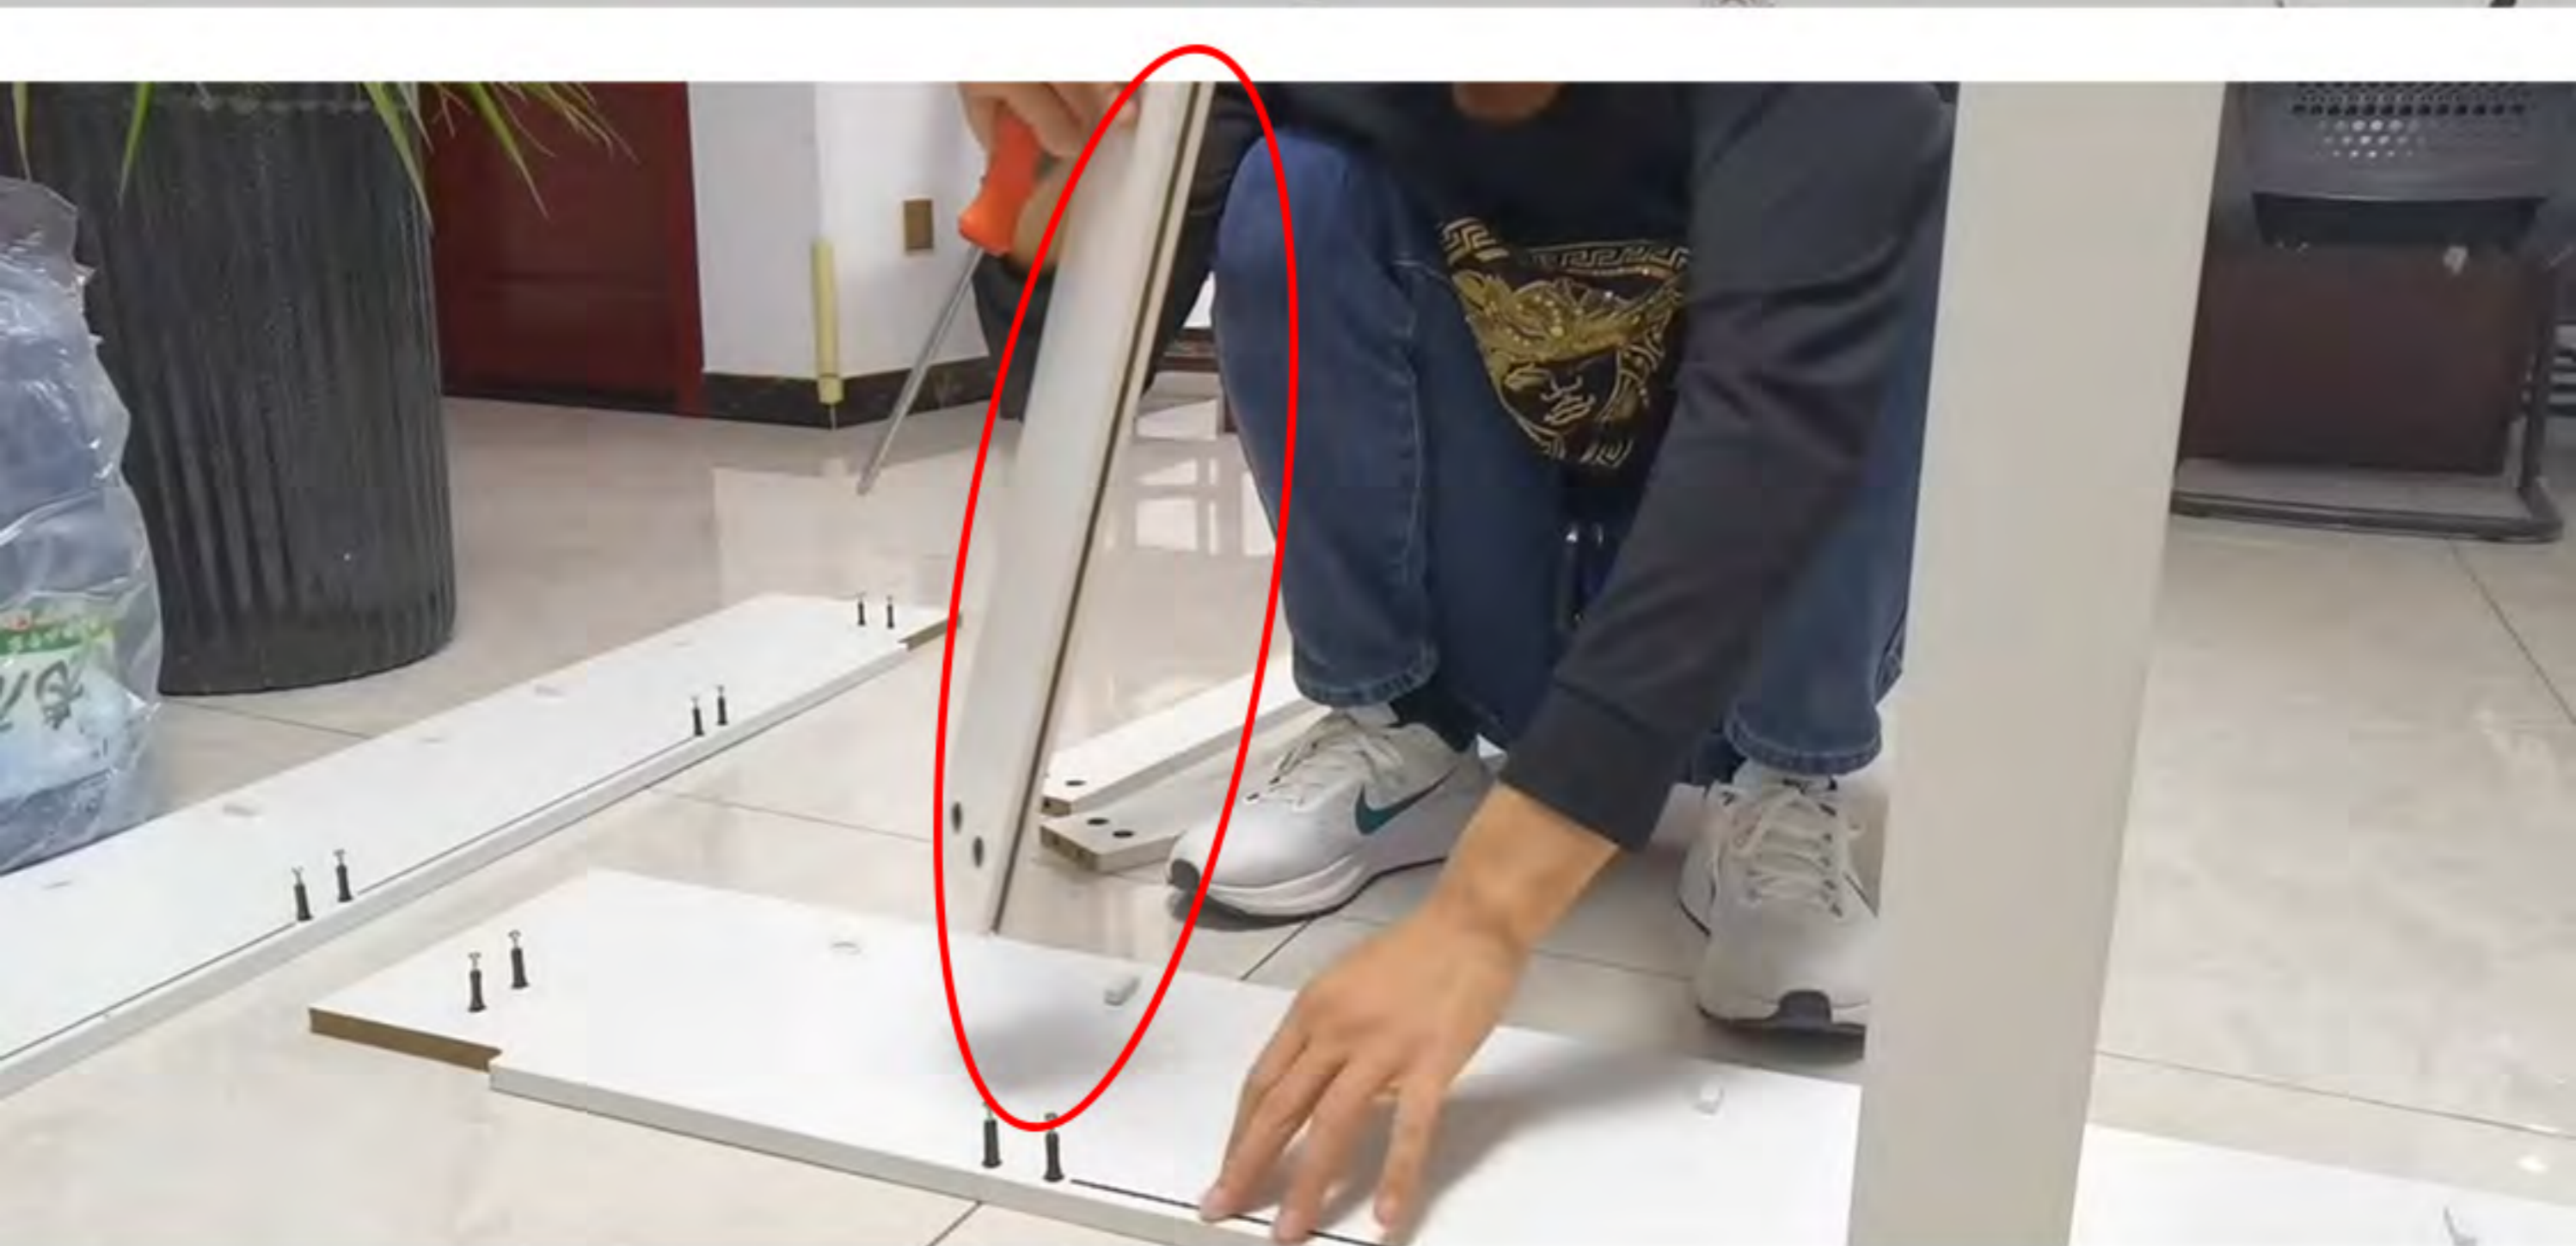

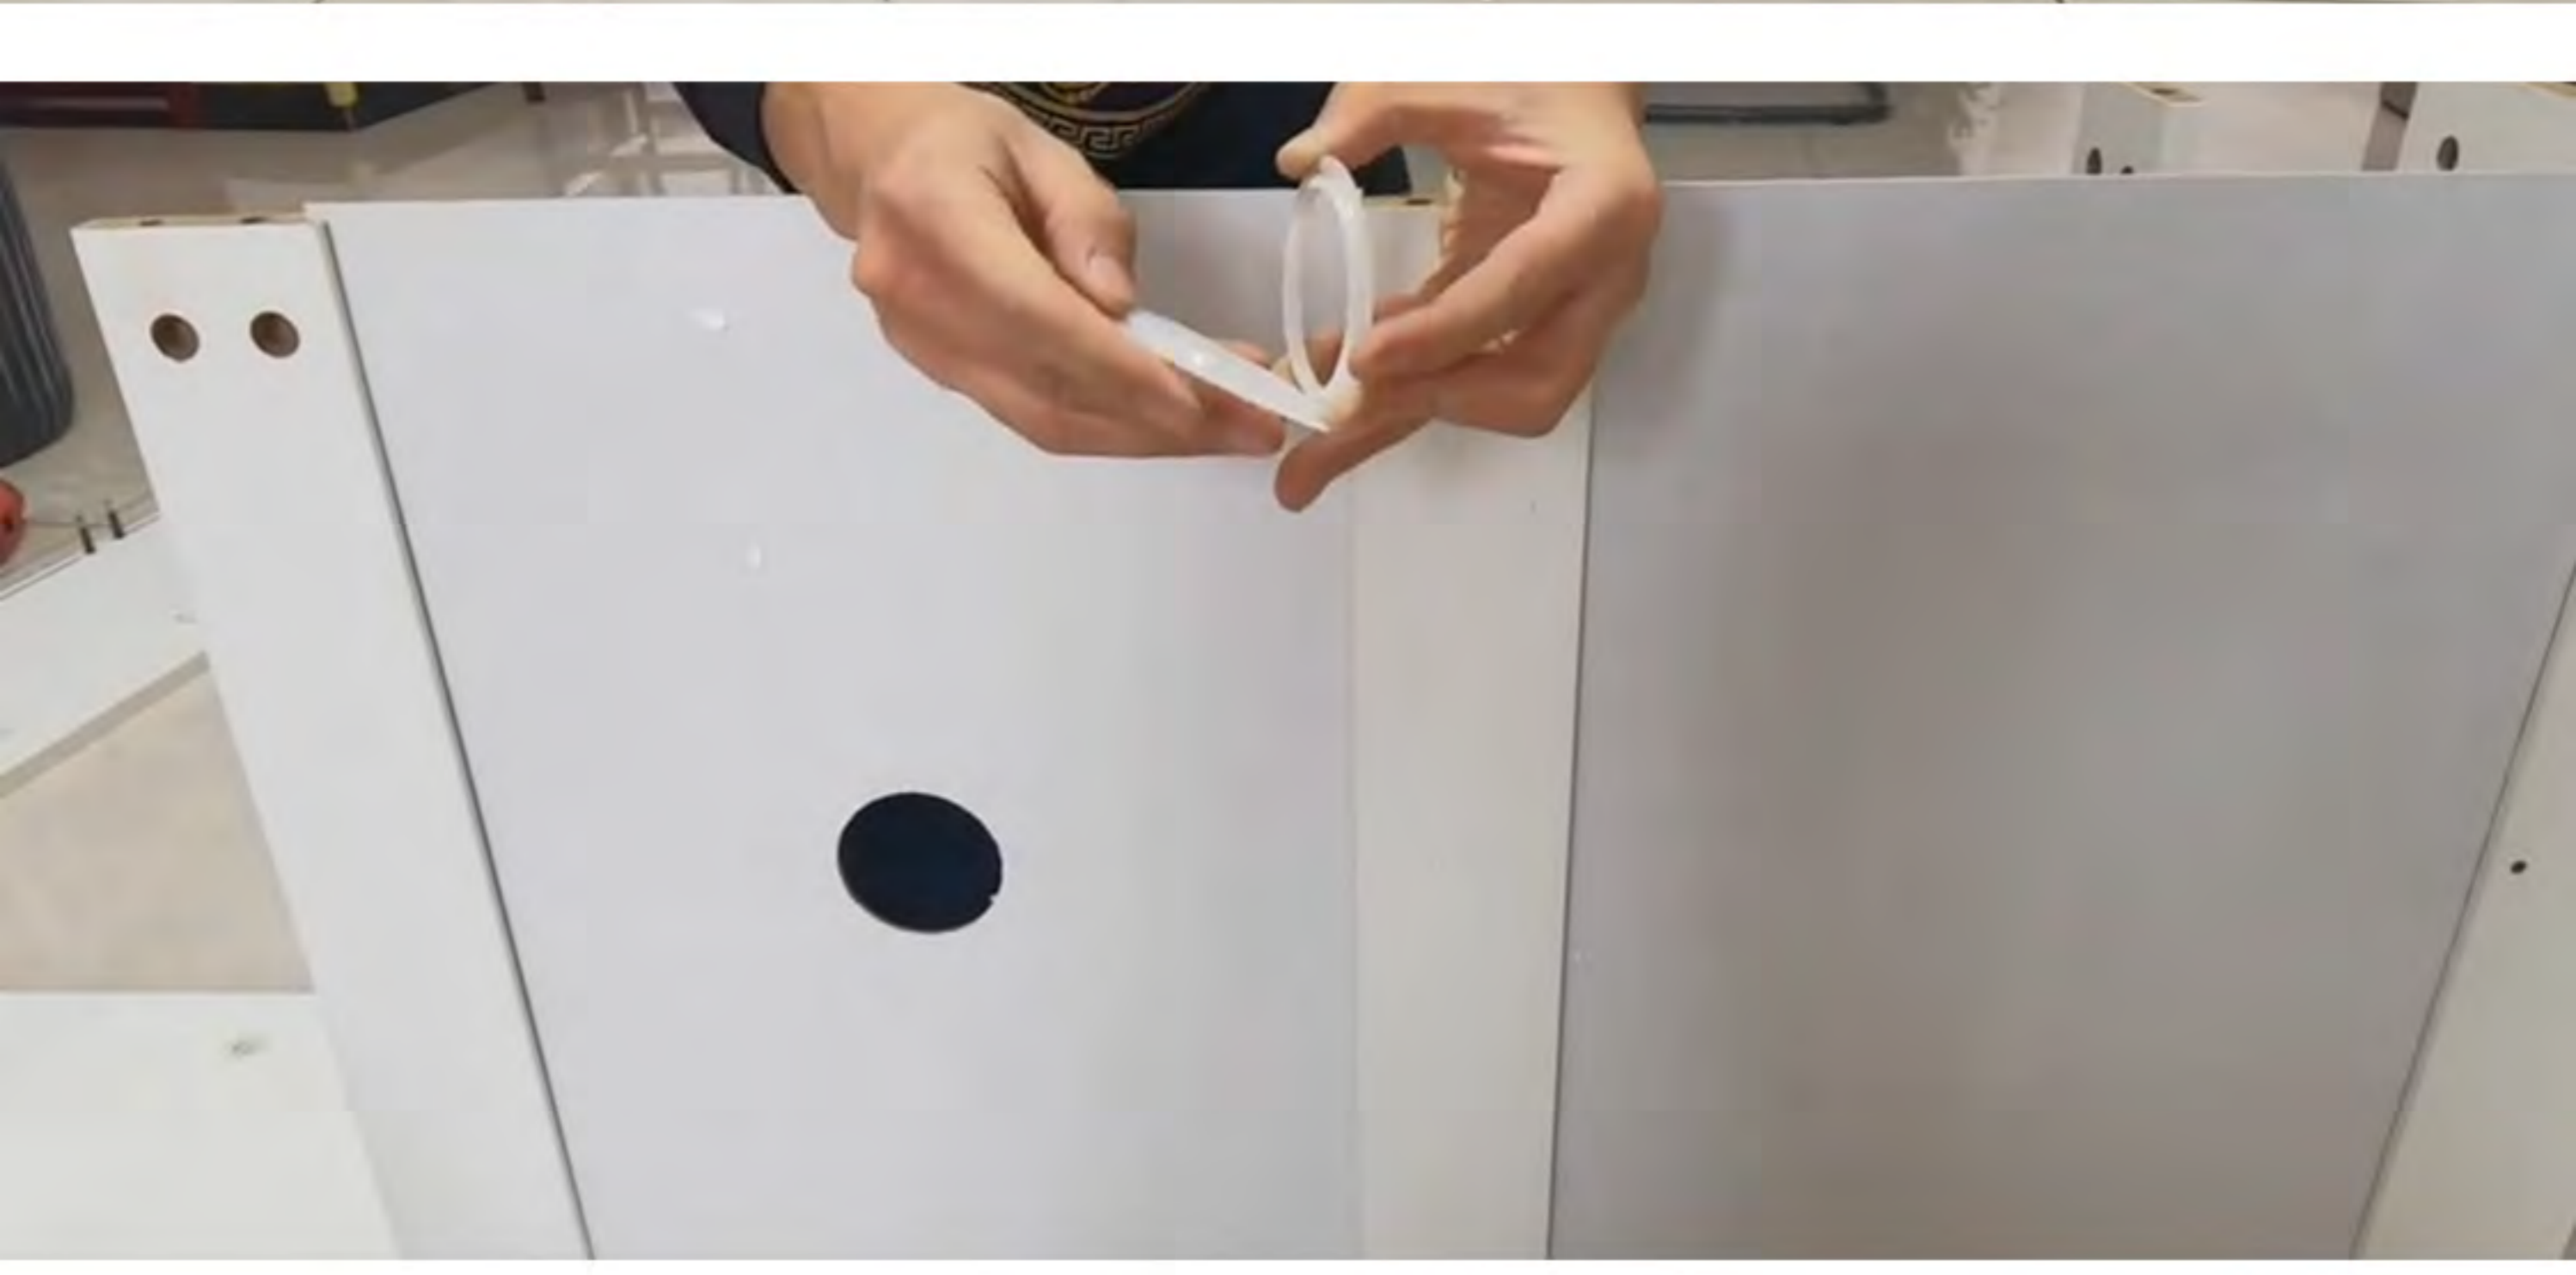




Repeat the same steps at all the latch pre-drilled holes



The same procedure applies to the latch pre-drilled holes on the inside of the cabinet

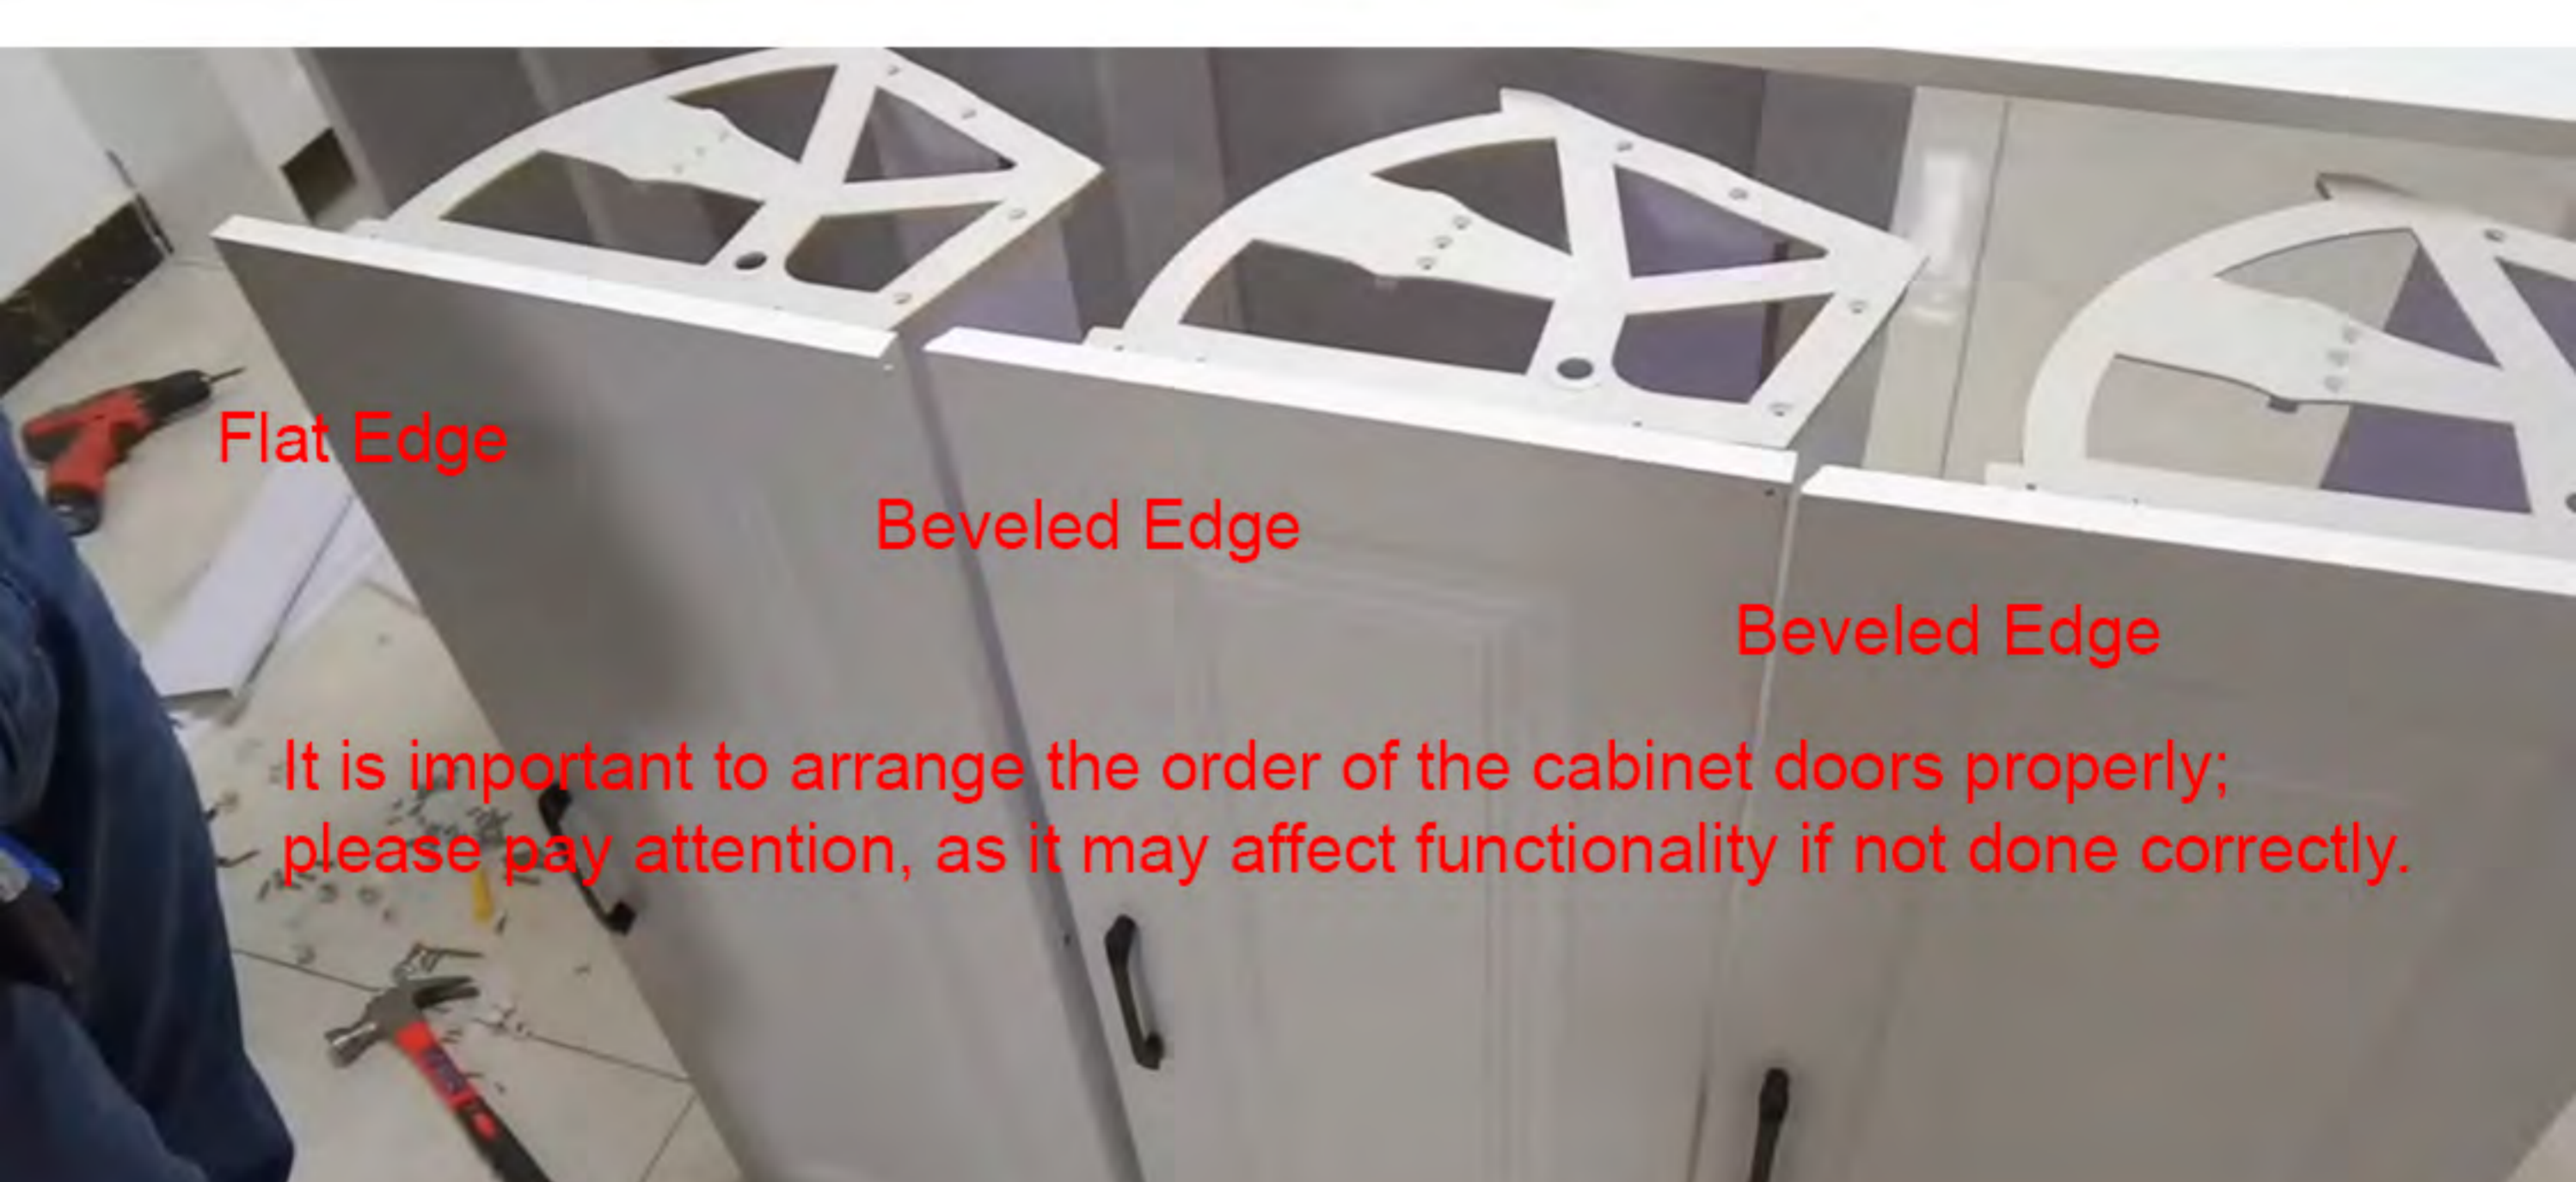


Flat Edge

Beveled Edge

Beveled Edge

It is important to arrange the order of the cabinet doors properly; please pay attention, as it may affect functionality if not done correctly.

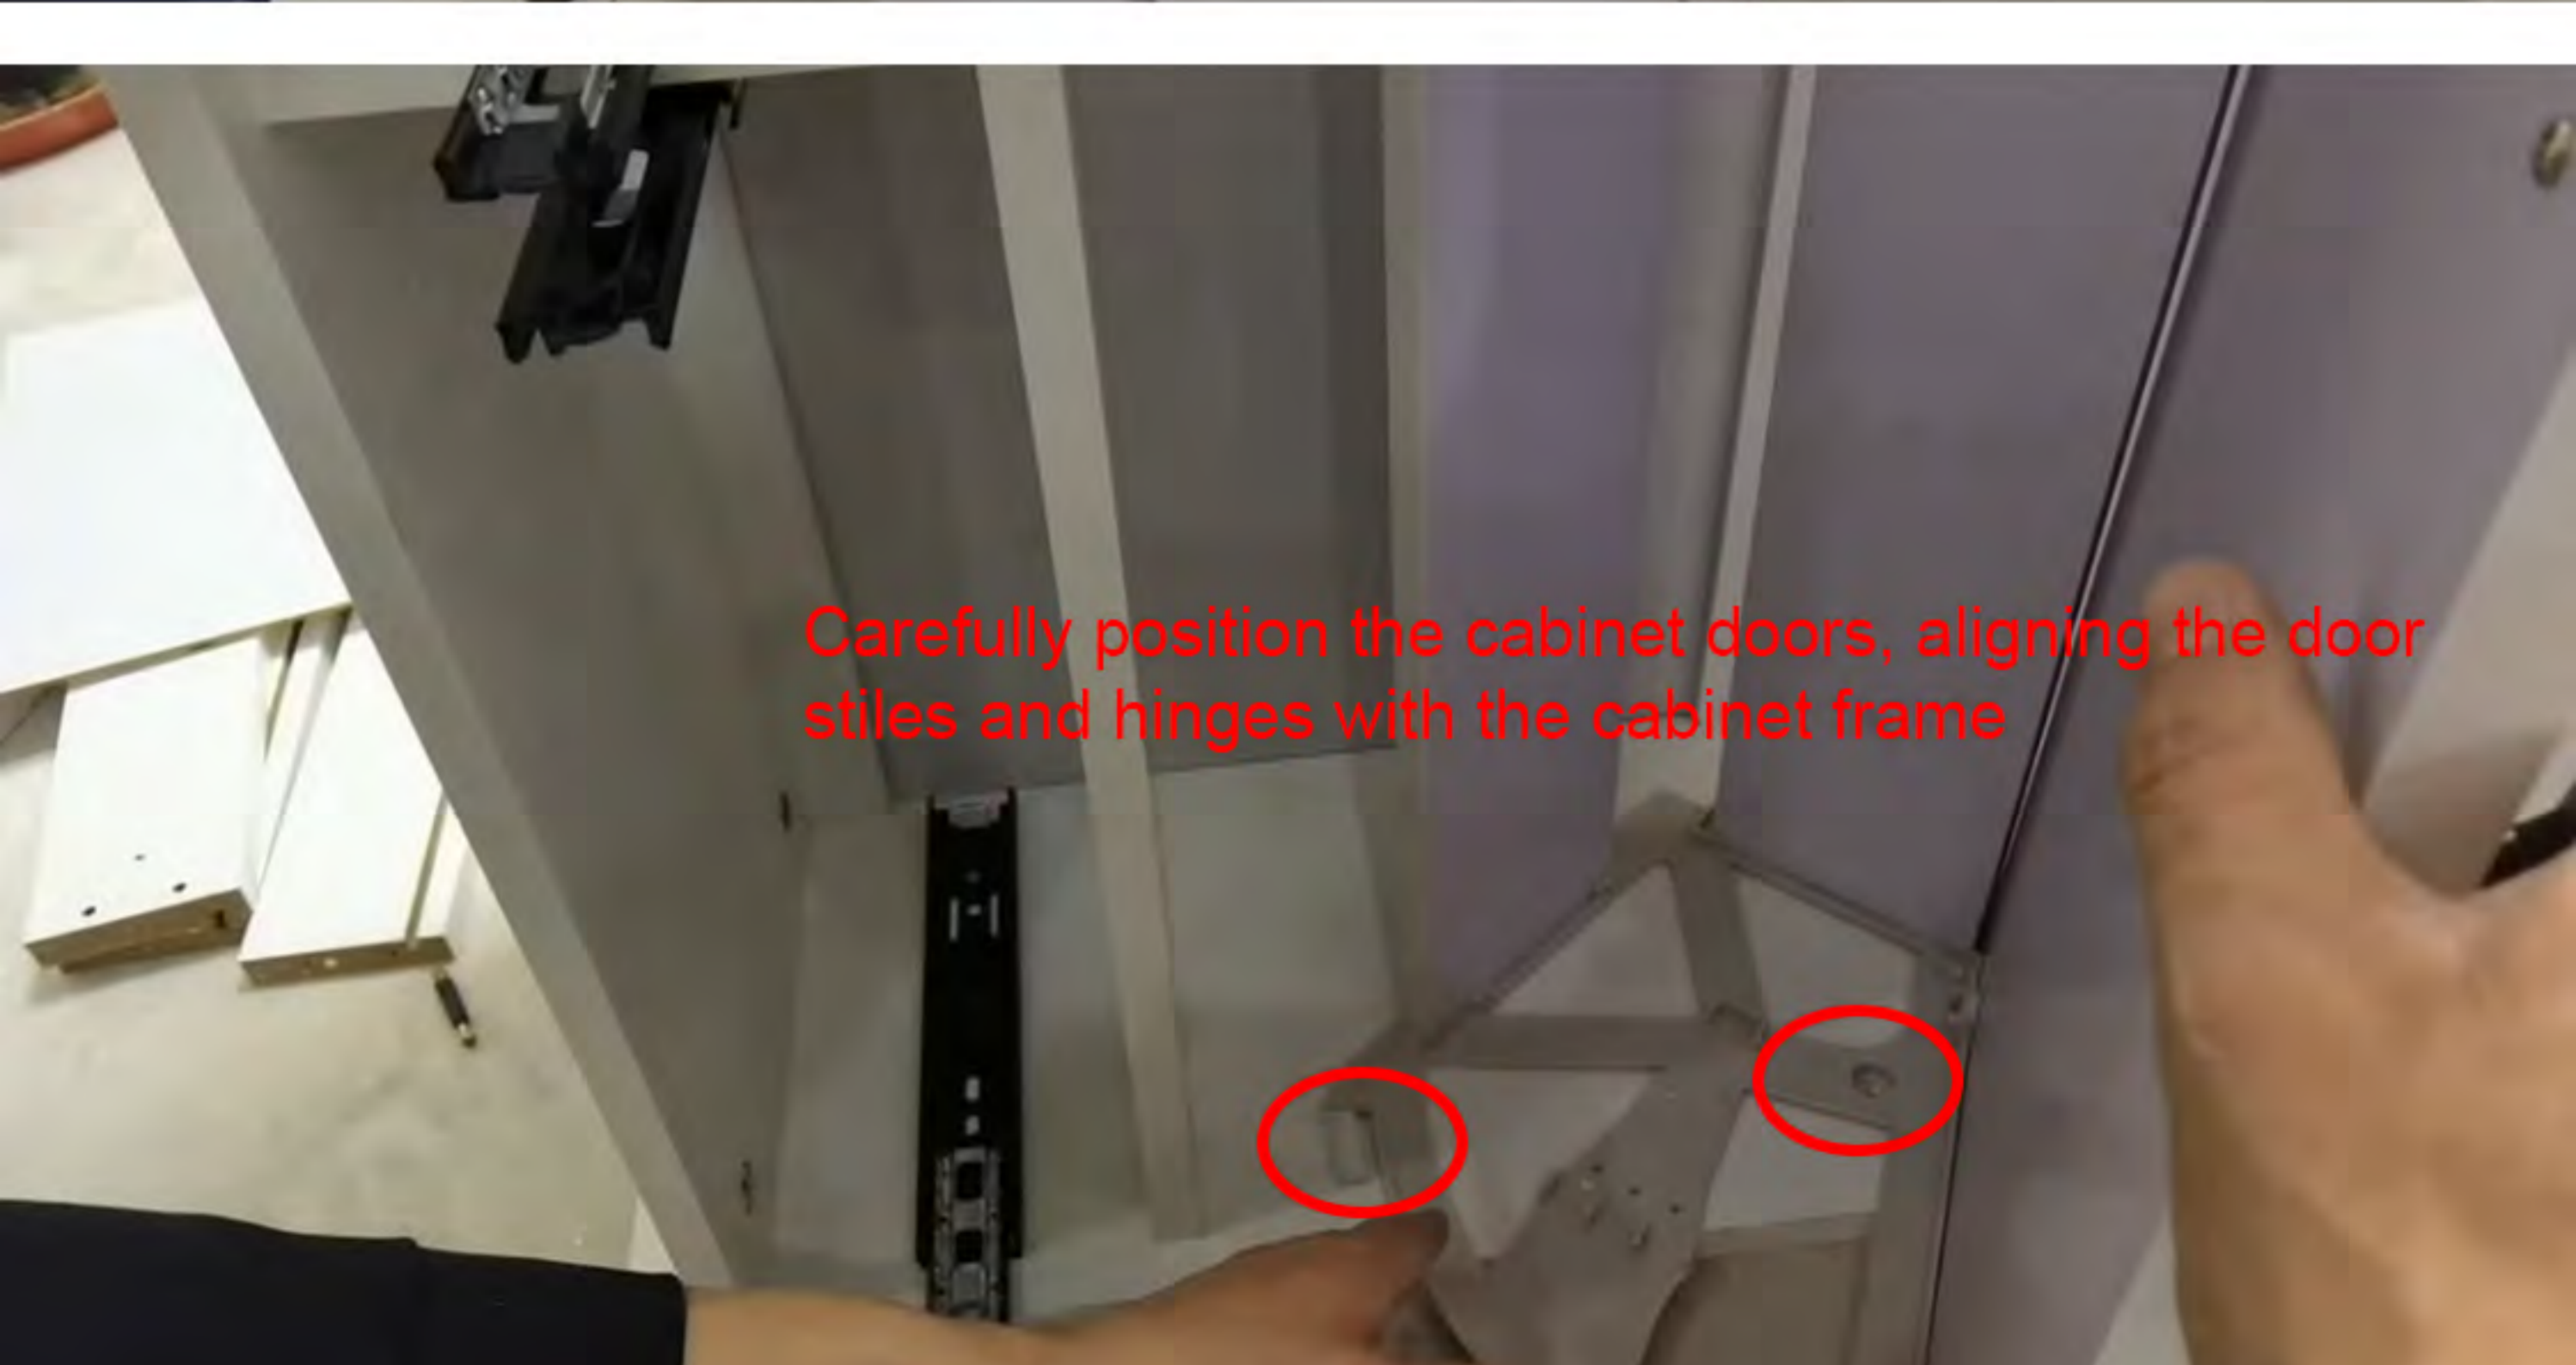

Carefully position the cabinet doors, aligning the door stiles and hinges with the cabinet frame





#15


#10



Repeat this step to install all cabinet doors



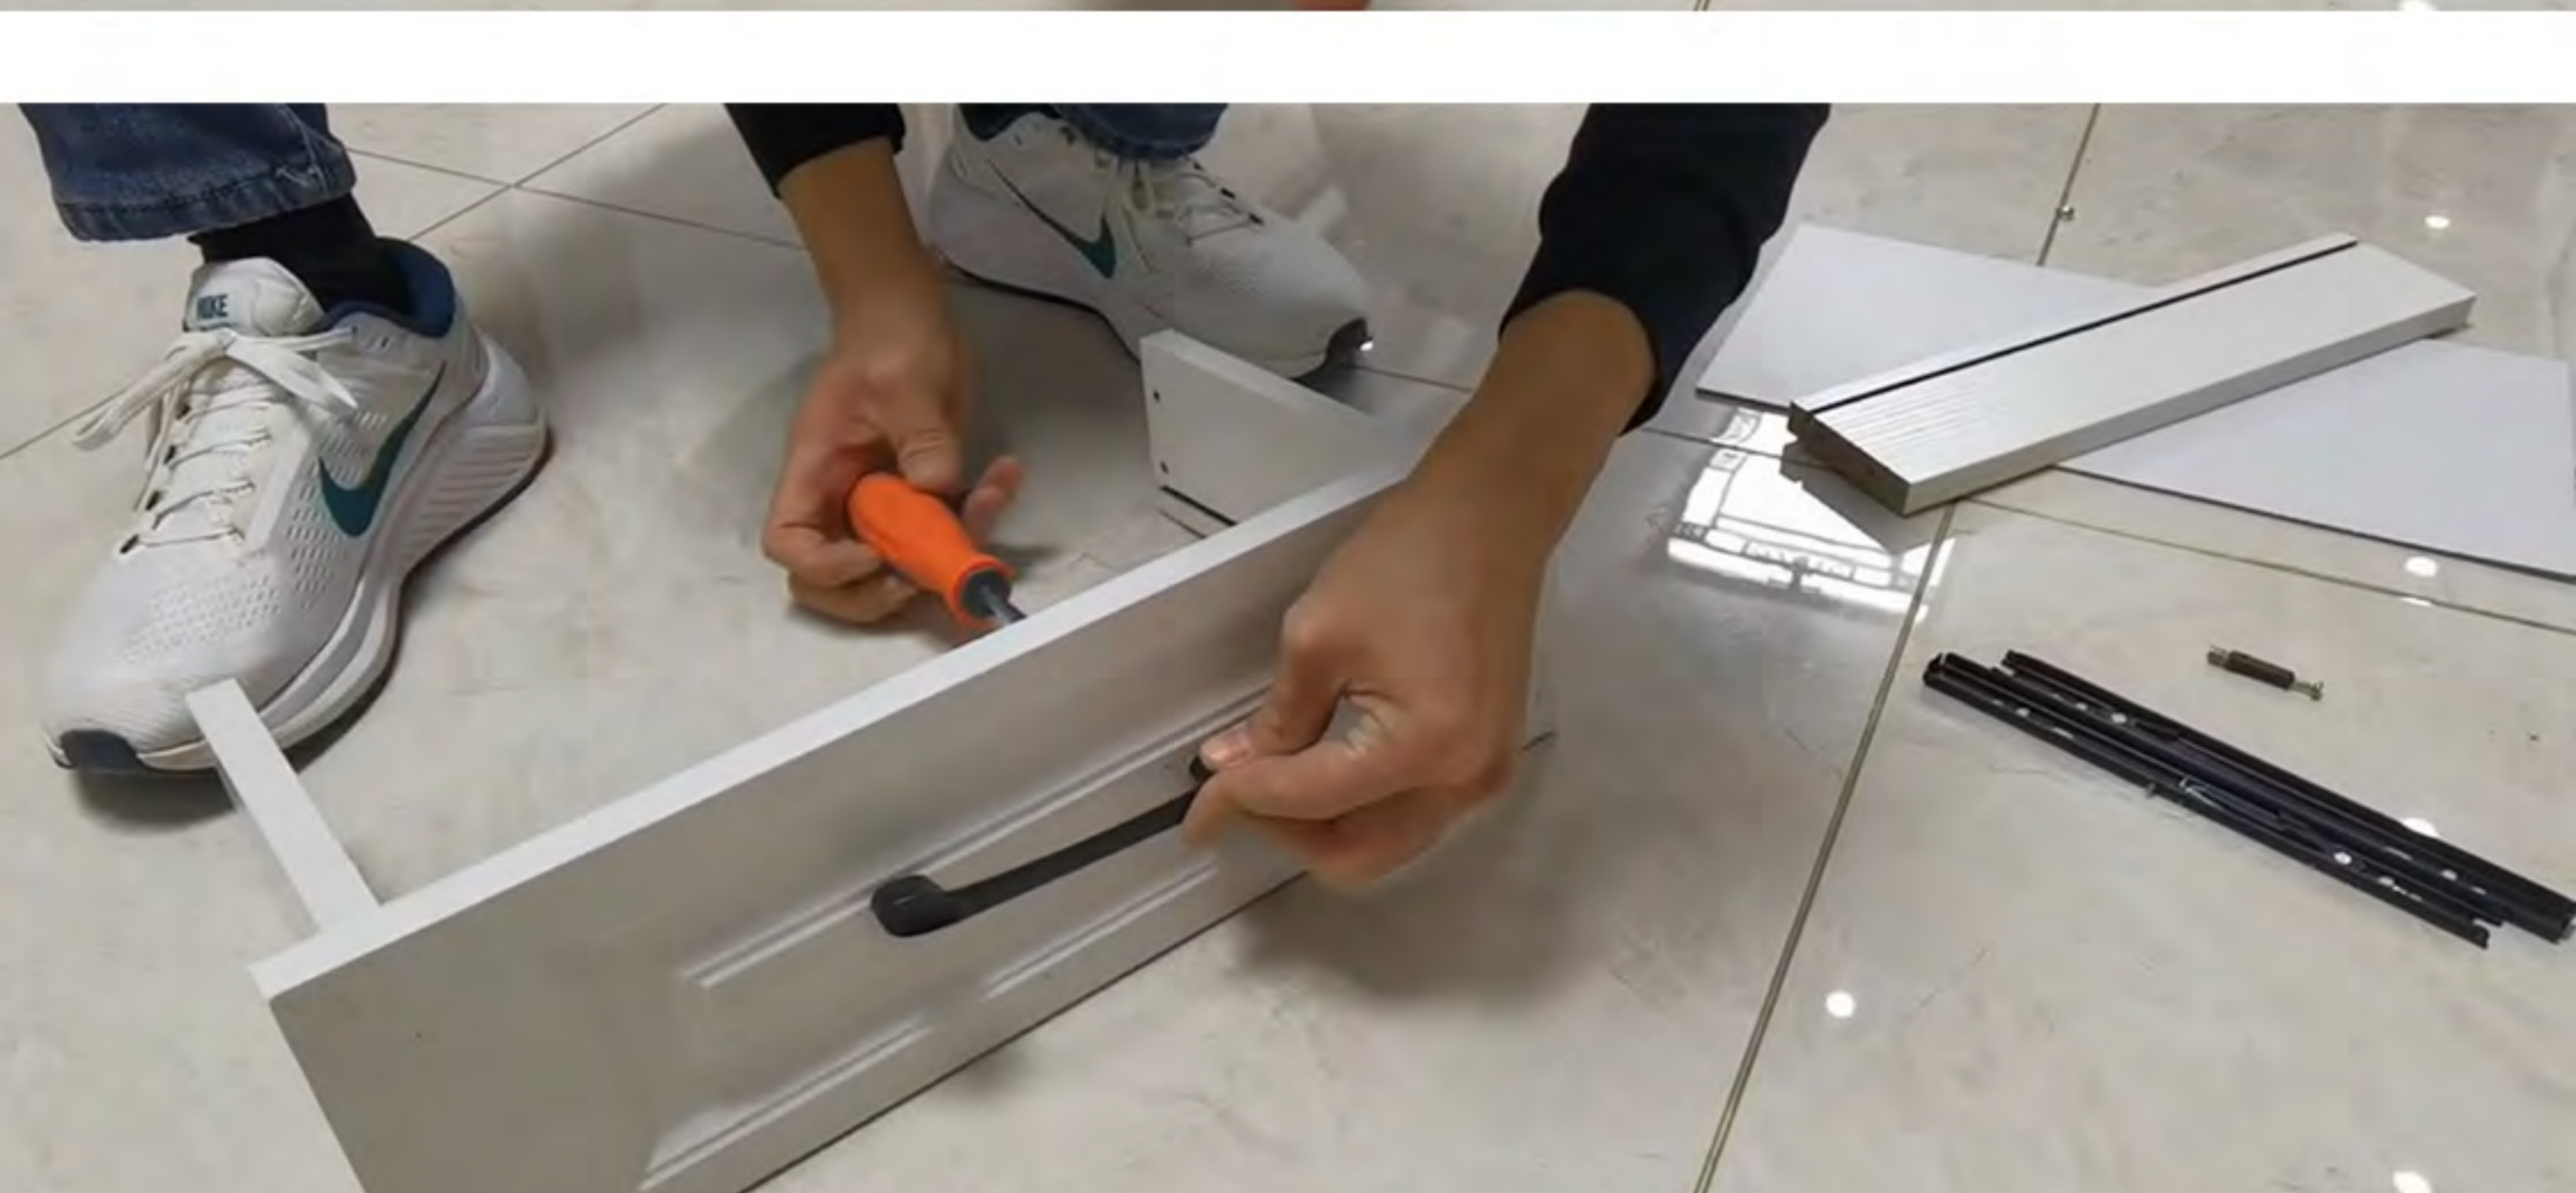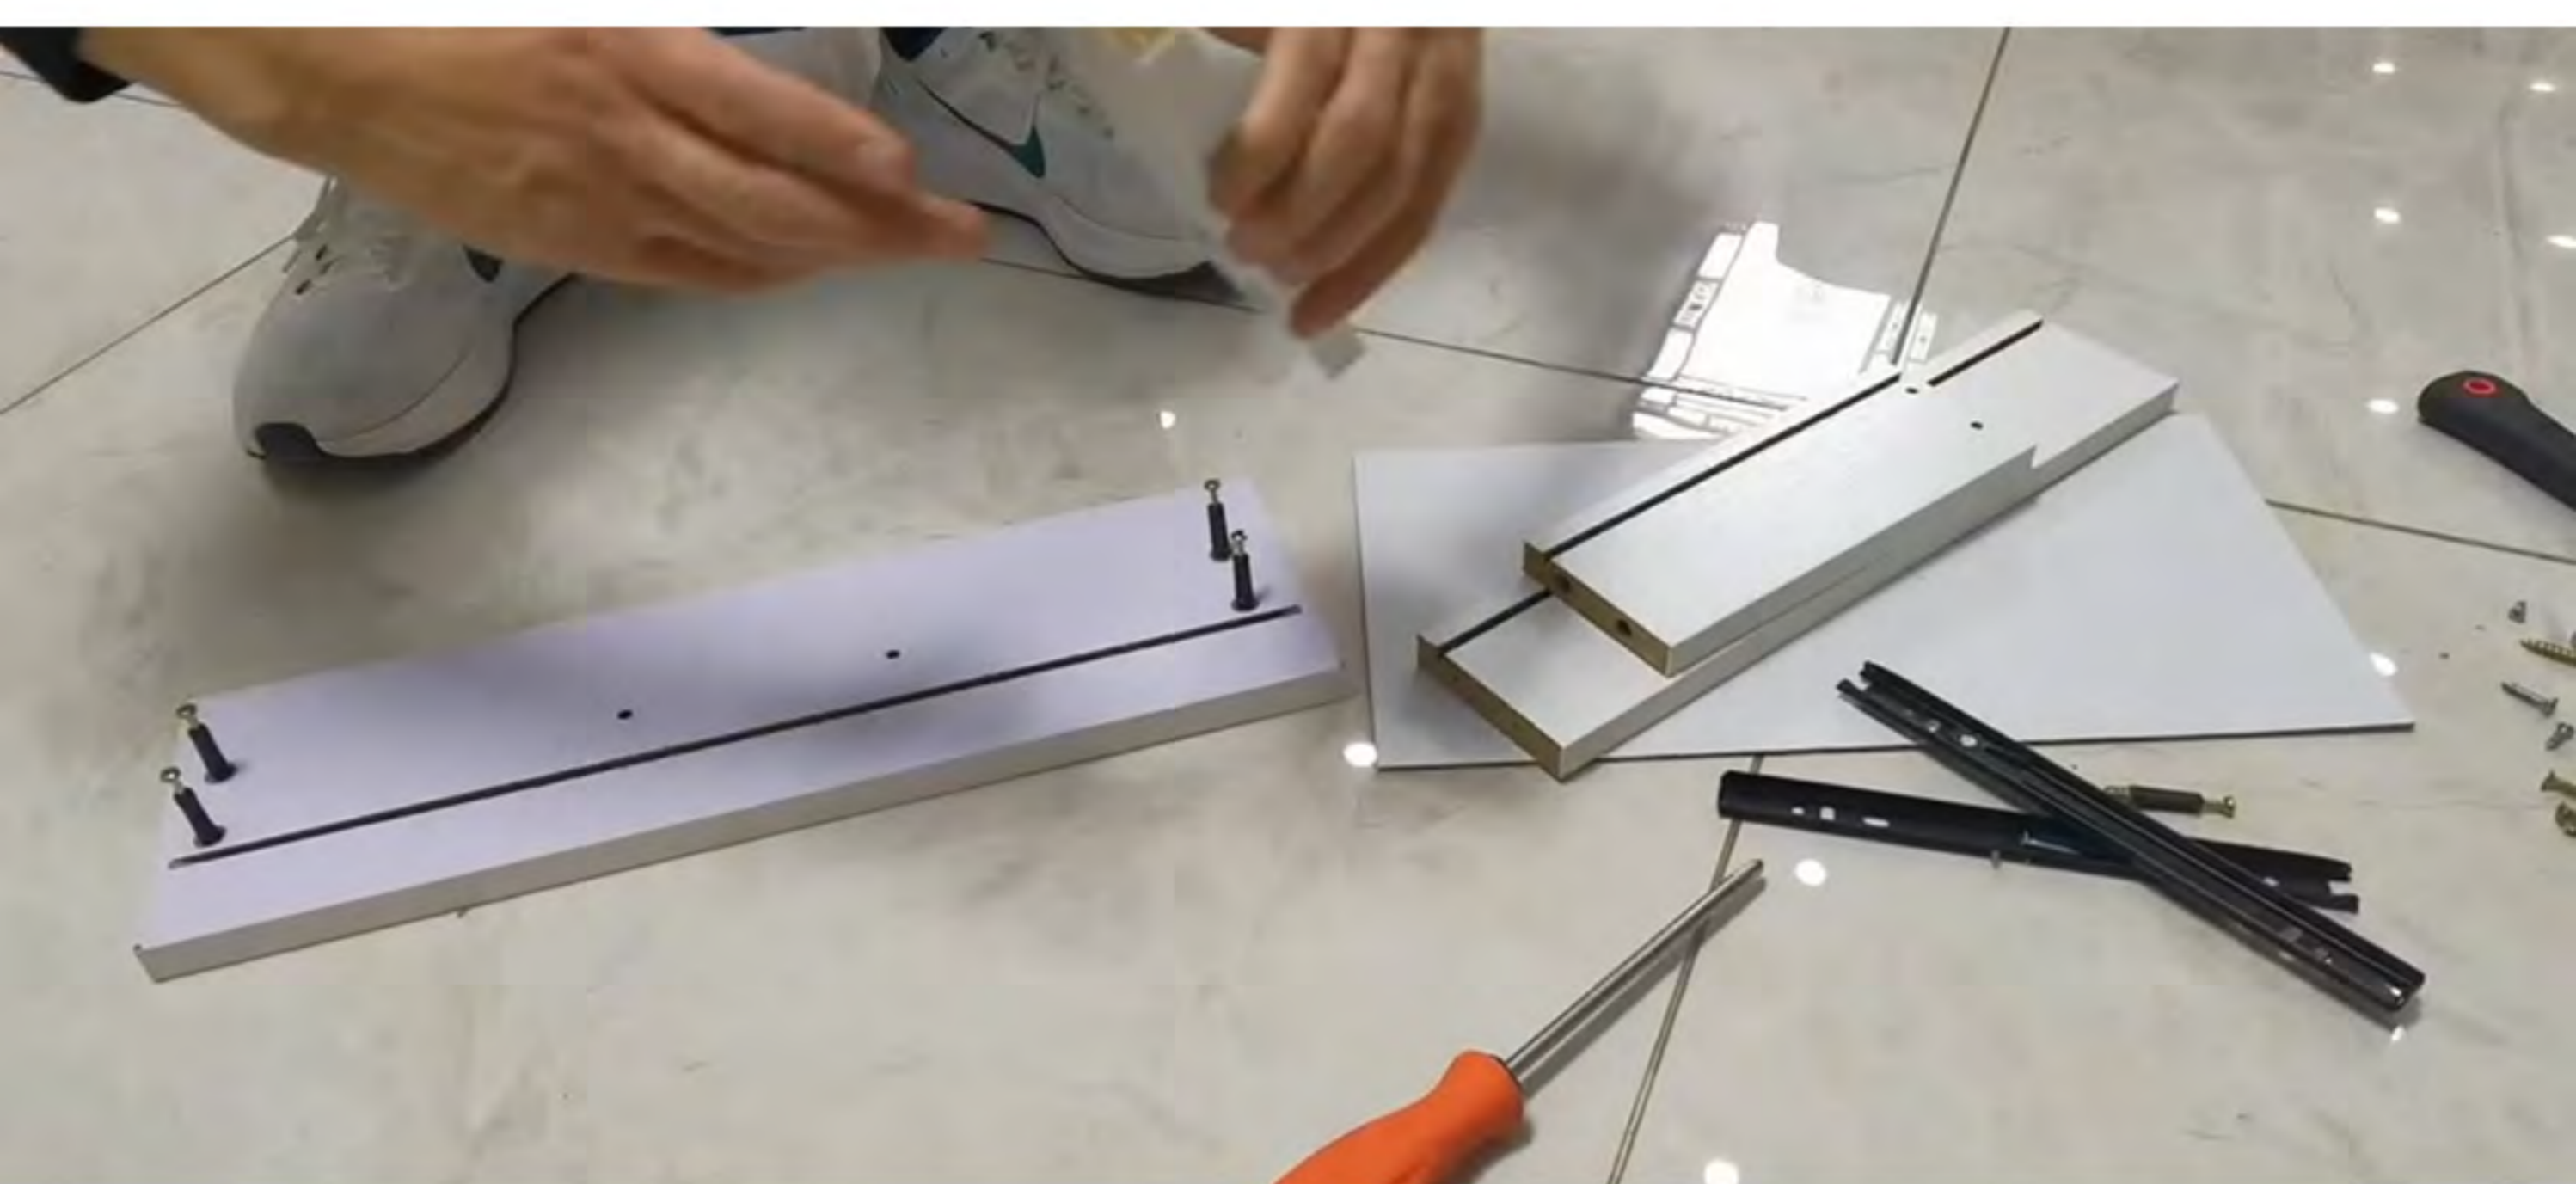


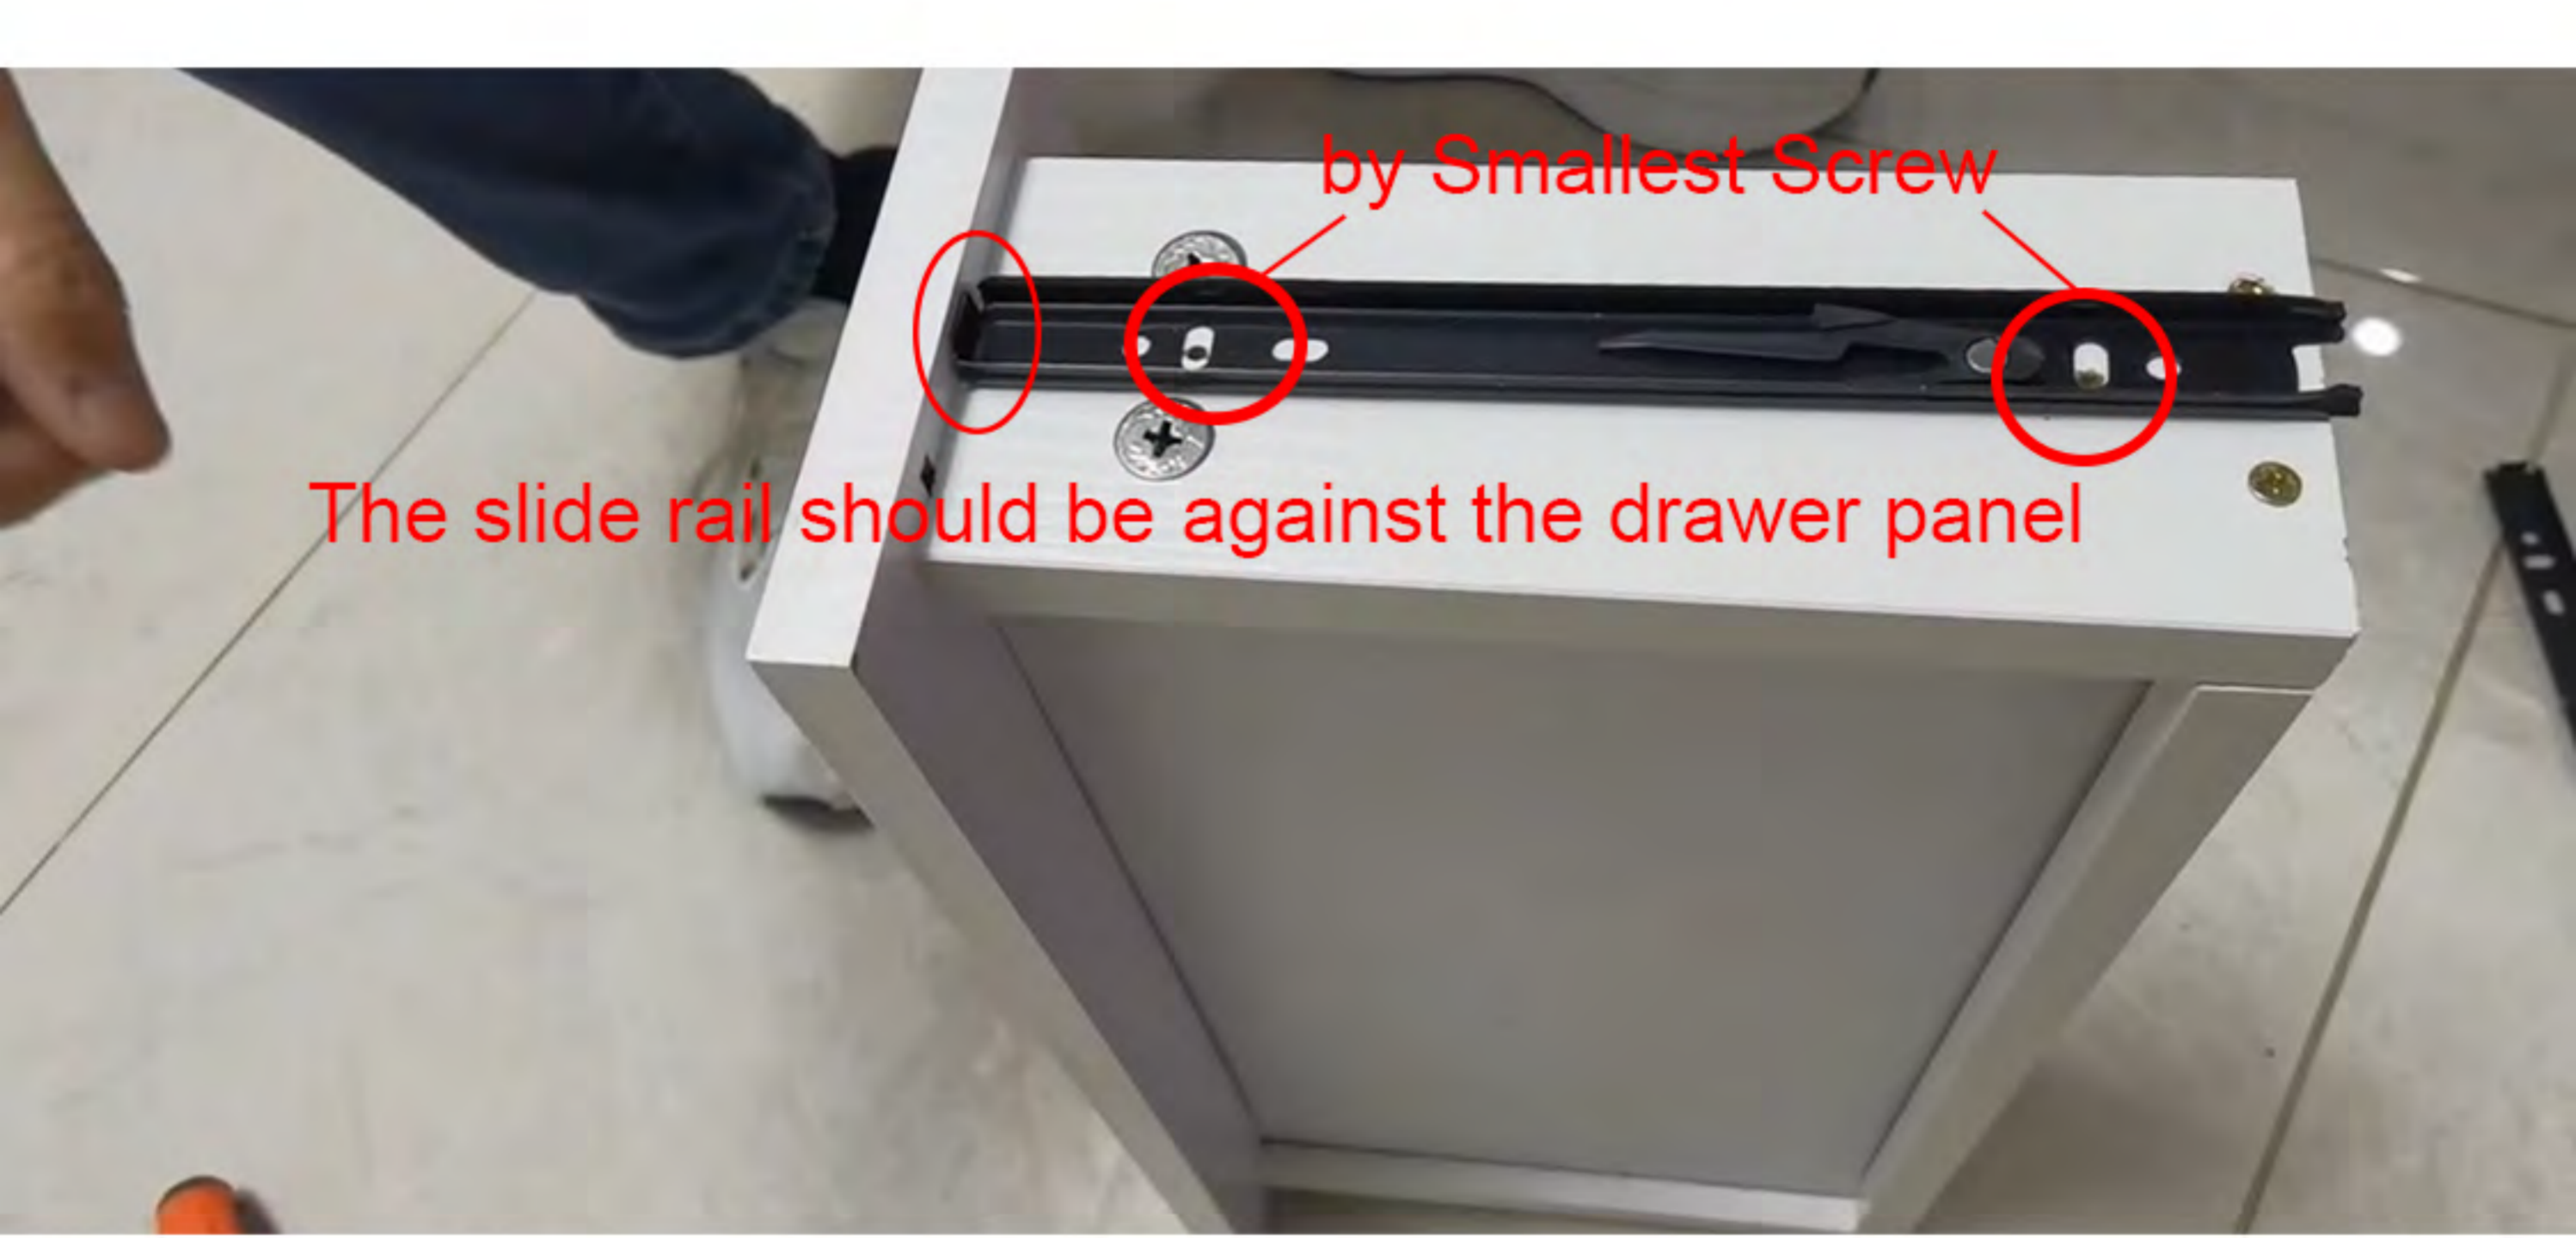


Installation of anti-tipping device



If you want to fix it to the wall, you can use the wall nails included in the accessory pack

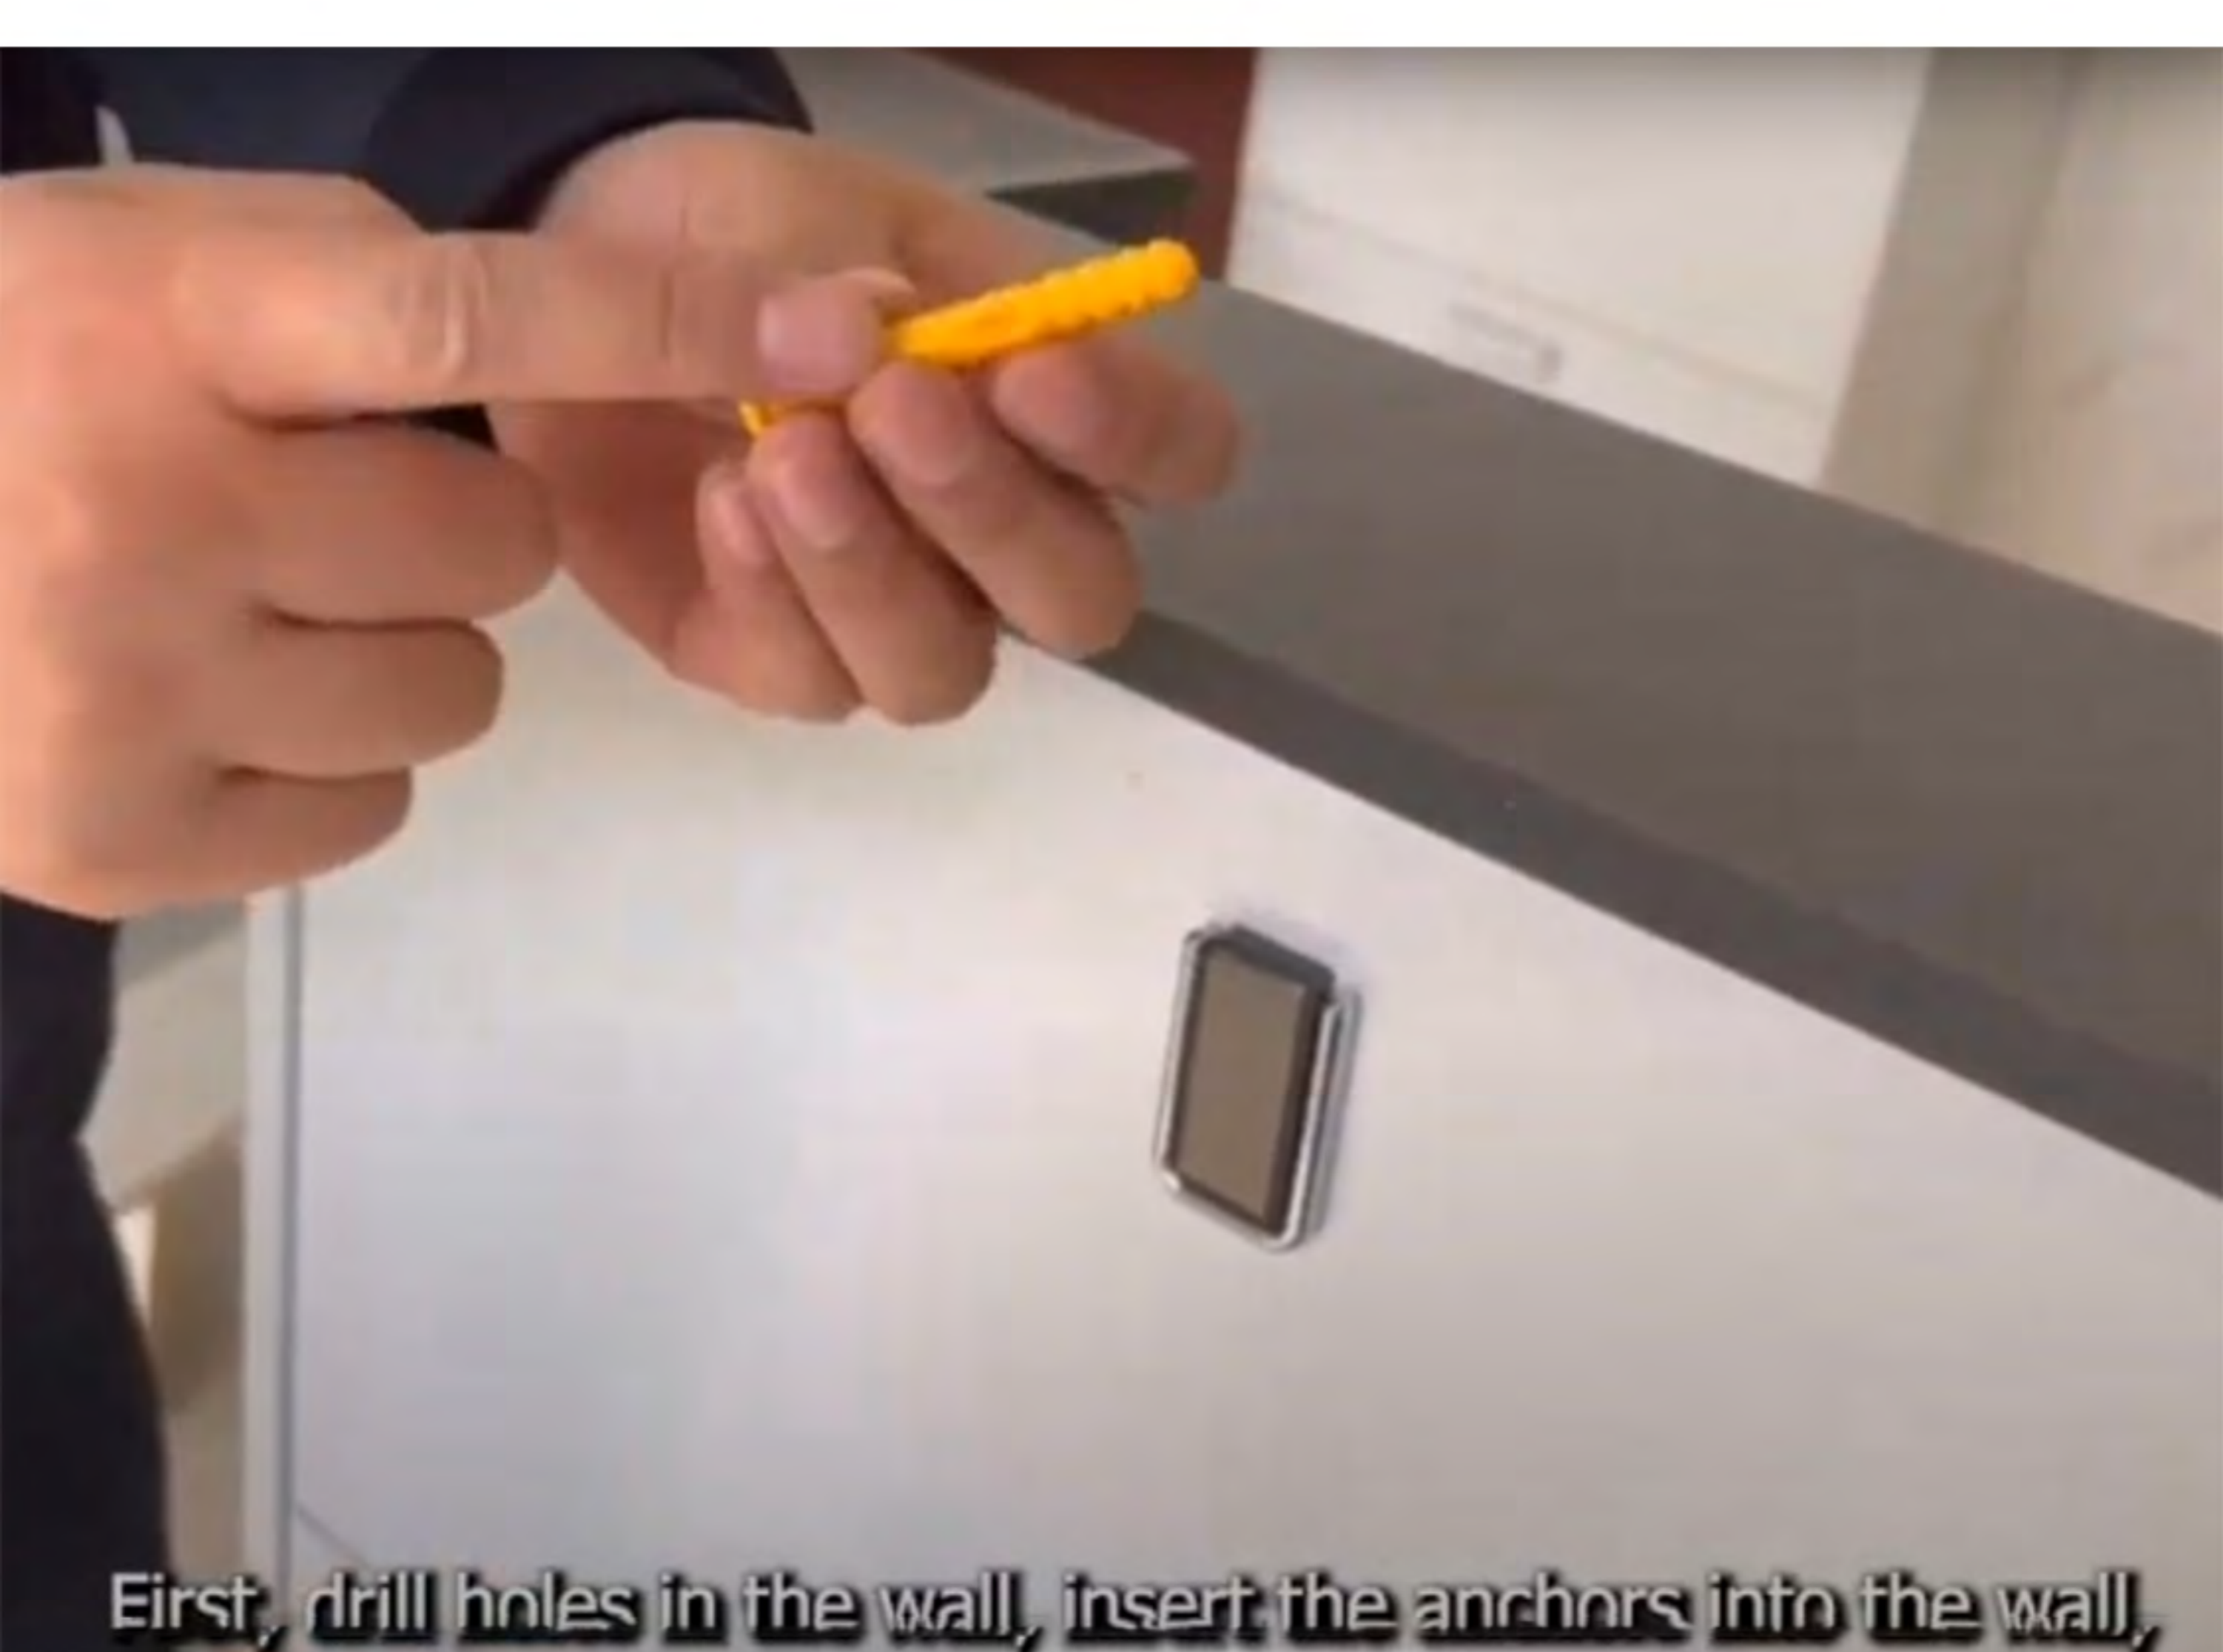

First, drill holes in the wall, insert the anchors into the wall,

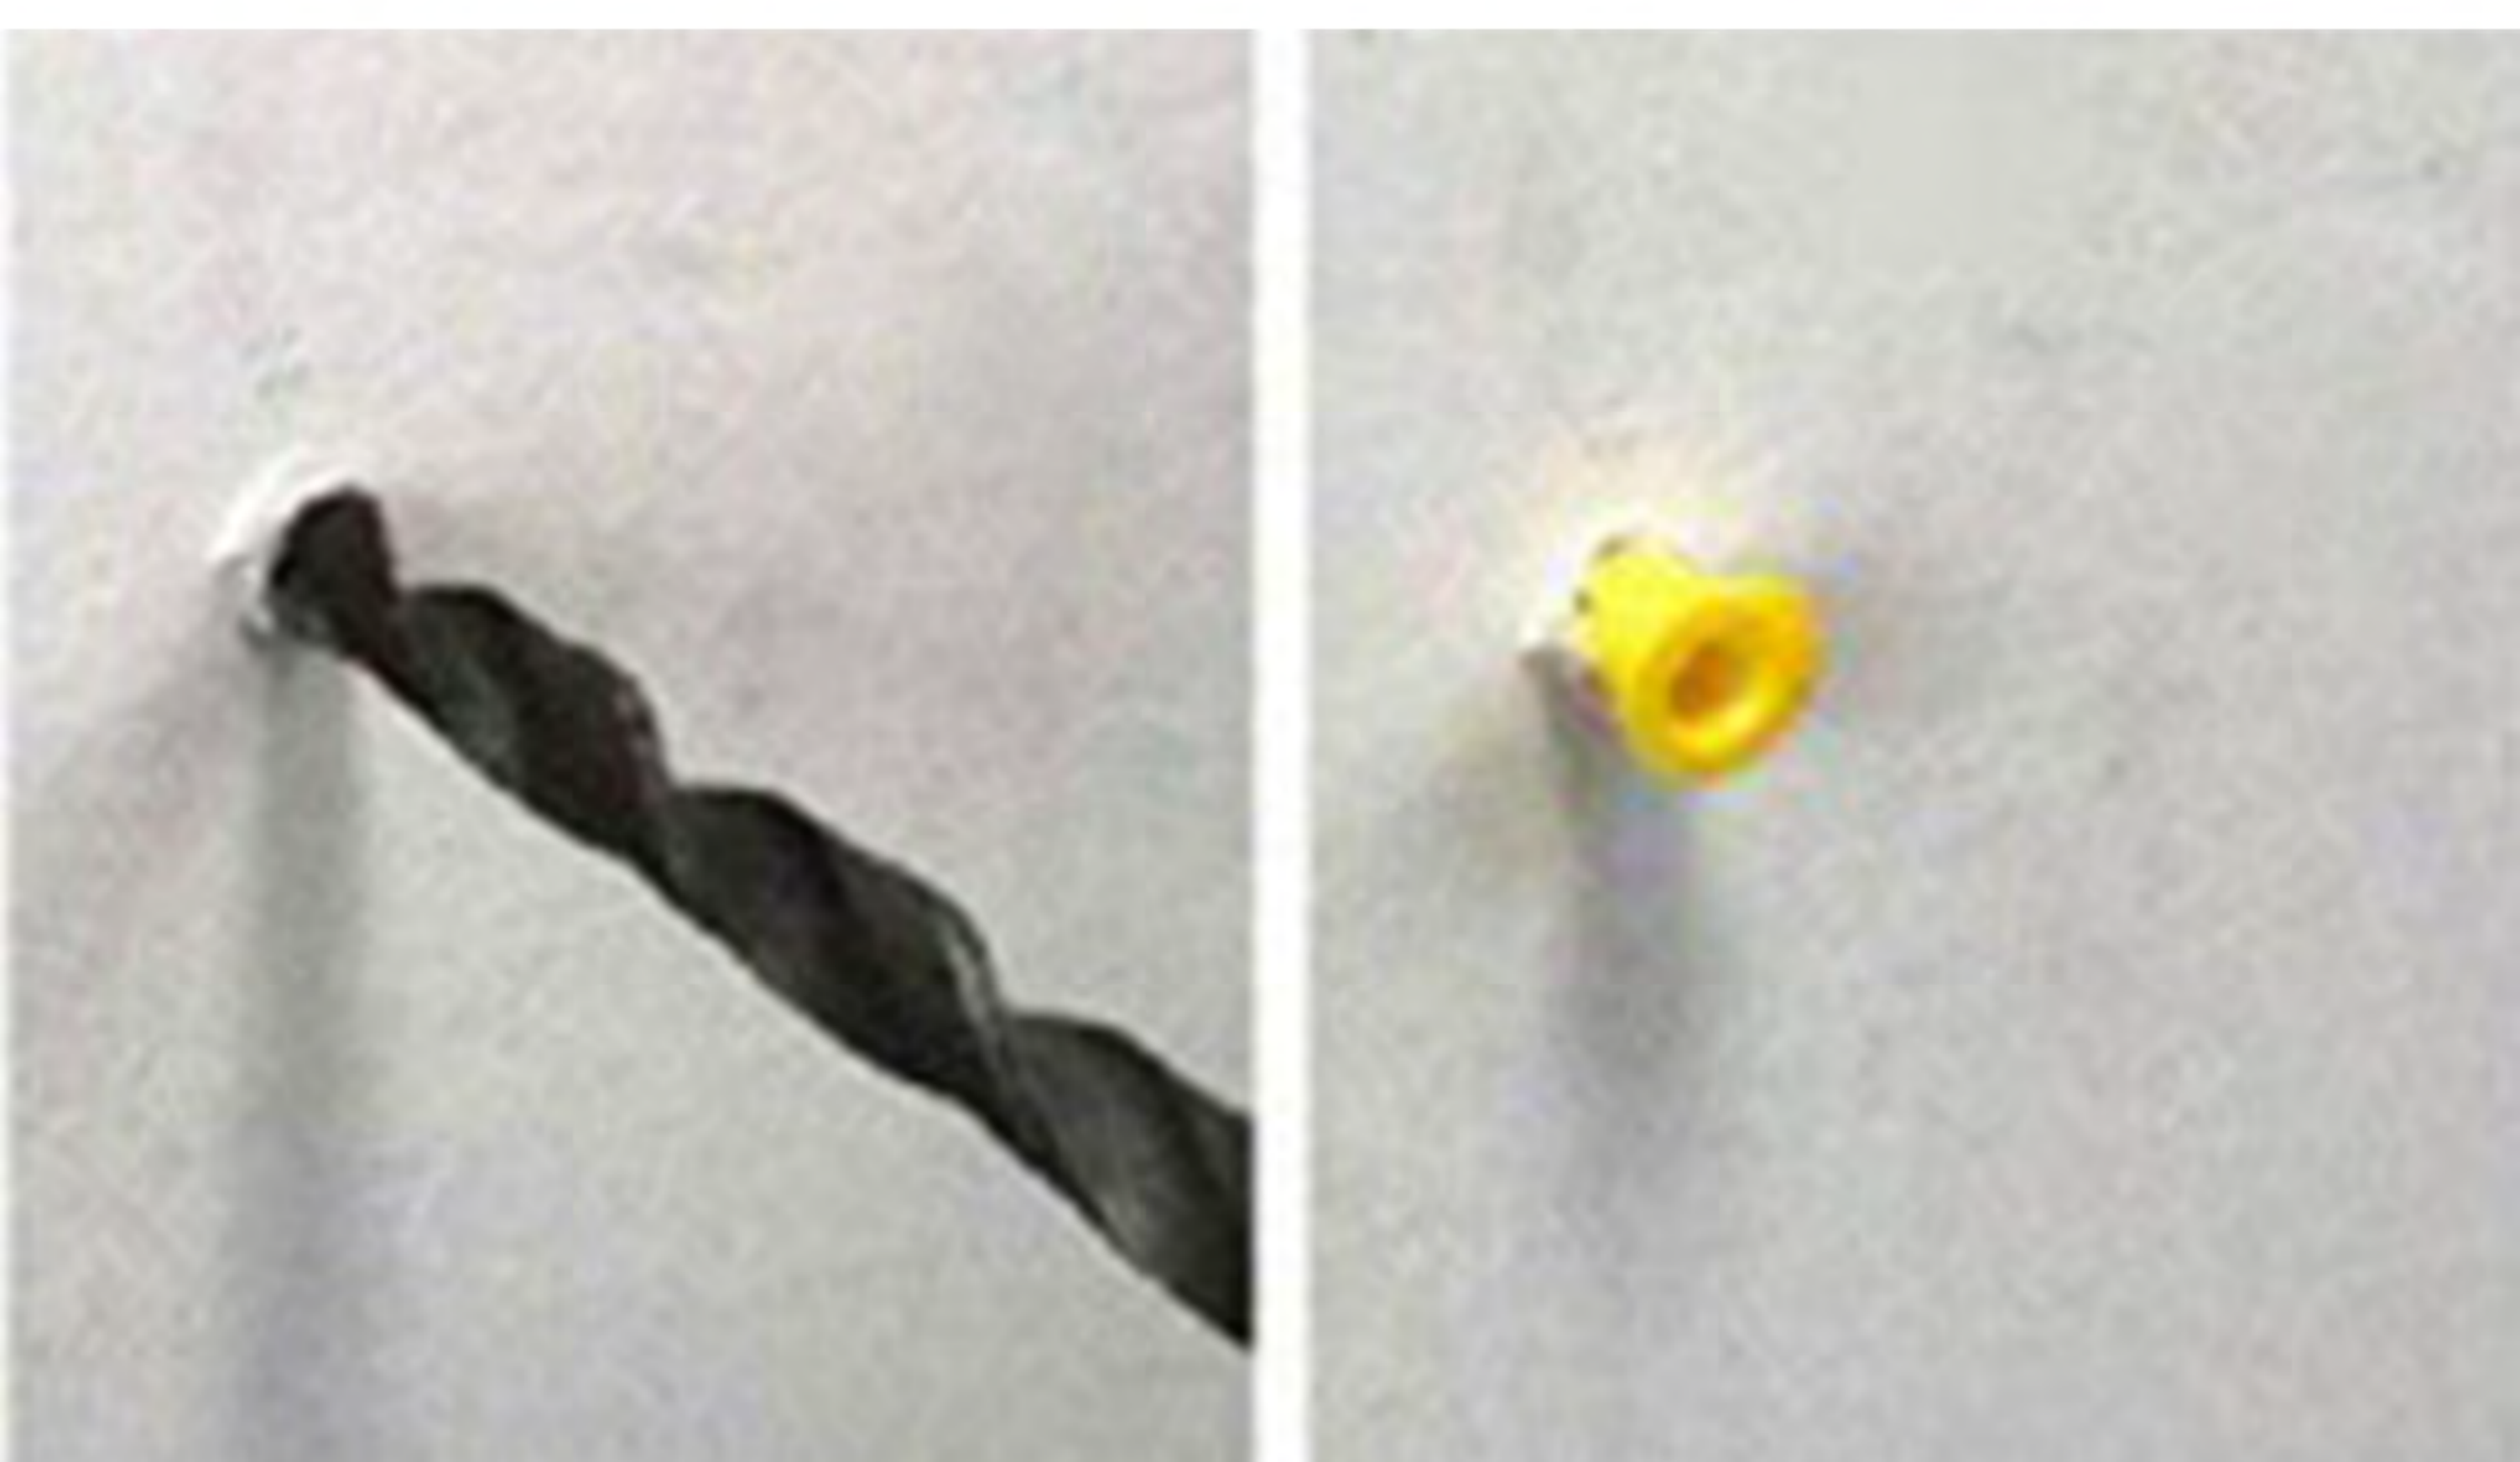

and then pass the long screws through the cabinet from the inside



Exactly, once the anchors are inserted into the wall, secure the cabinet to the wall using the anchors and screws.