



# SOCE029 80CM Installation Instruction


Please be sure to use a manual screwdriver and refrain from using an electric drill.

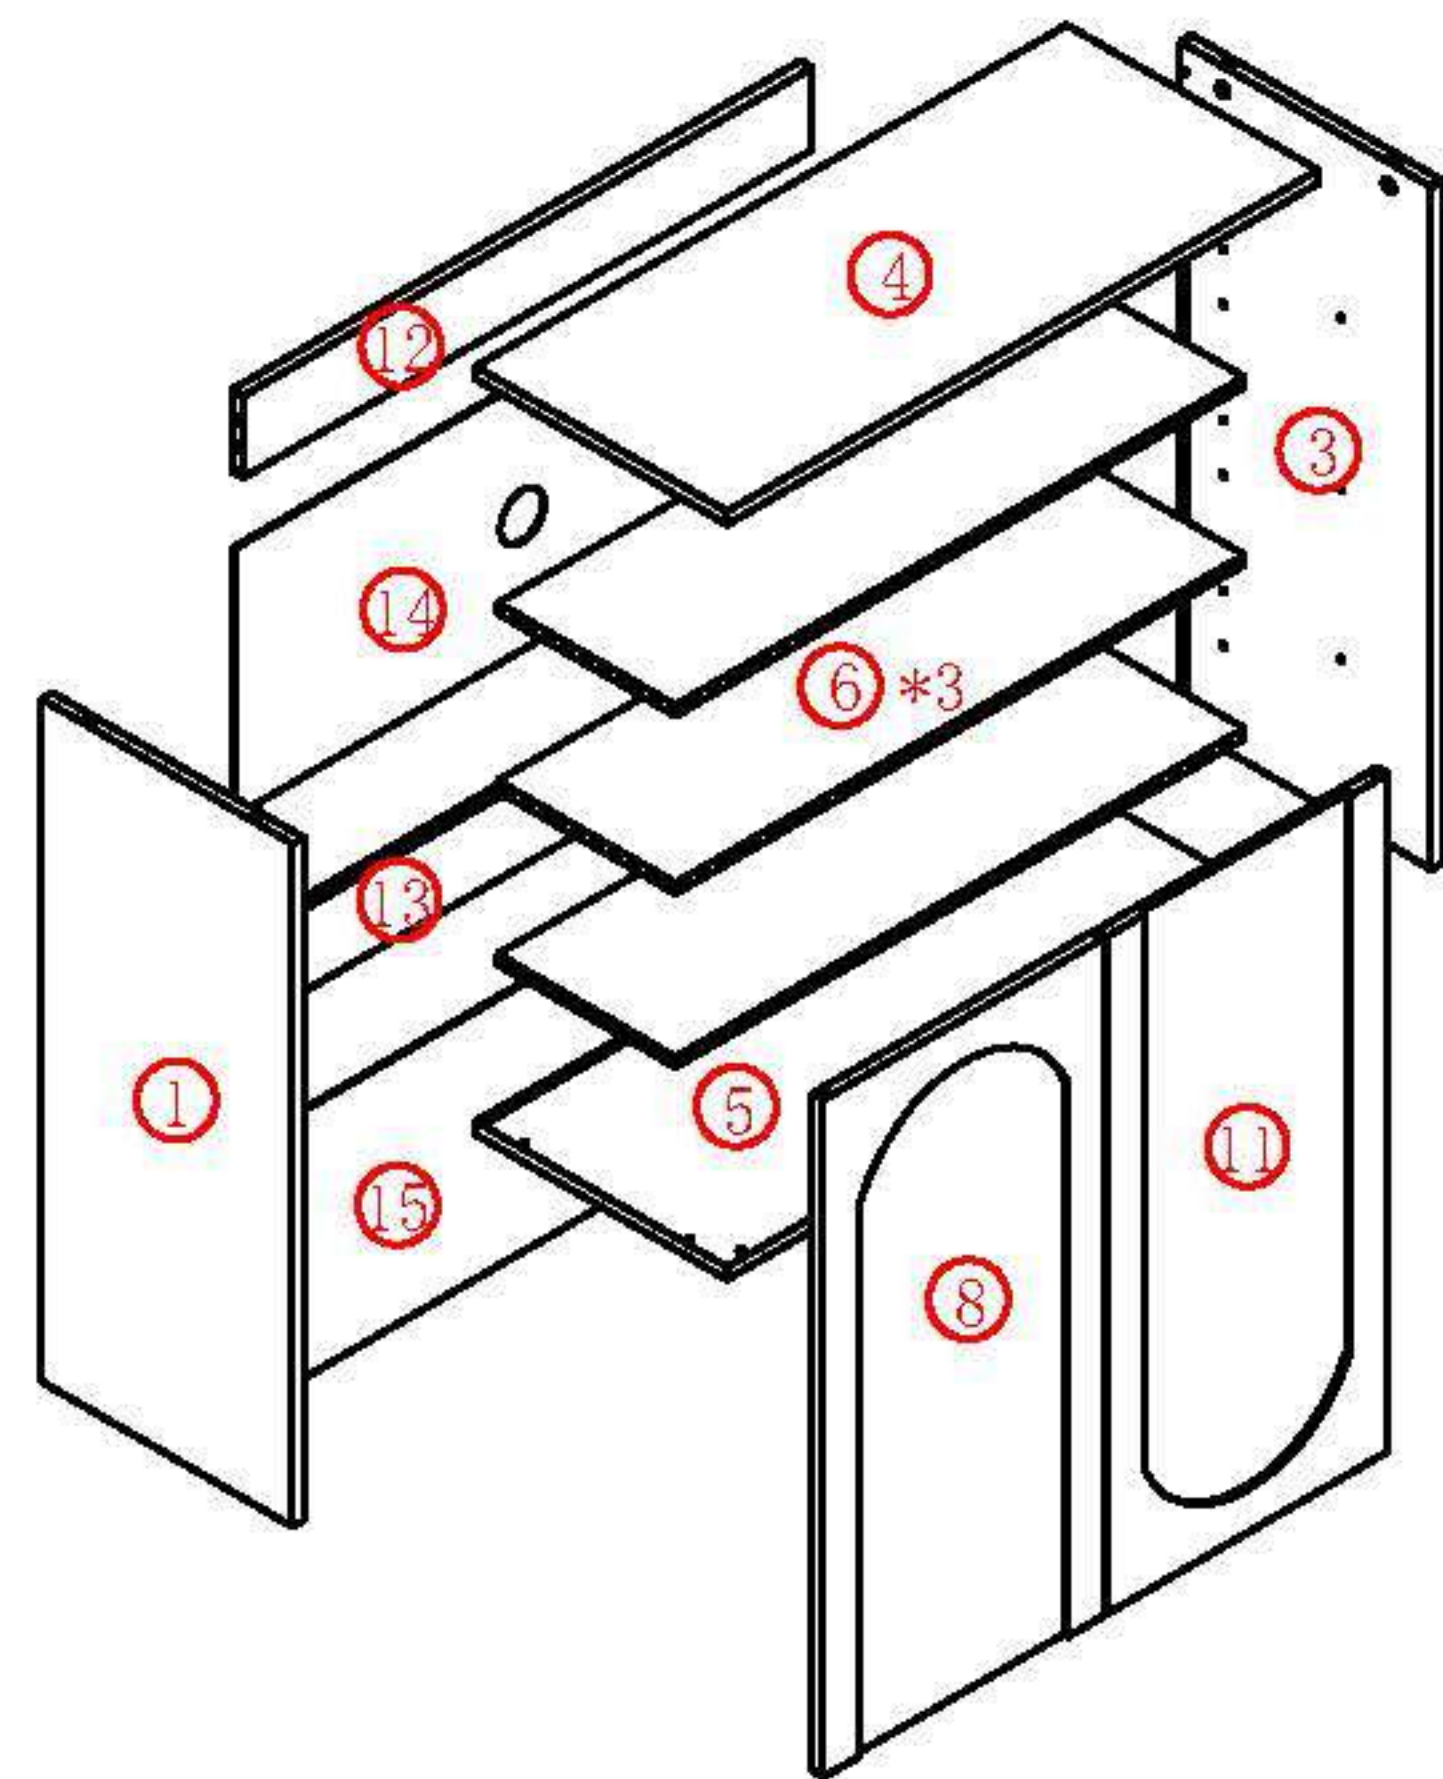


- ☆ 1. The panels and screws are not used. Please read the instructions carefully before installation and distinguish each panel components and screws.
- ☆ 2. When installing the towel, please tighten the screws to 70% first, and then tighten all the screws after all installation is completed.

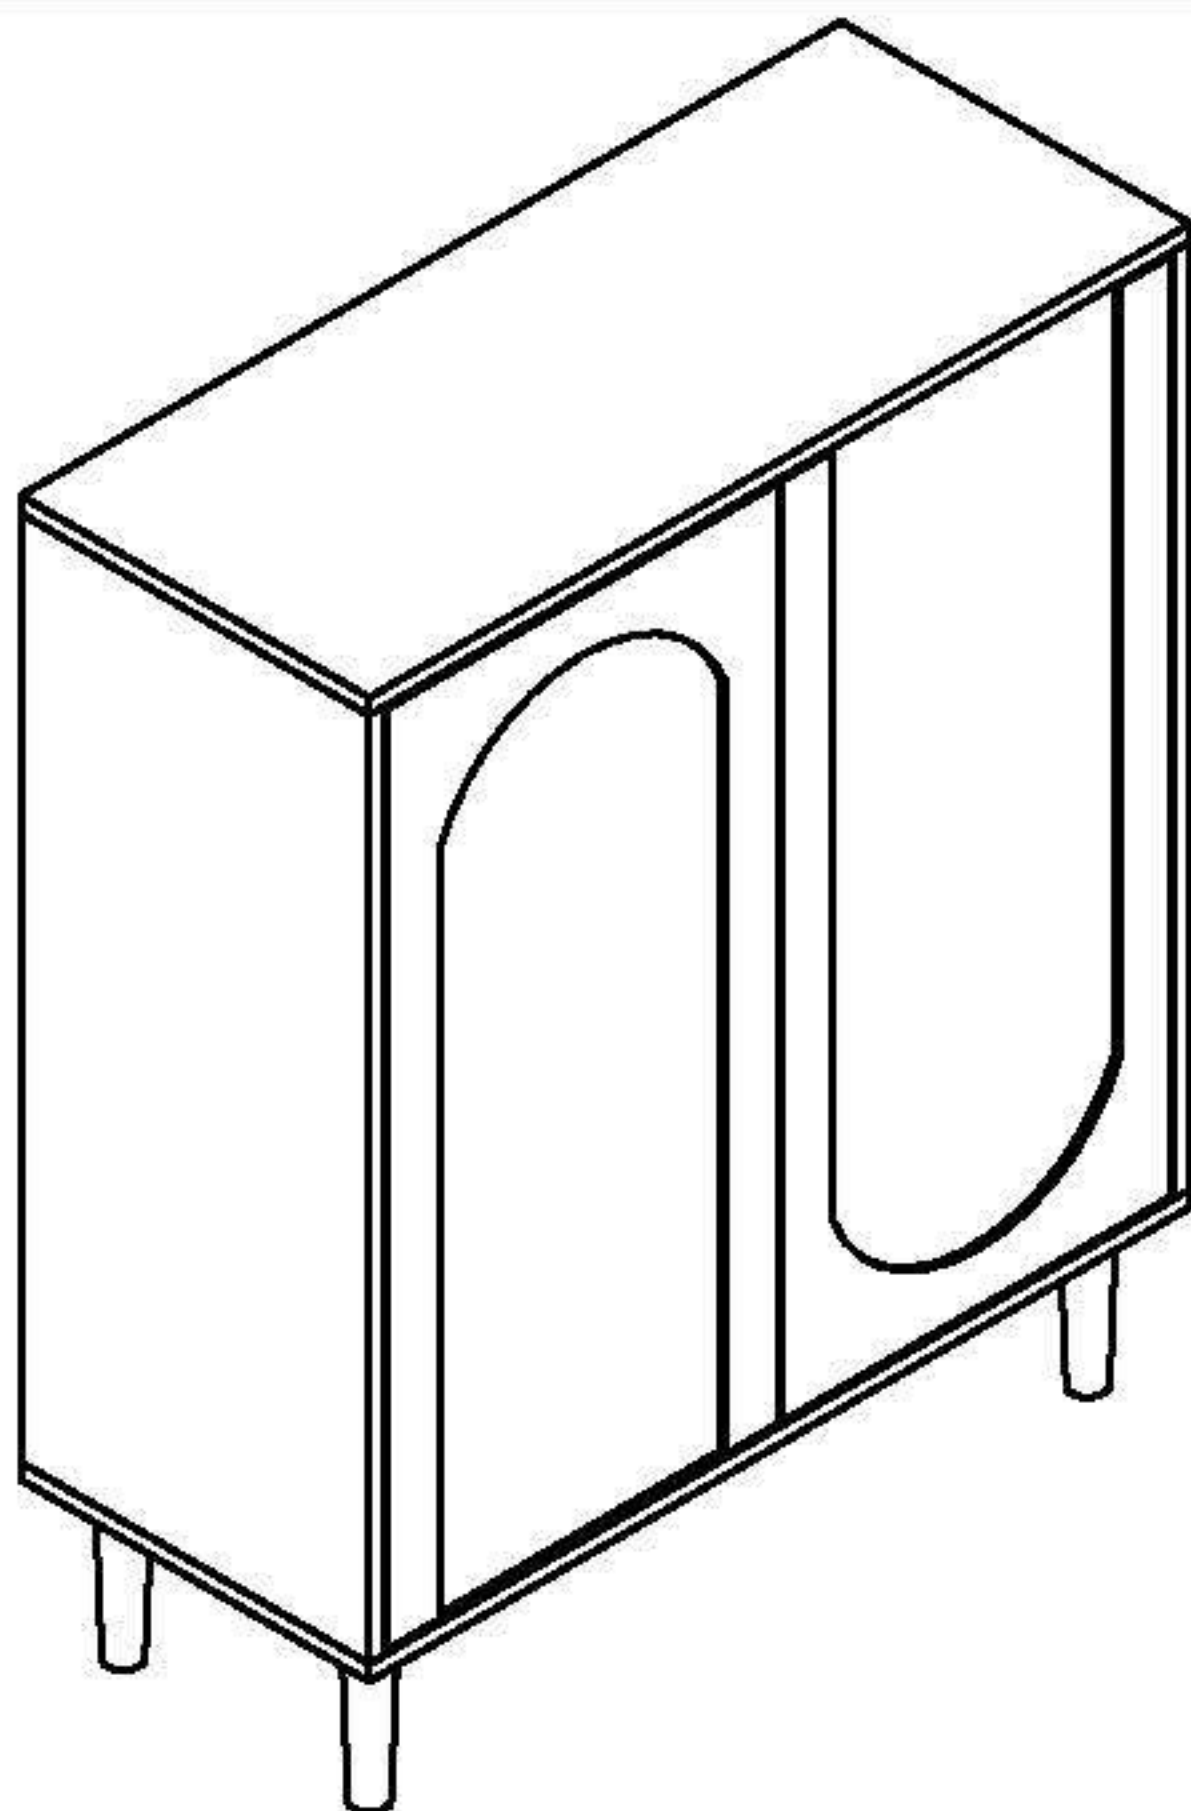

Inner Hexagonal Wrench \*1

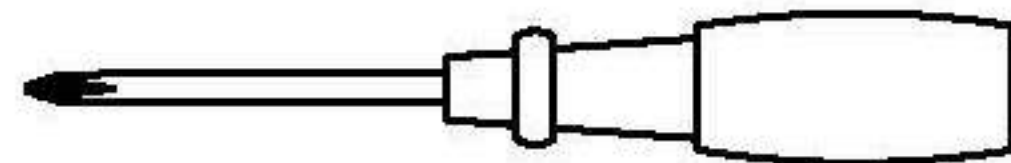


Screwdriver \*1

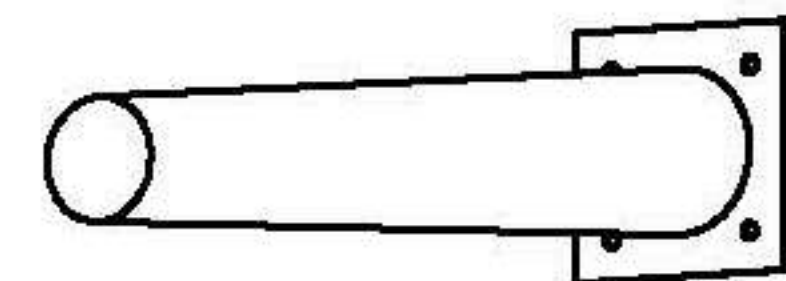

M44\*5




C6\*5

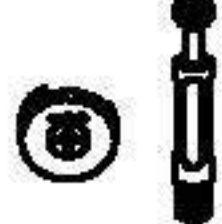

D0\*14



A2\*28

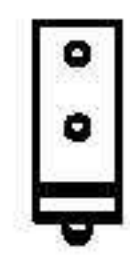


K2\*2



K11\*1




K0\*16

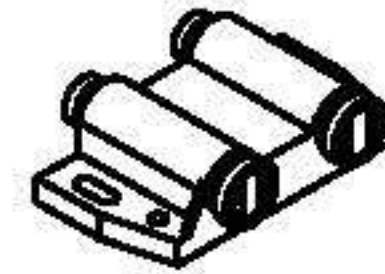


S32\*1




L19\*2


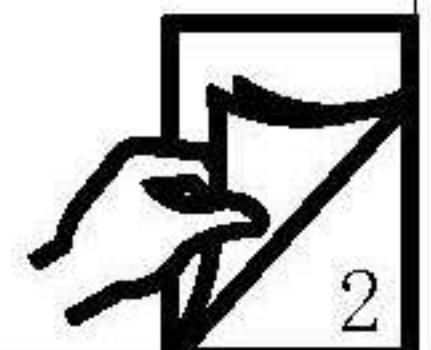


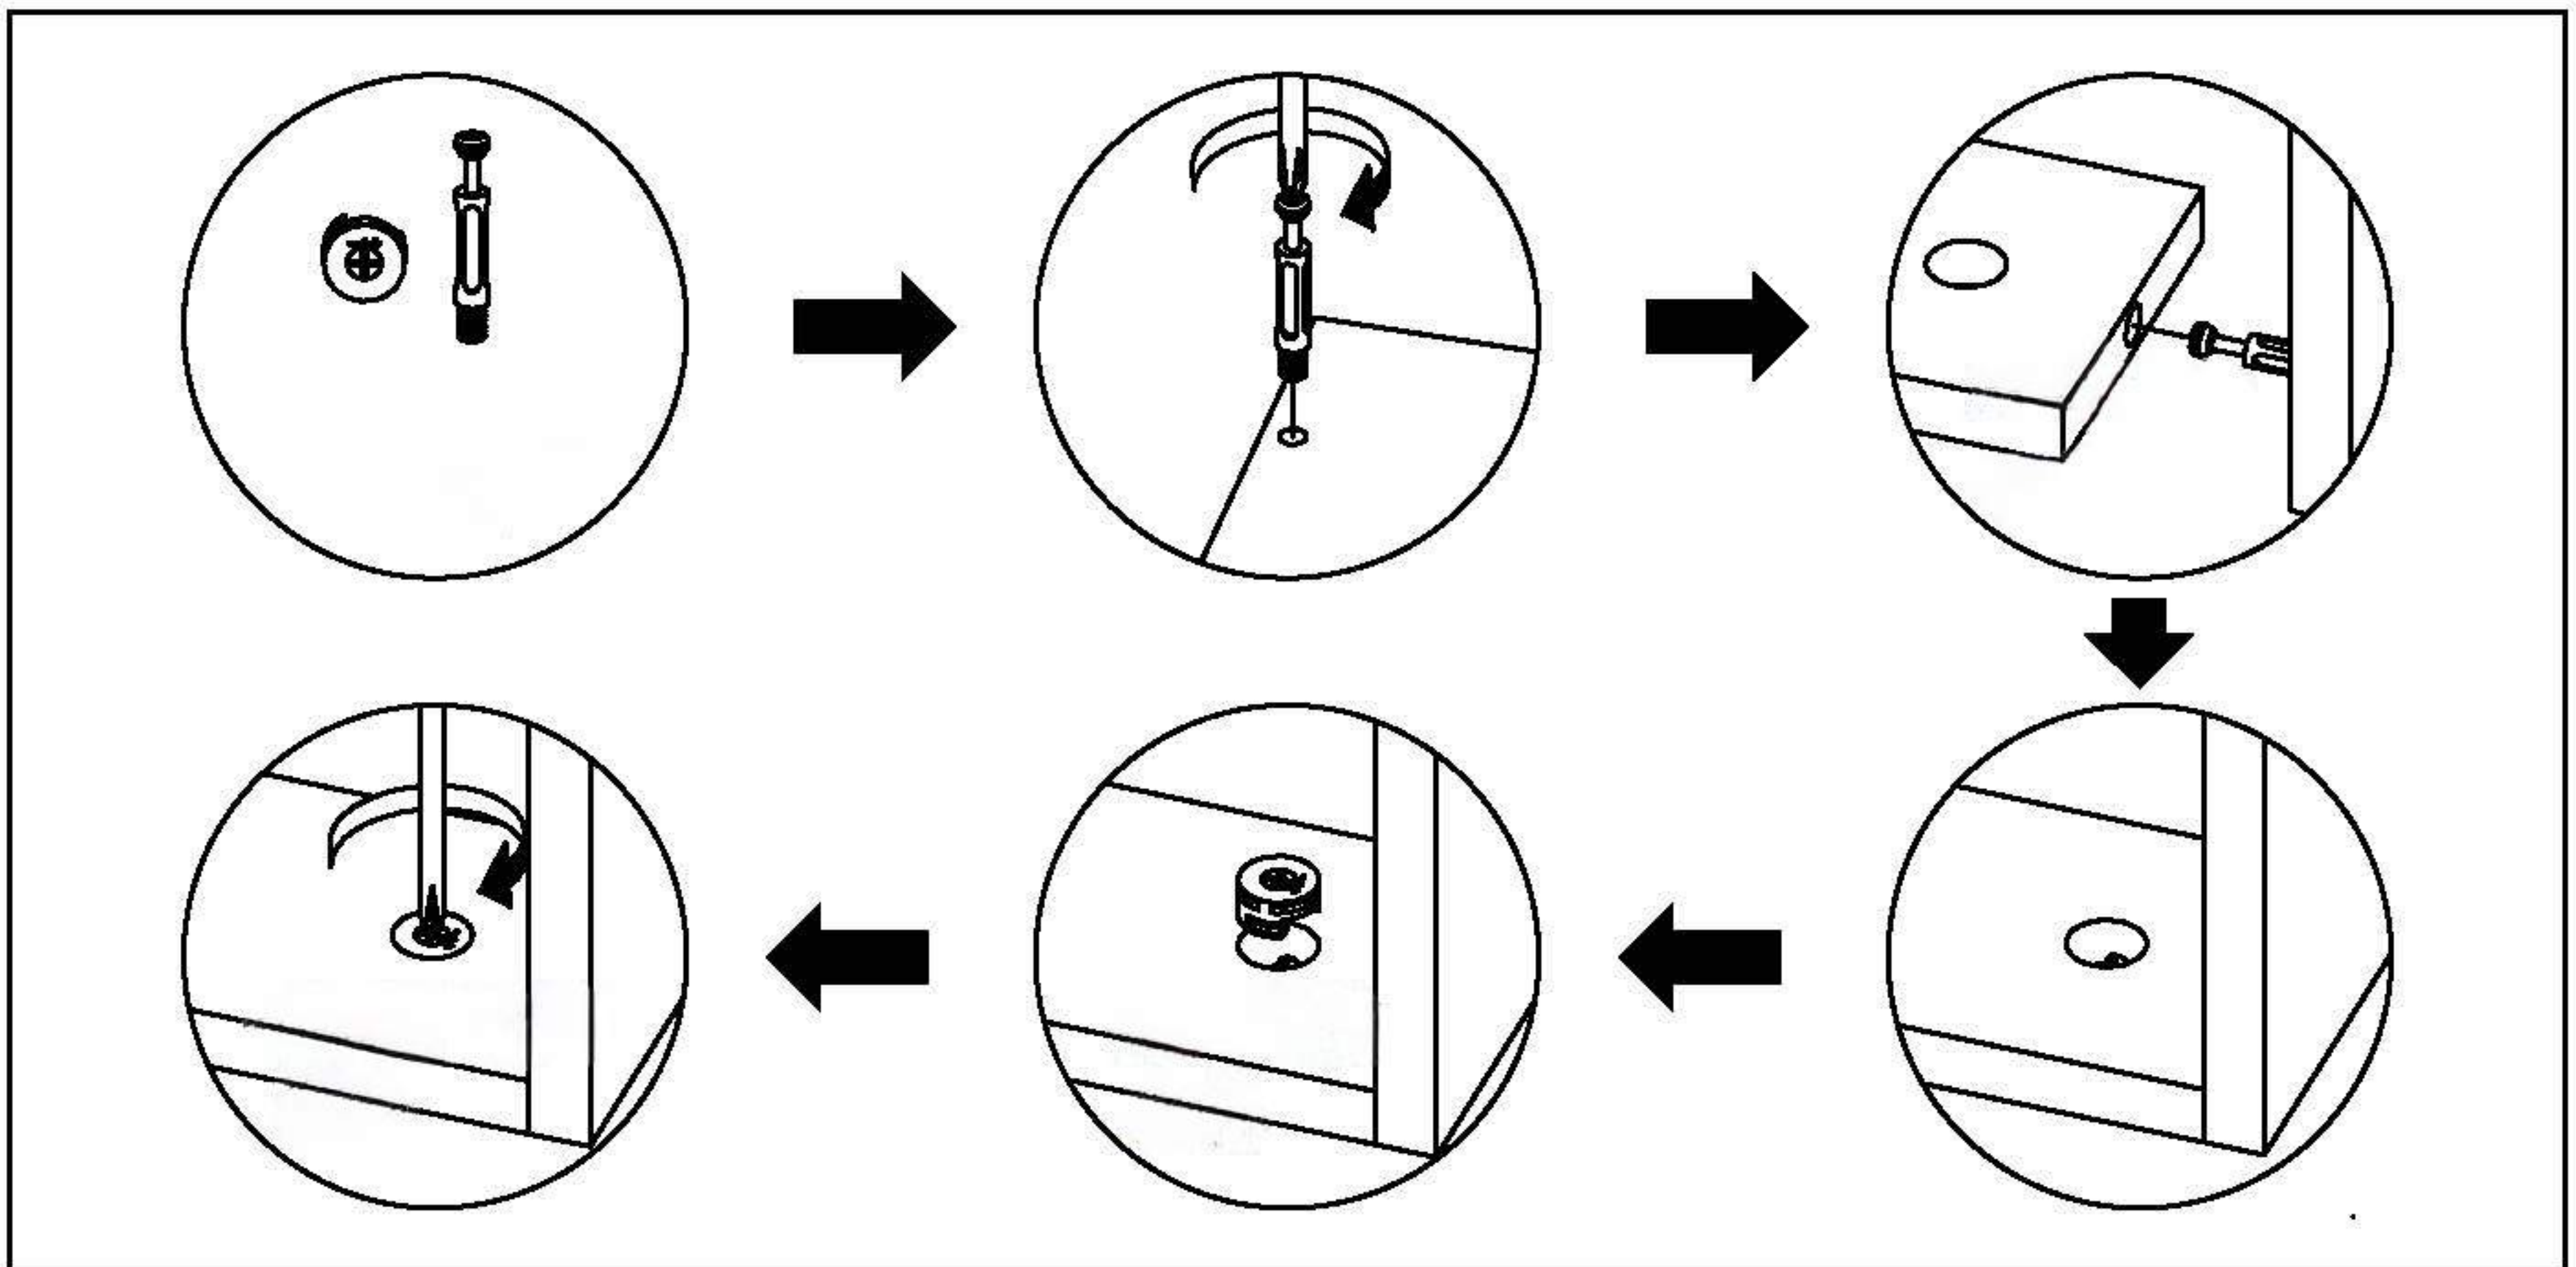


Step 1

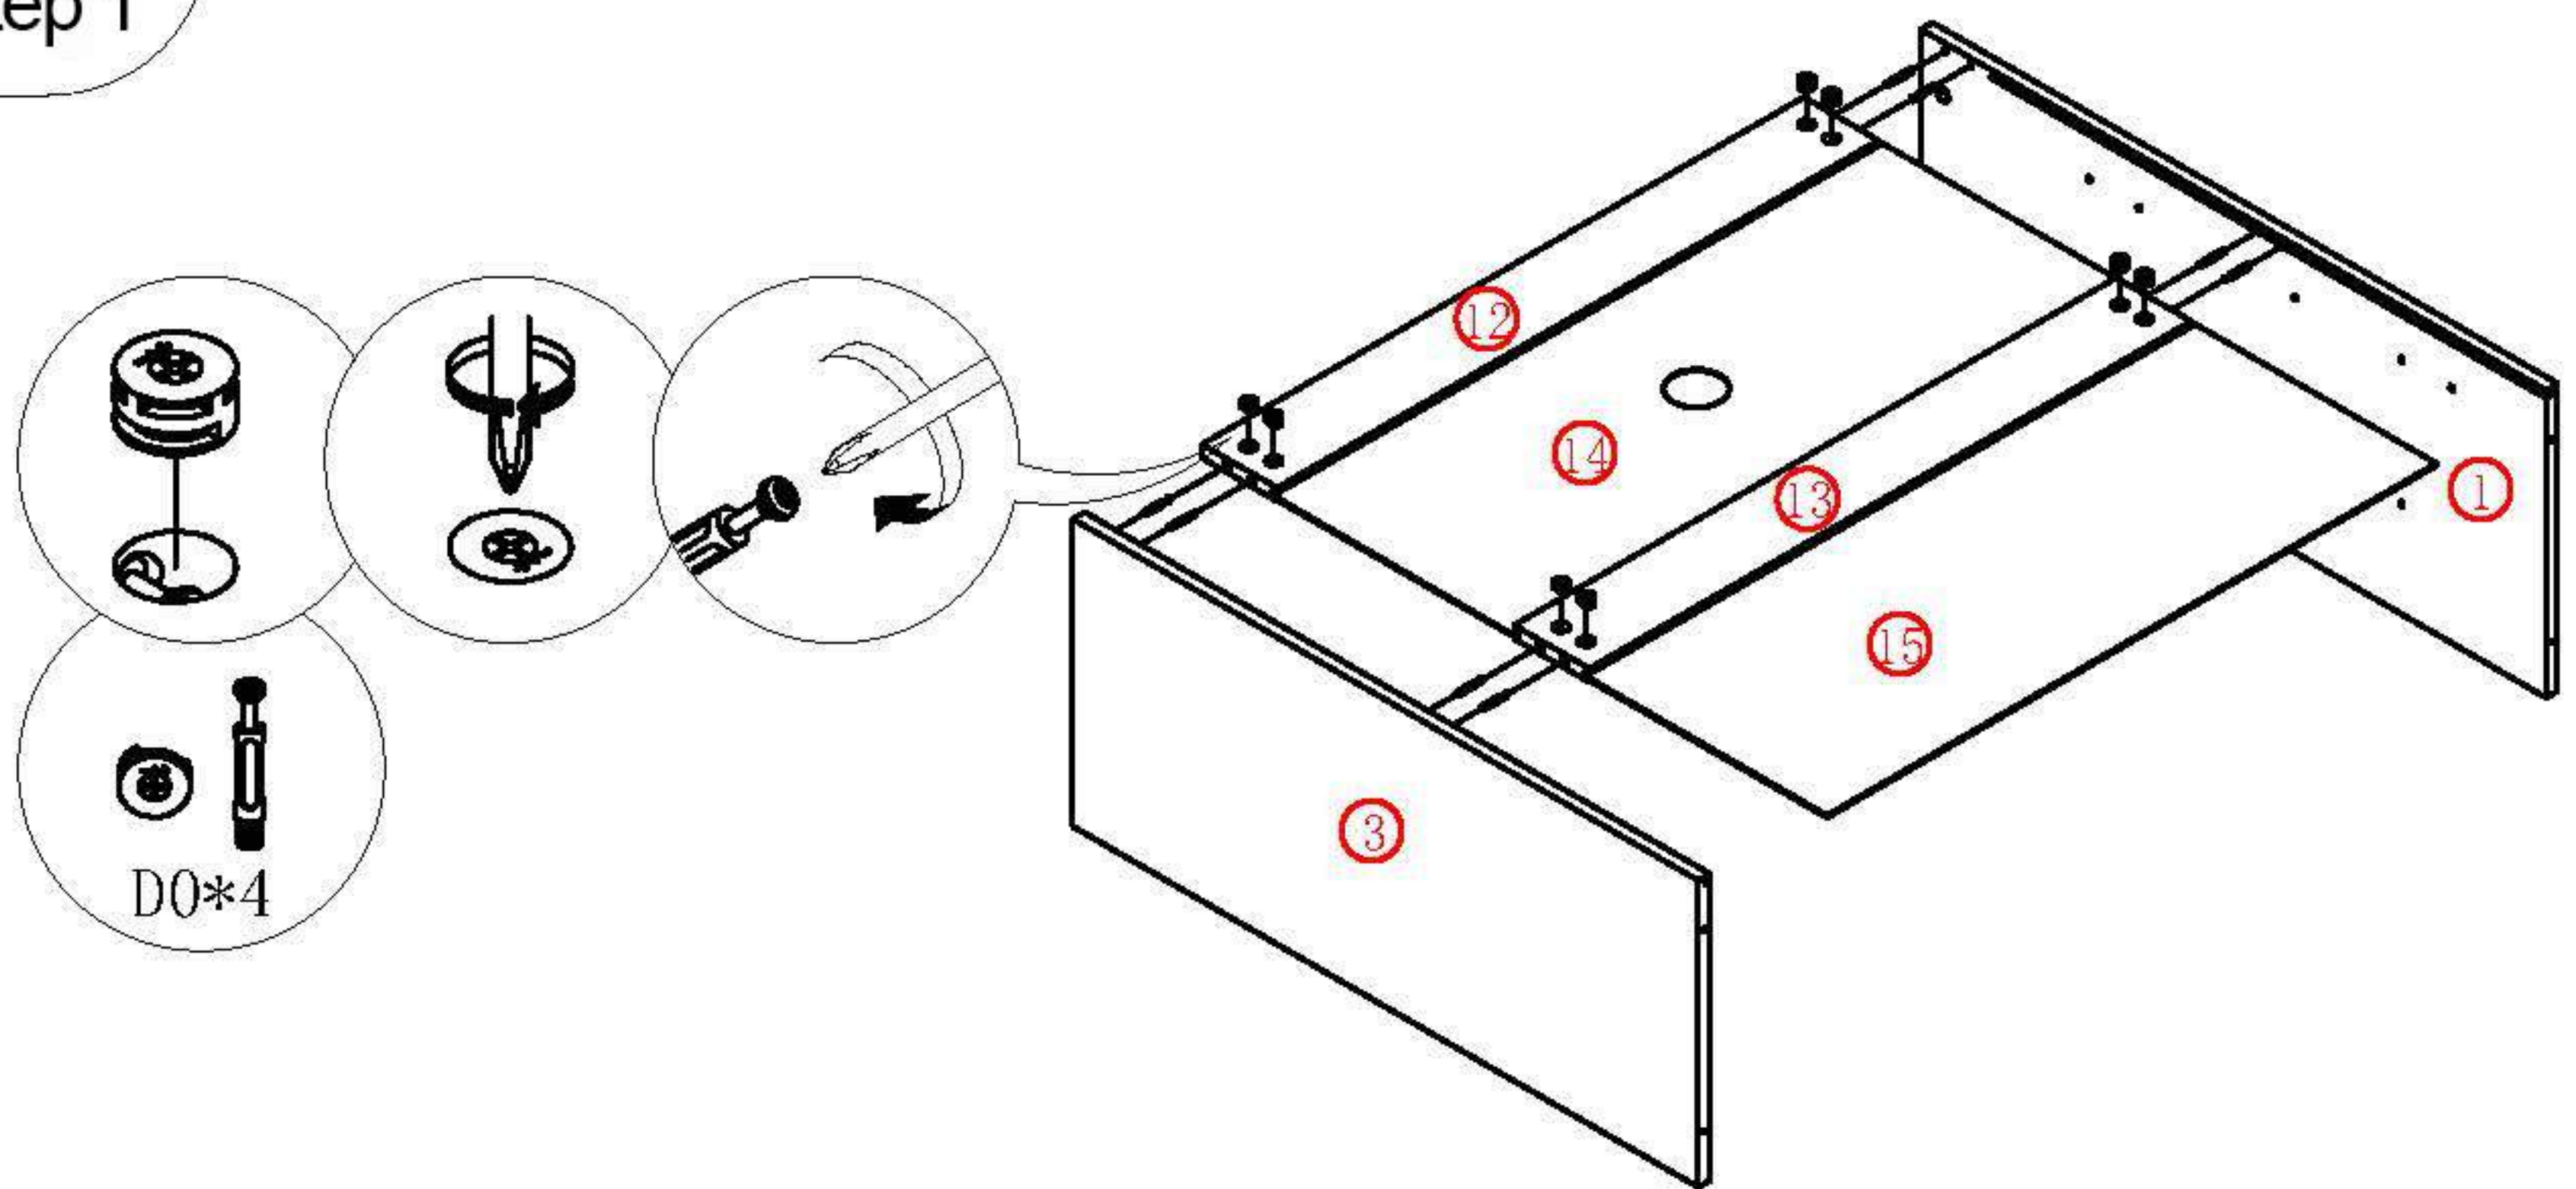


Step 2

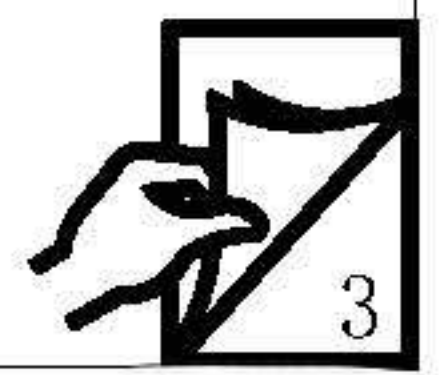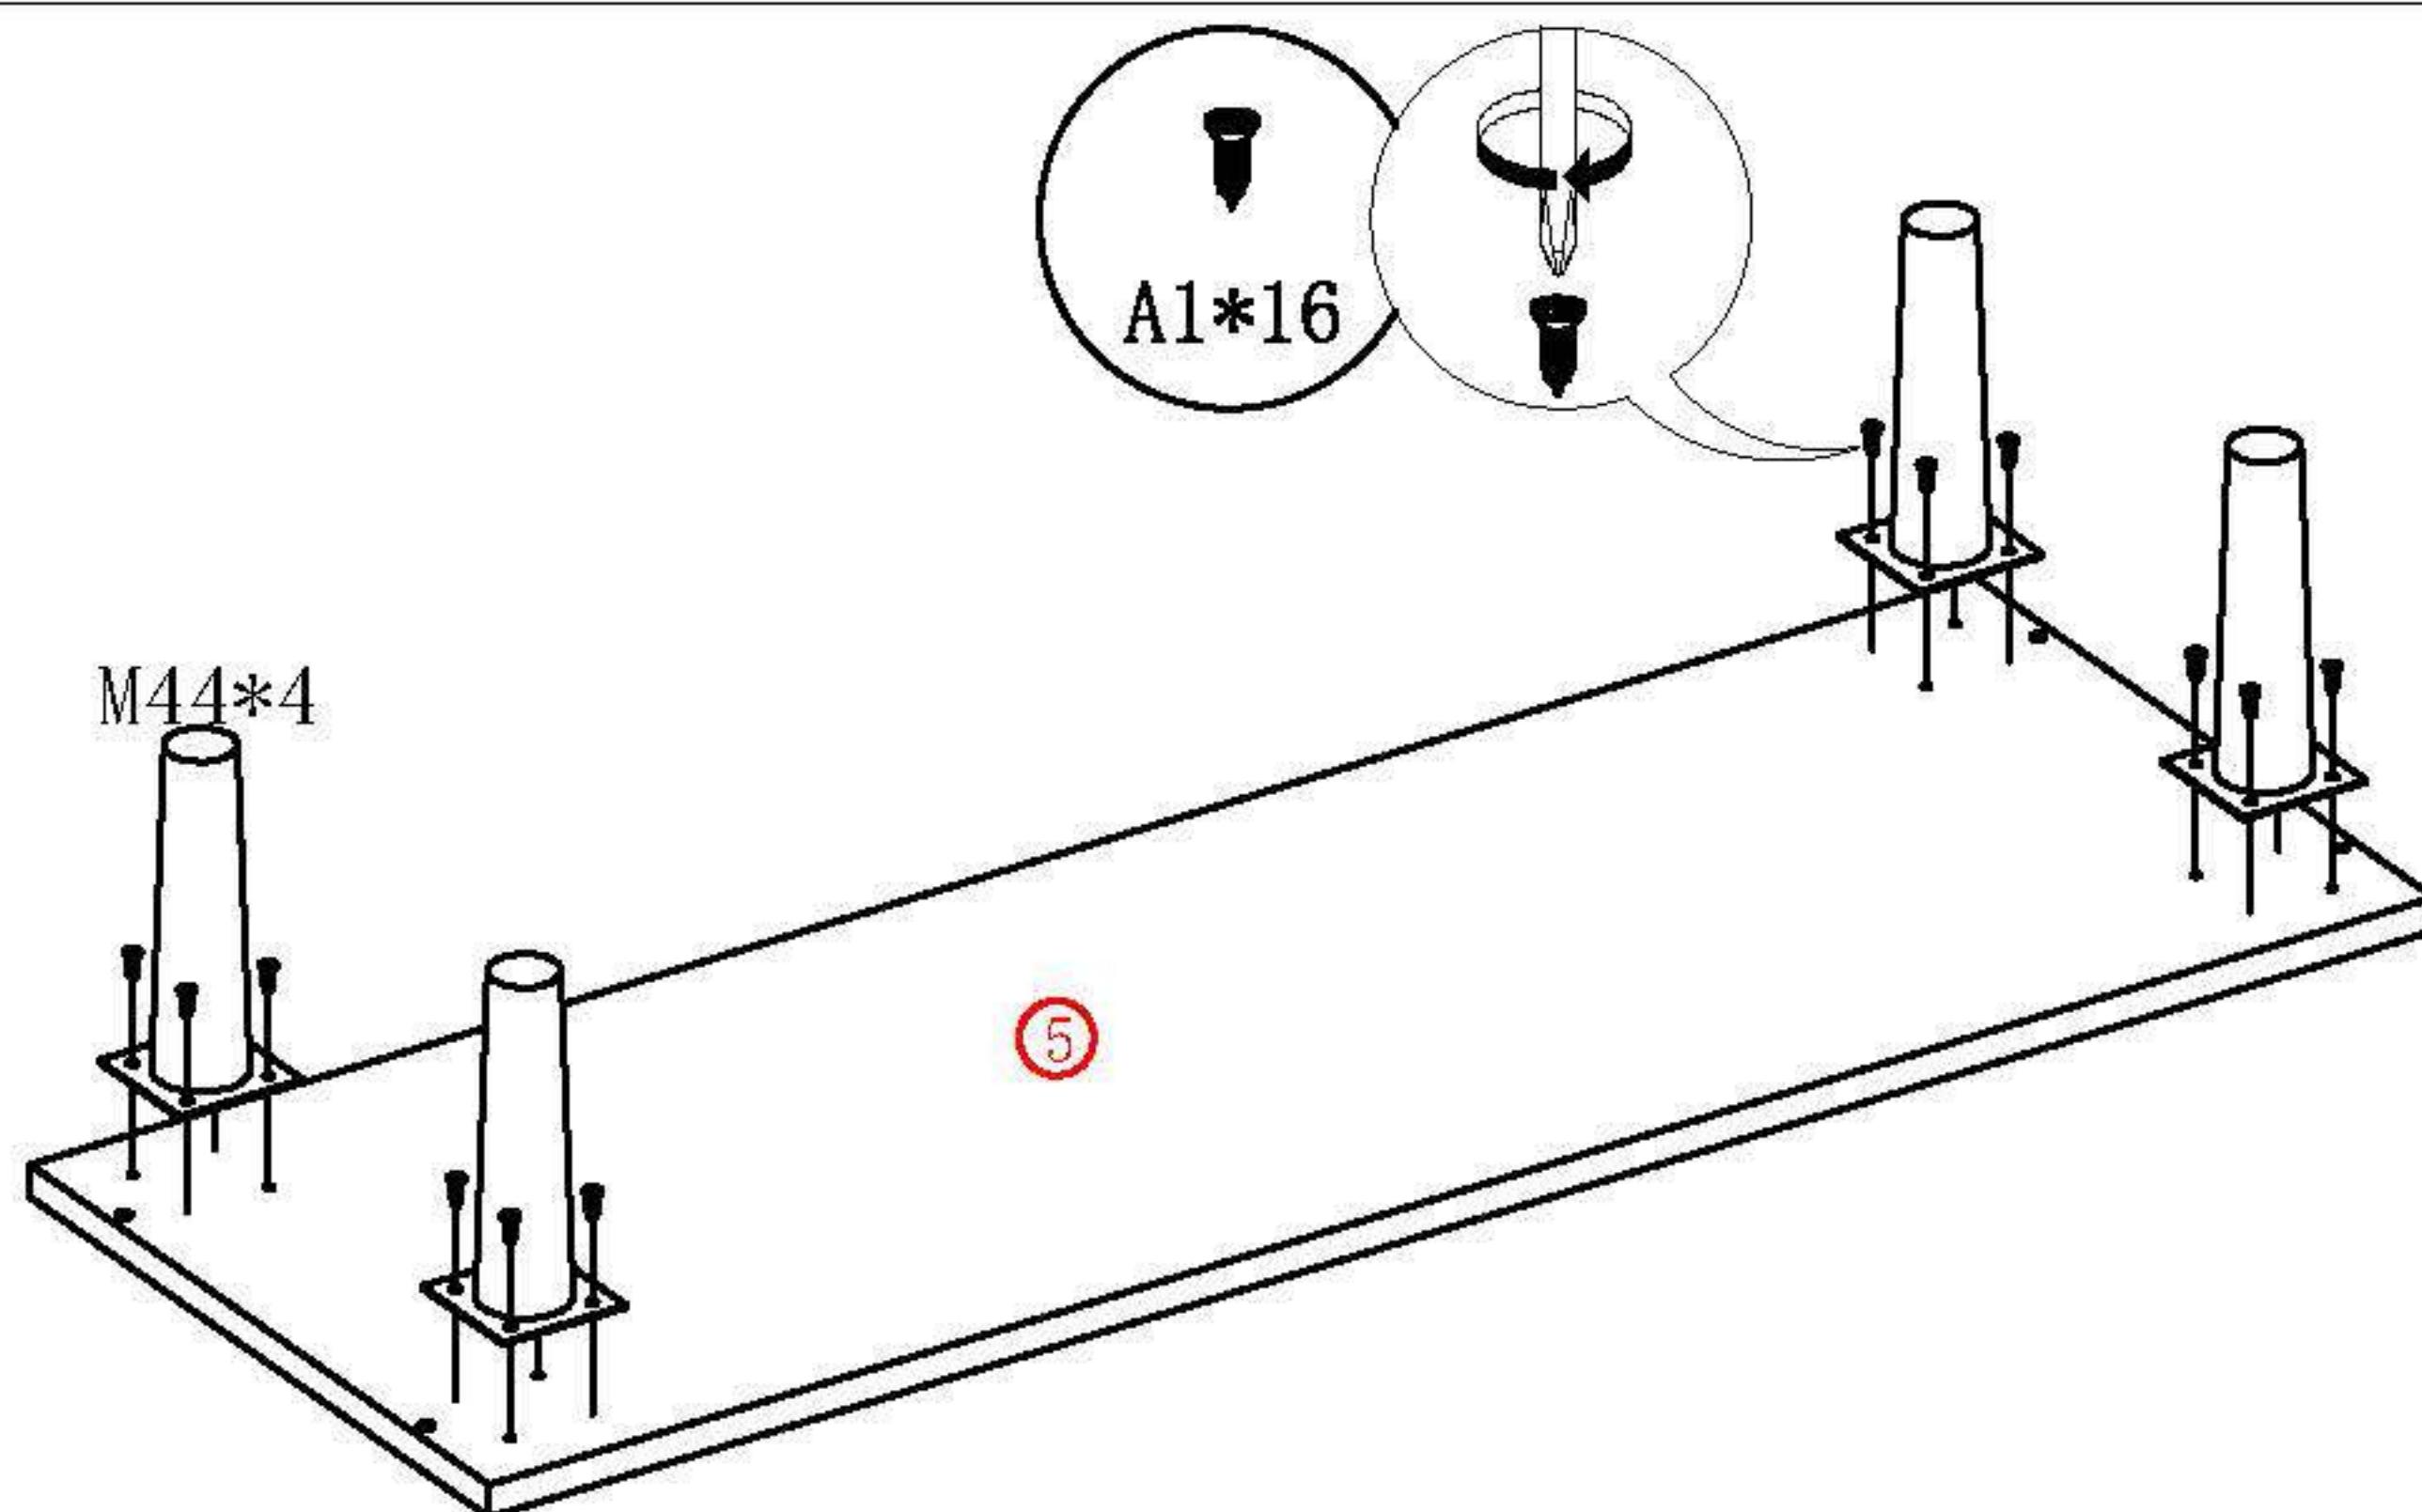



Step 3

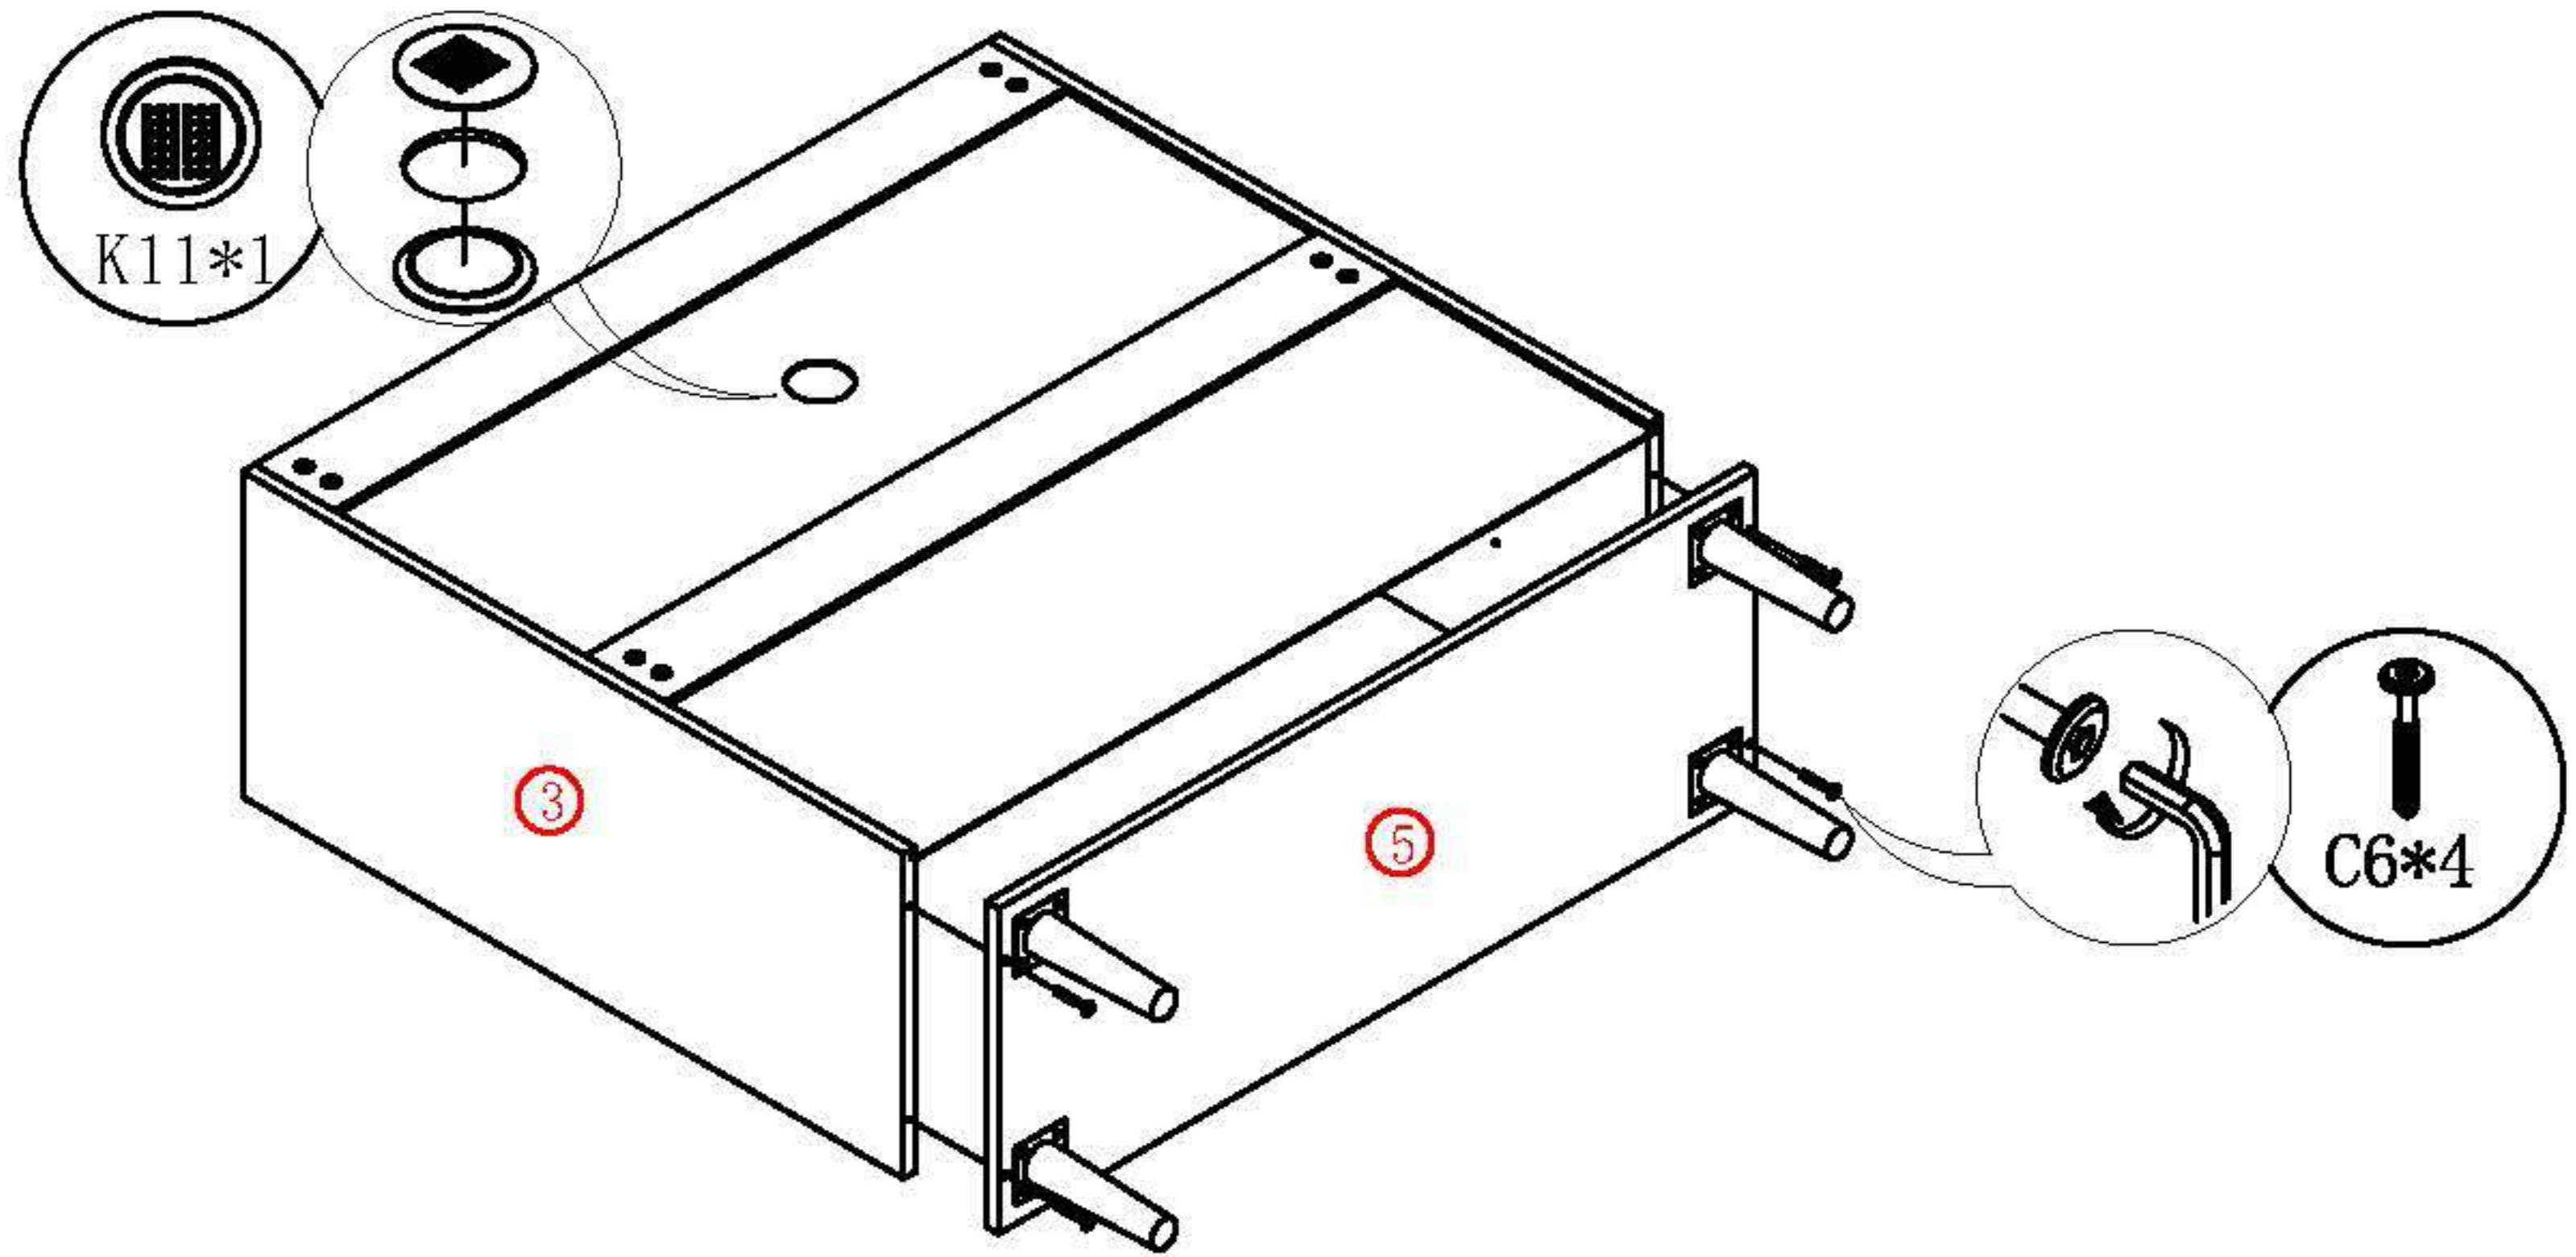


Step 4

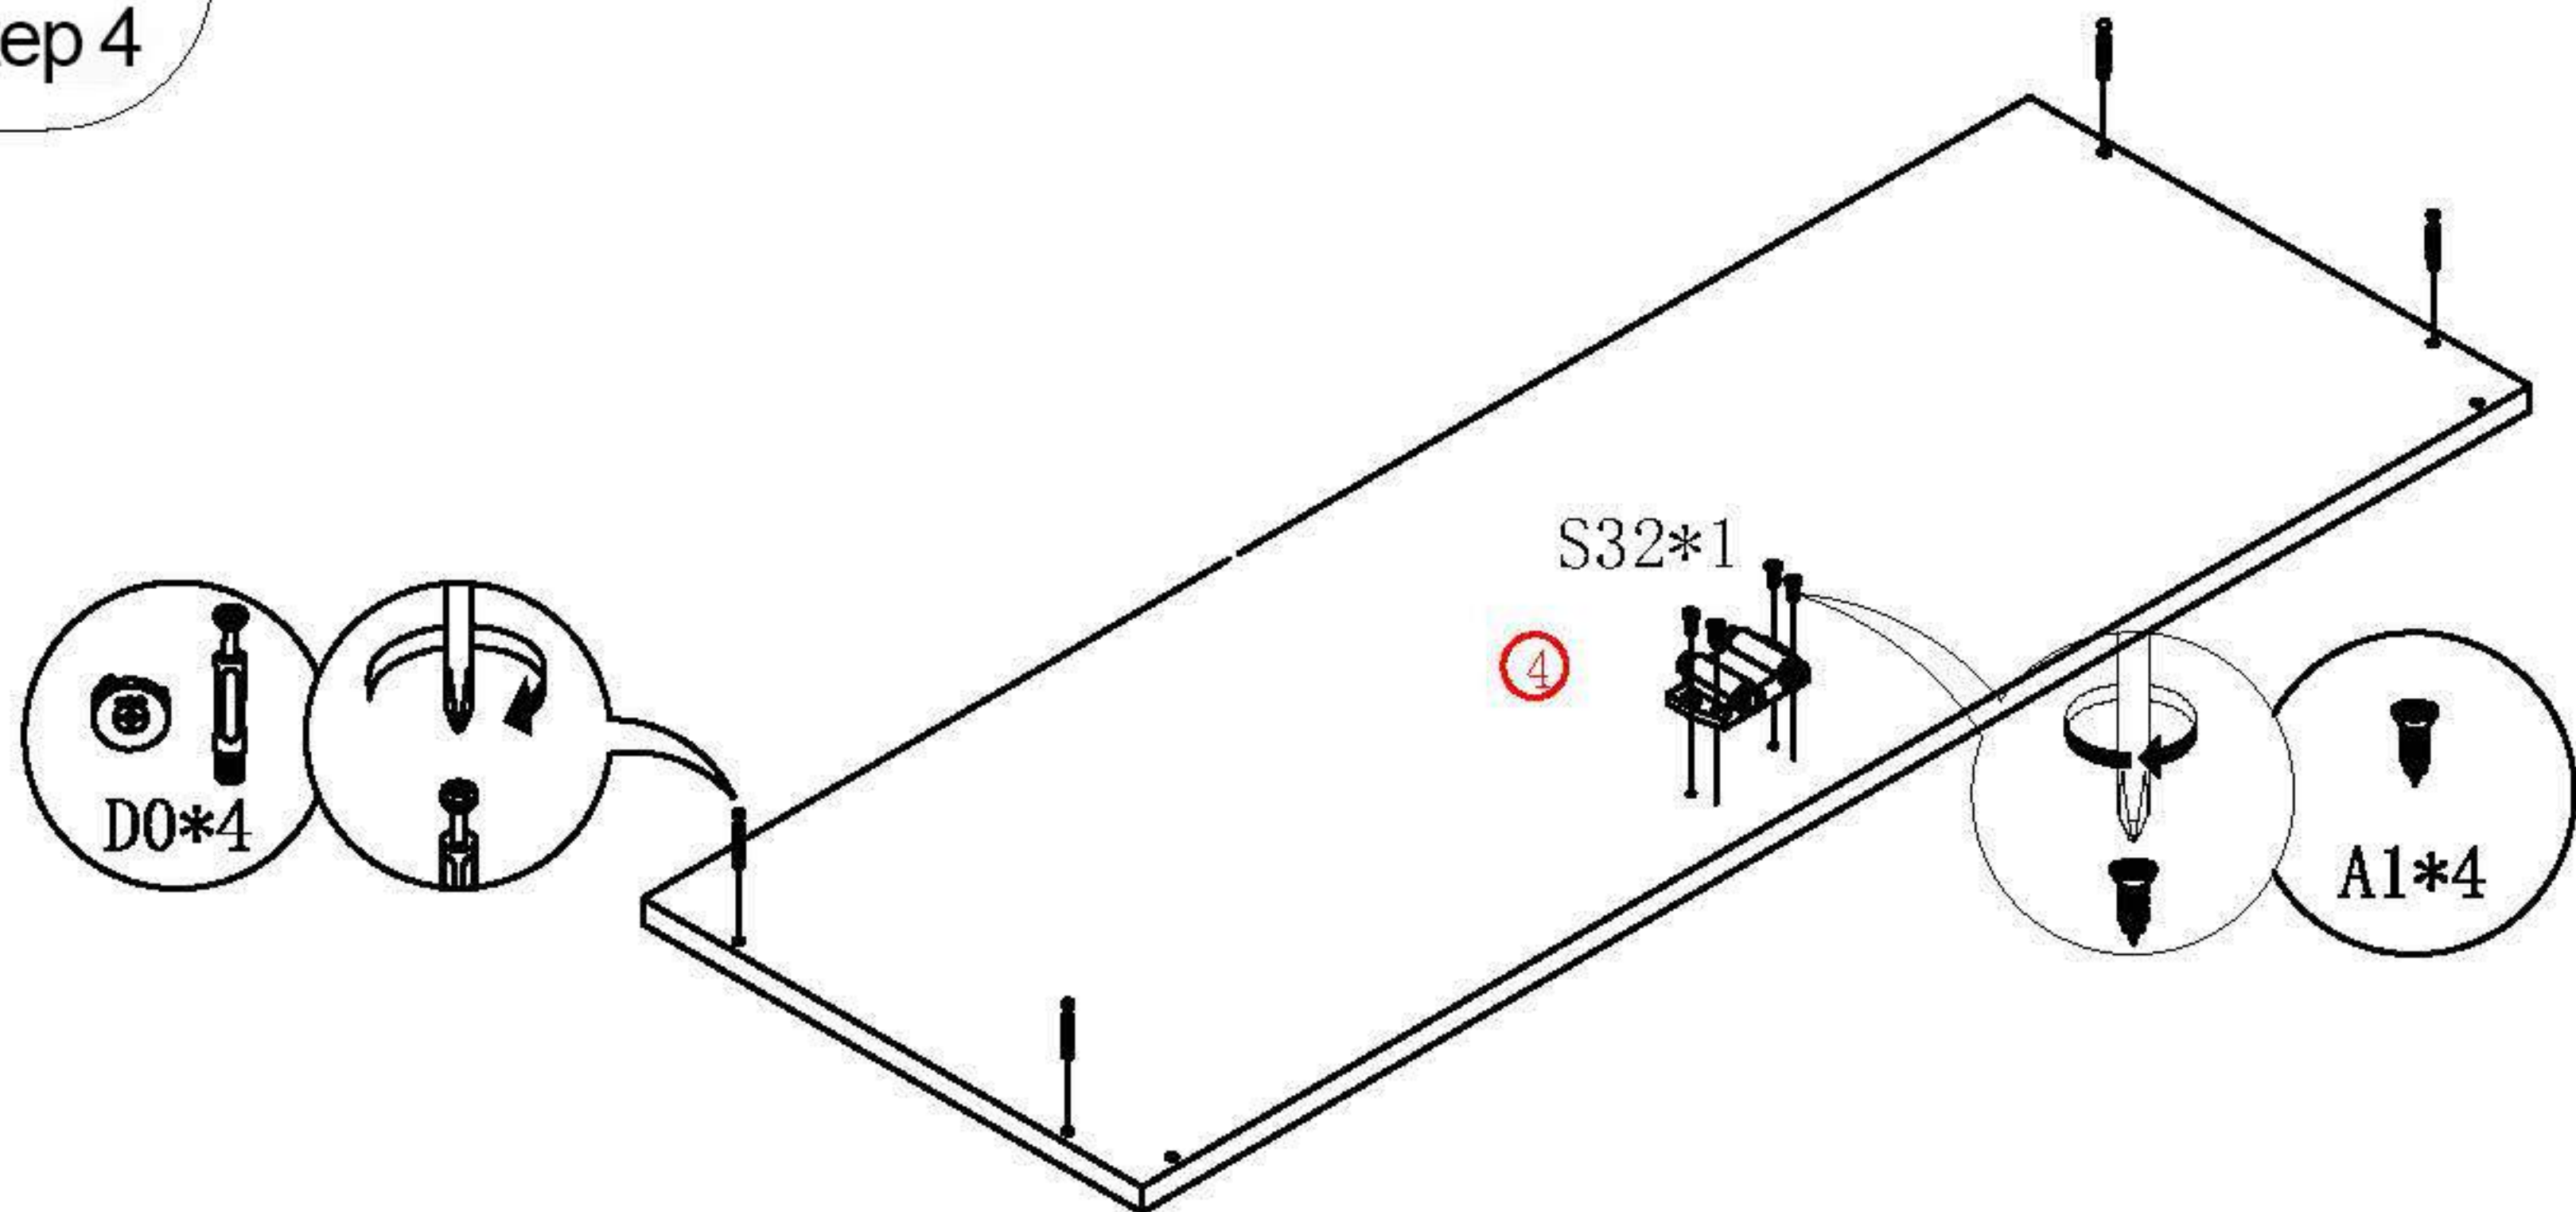


Step 5

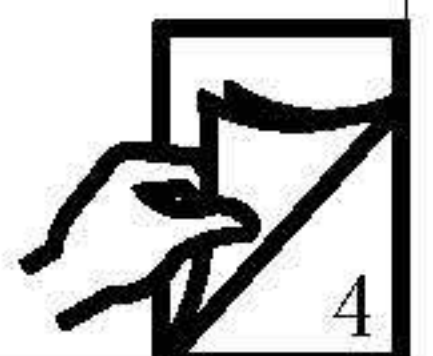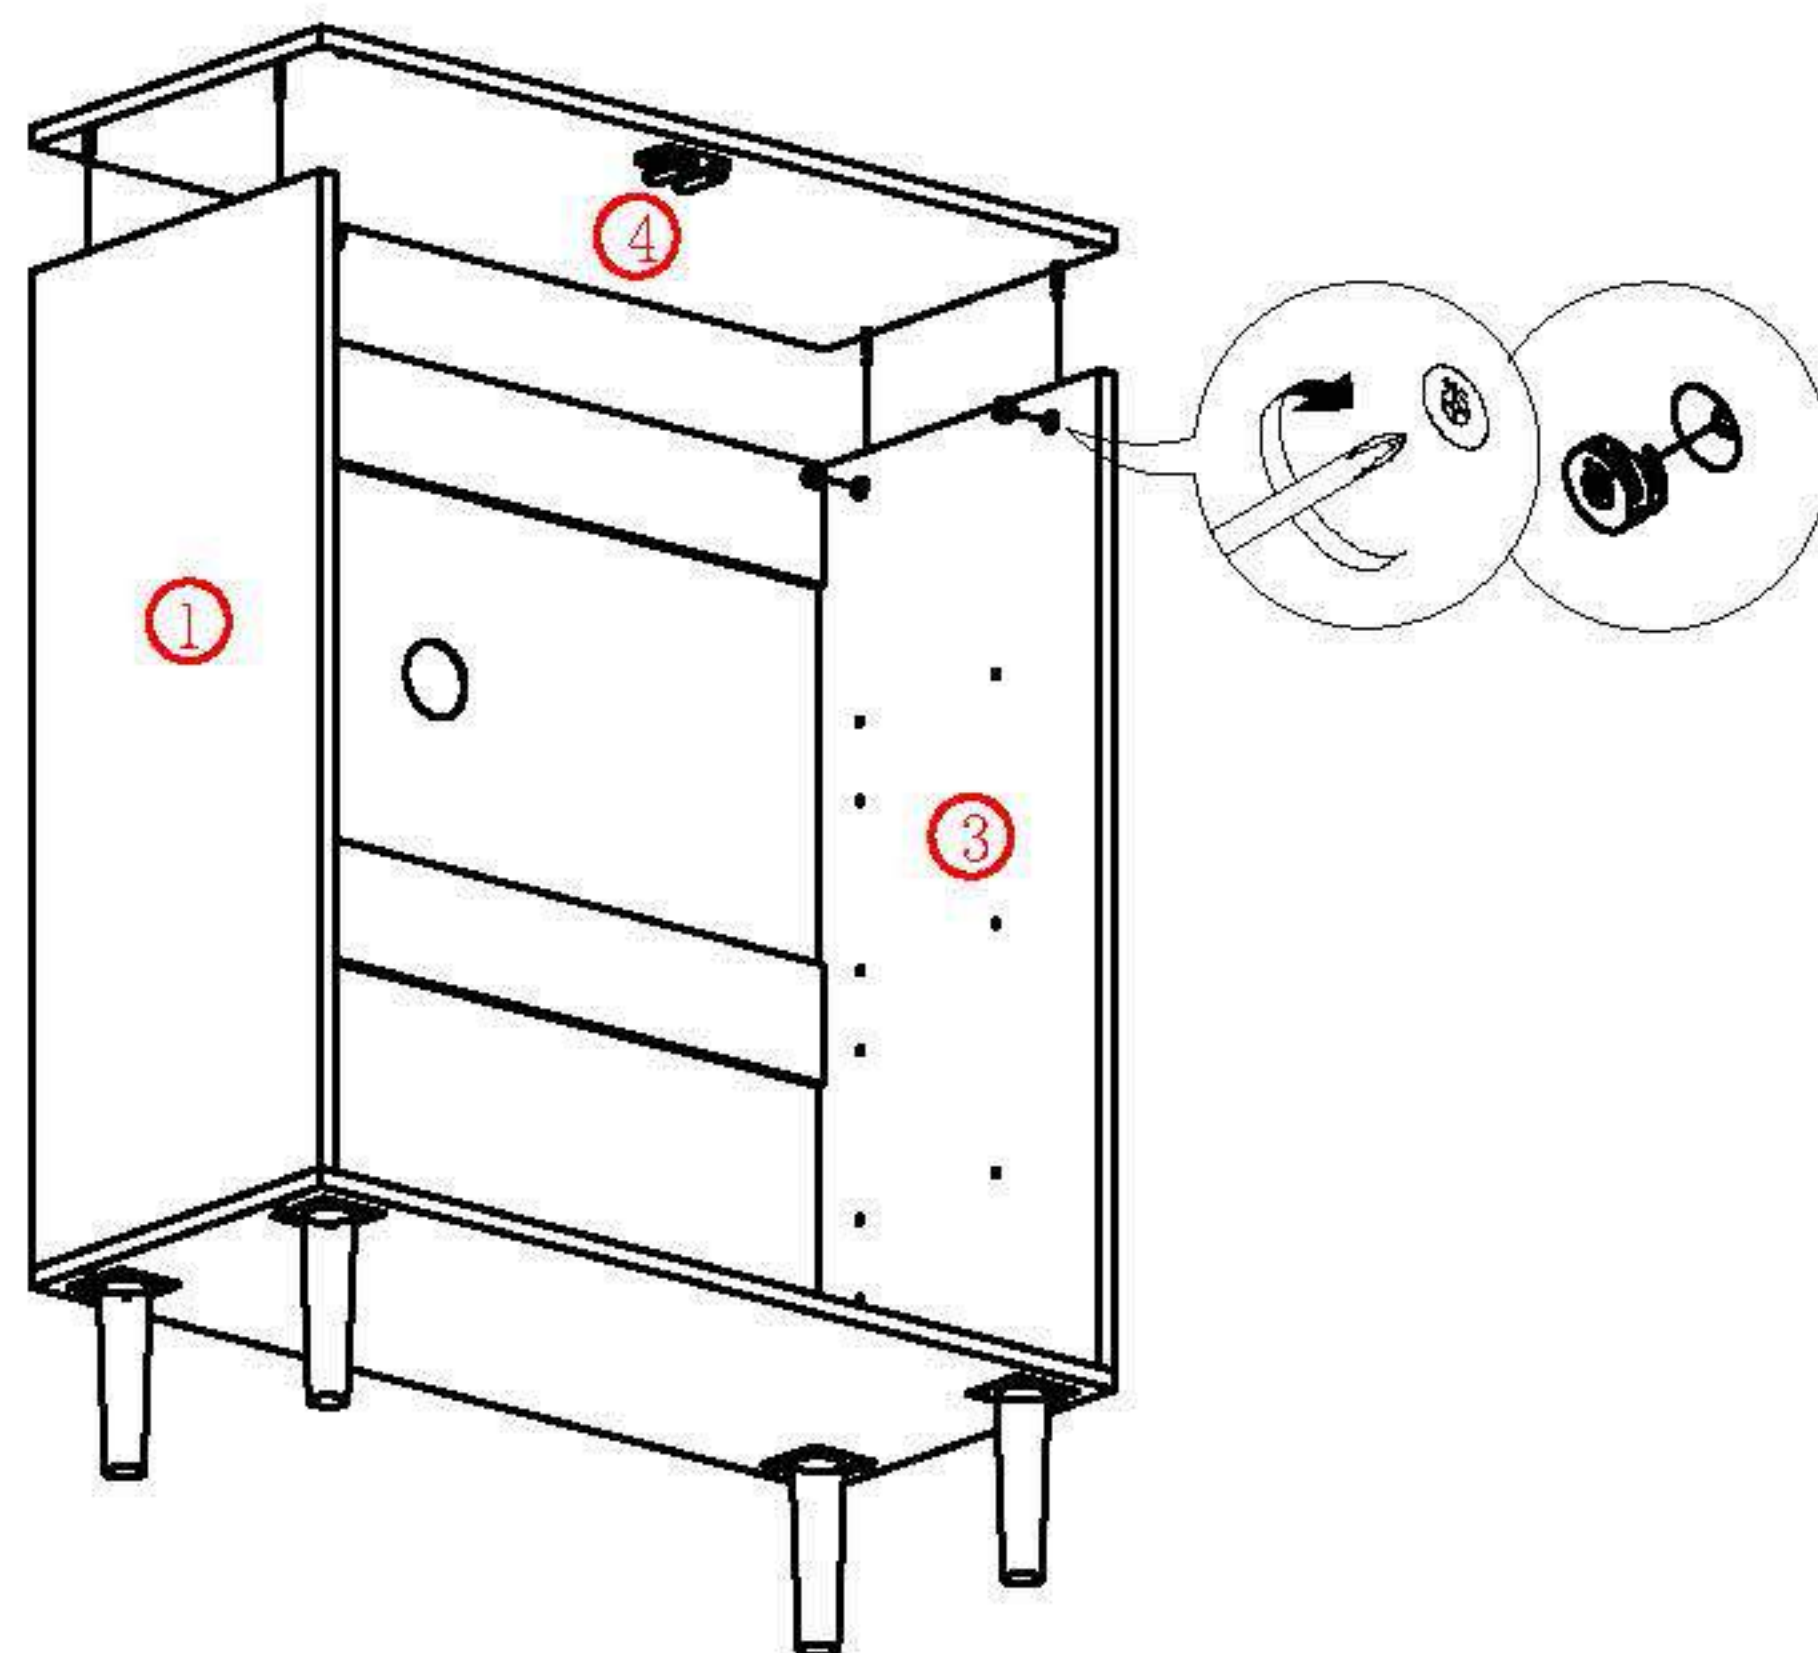

Step 6

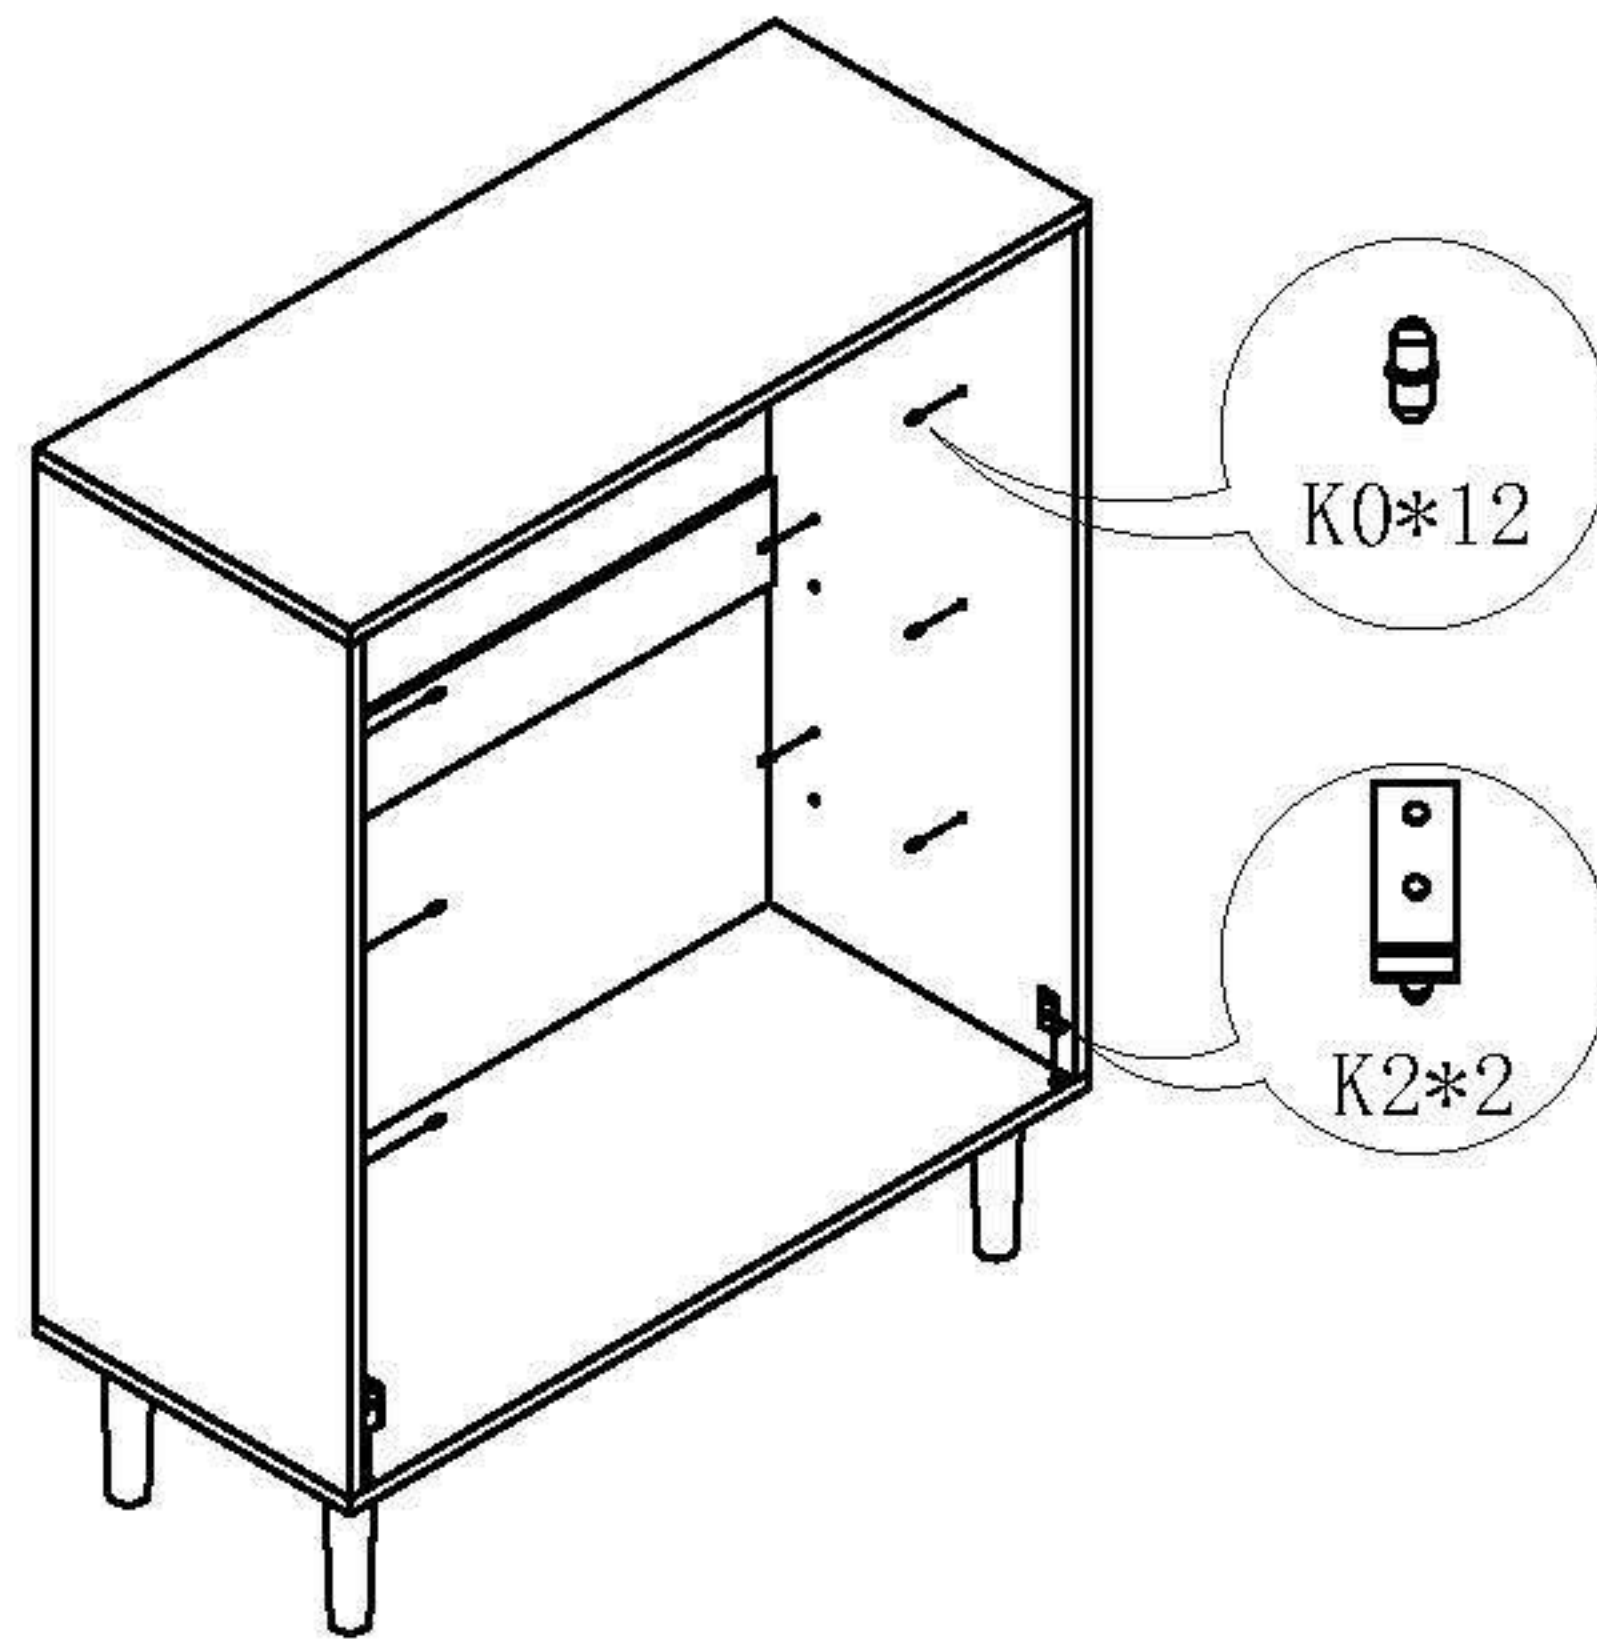

Step 7

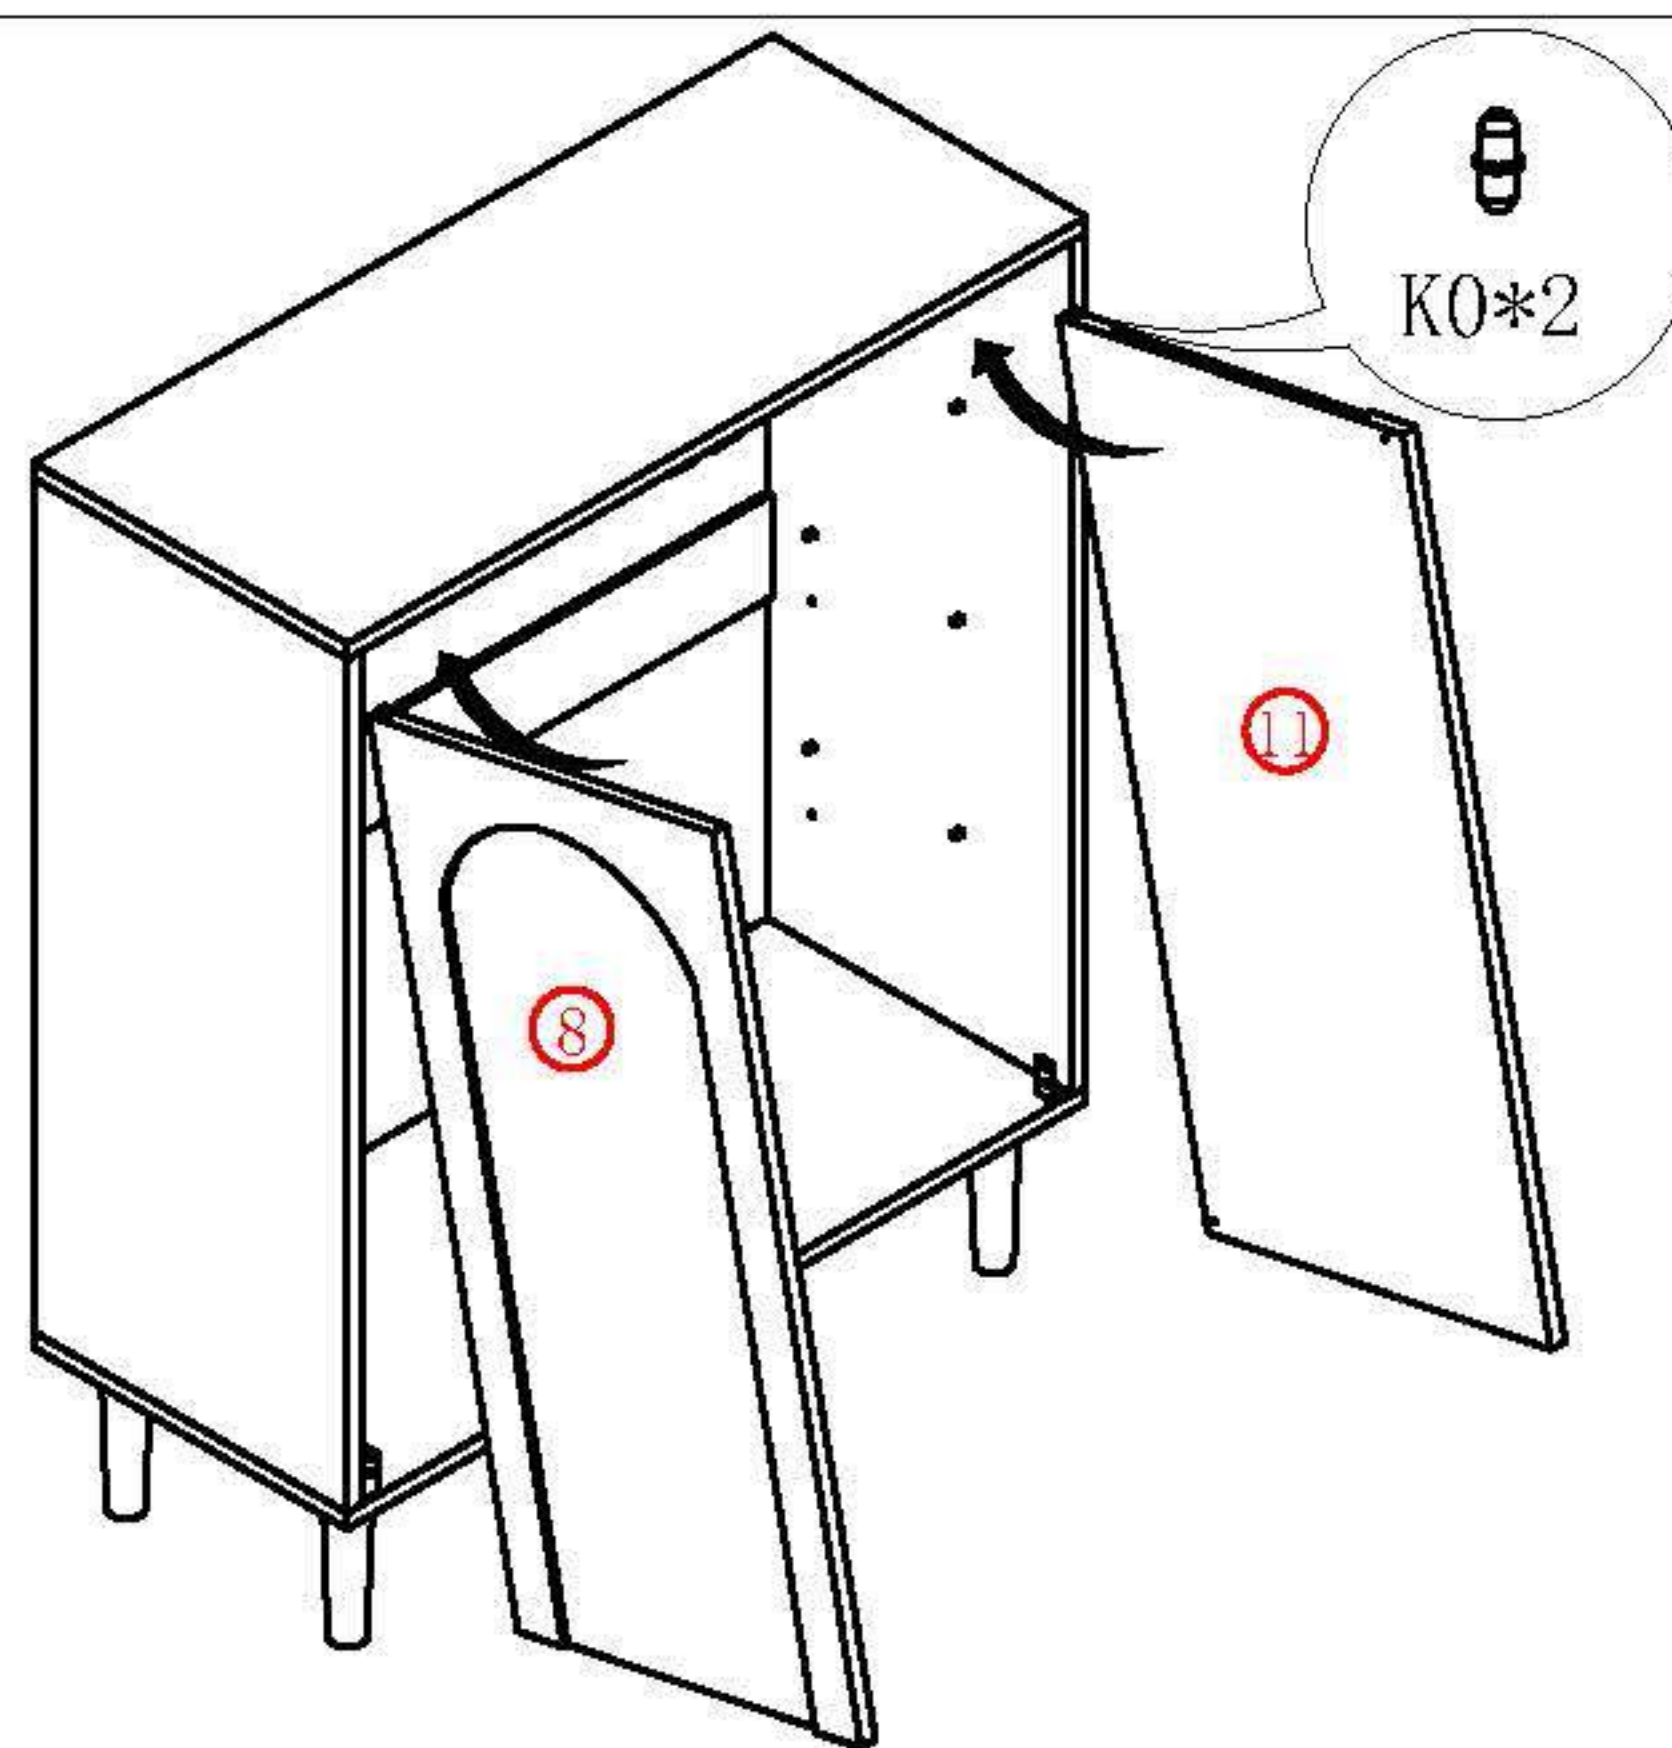

Step 8

