
WCK002 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.

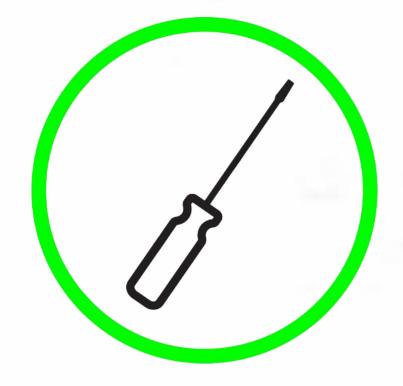




Parts List Take the four-layer style as an example




start assembling

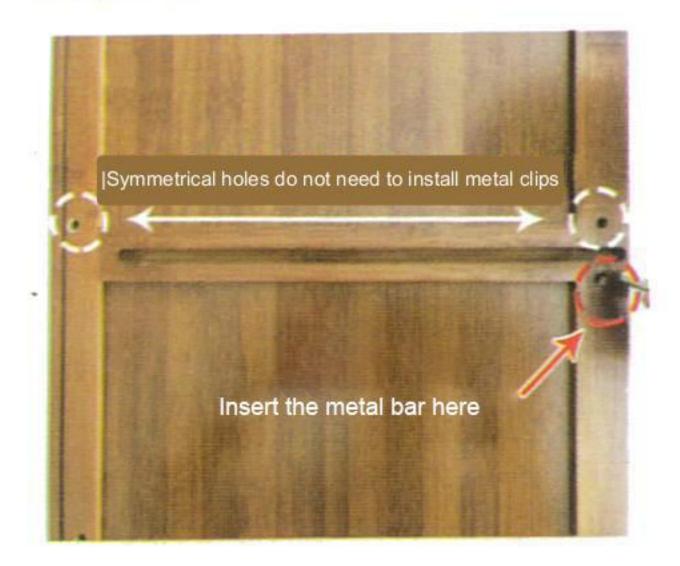

Installation effect:



Take out the side brackets and the metal clips and put them into the holes one by one

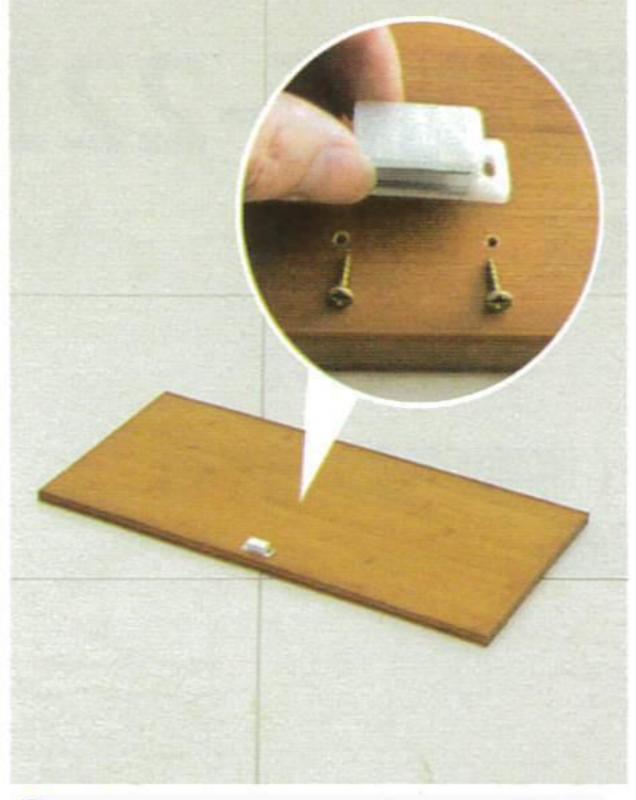


(2) Take out the ordinary laminate and the door stopper and install it with small screws



Then the ordinary laminate and the side bracket are fixed with large screws on the left (note that the groove of the bracket is aligned with the groove of the laminate)



④ Take out the top layer and install it with large screws

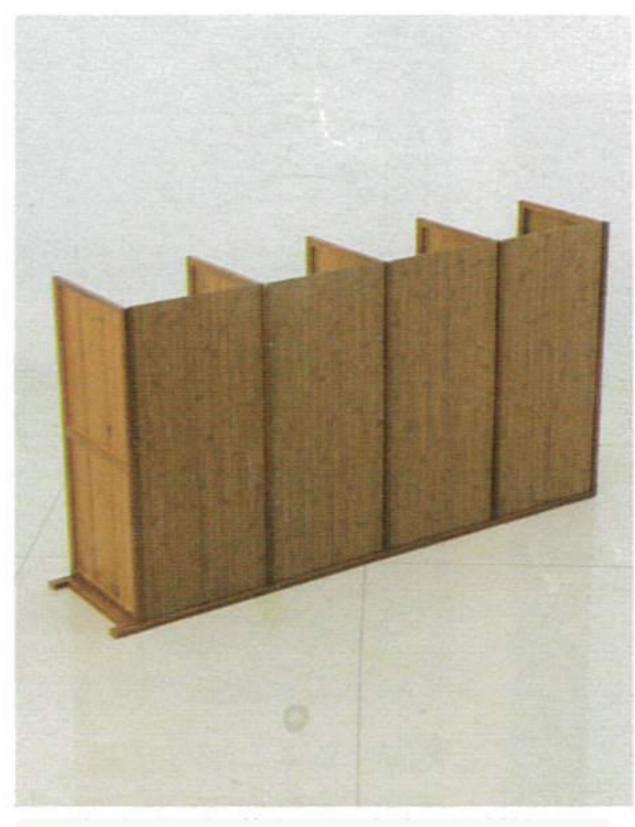


®Take out the back panel one by one and insert it along the groove of the bracket



Take out the side bracket and install it with large screws on the right



②Take out the door panel, door gasket, door pull ring, and metal clips and install them as shown in the figure

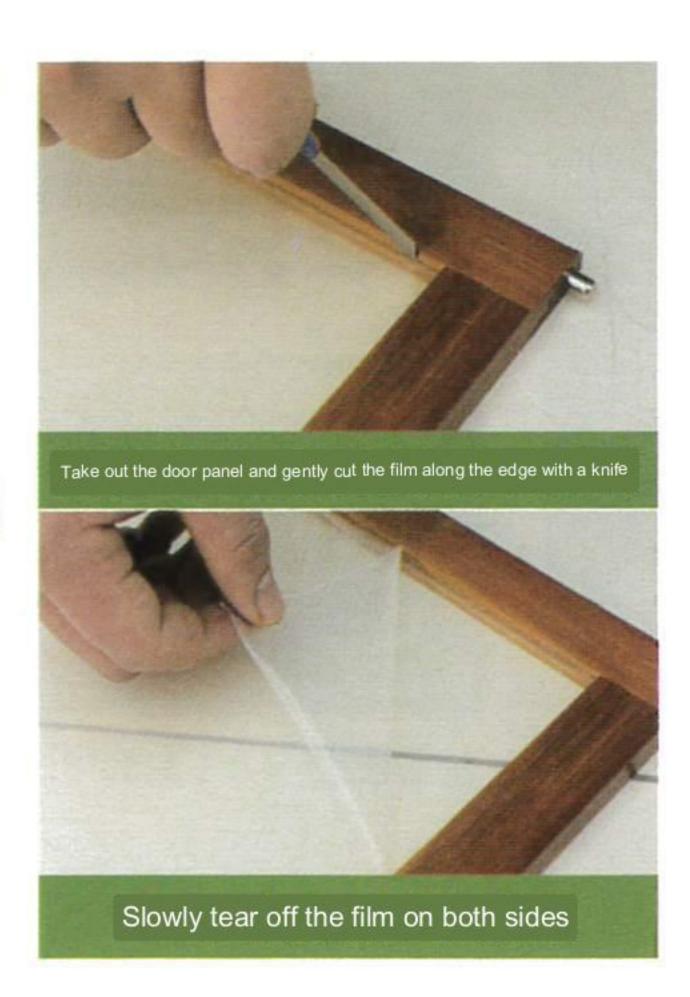



® Install the remaining door panels in sequence , tighten the screw