

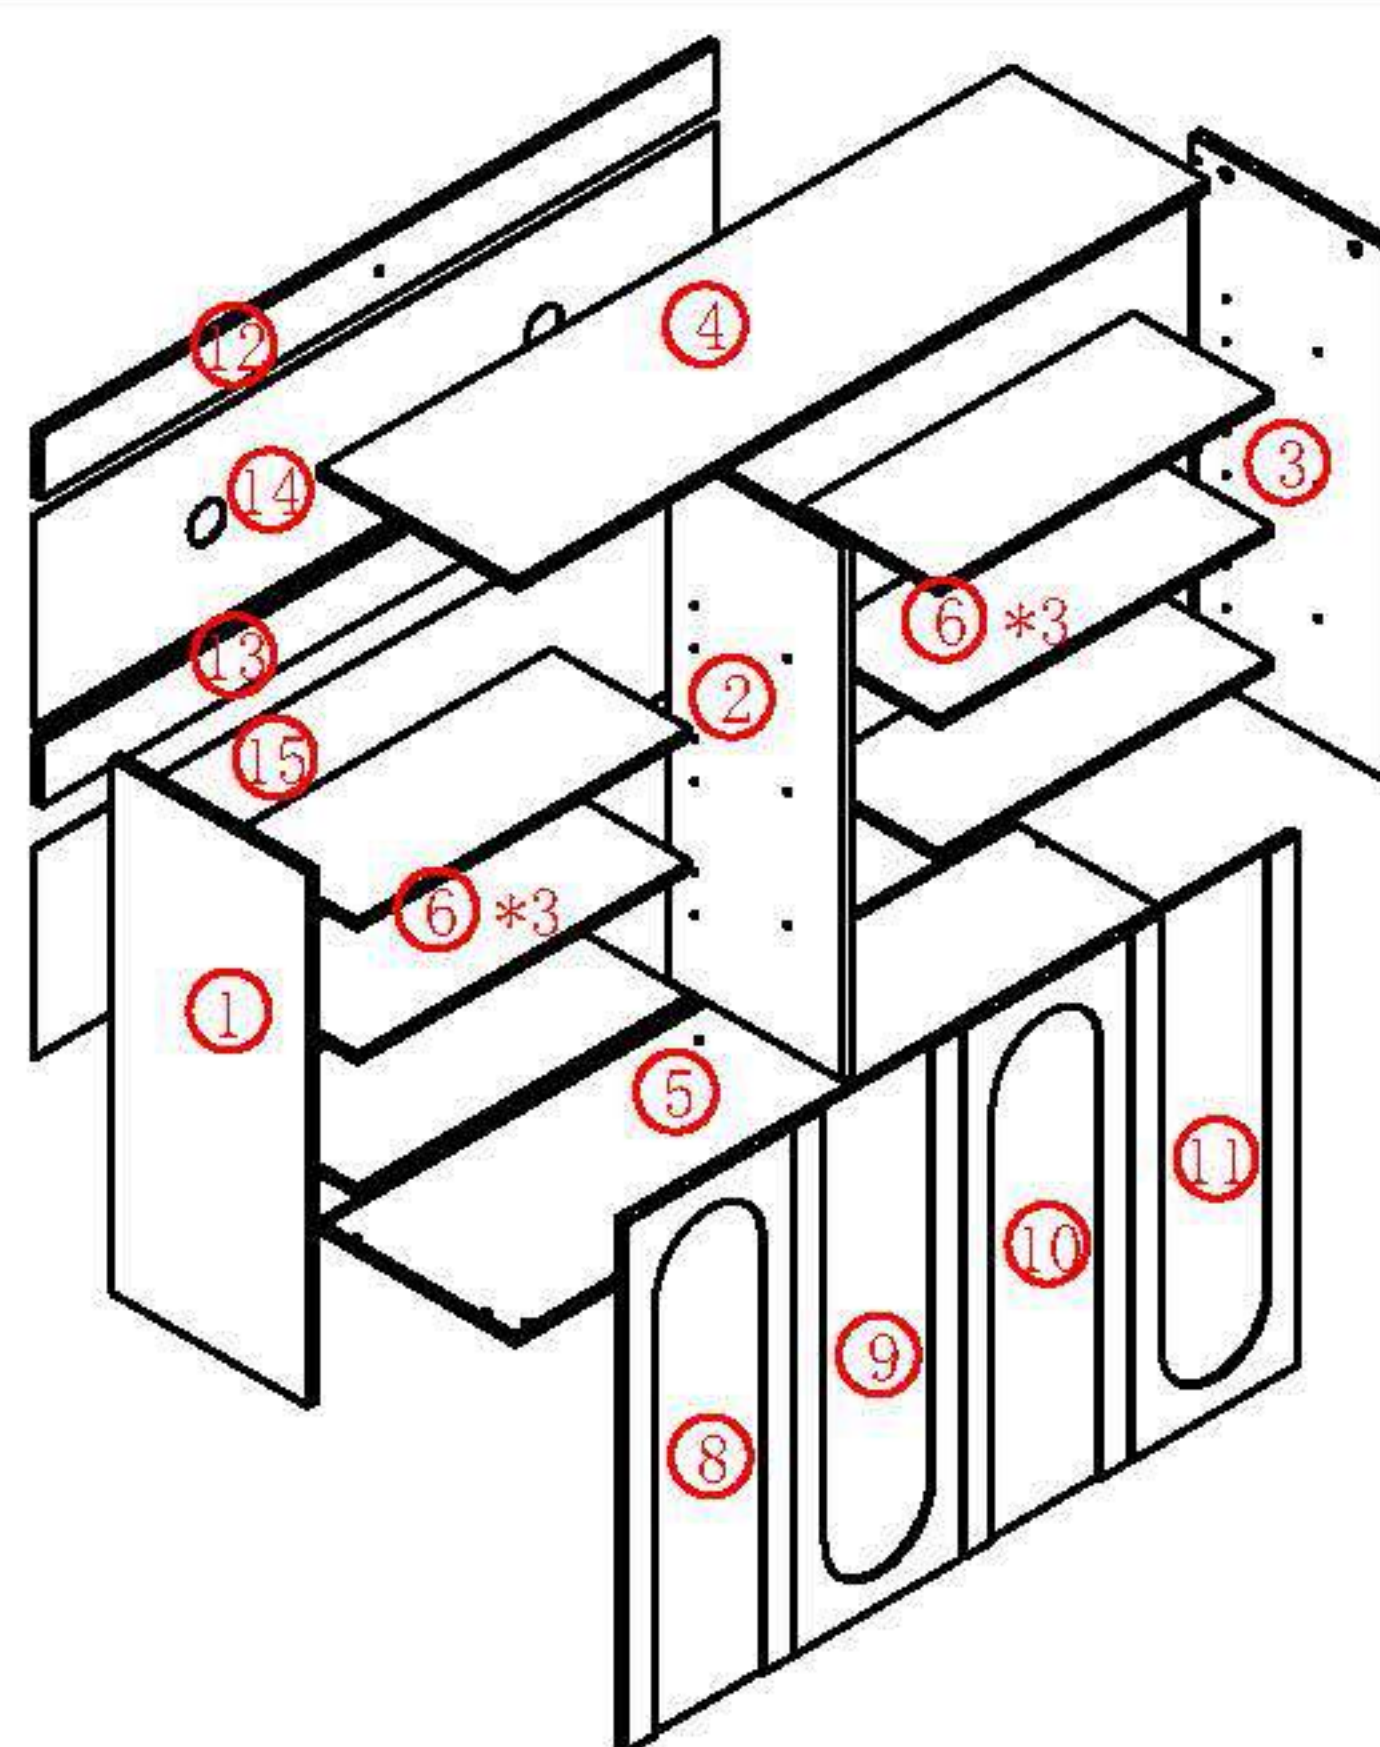


SOCE029 120/140CM Installation Instruction


Please be sure to use a manual screwdriver and refrain from using an electric drill.

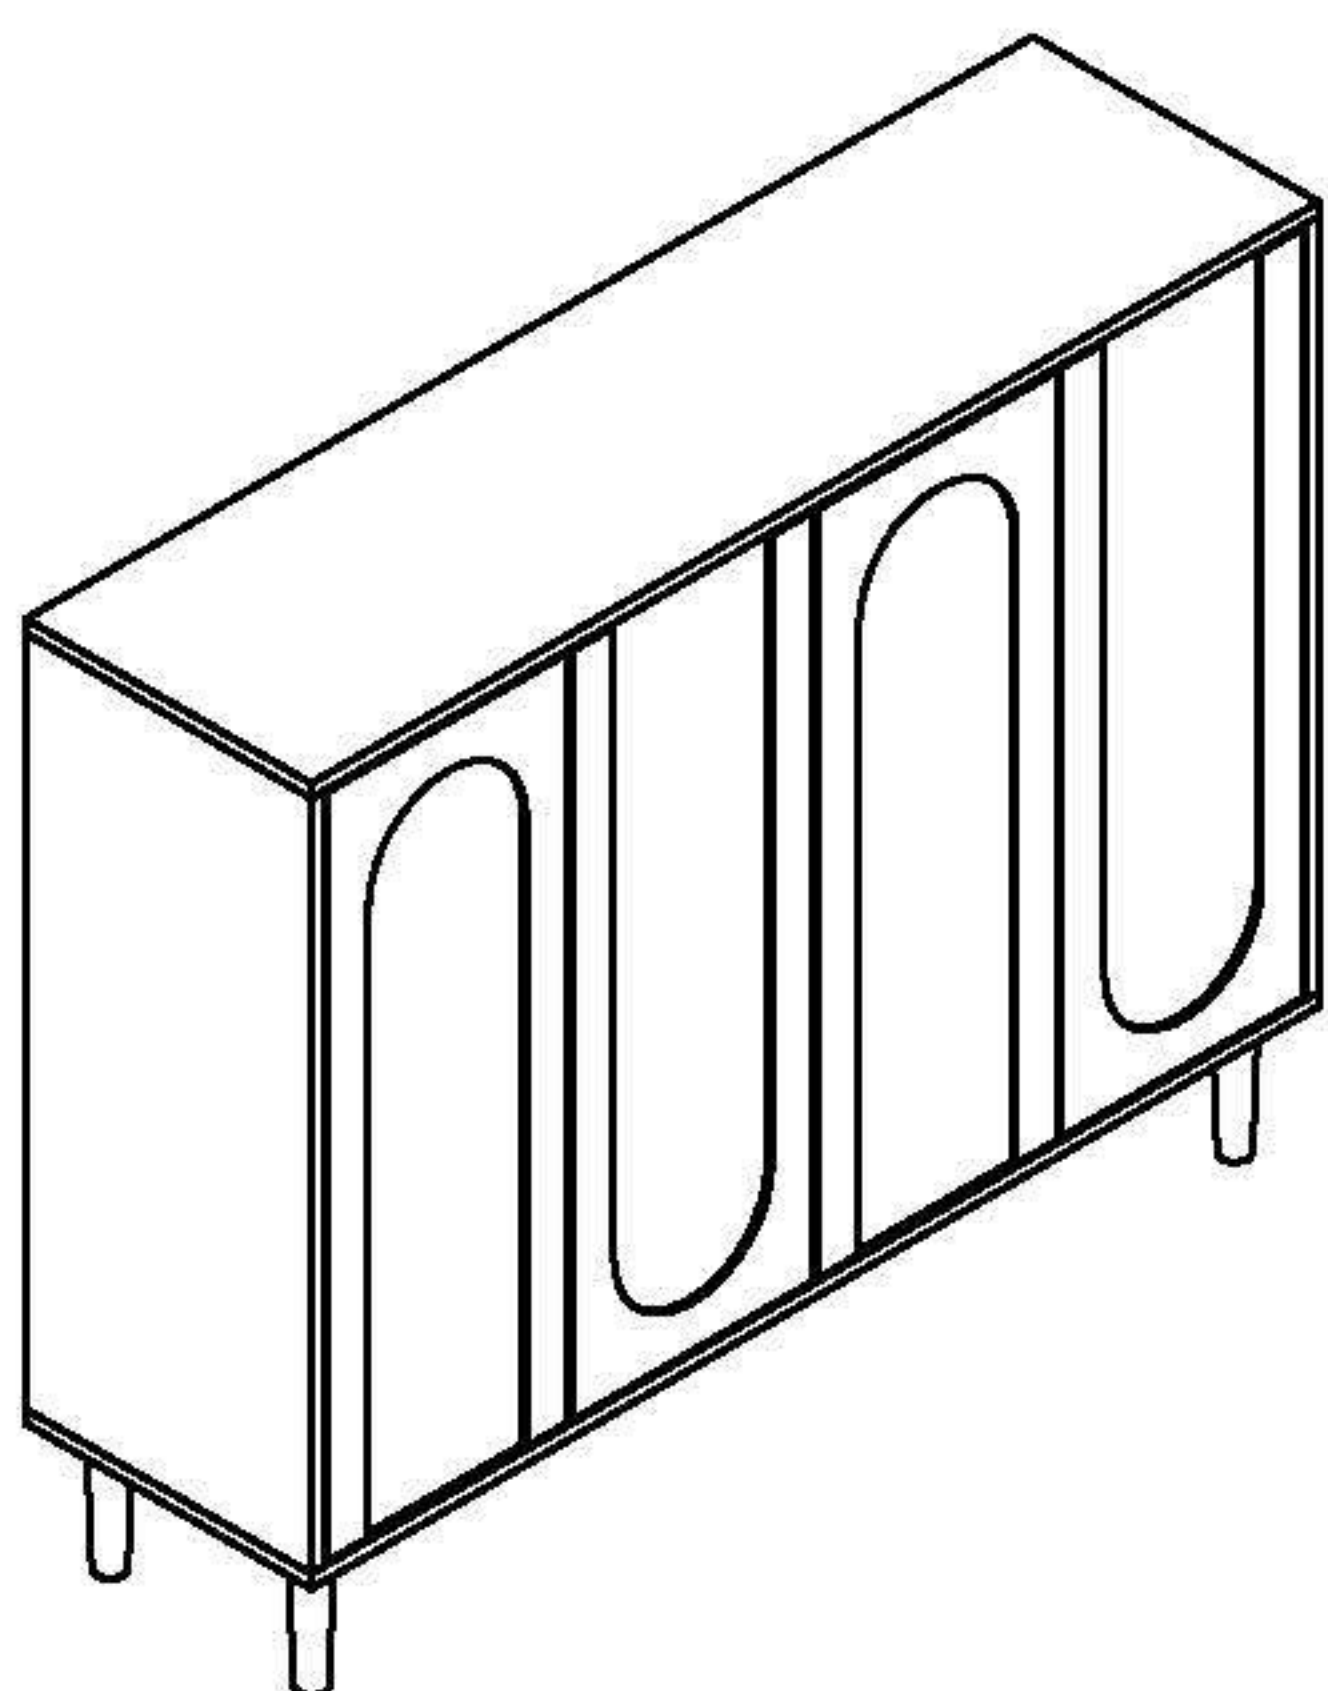


- ☆ 1. The panels and screws are not used. Please read the instructions carefully before installation and distinguish each panel components and screws.
- ☆ 2. When installing the towel, please tighten the screws to 70% first, and then tighten all the screws after all installation is completed.

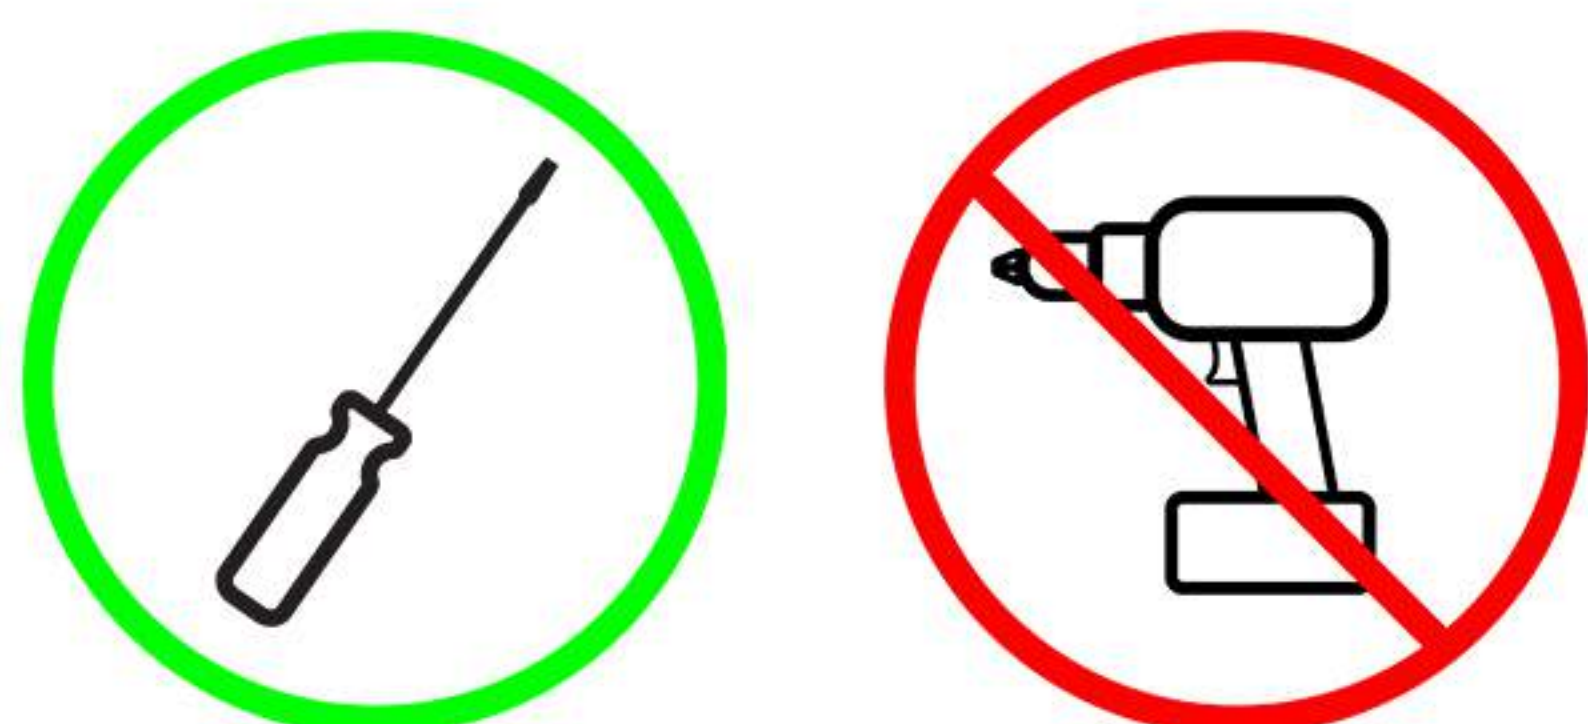

Inner Hexagonal Wrench *1

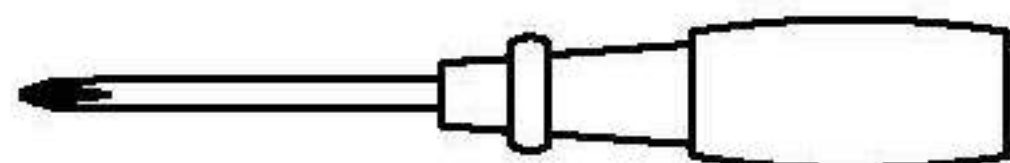

Screwdriver *1

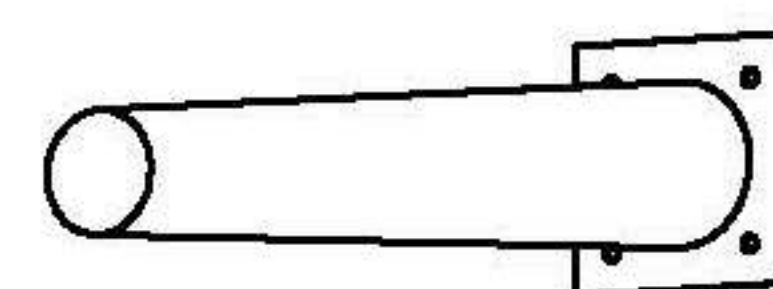

M44*5




C6*9




D0*16



A2*42

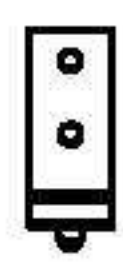

K2*4

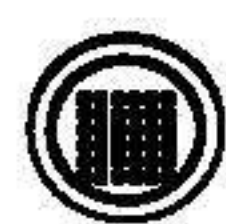


K11*2




K0*30




S32*2




L19*4

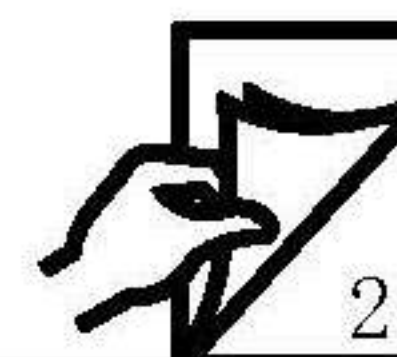


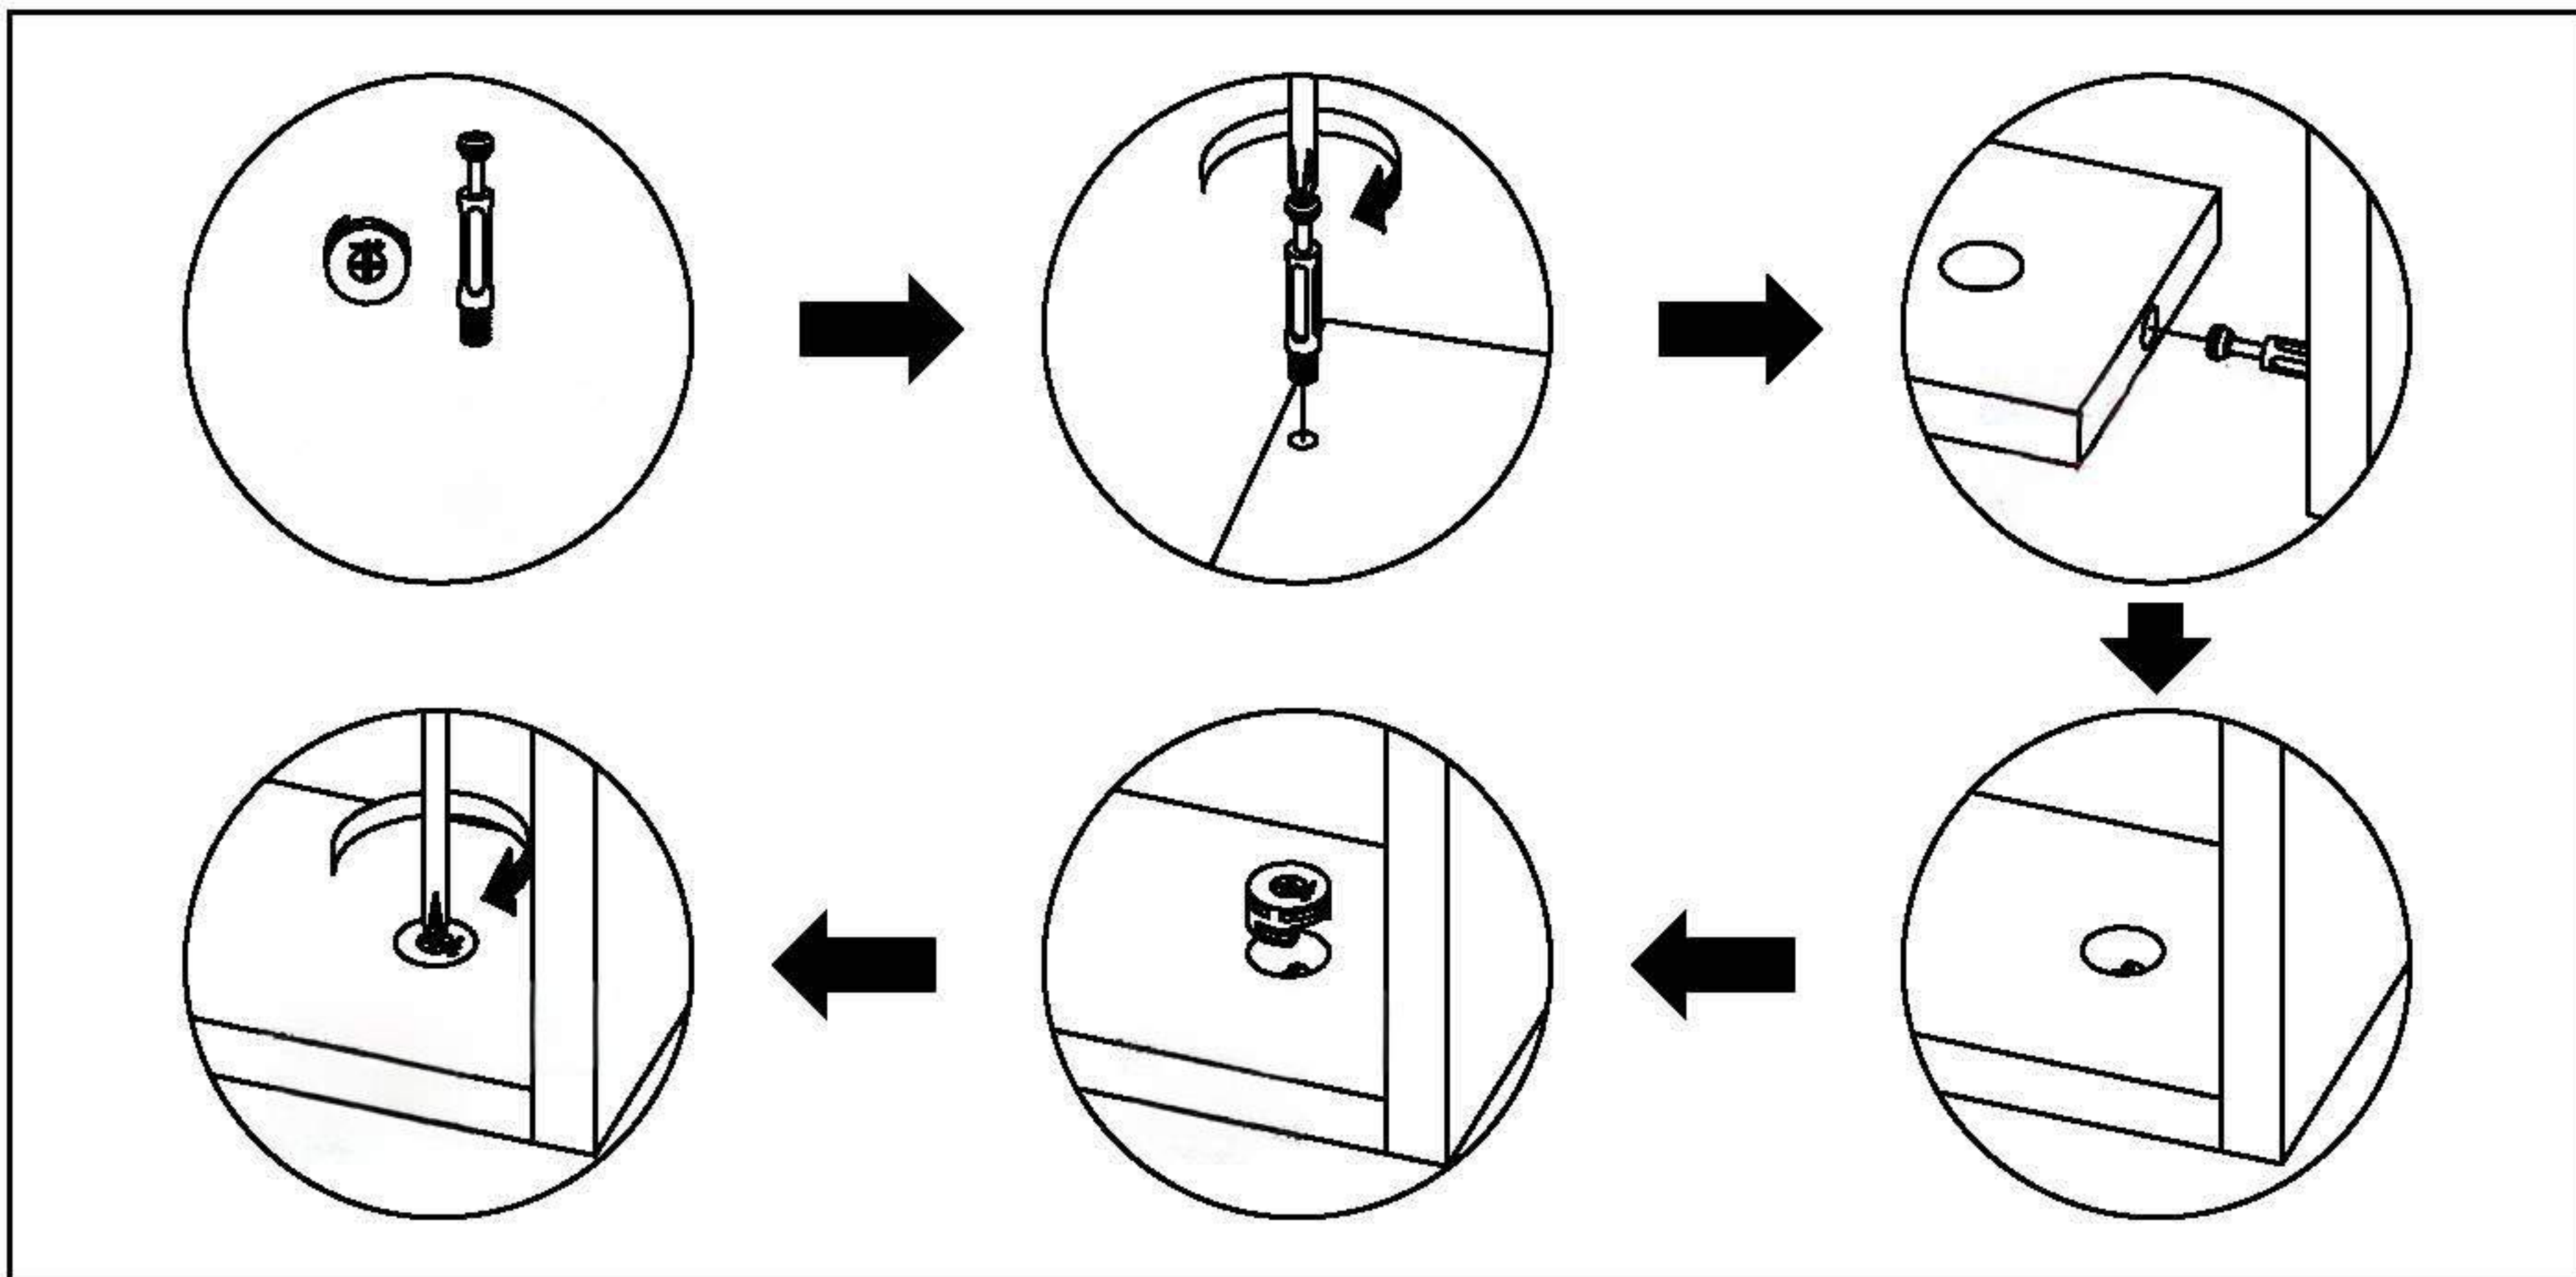


Step 1

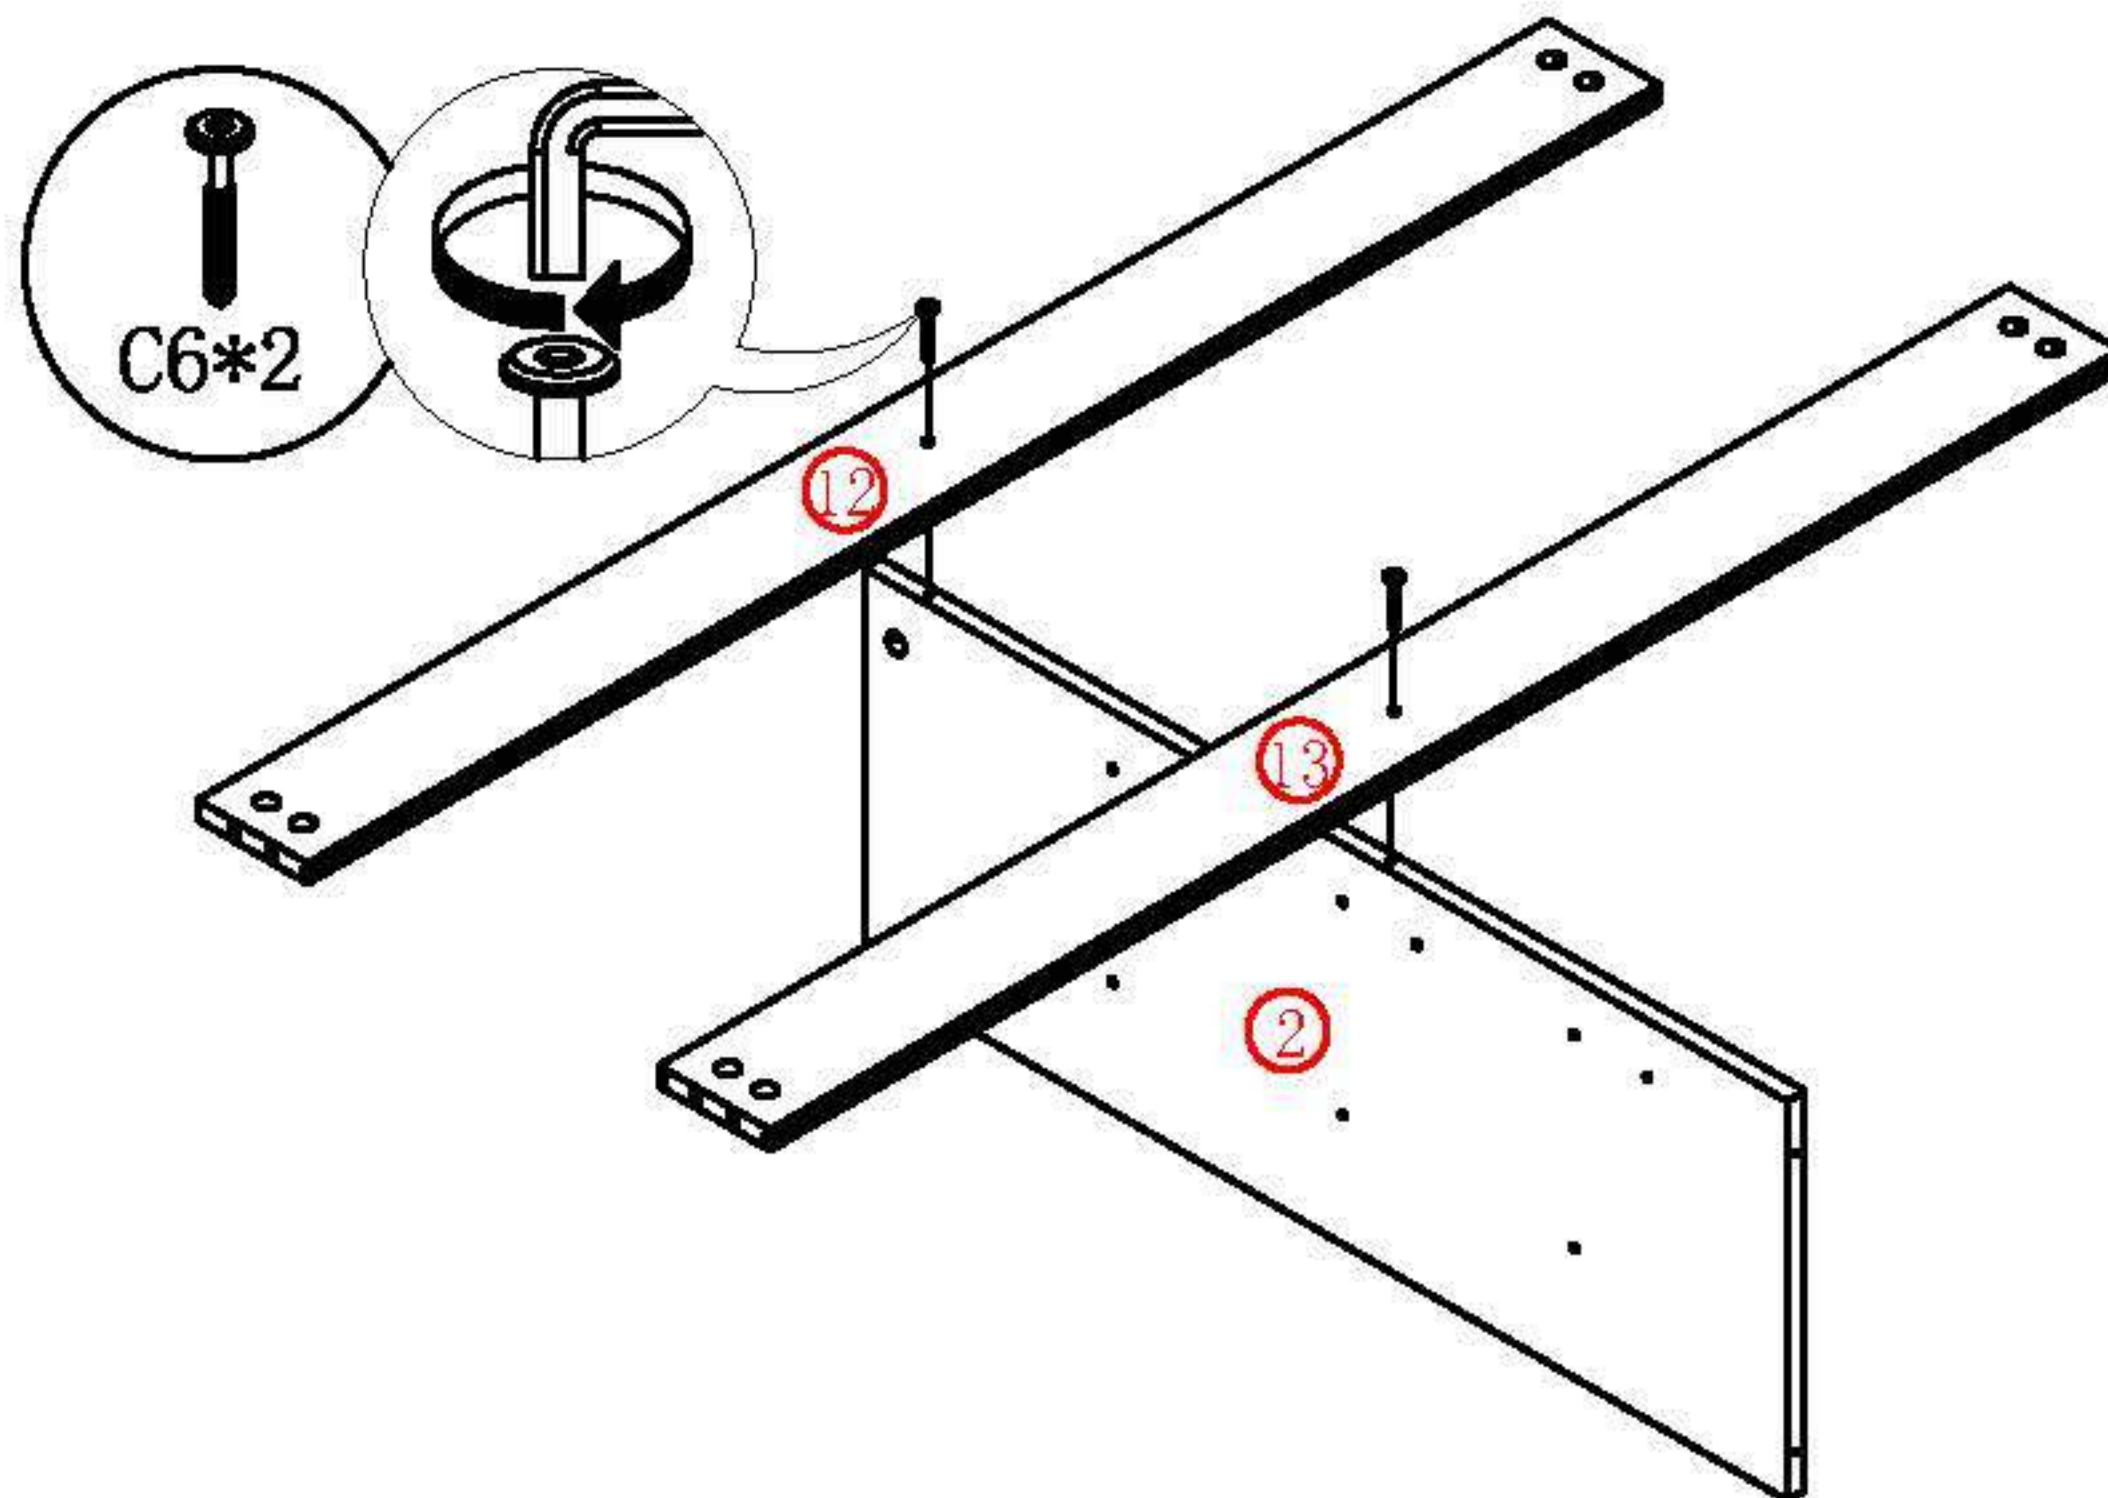


Step 2

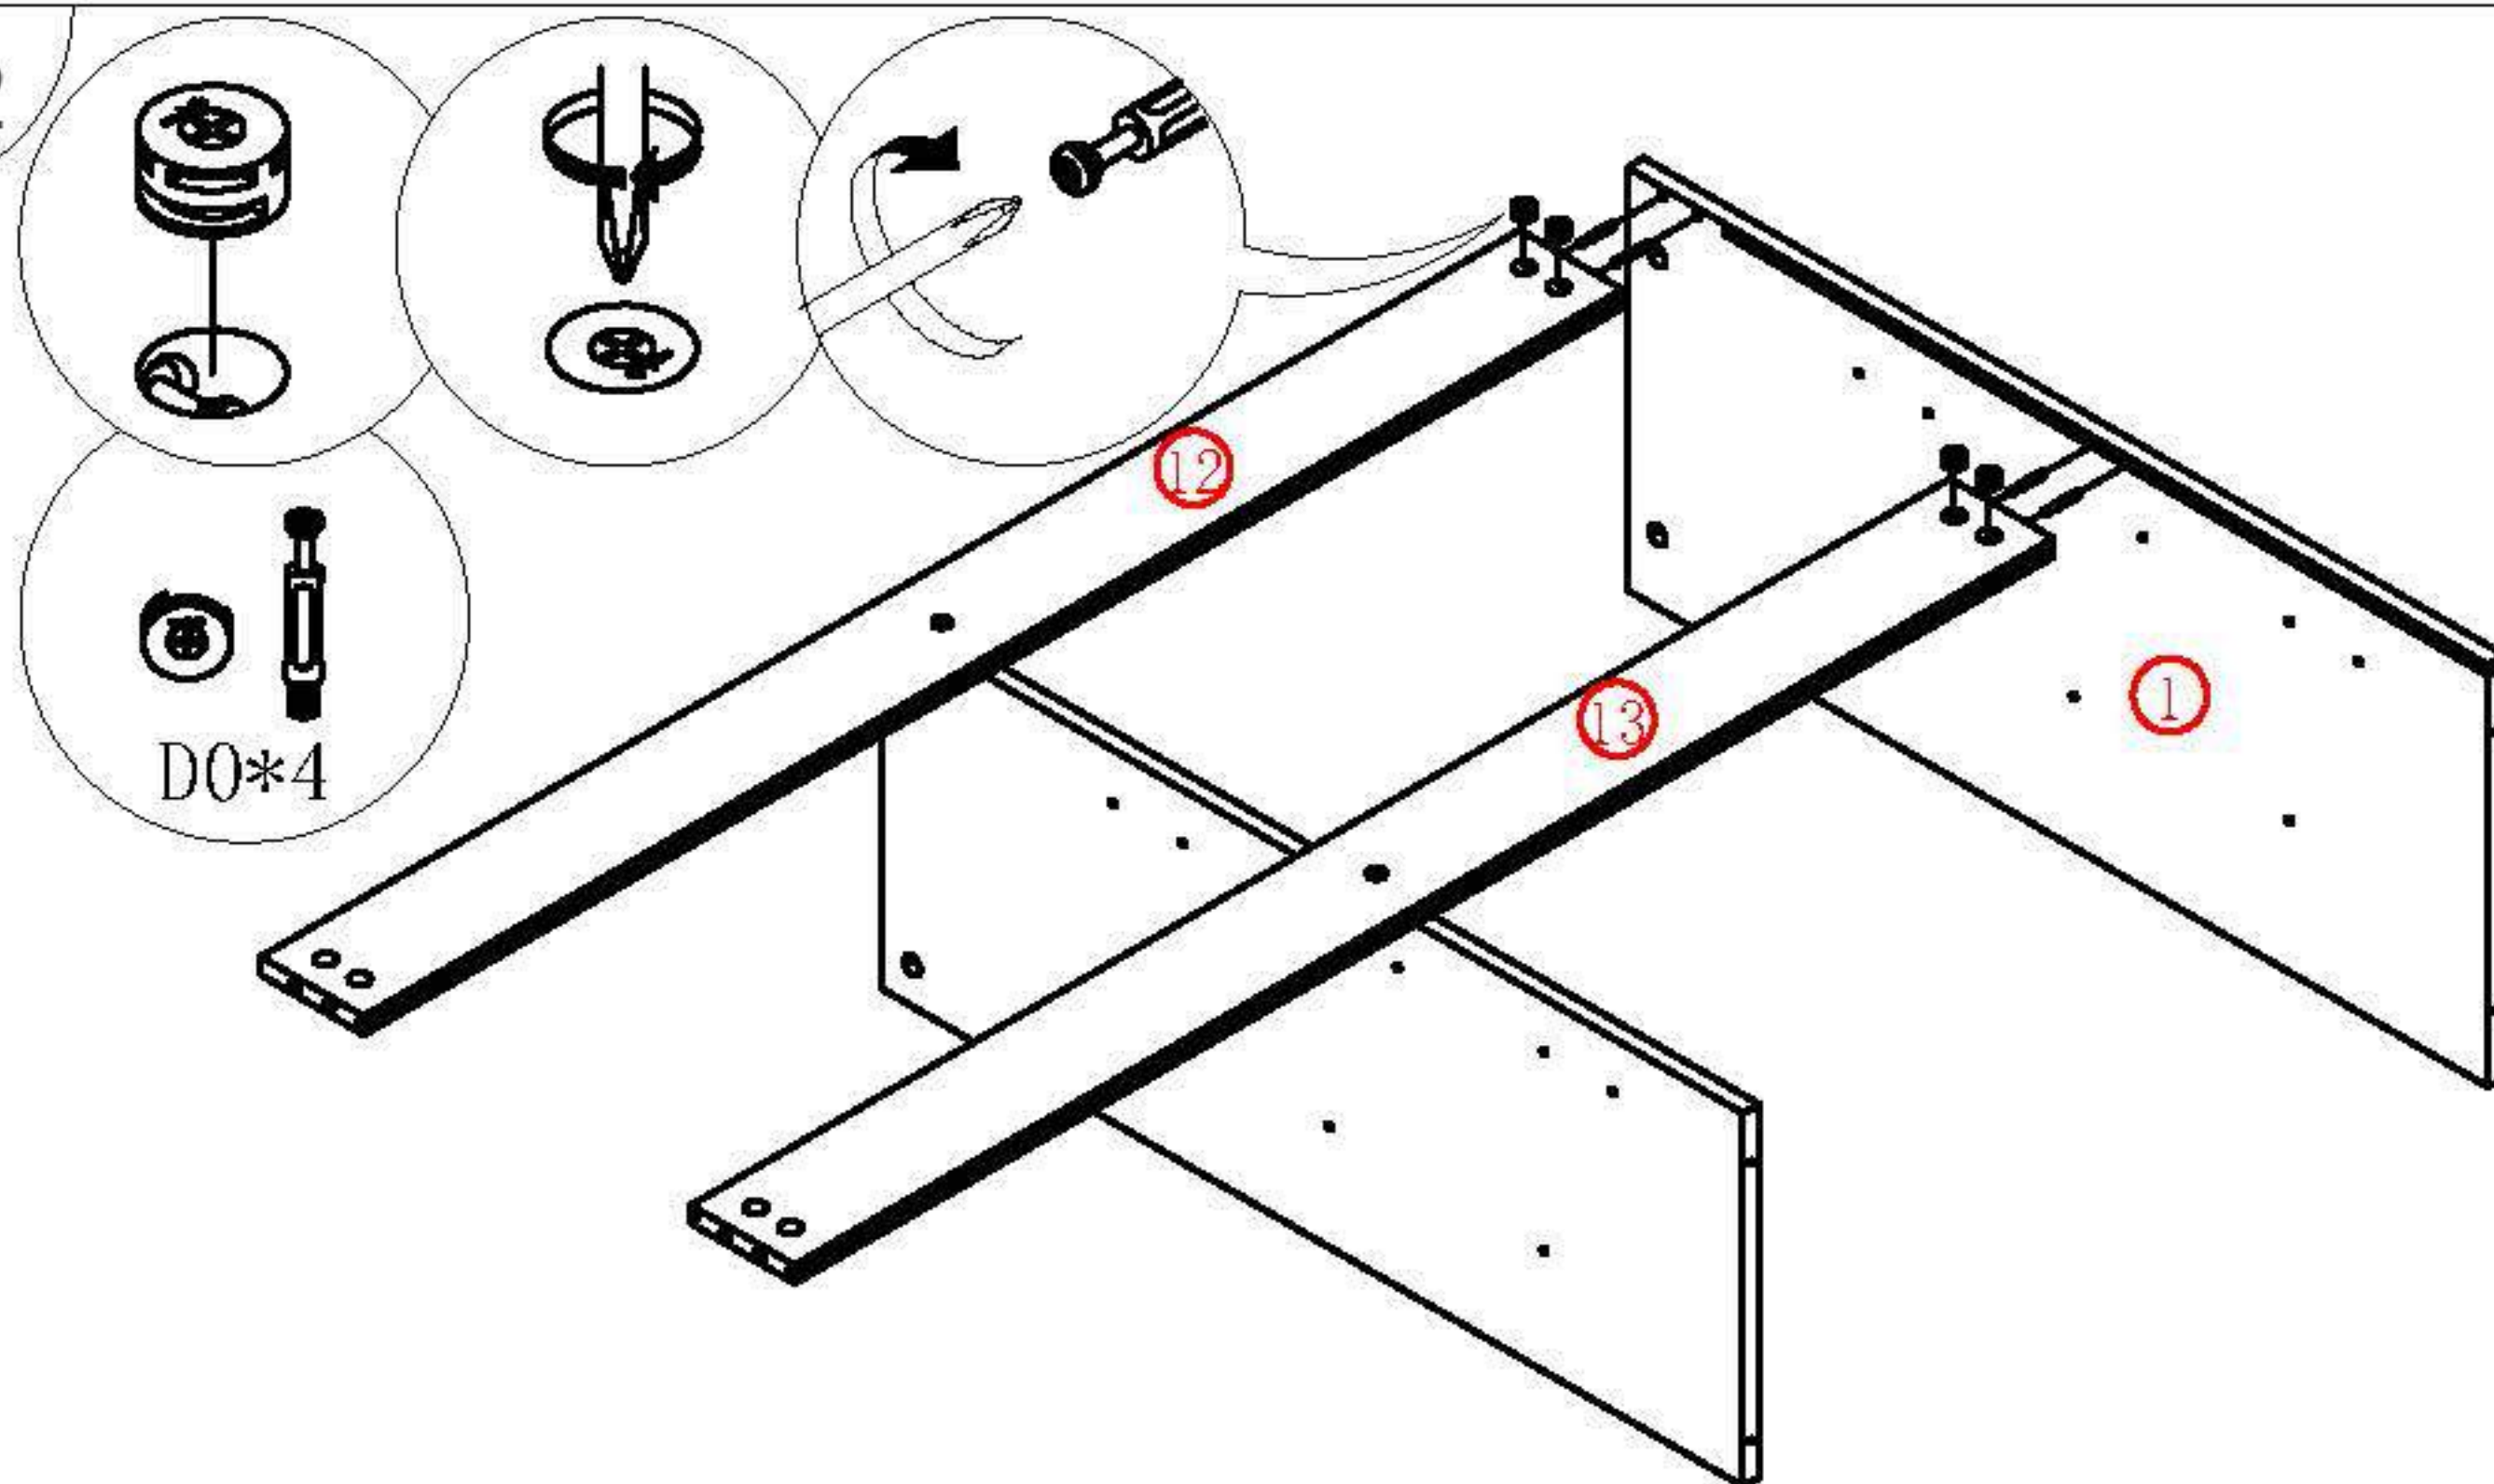



Step 3

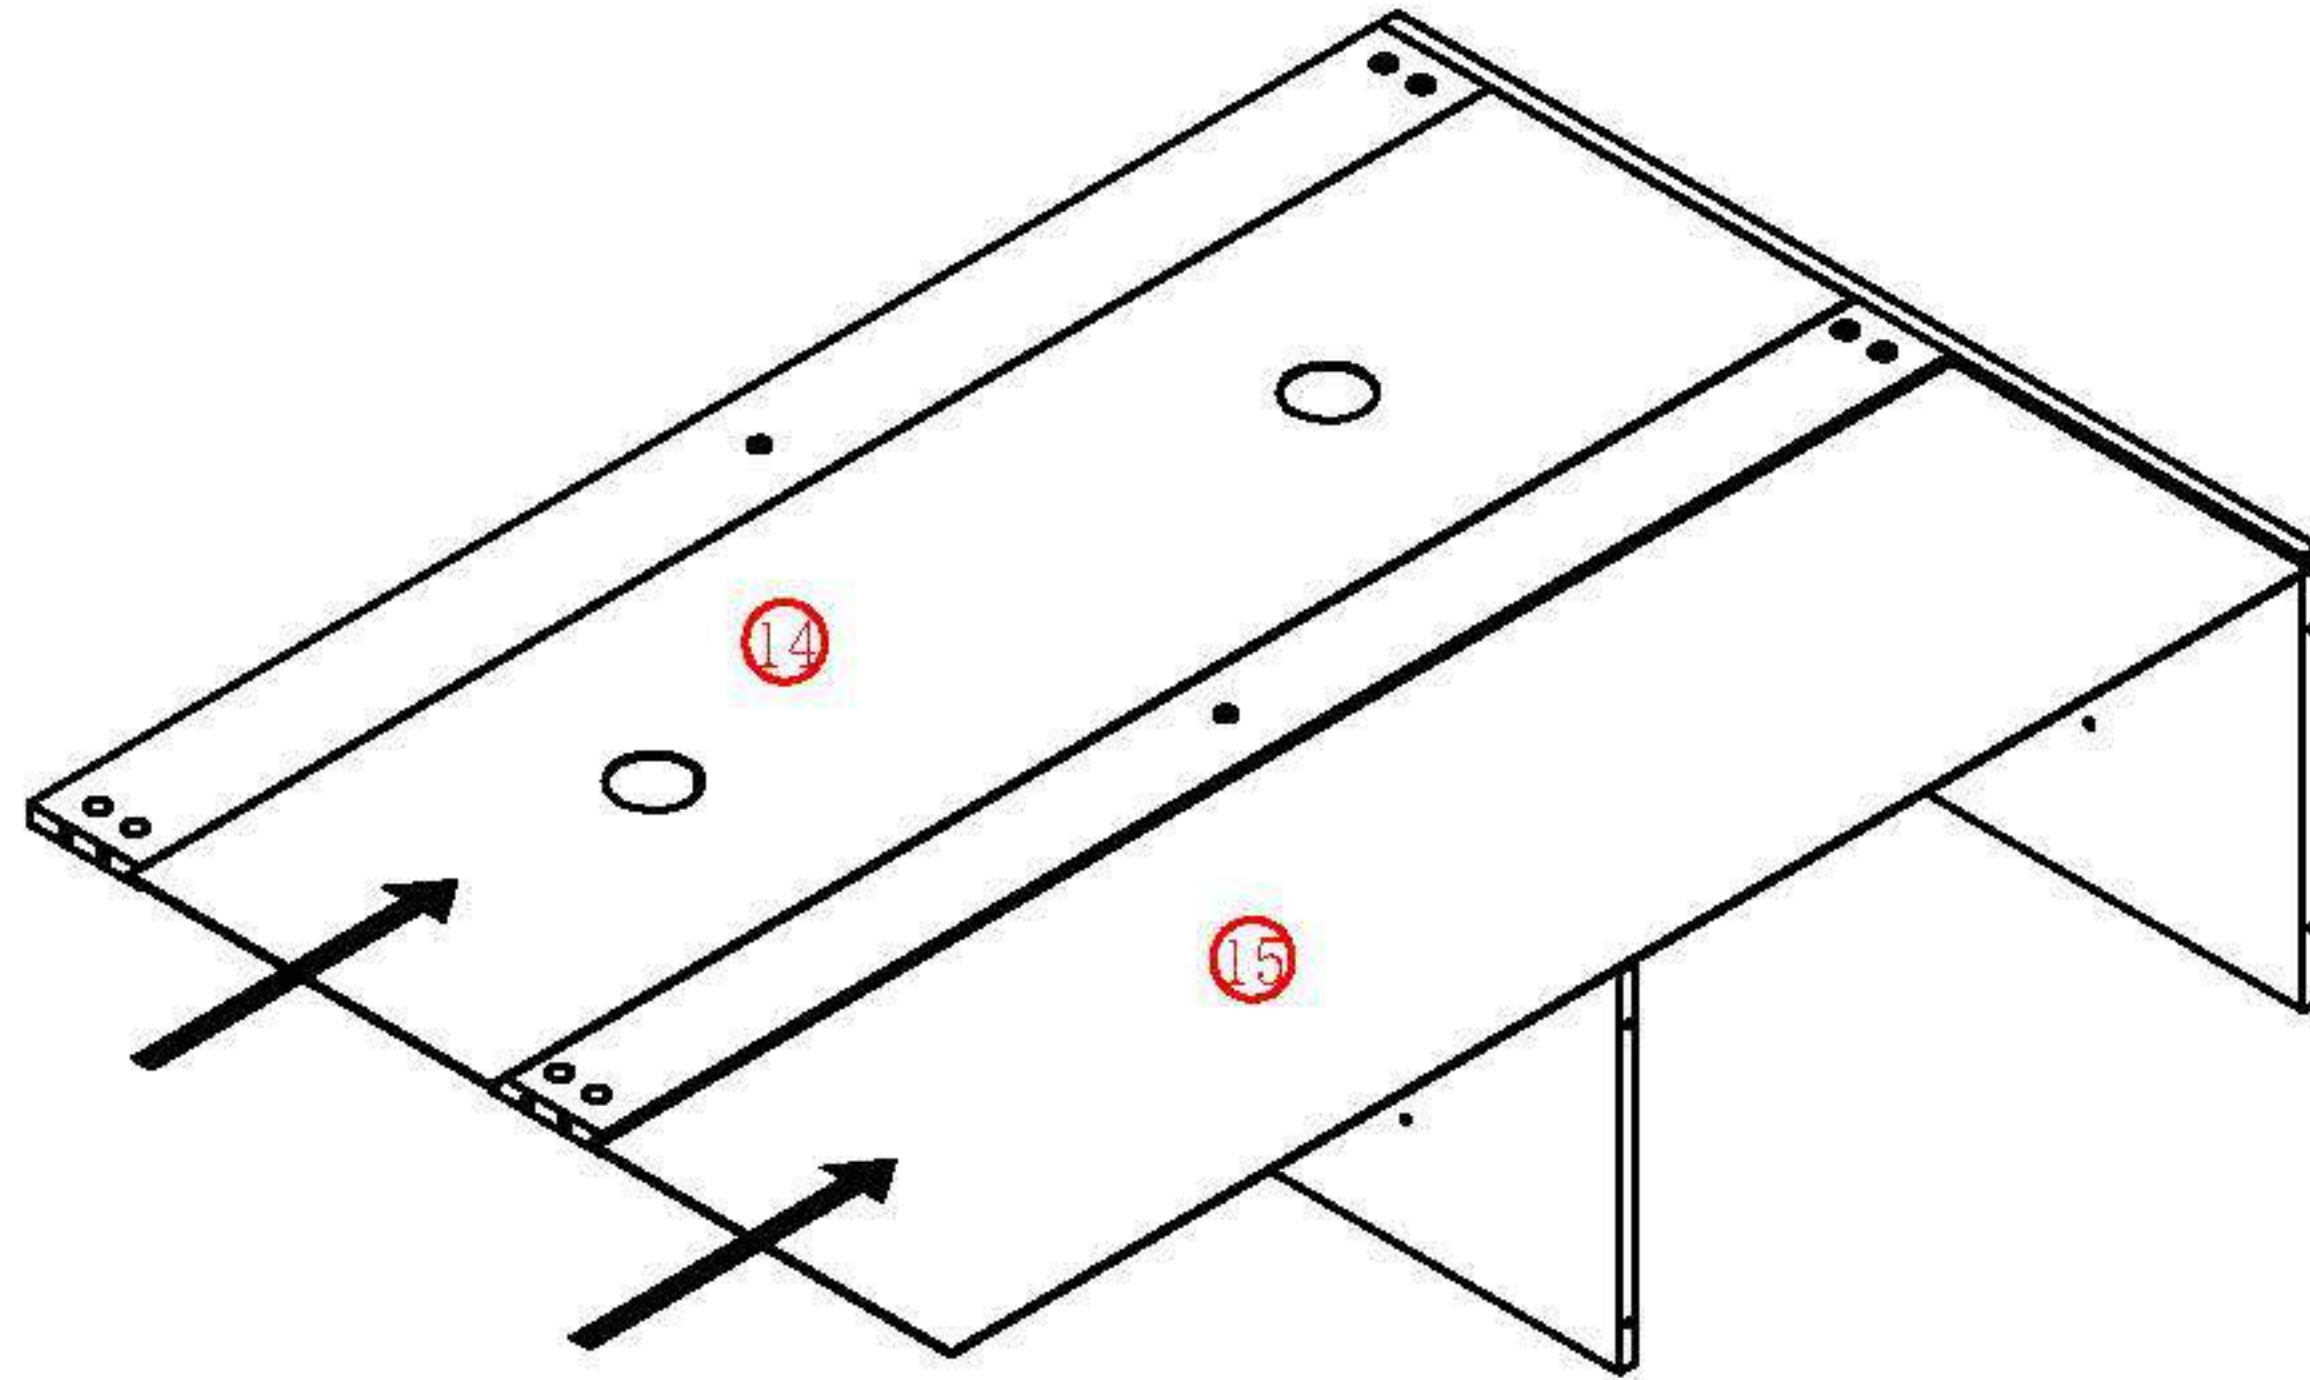


Step 4

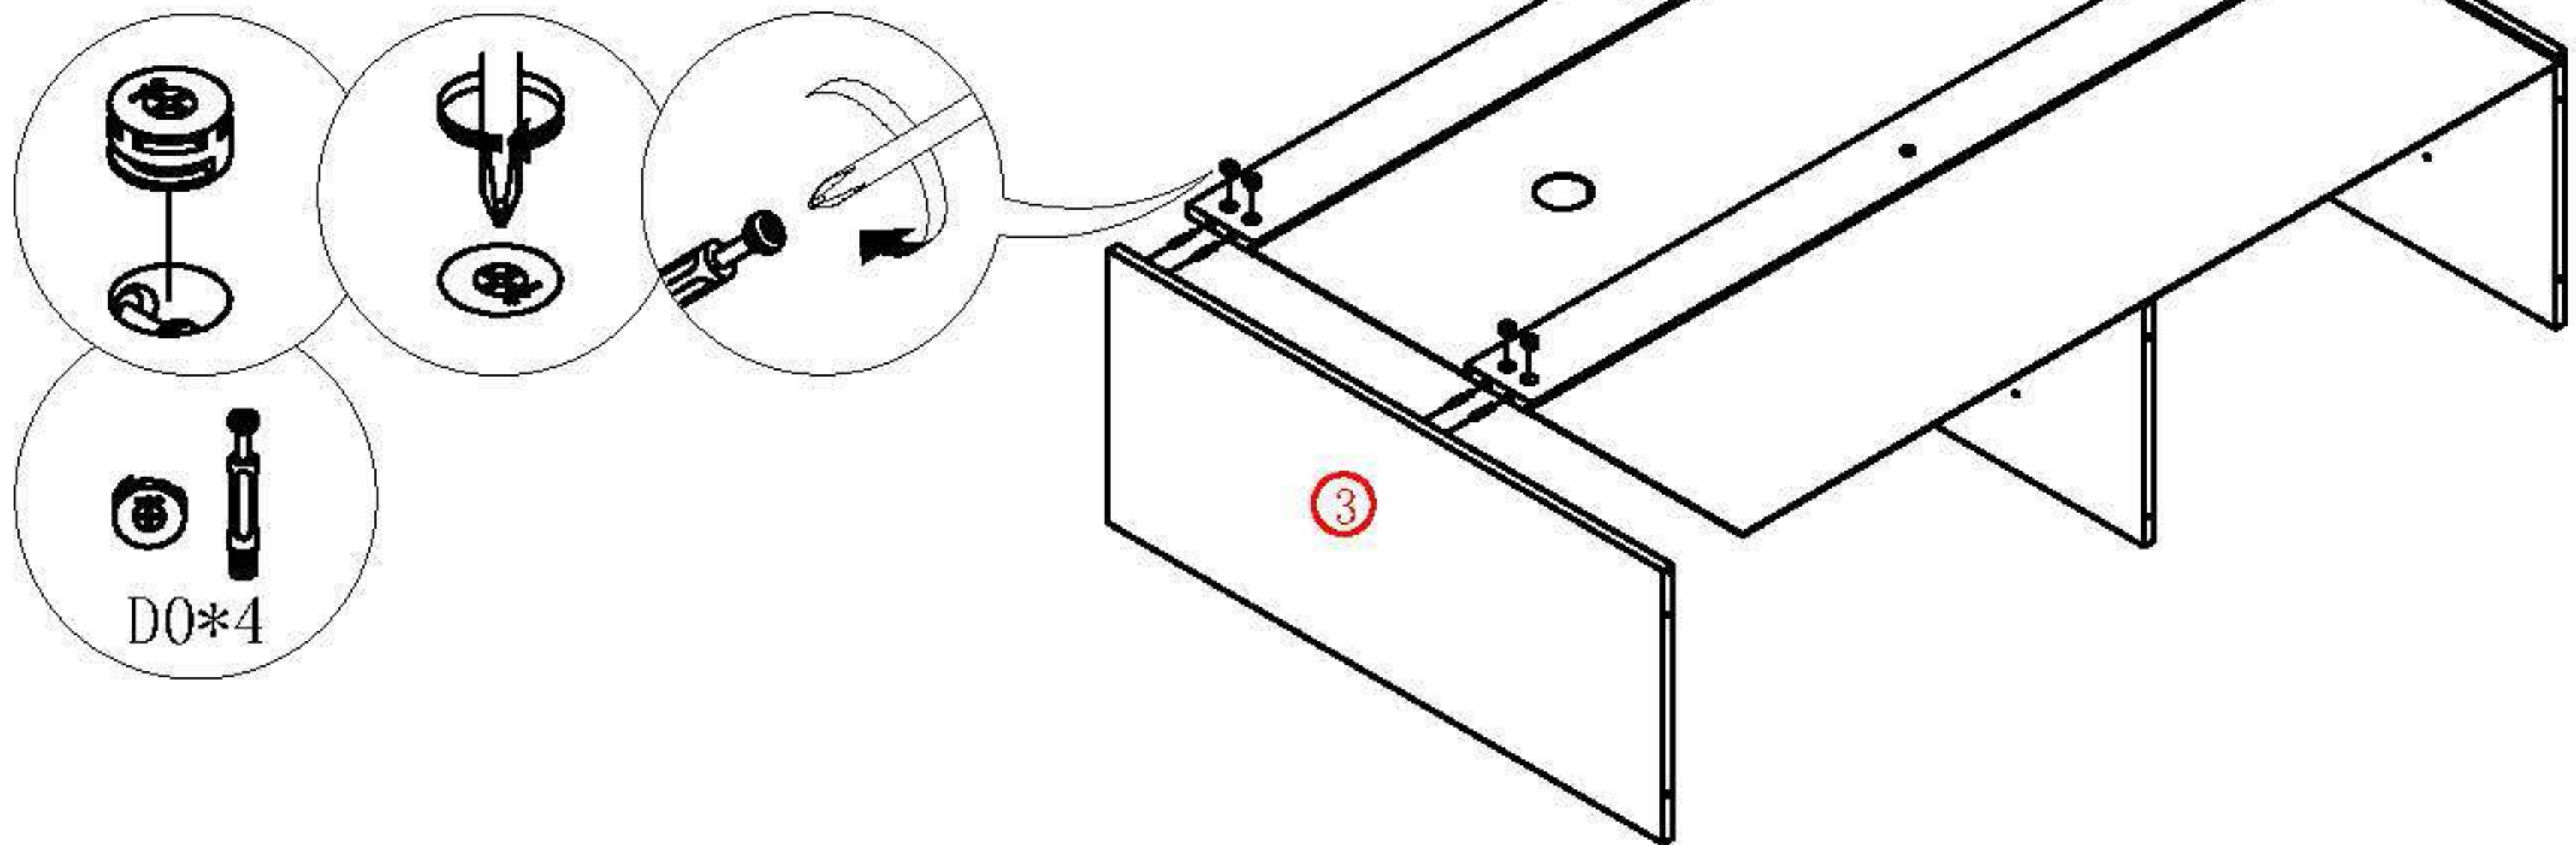


Step 5

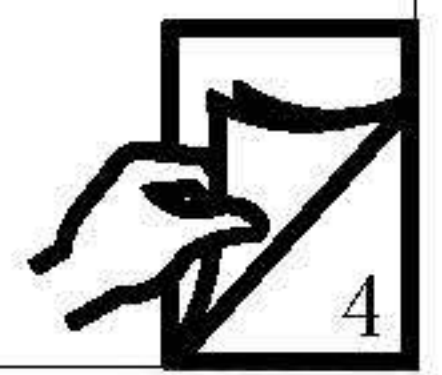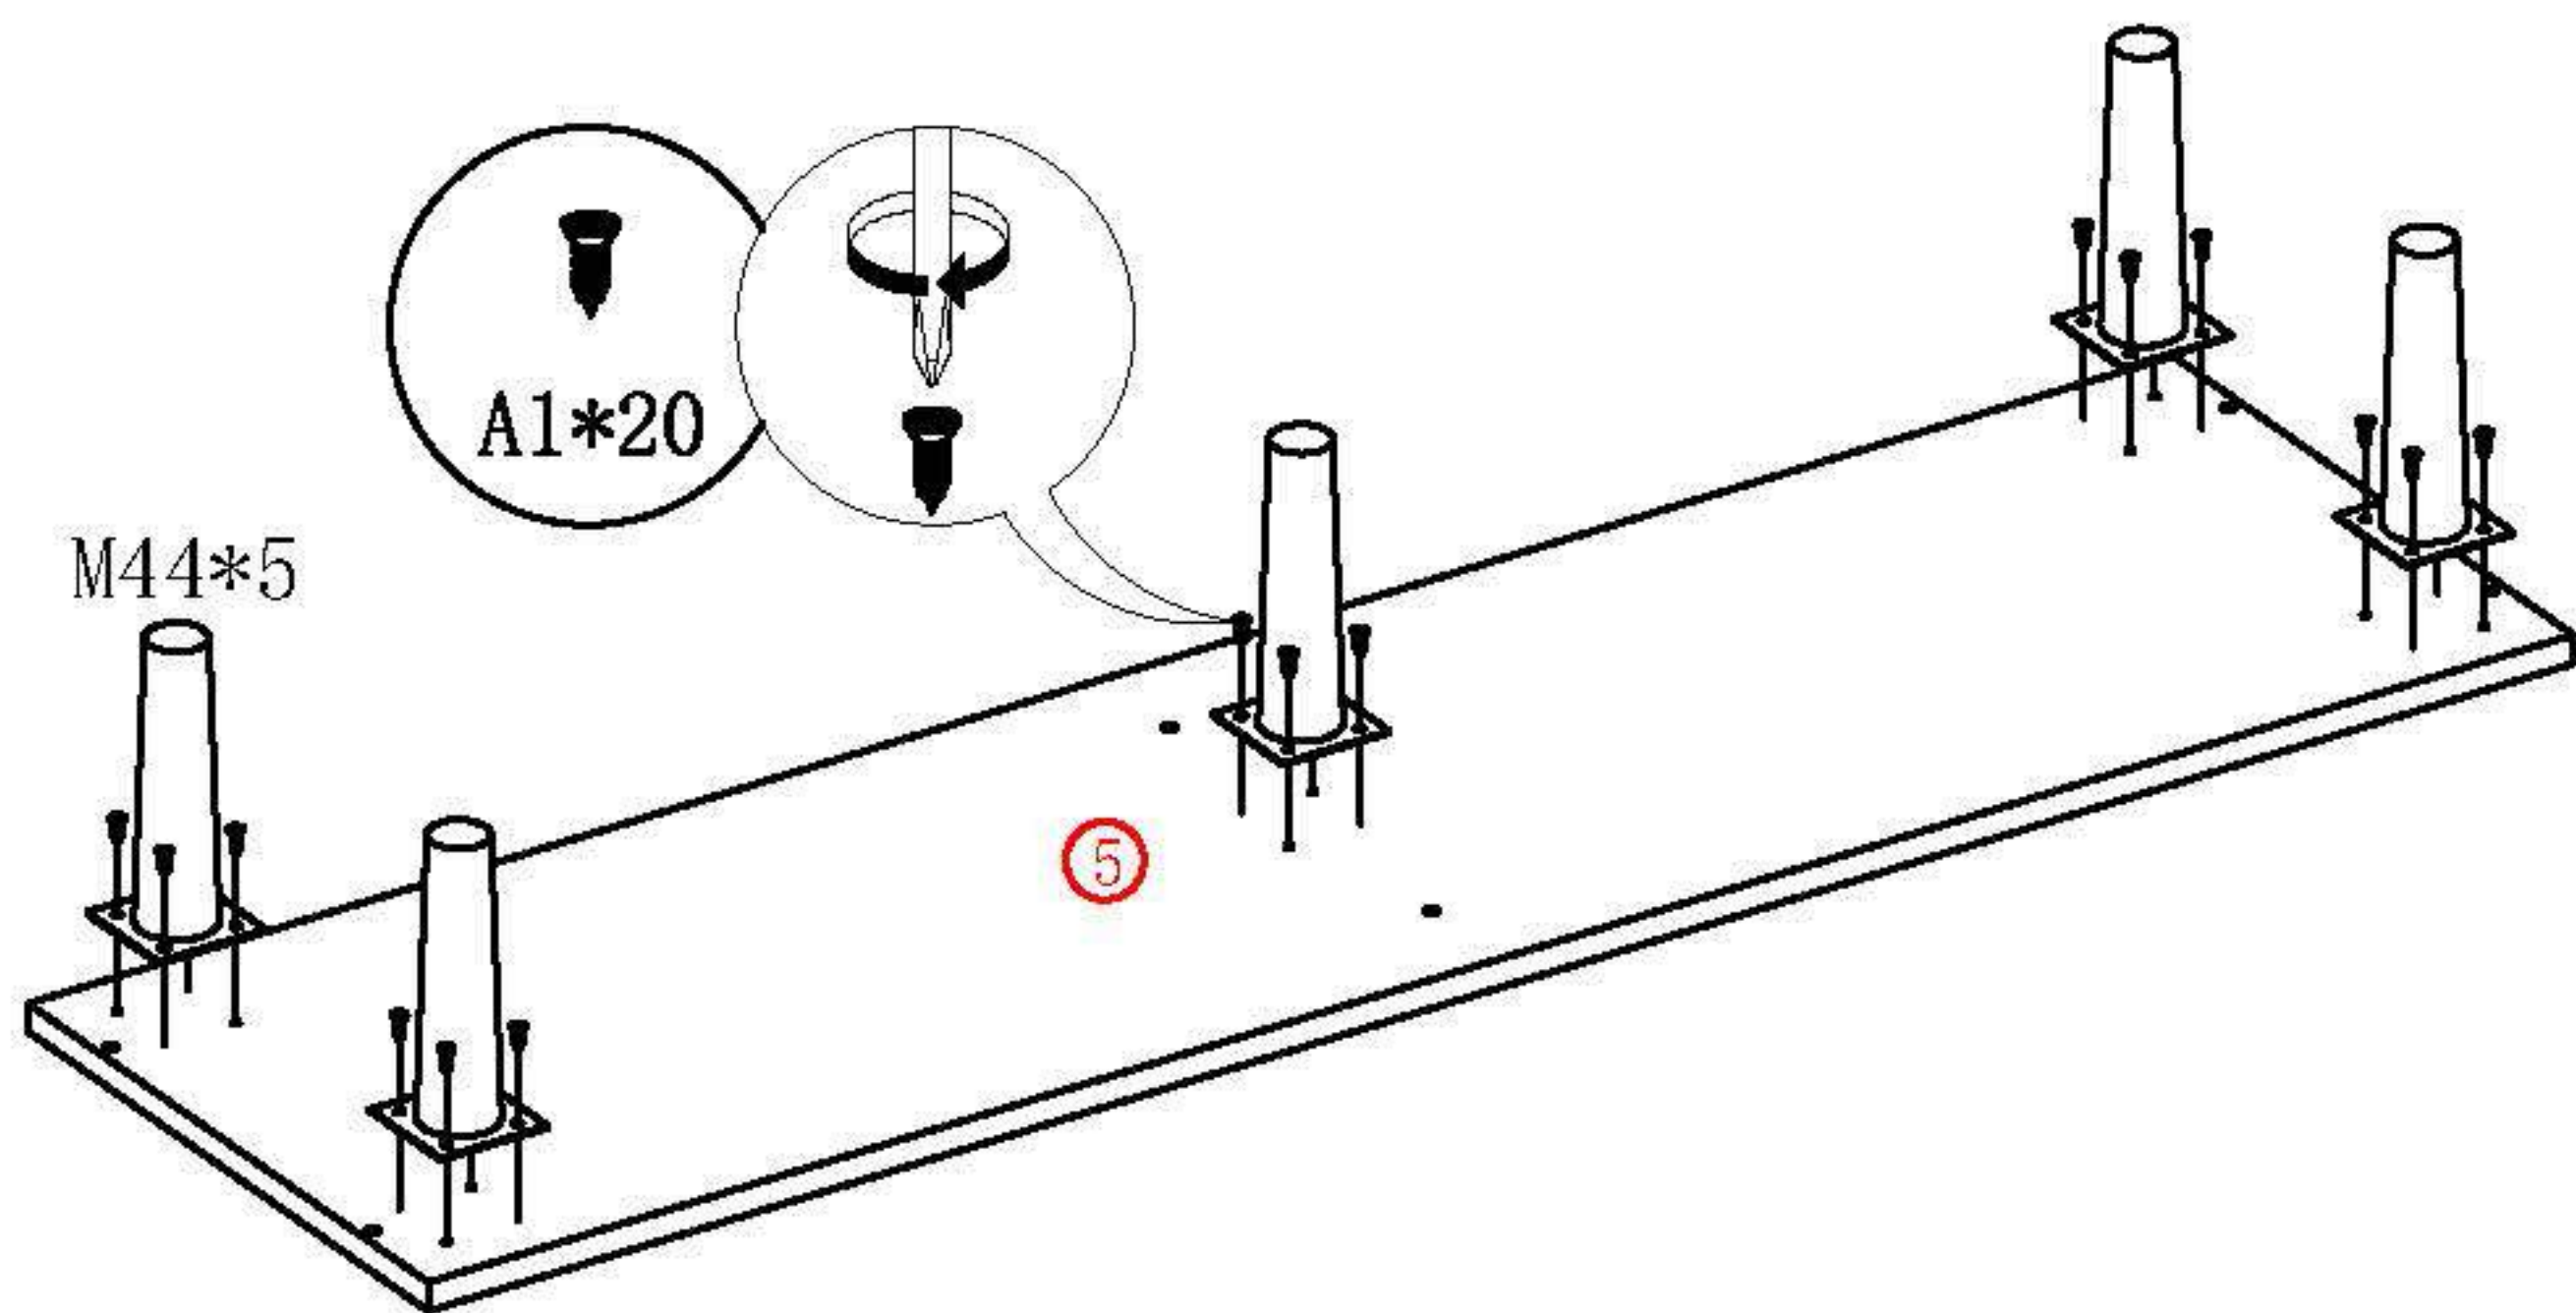



Step 6

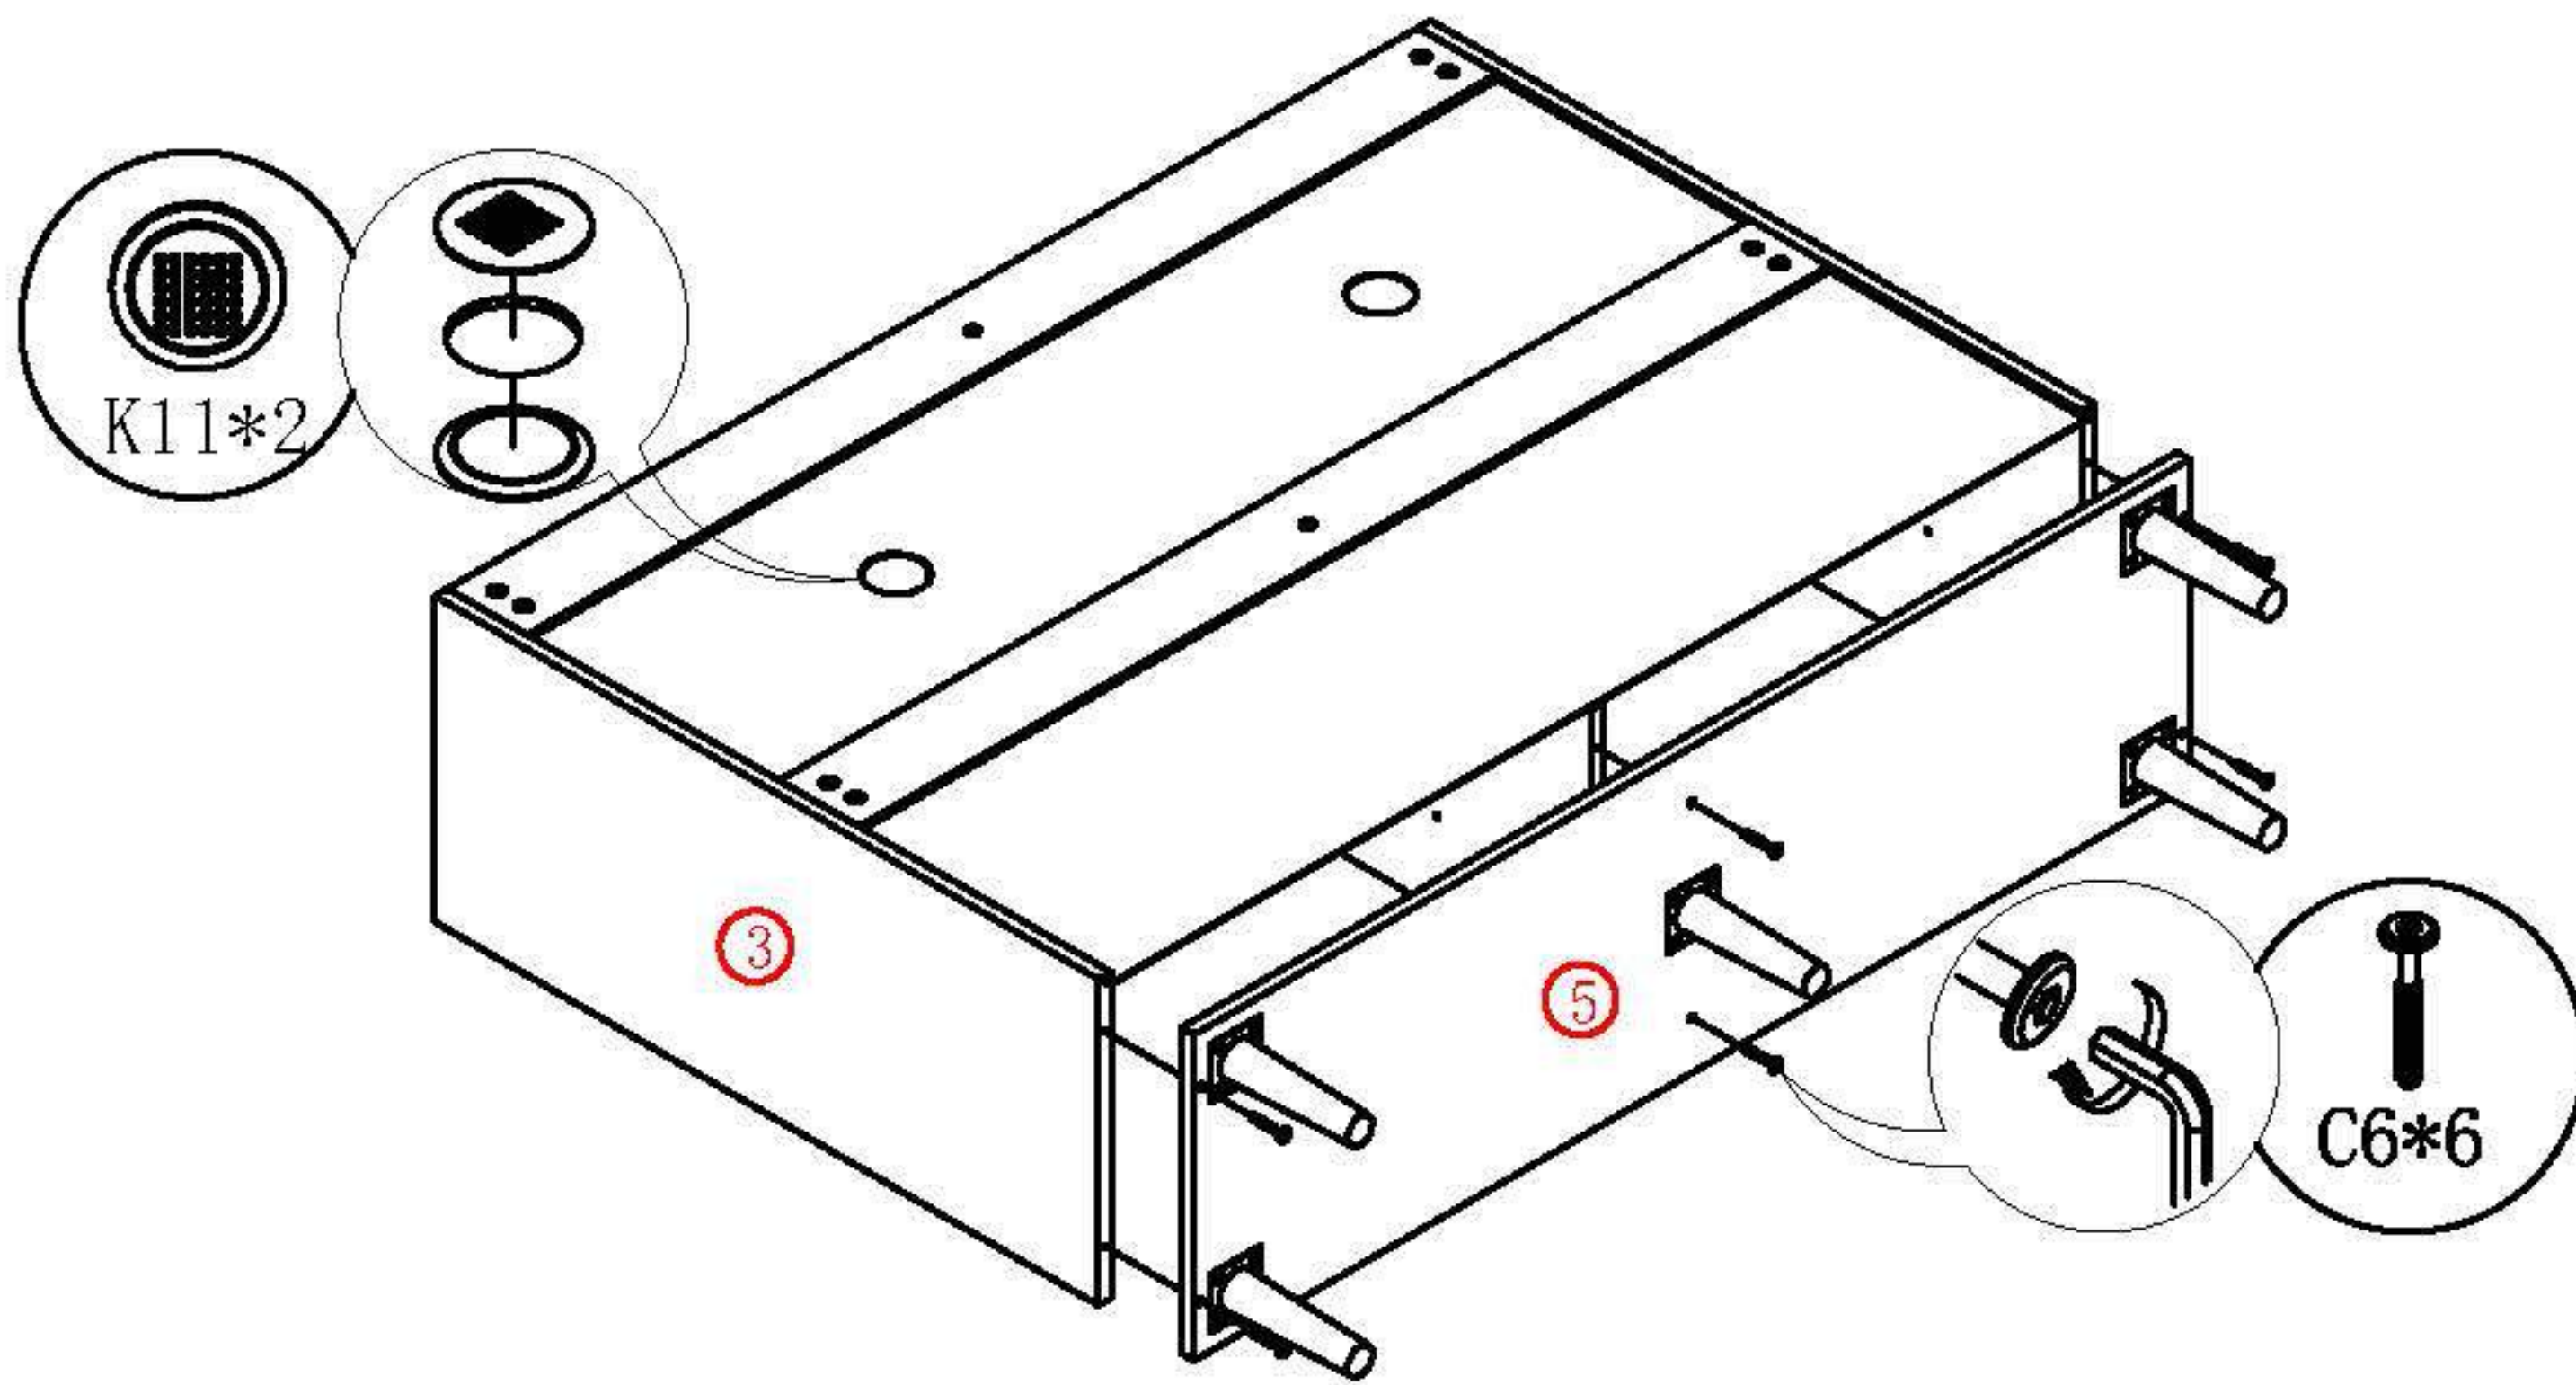


Step 7

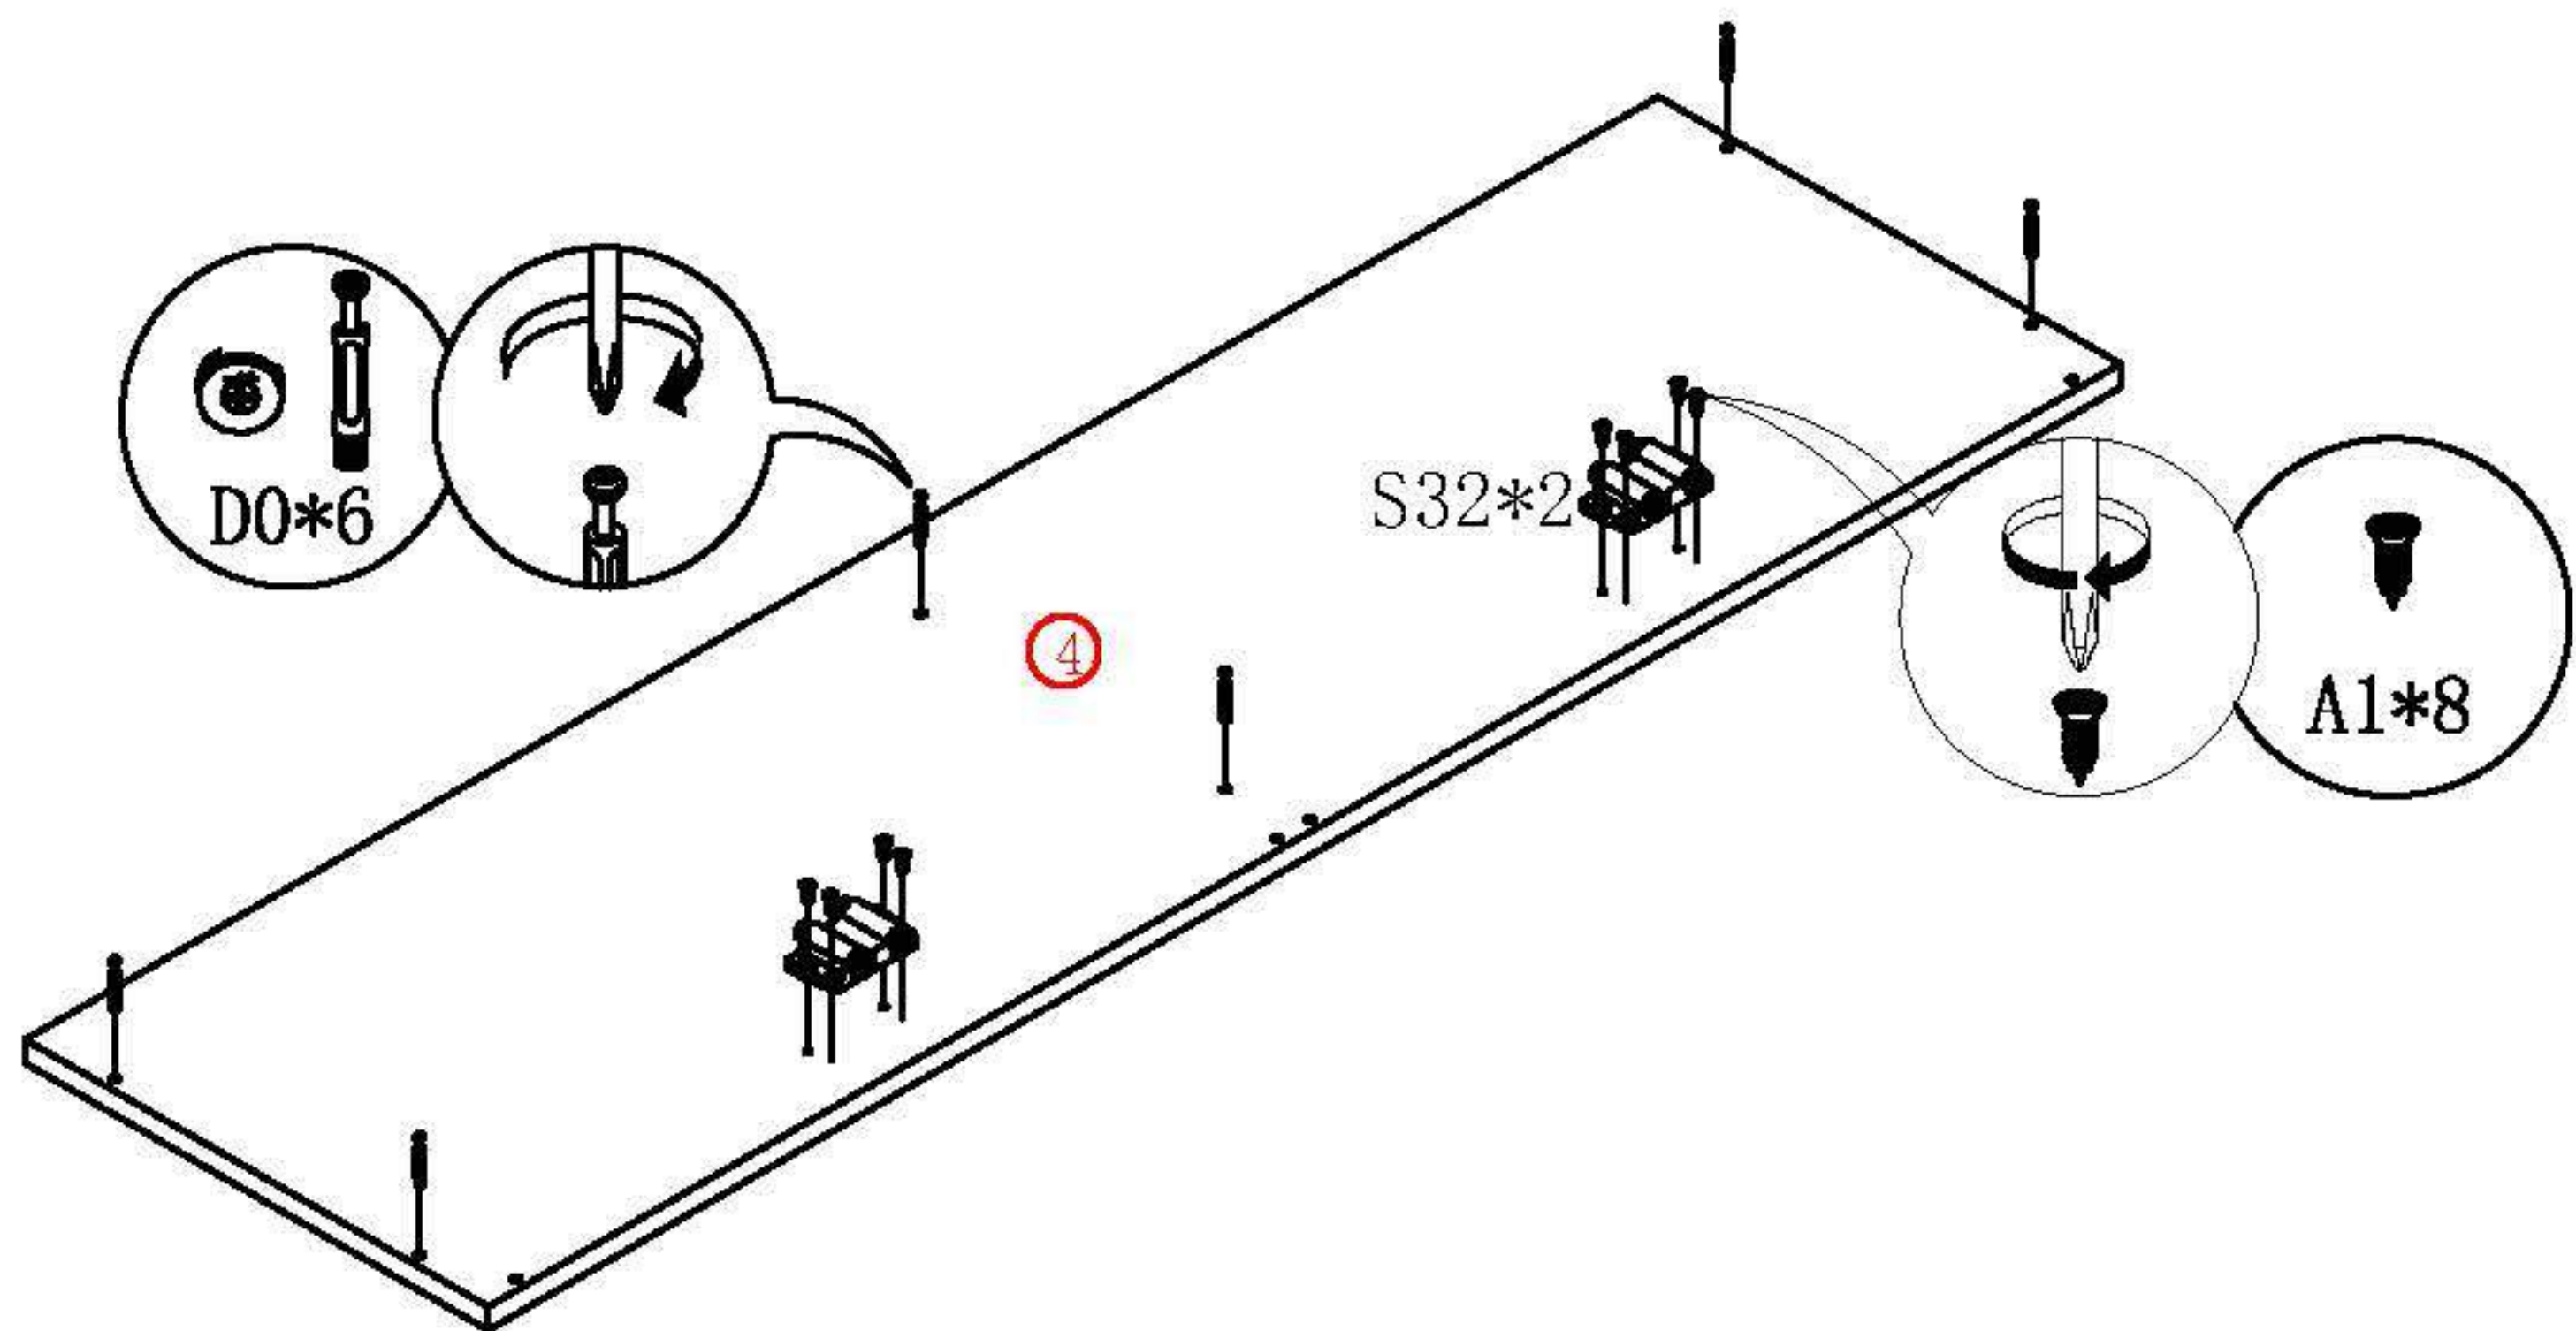


Step 8

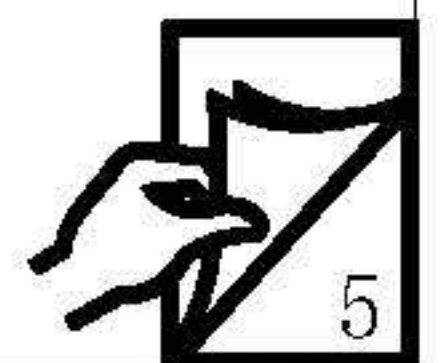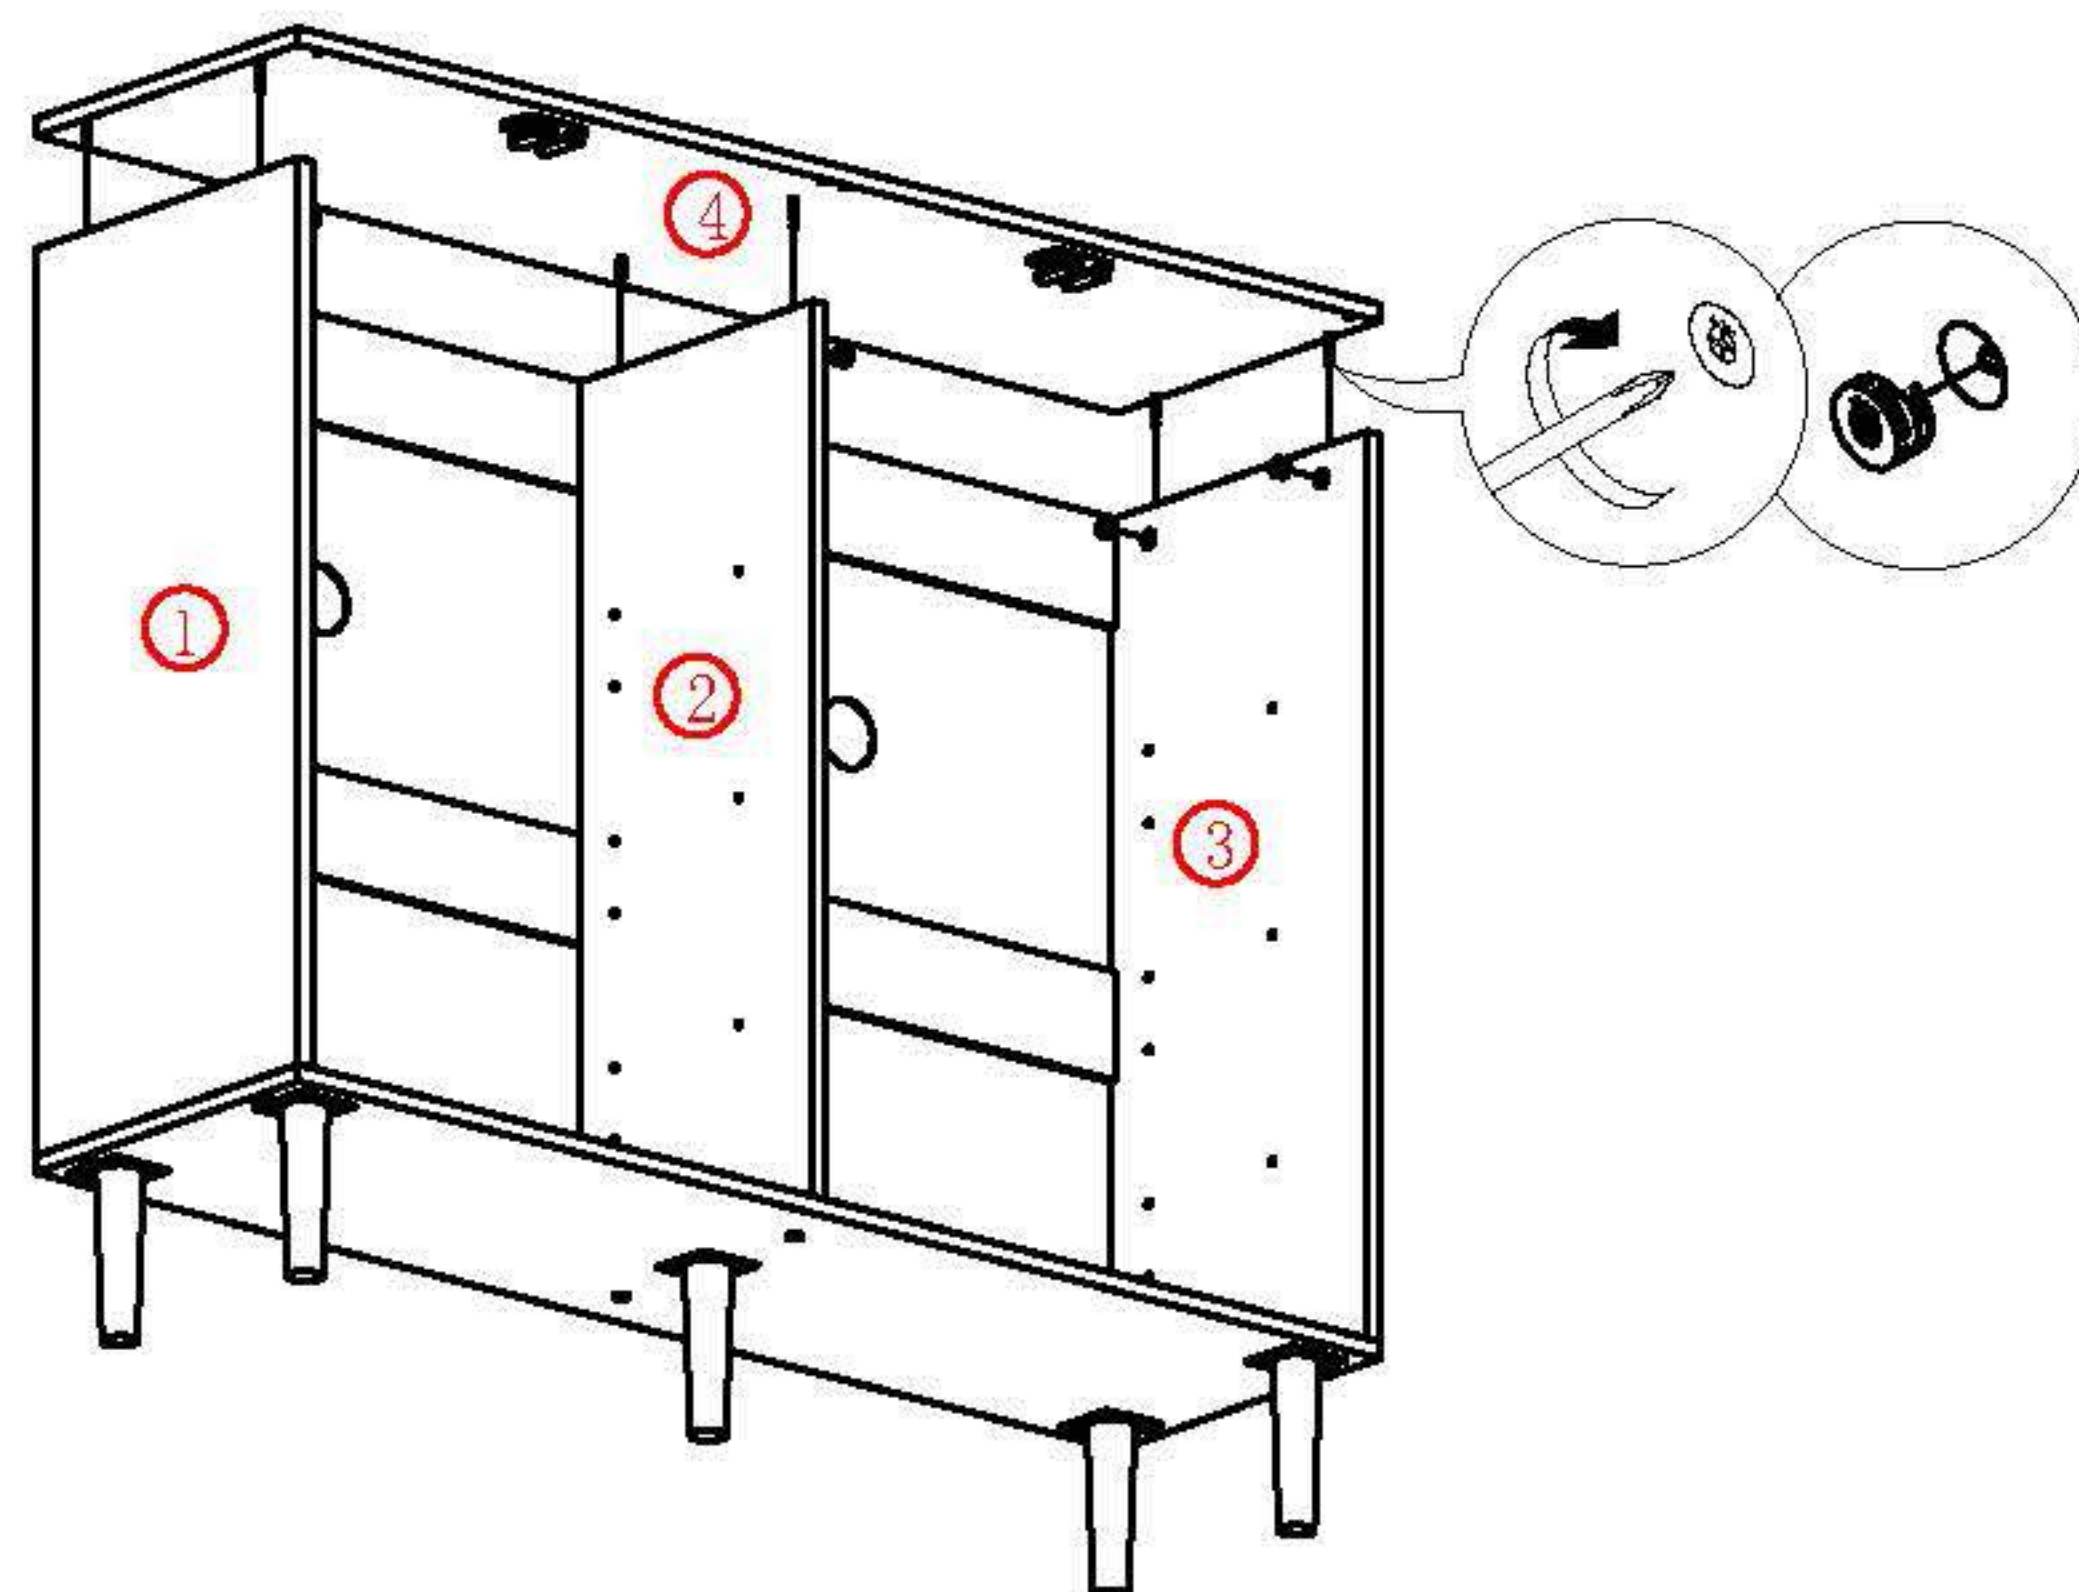

Step 9

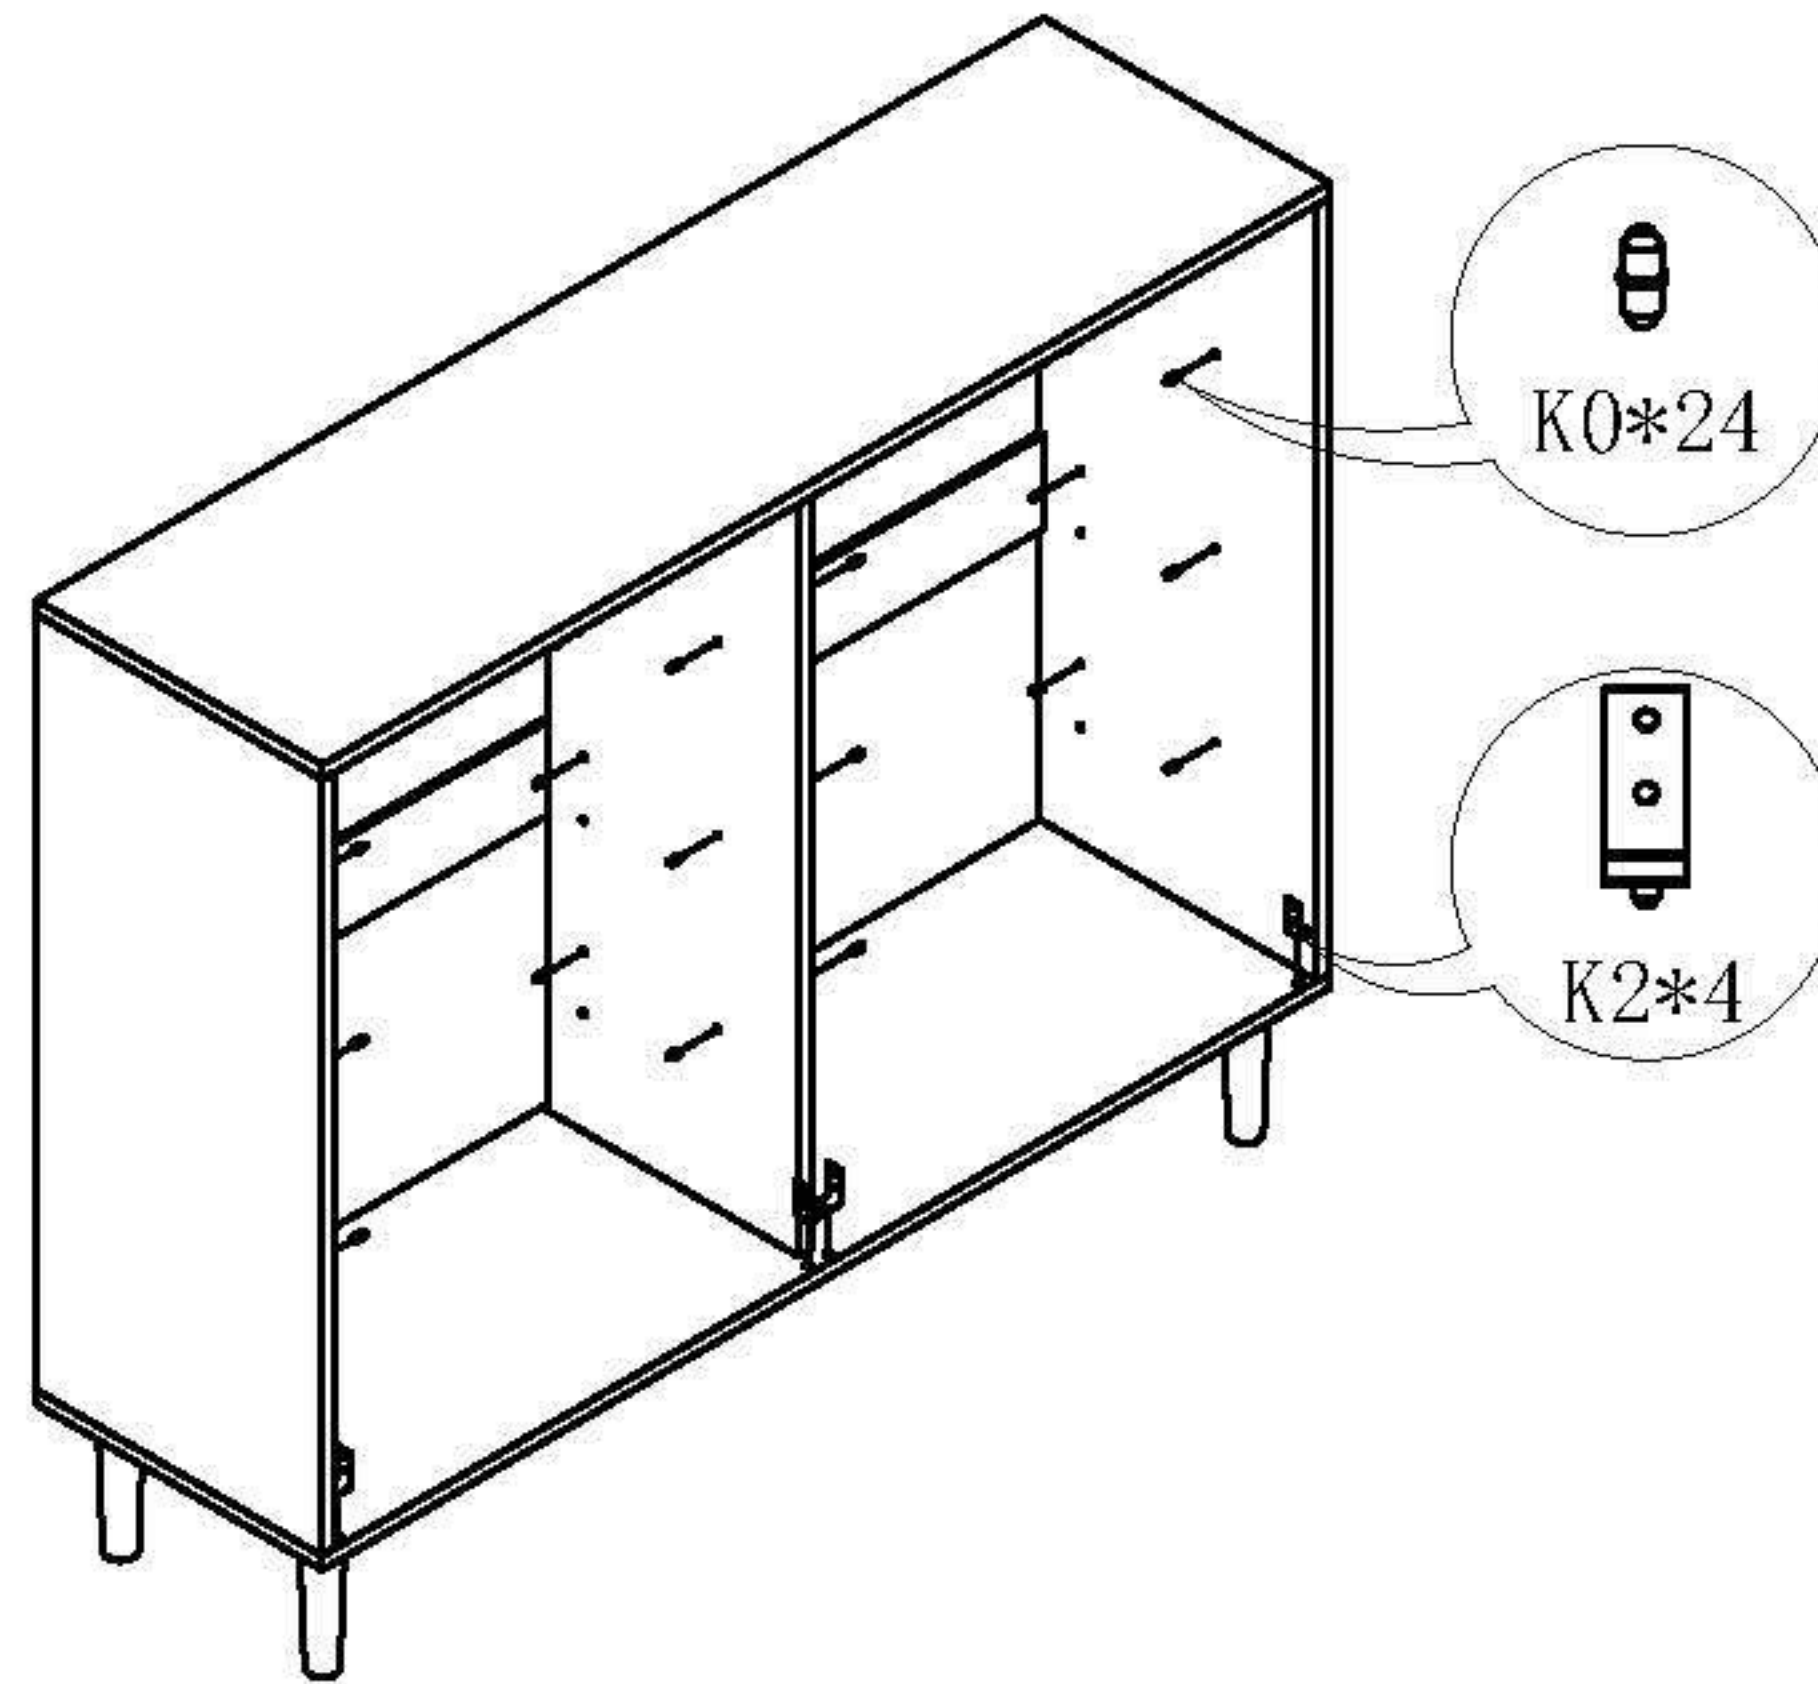

Step 10

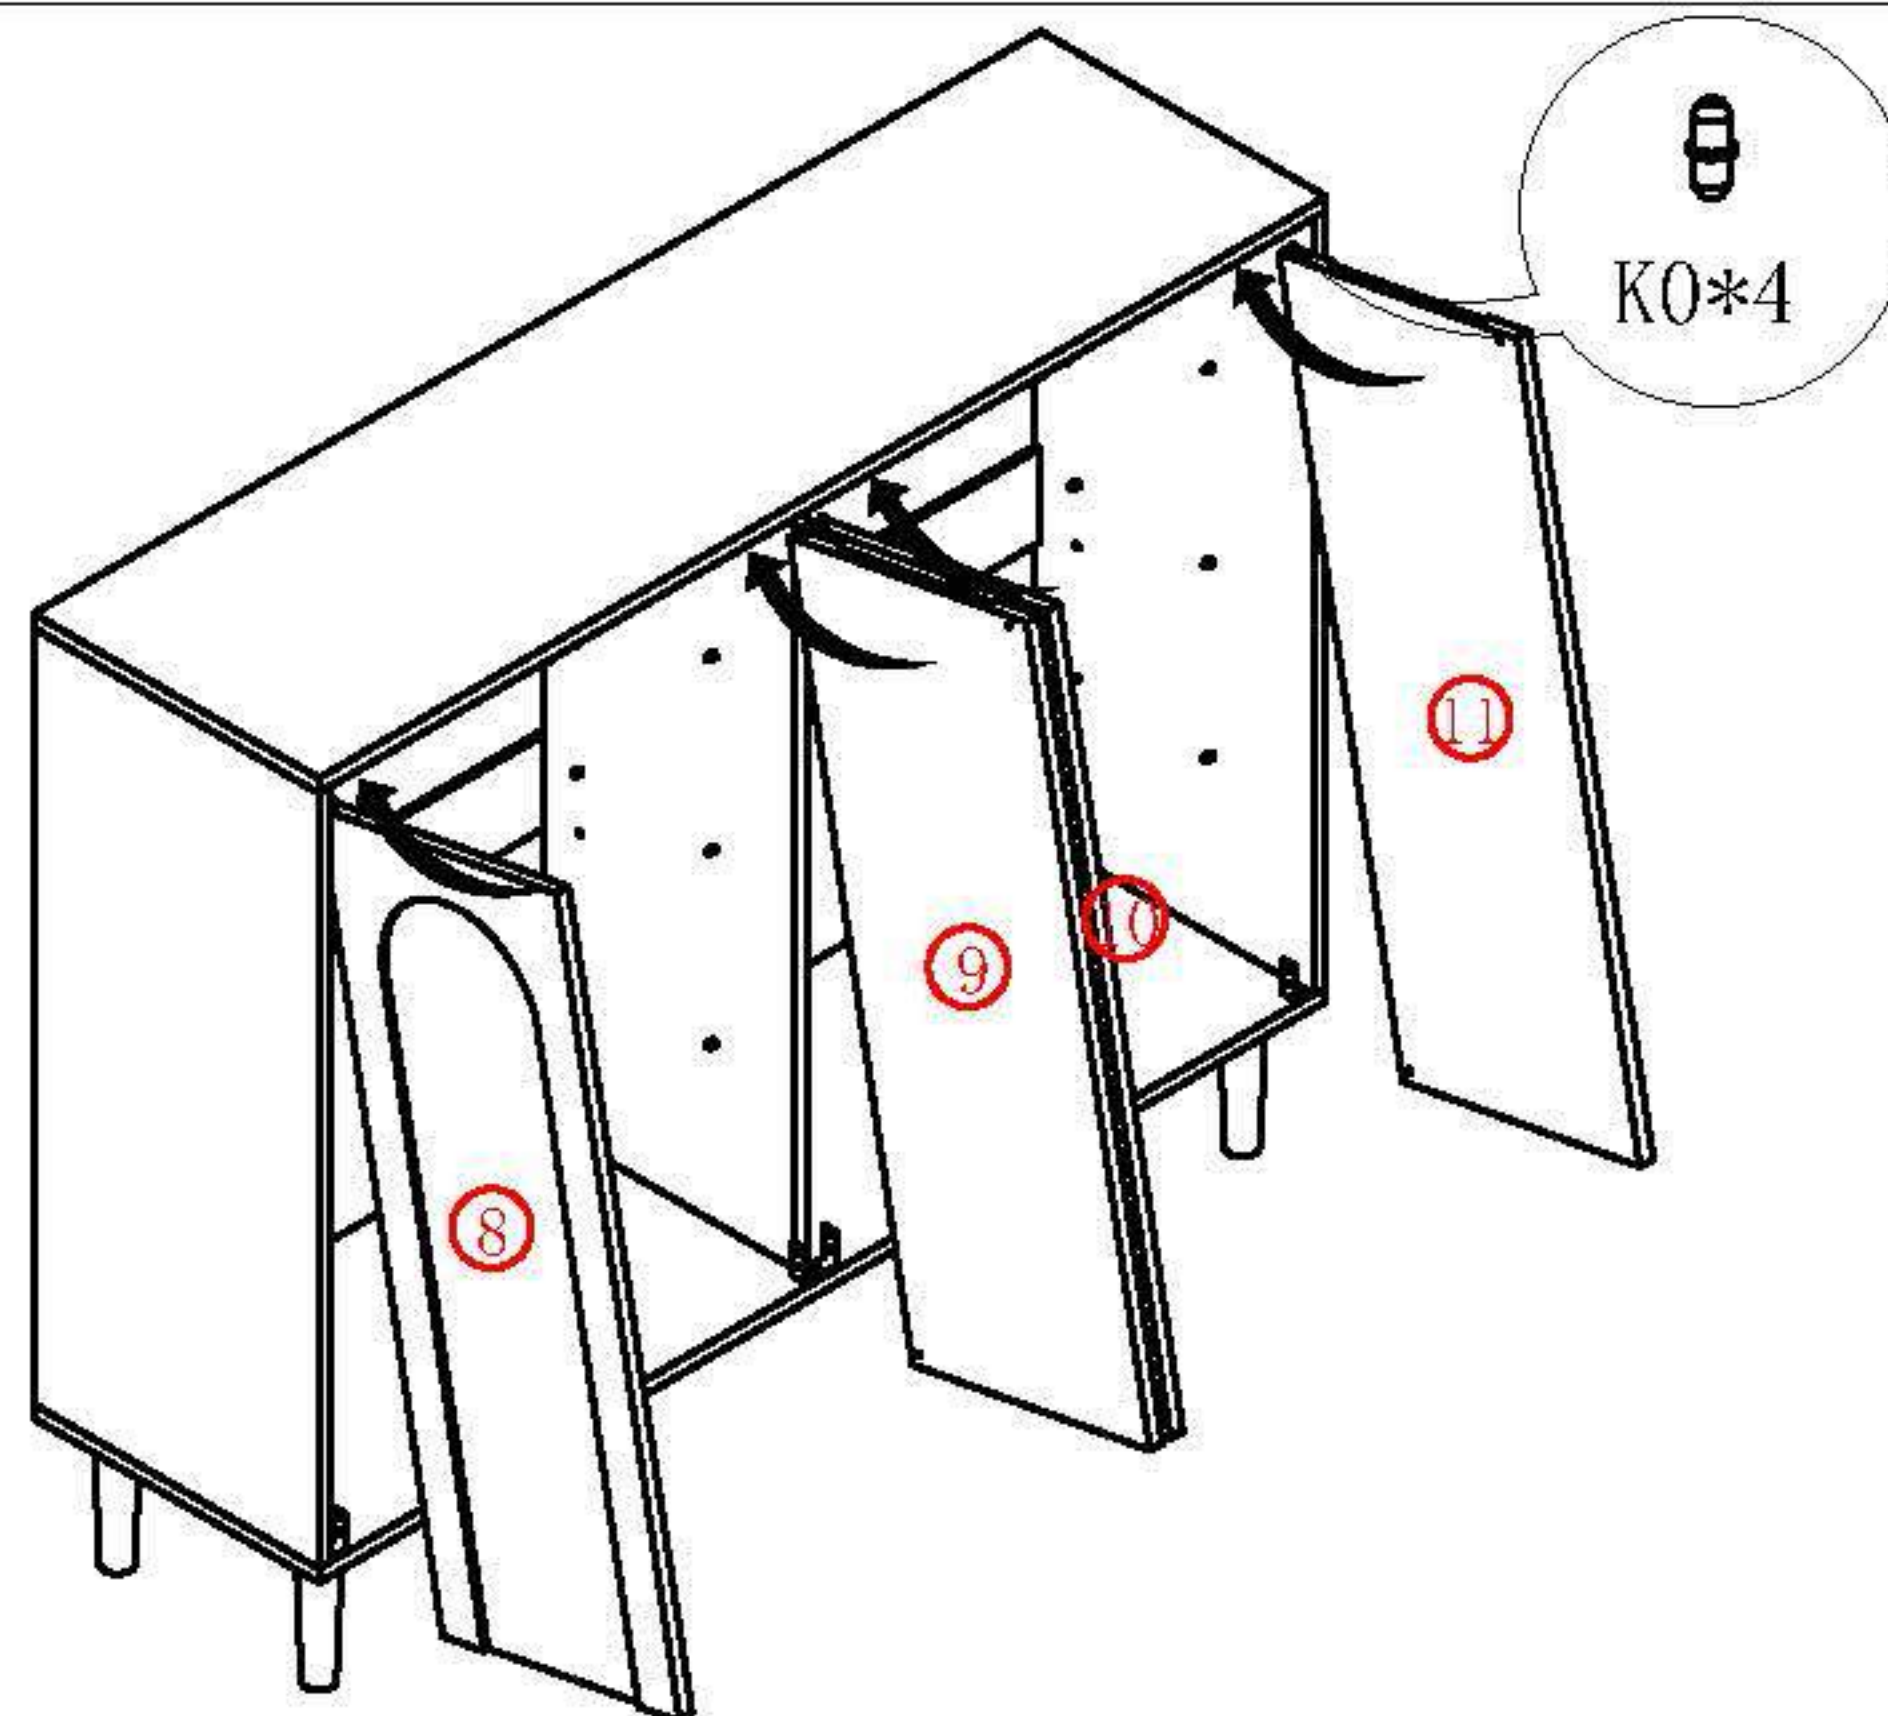

Step 11

