



CC019 Installation Instruction

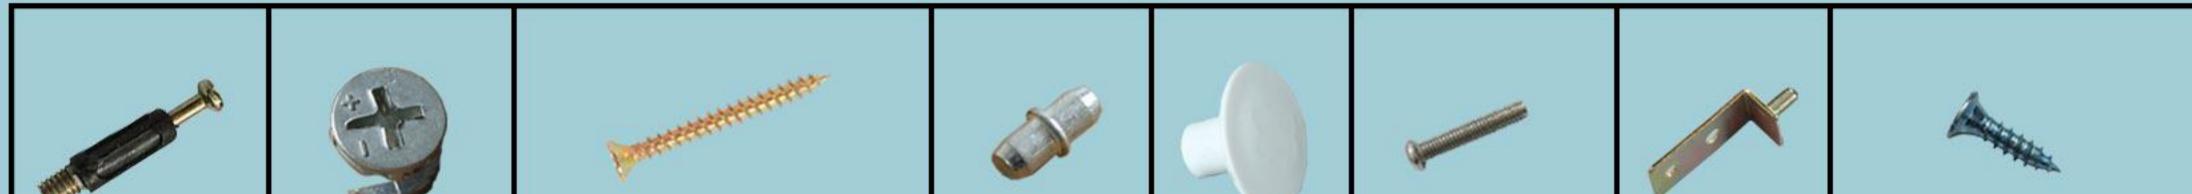


Eccentric Screw	Eccentric Bolt	3.5cm Selftapping Screw	Metal Pin	Handle	Handle Screw	Door hinge	Micro Self-Tapping Screw
A*12	B*12	C*33	D*1	E*1	F*1	G*1	H*2

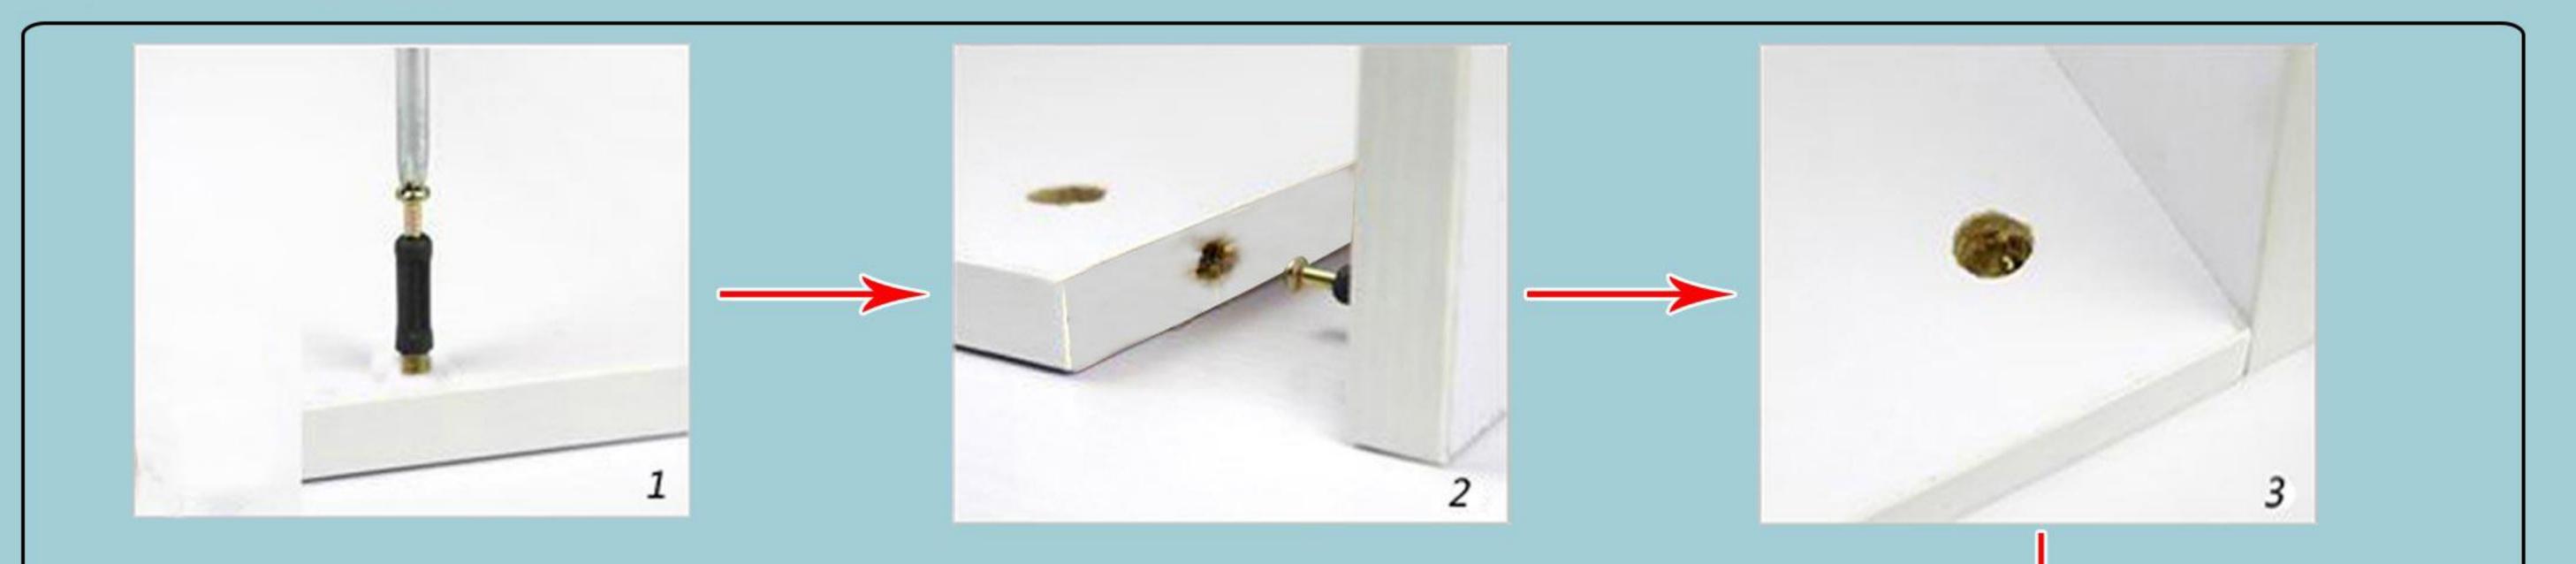


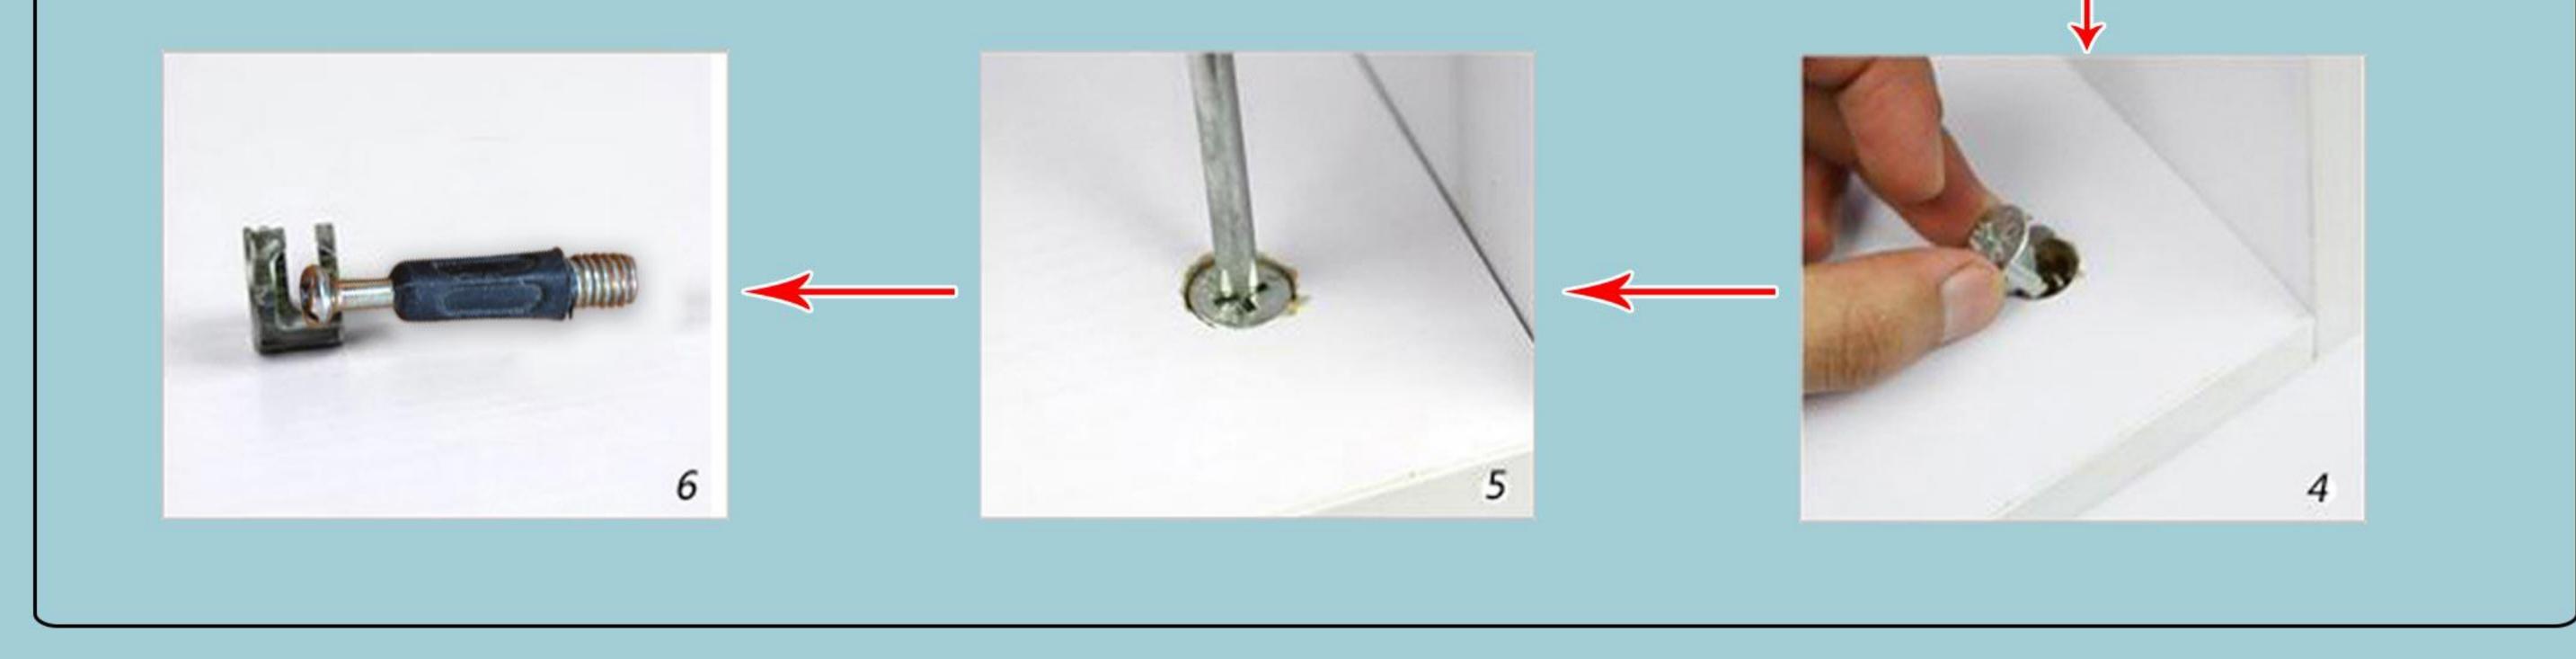


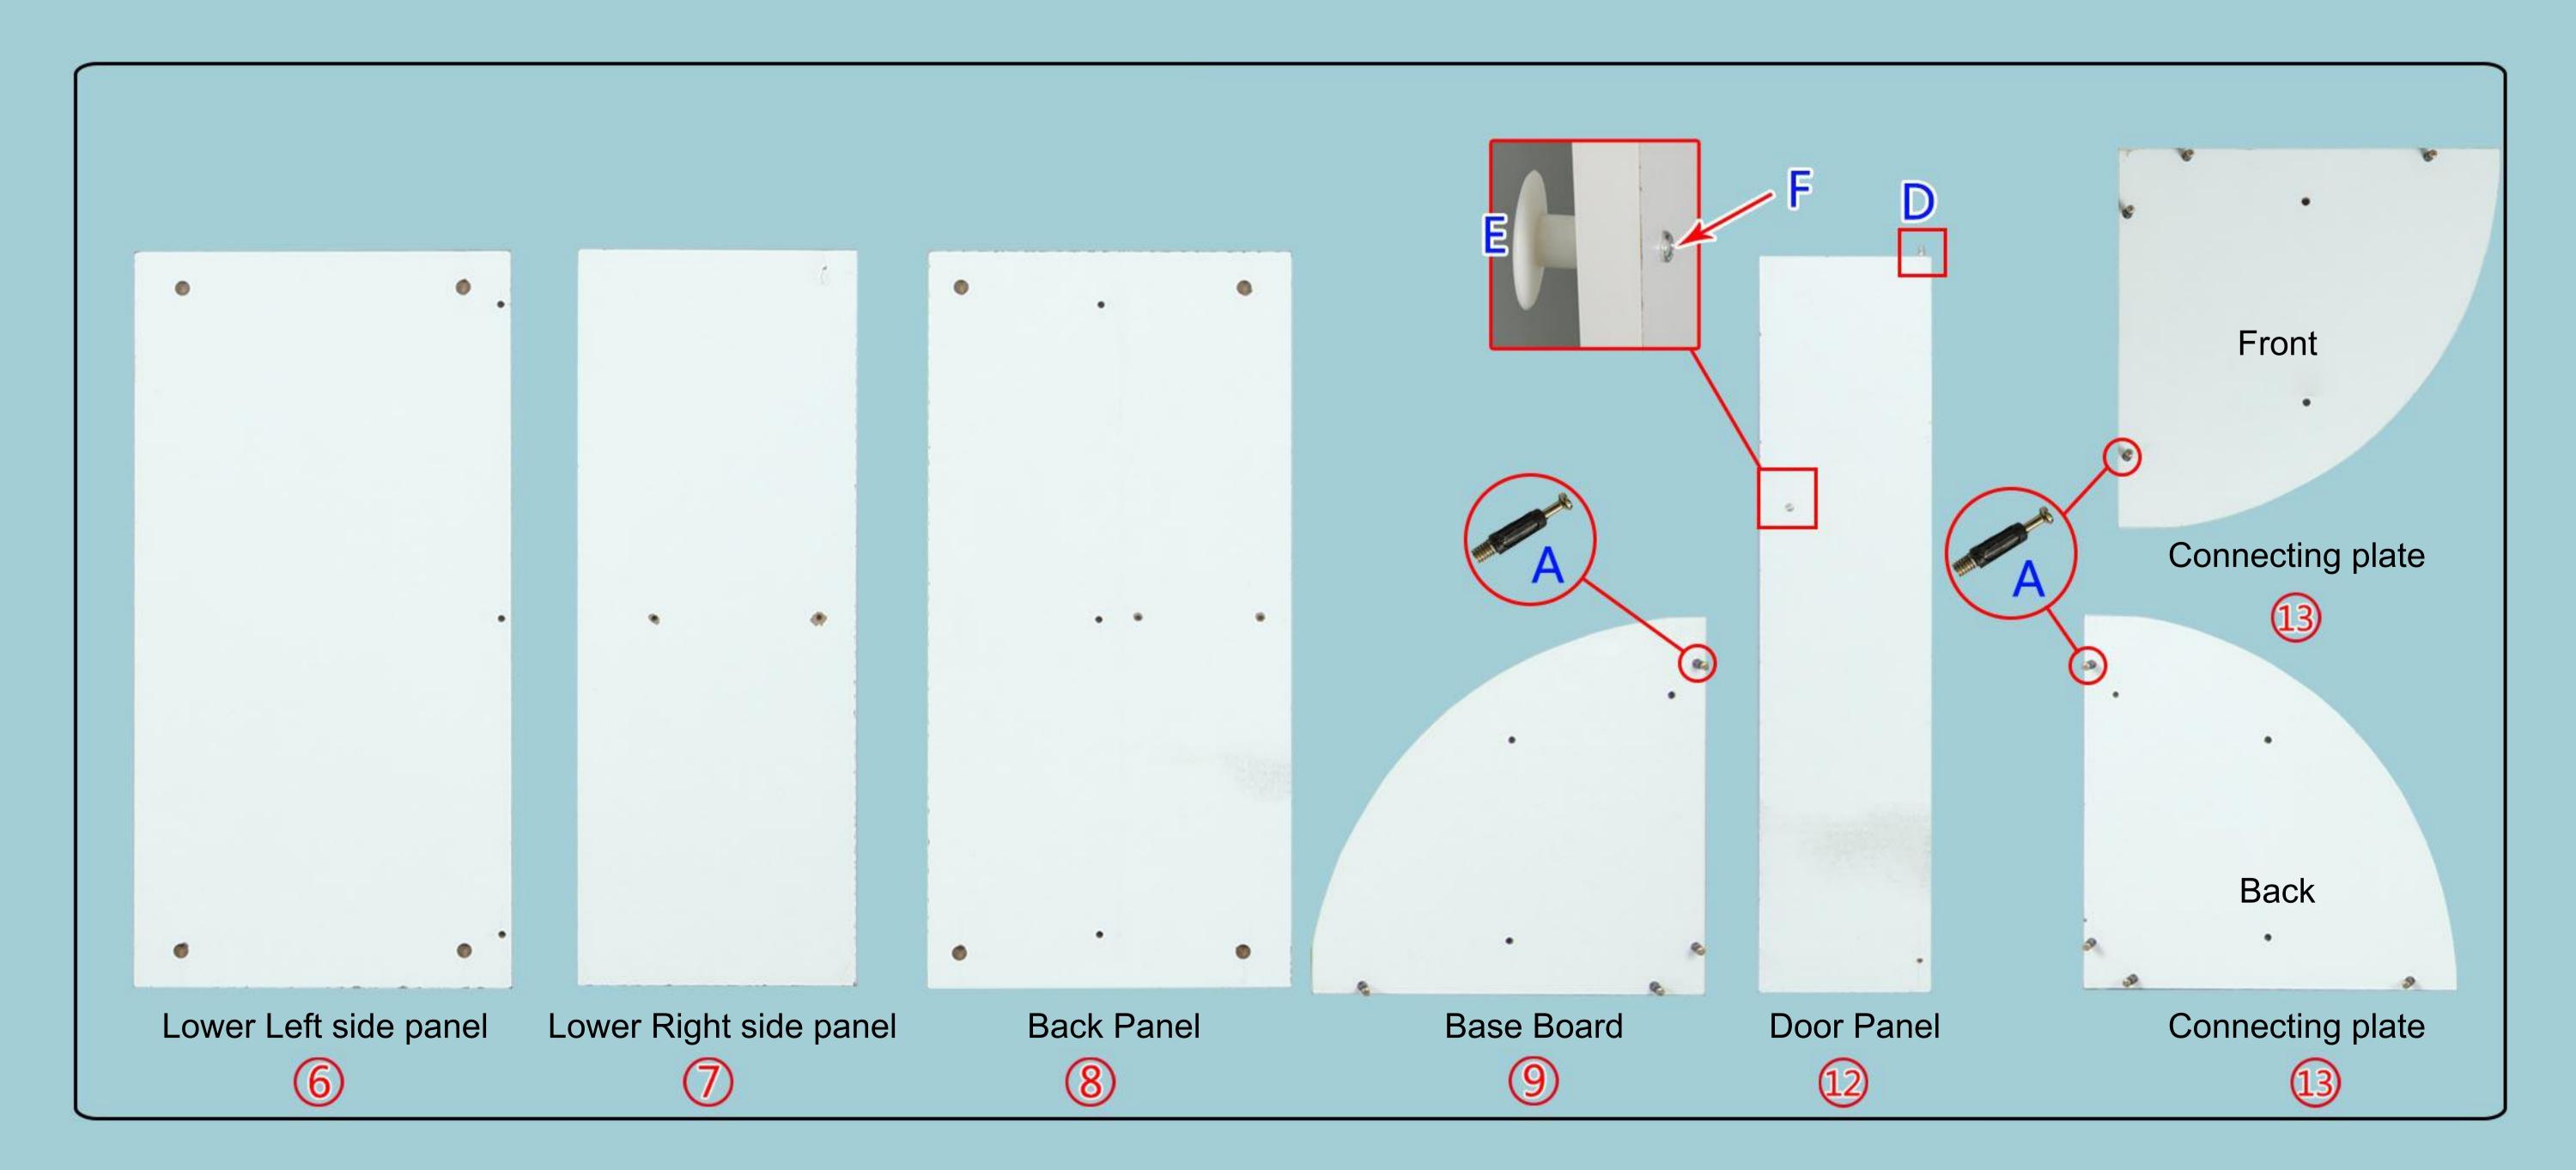


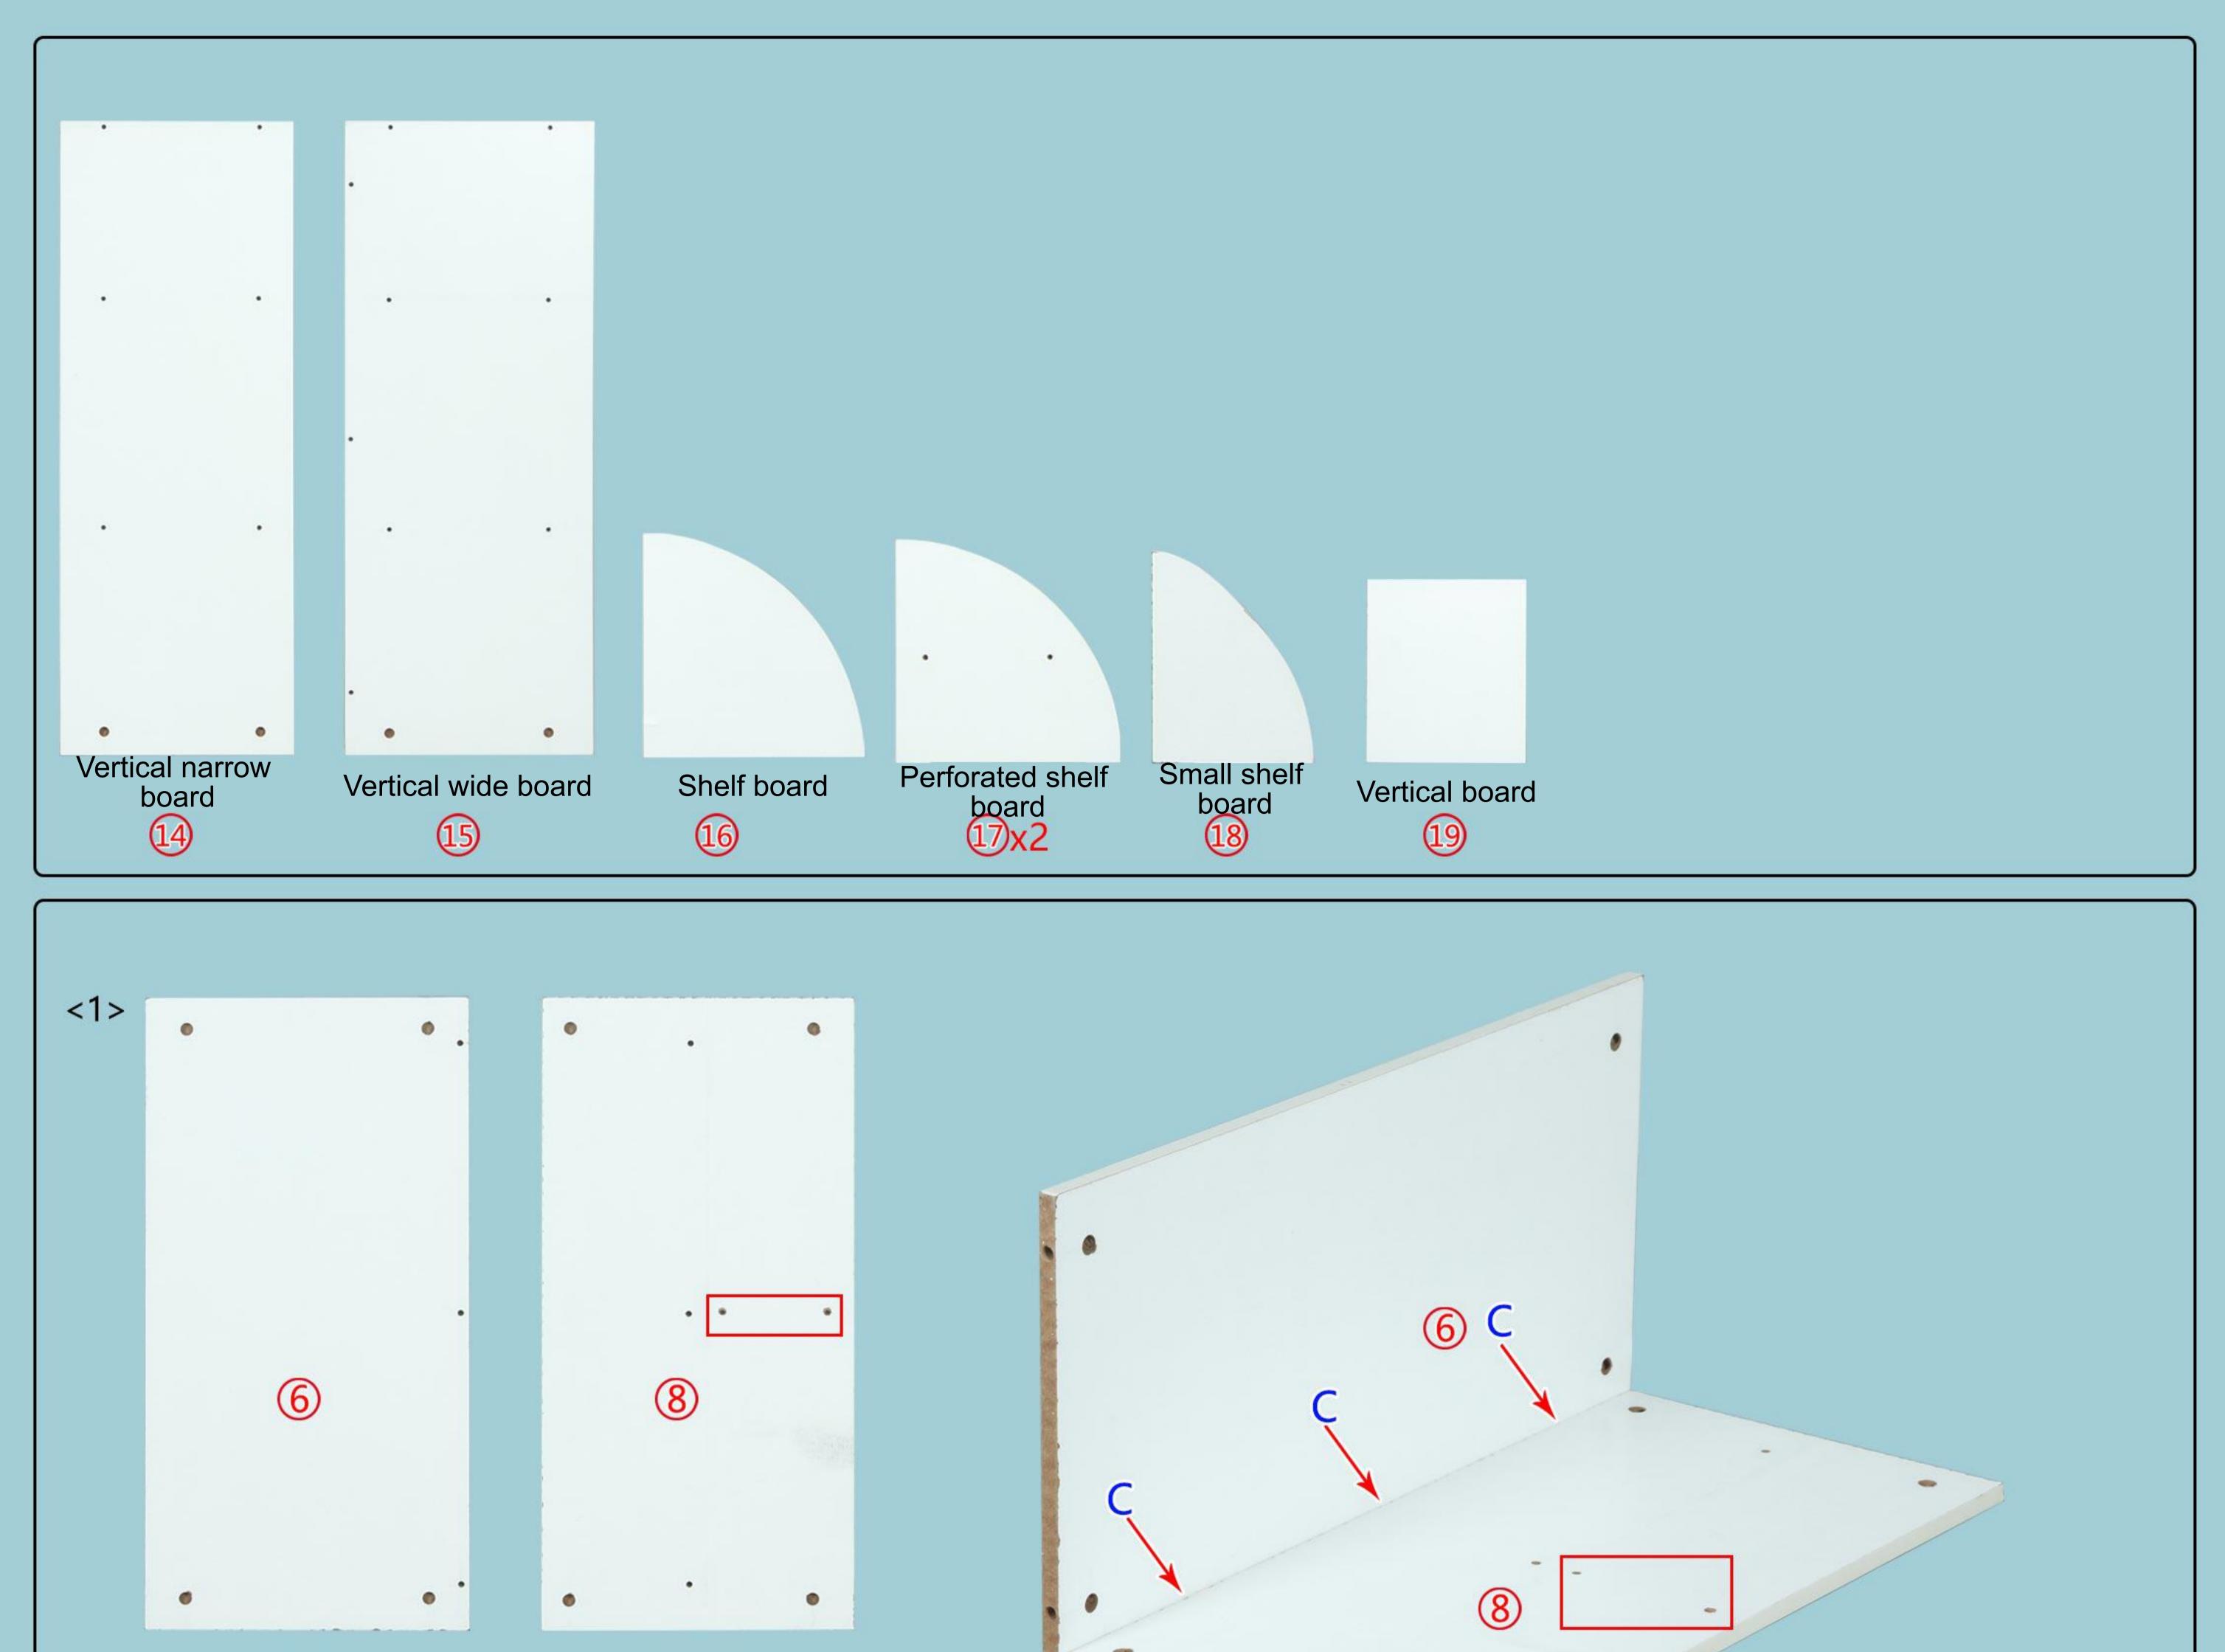





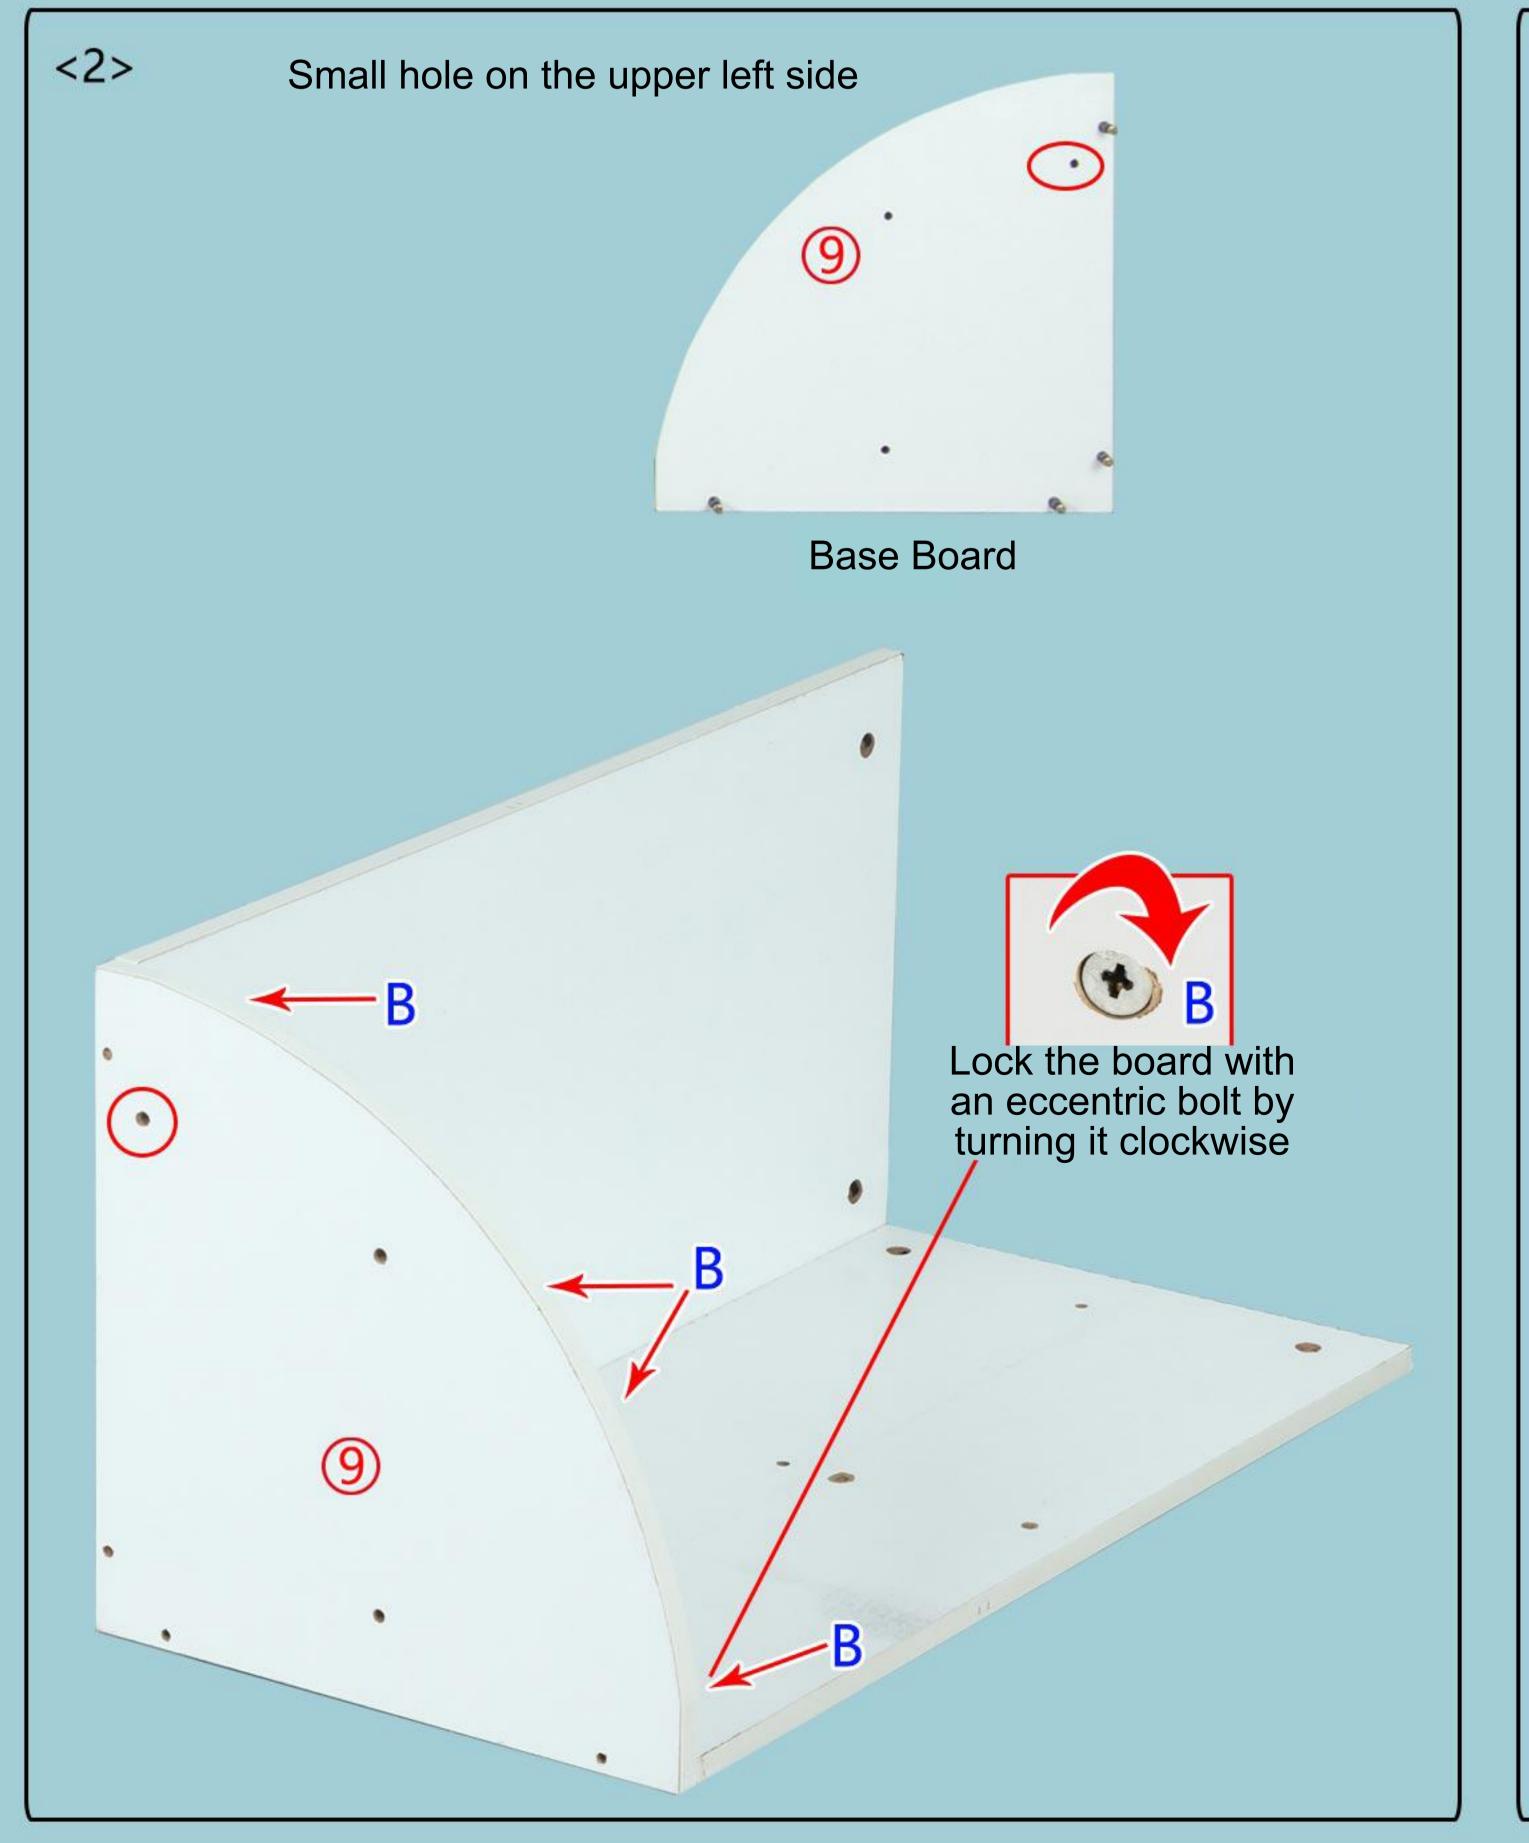


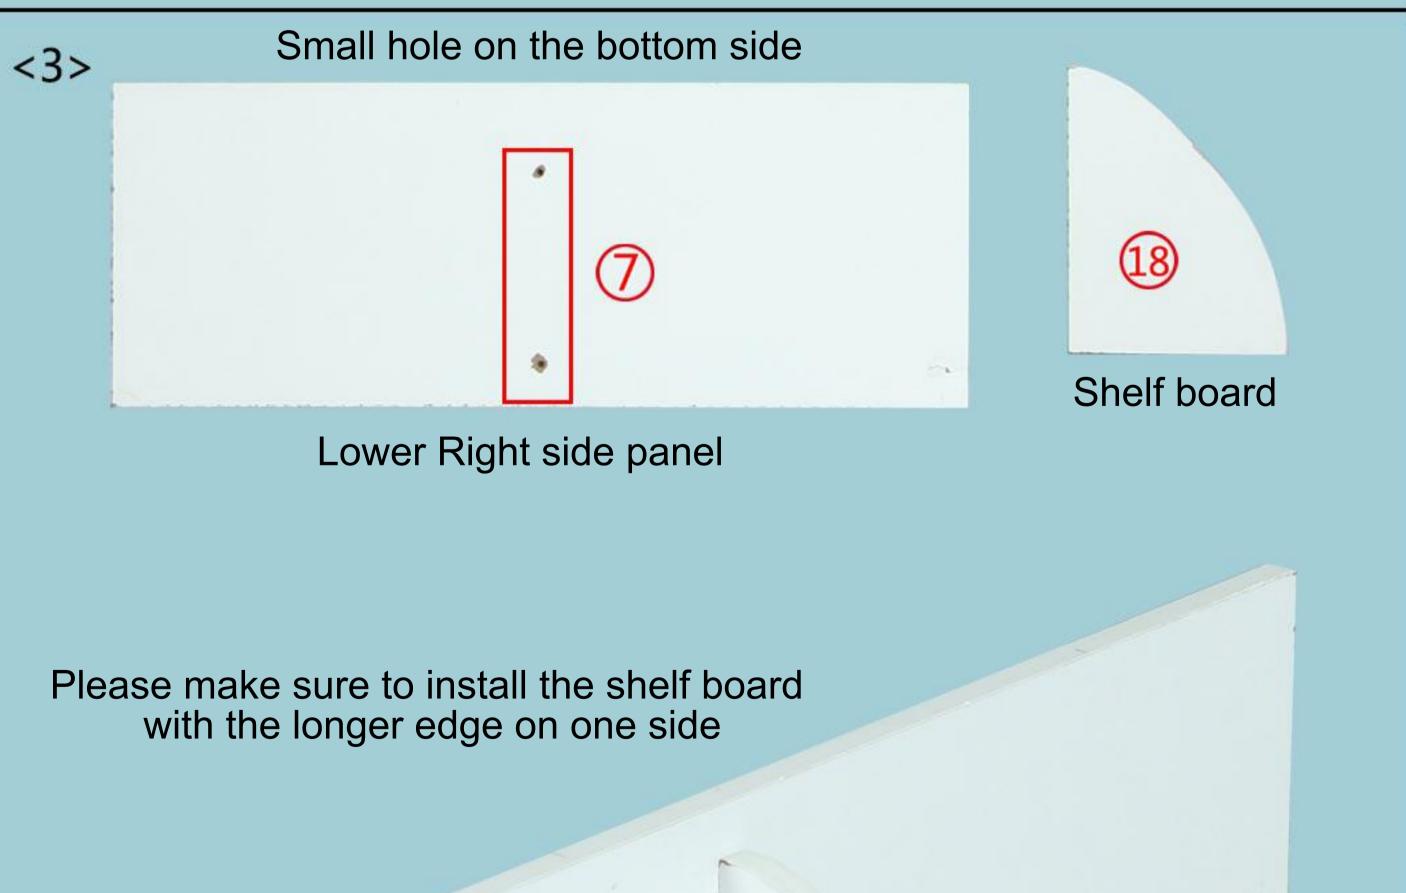


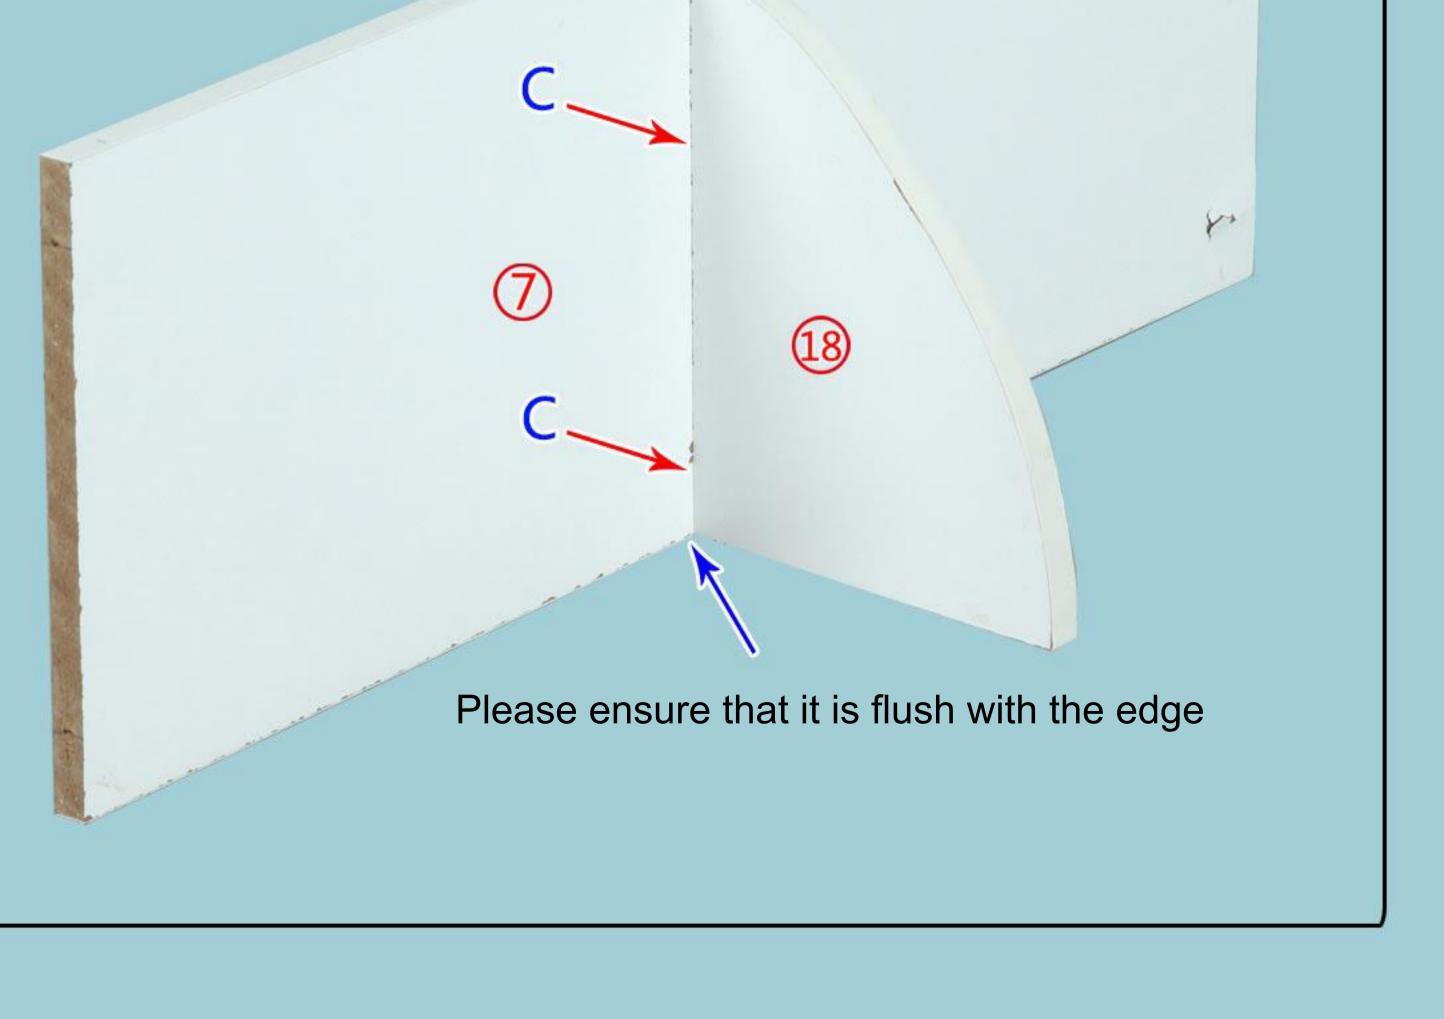

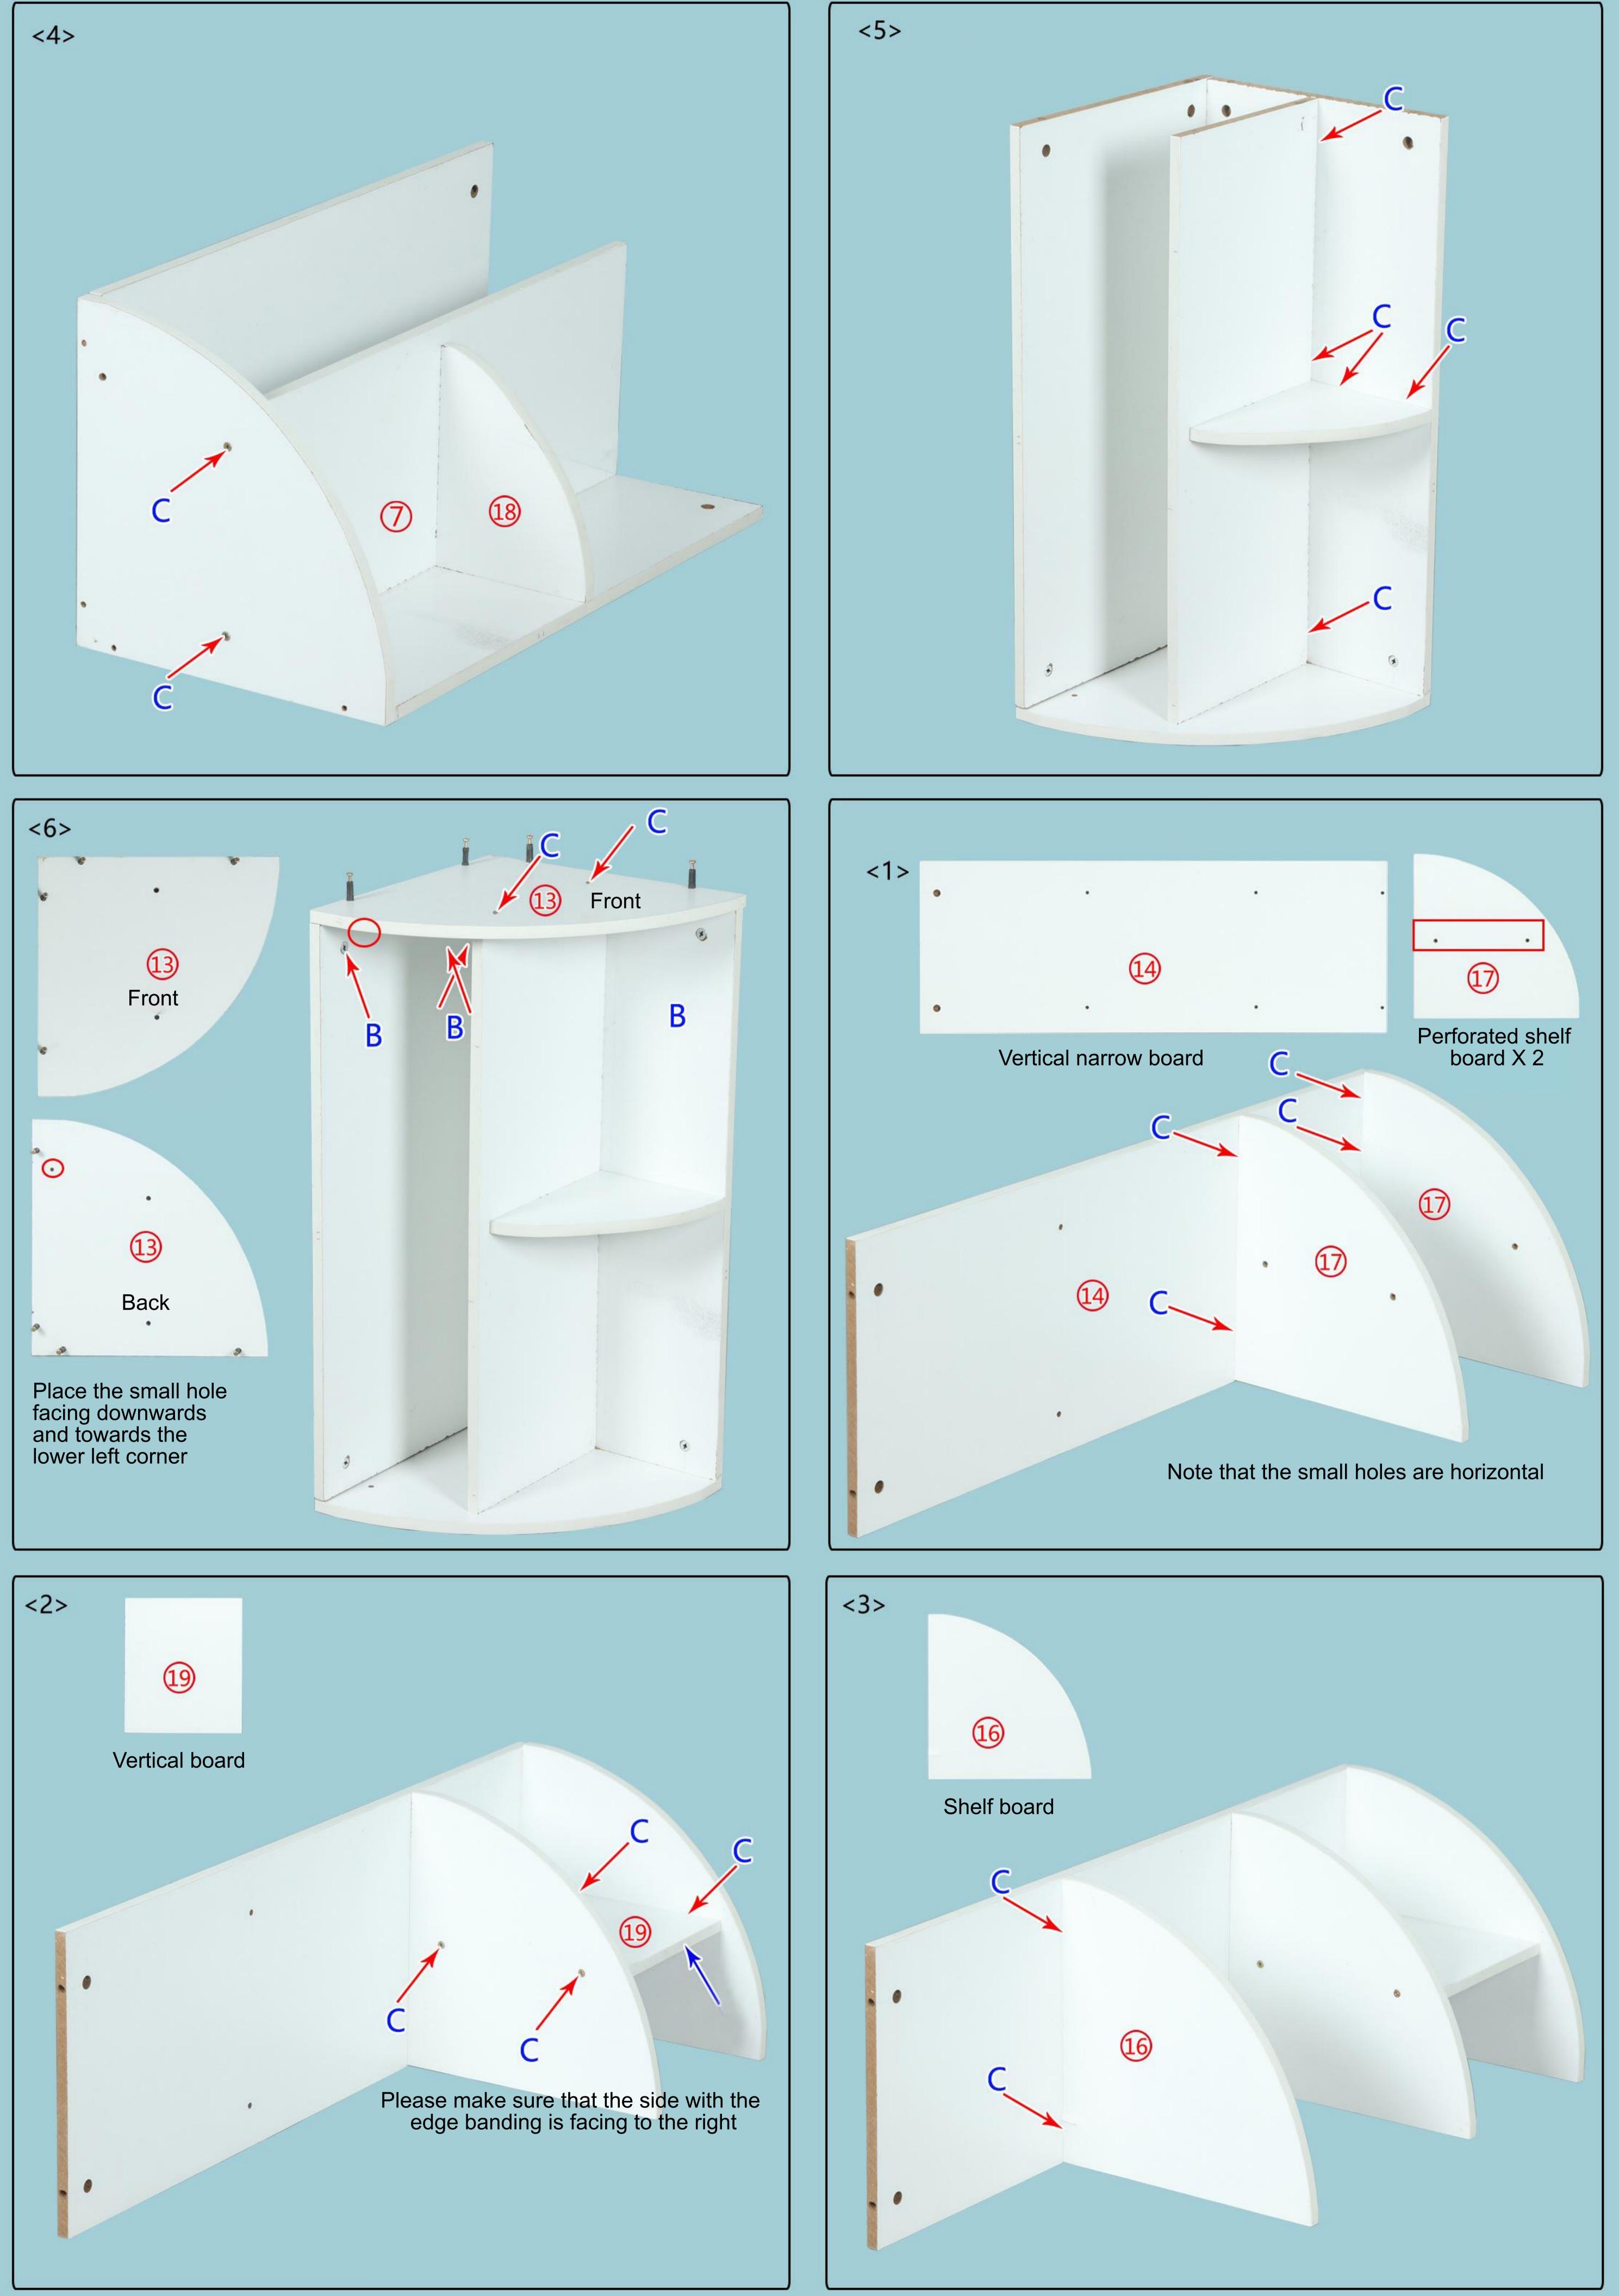

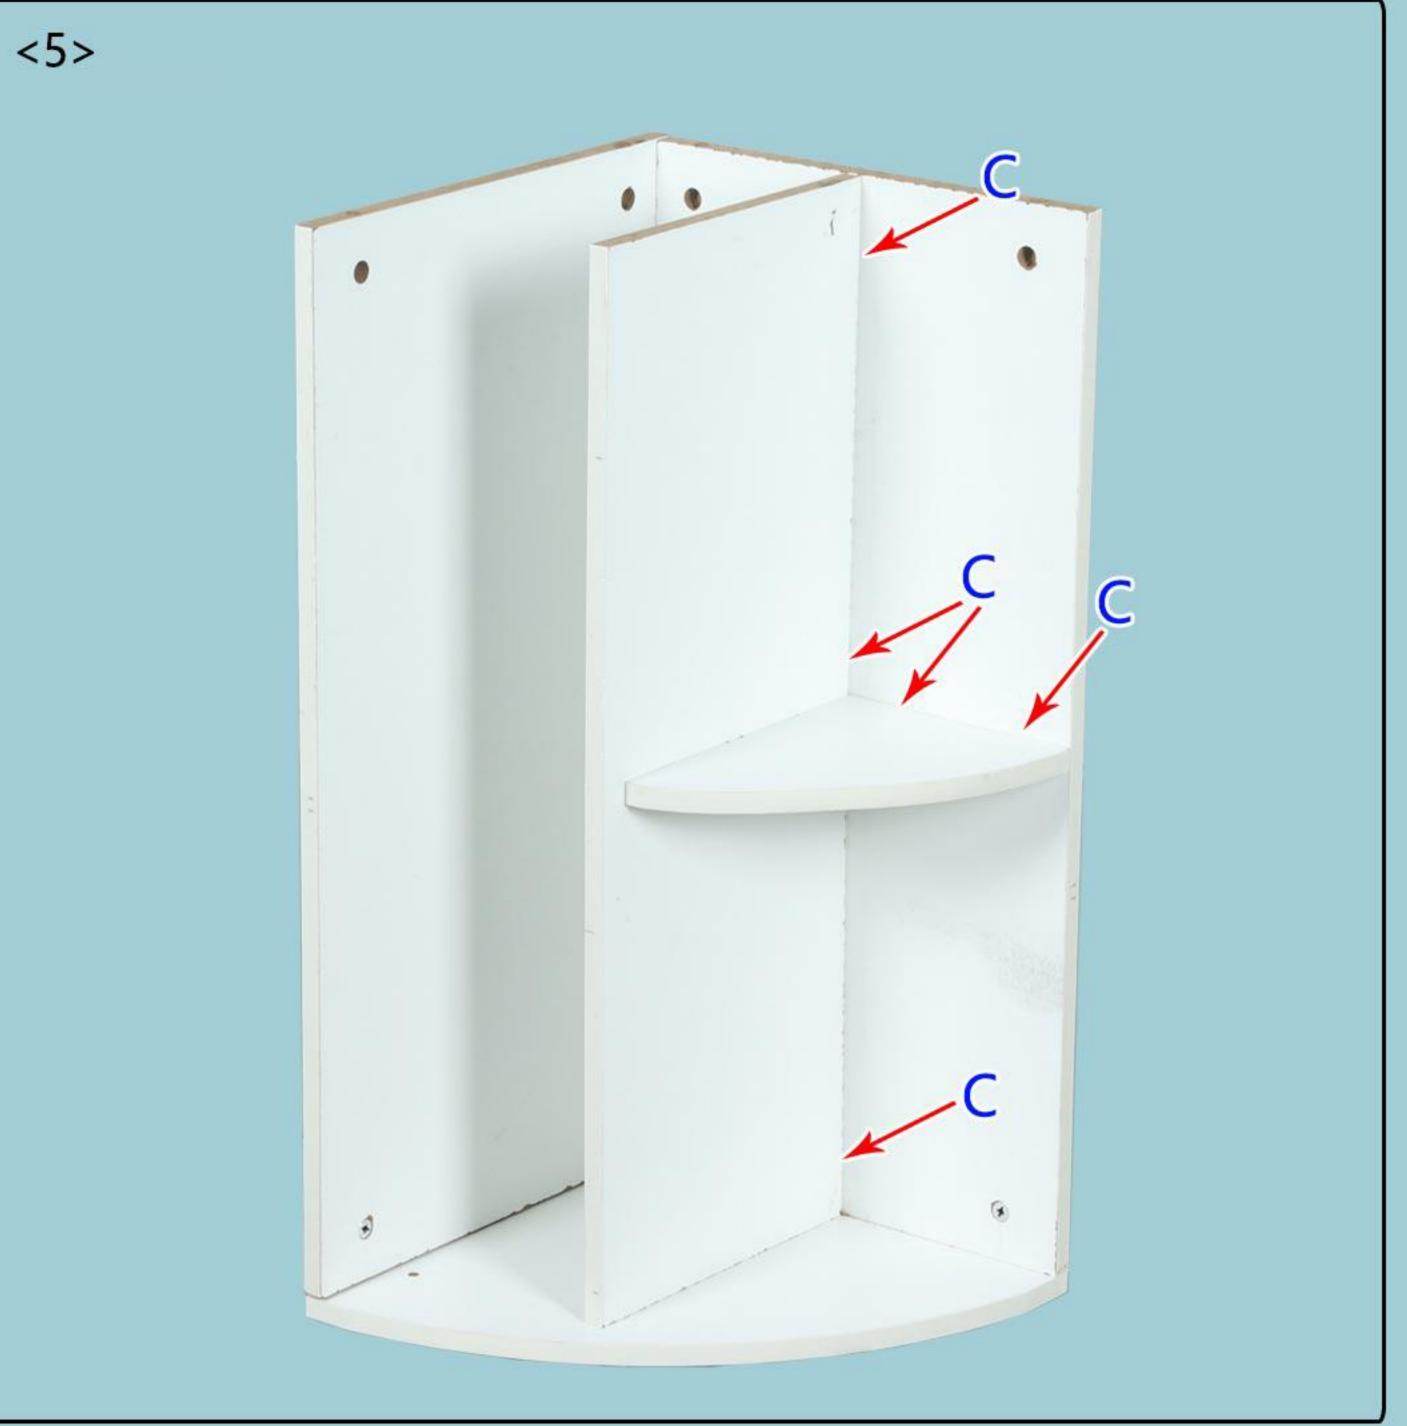

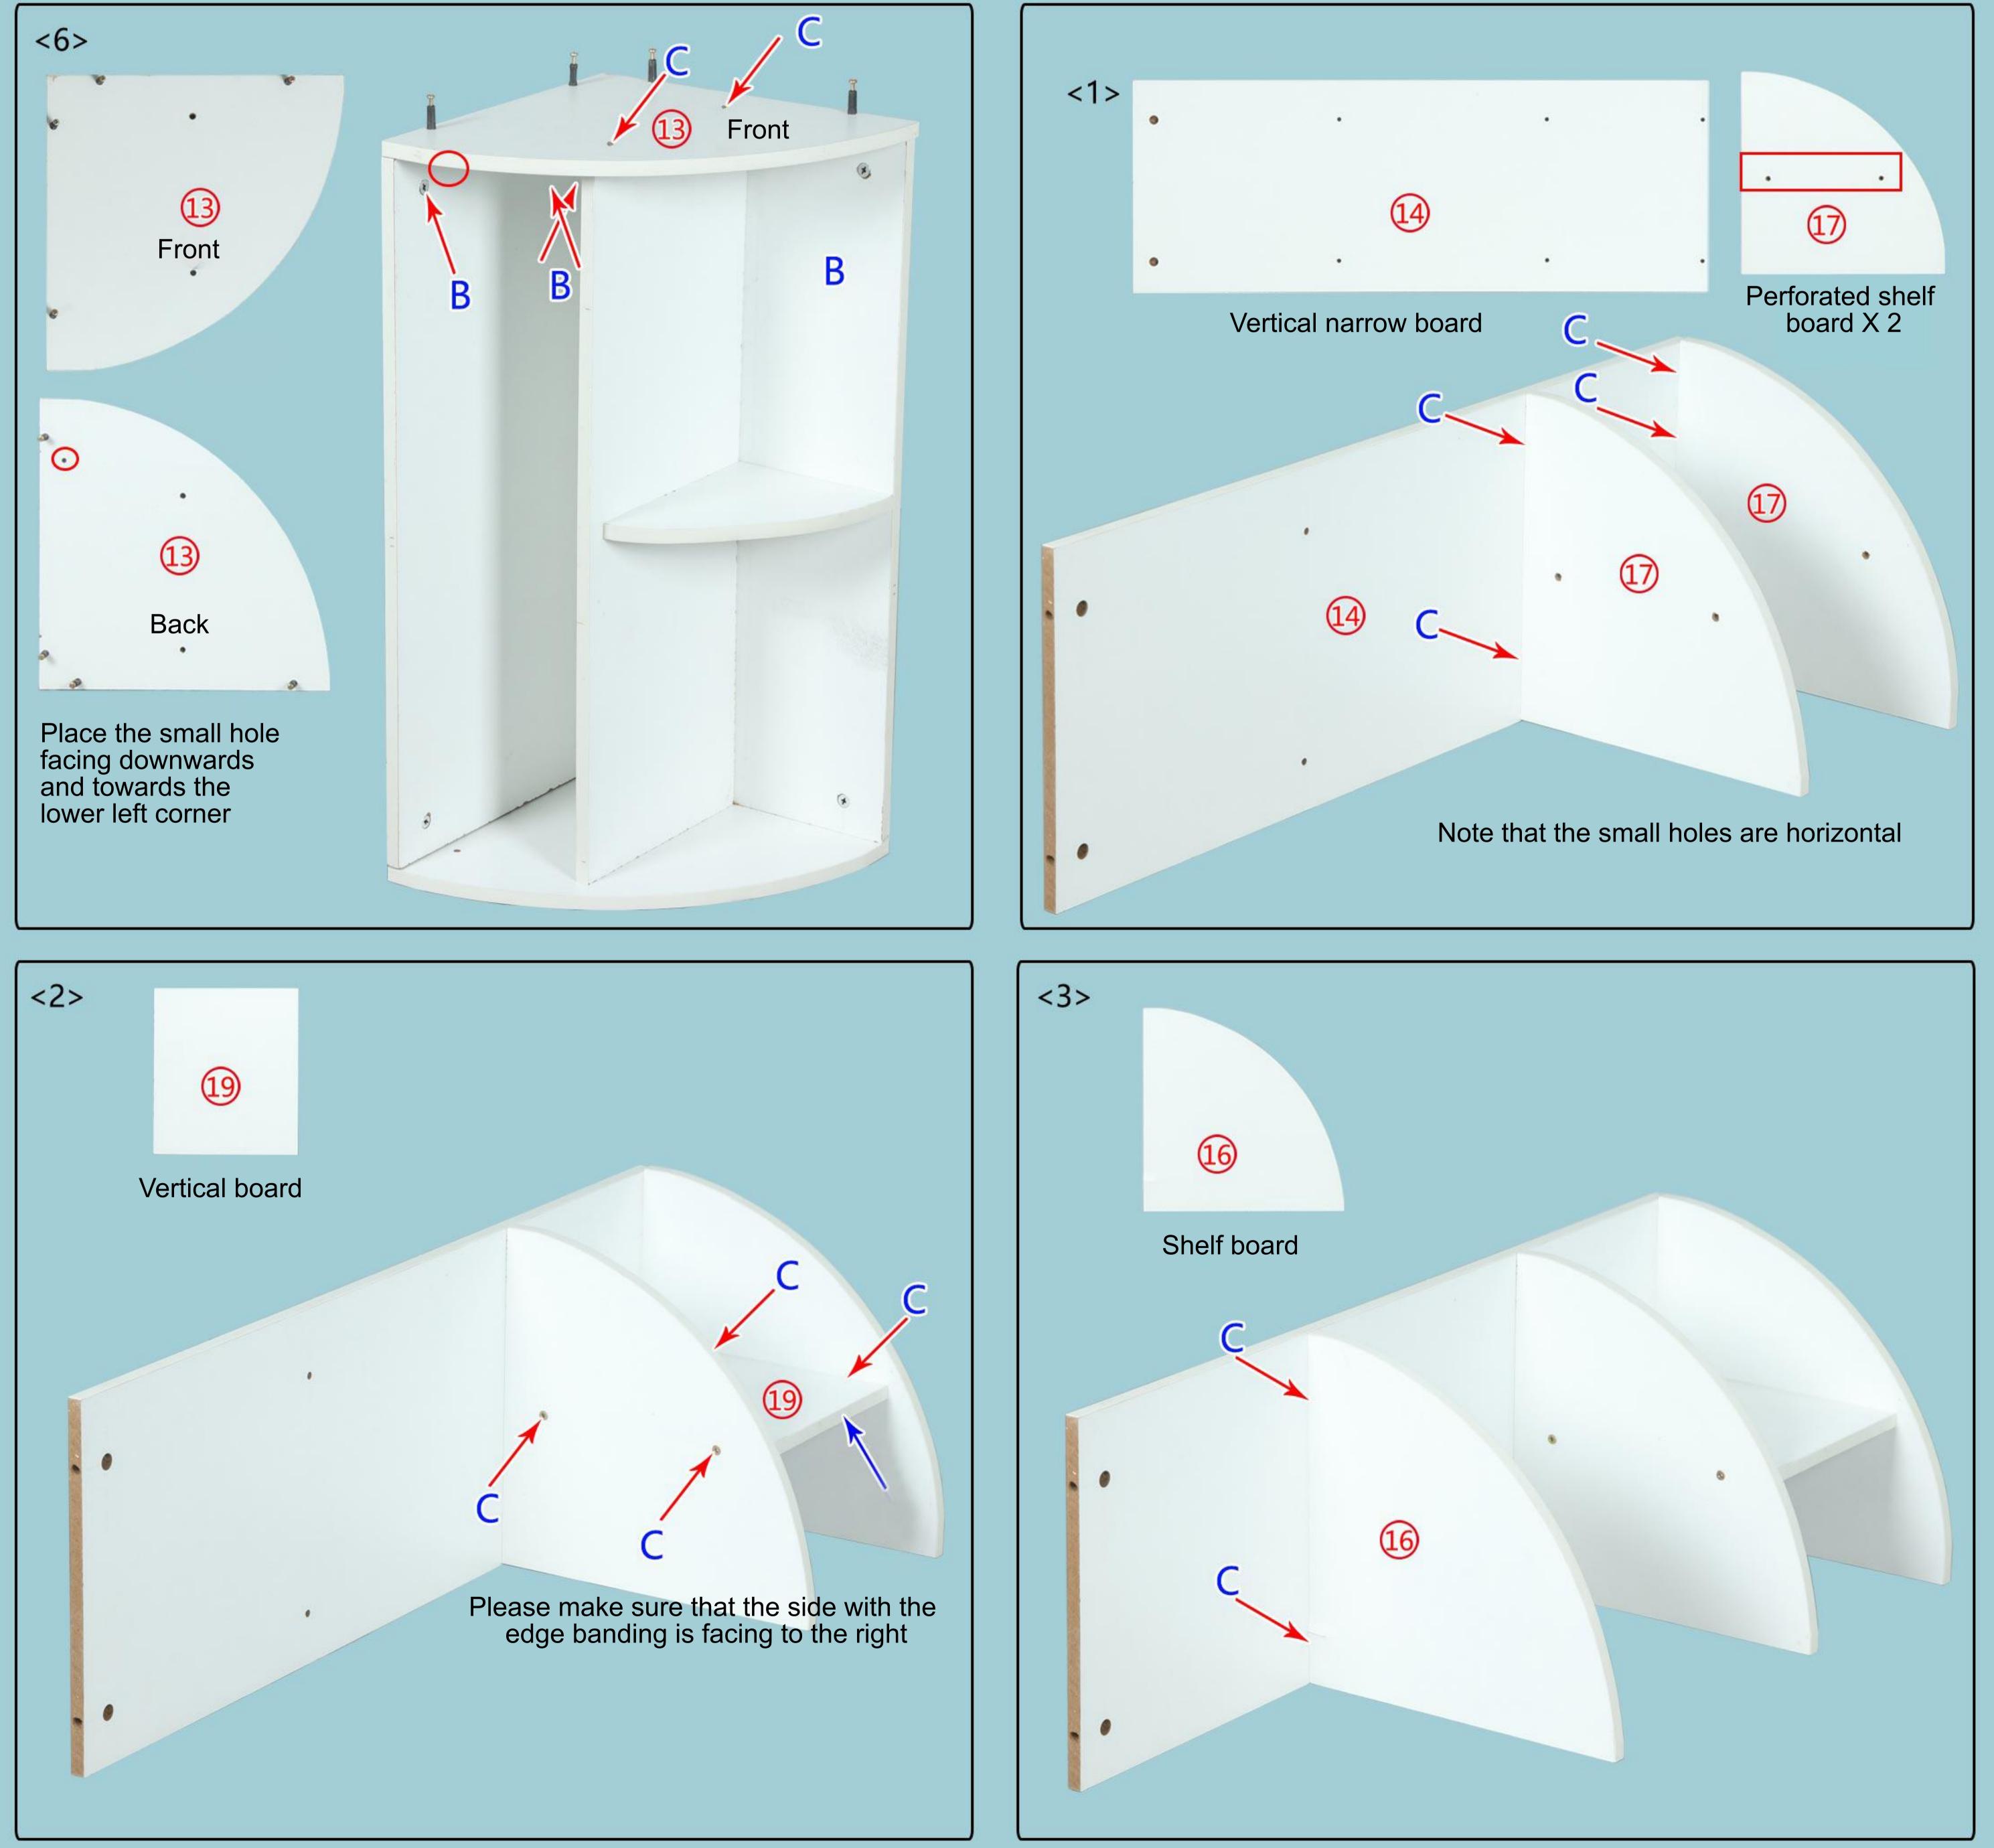

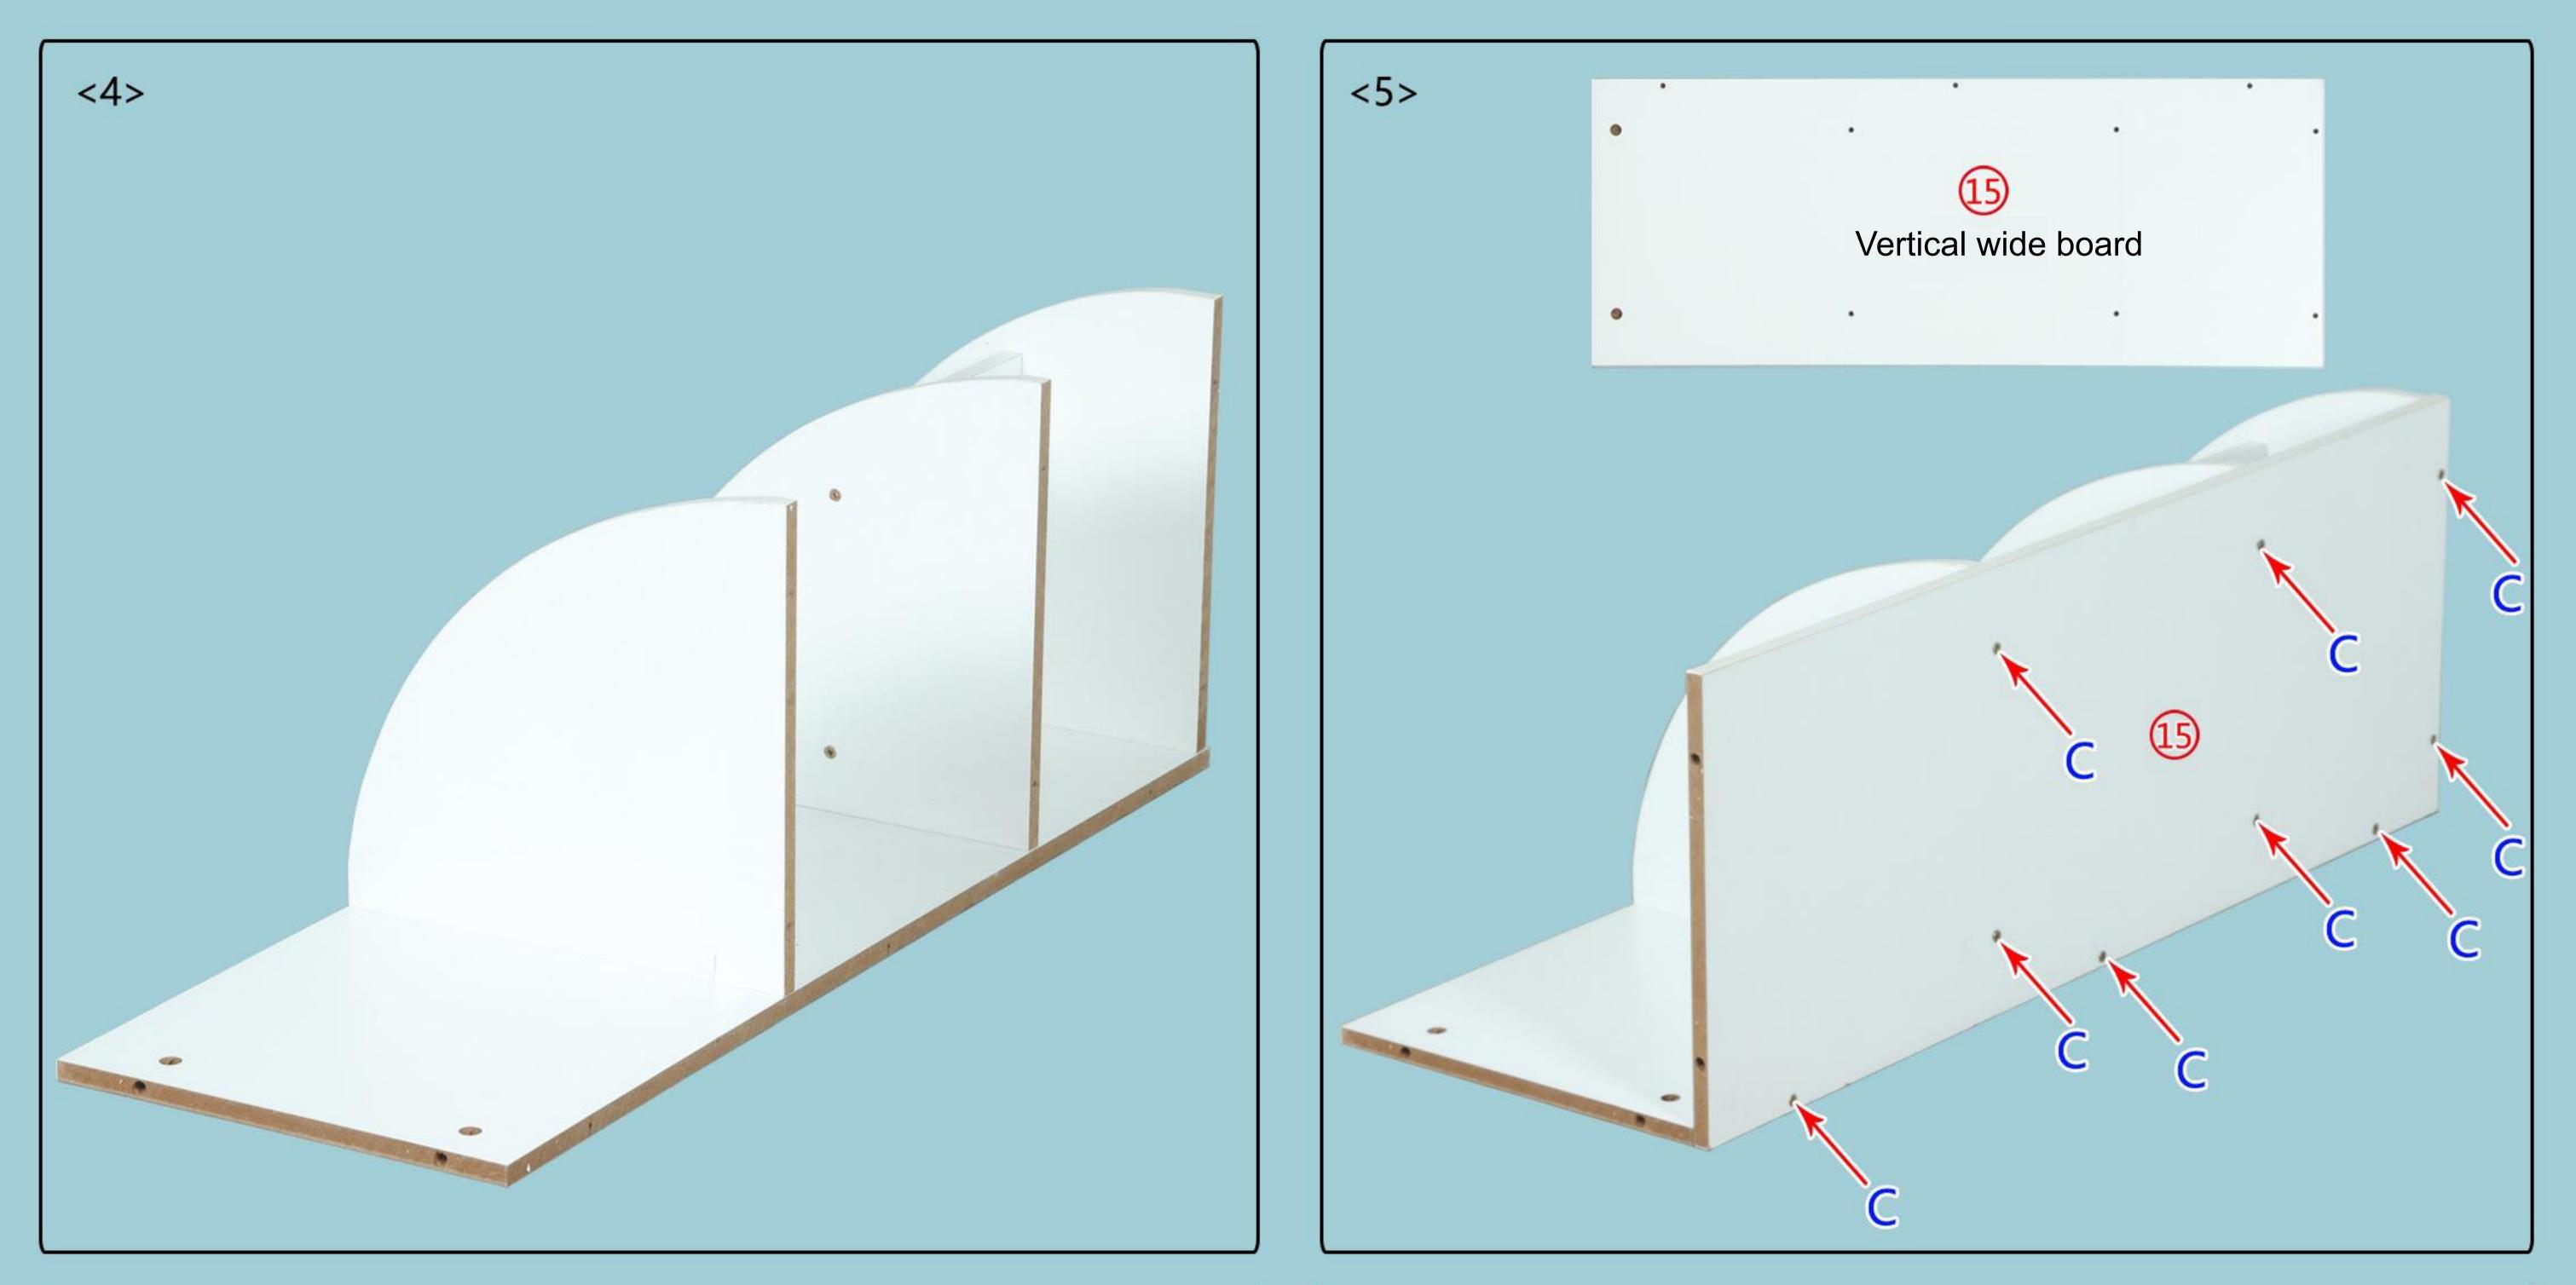

<1> Upper part B B B B



