

# WCK009 Installation Instruction

Please be sure to use a manual screwdriver and refrain from using an electric drill.



1. Product accessories and quantity (it is recommended to put more spare screws)

			
5*40 pointed screws	M6 flange nut	6*10 flat head screws	6*25 flat head screws
C1*22 (Contains 2 spares)	H2*6 (includes 1 spare)	E0*2 (includes 1 spare)	E4*5 (includes 1 spare)
			
Universal wheel with brake thread	wrench		screwdriver
16*2	1		1
			
Universal wheel without brake thread			
17*2			

## Kind tips:

1. When installing, please refer to the drawings to distinguish the boards.

The color of the product is not subject to the instructions;

2. Tighten the screws 70%, and then tighten them after everything is completed!

3. Some boards have a red side, and the red side faces down or inward.

4. Please read all the drawings before proceeding with installation.

5. If there are extra screw accessories, they are spare screws provided by the manufacturer!

## 2. Start the installation: overall and partial installation


<1>



② Side steel frame



① Laminate

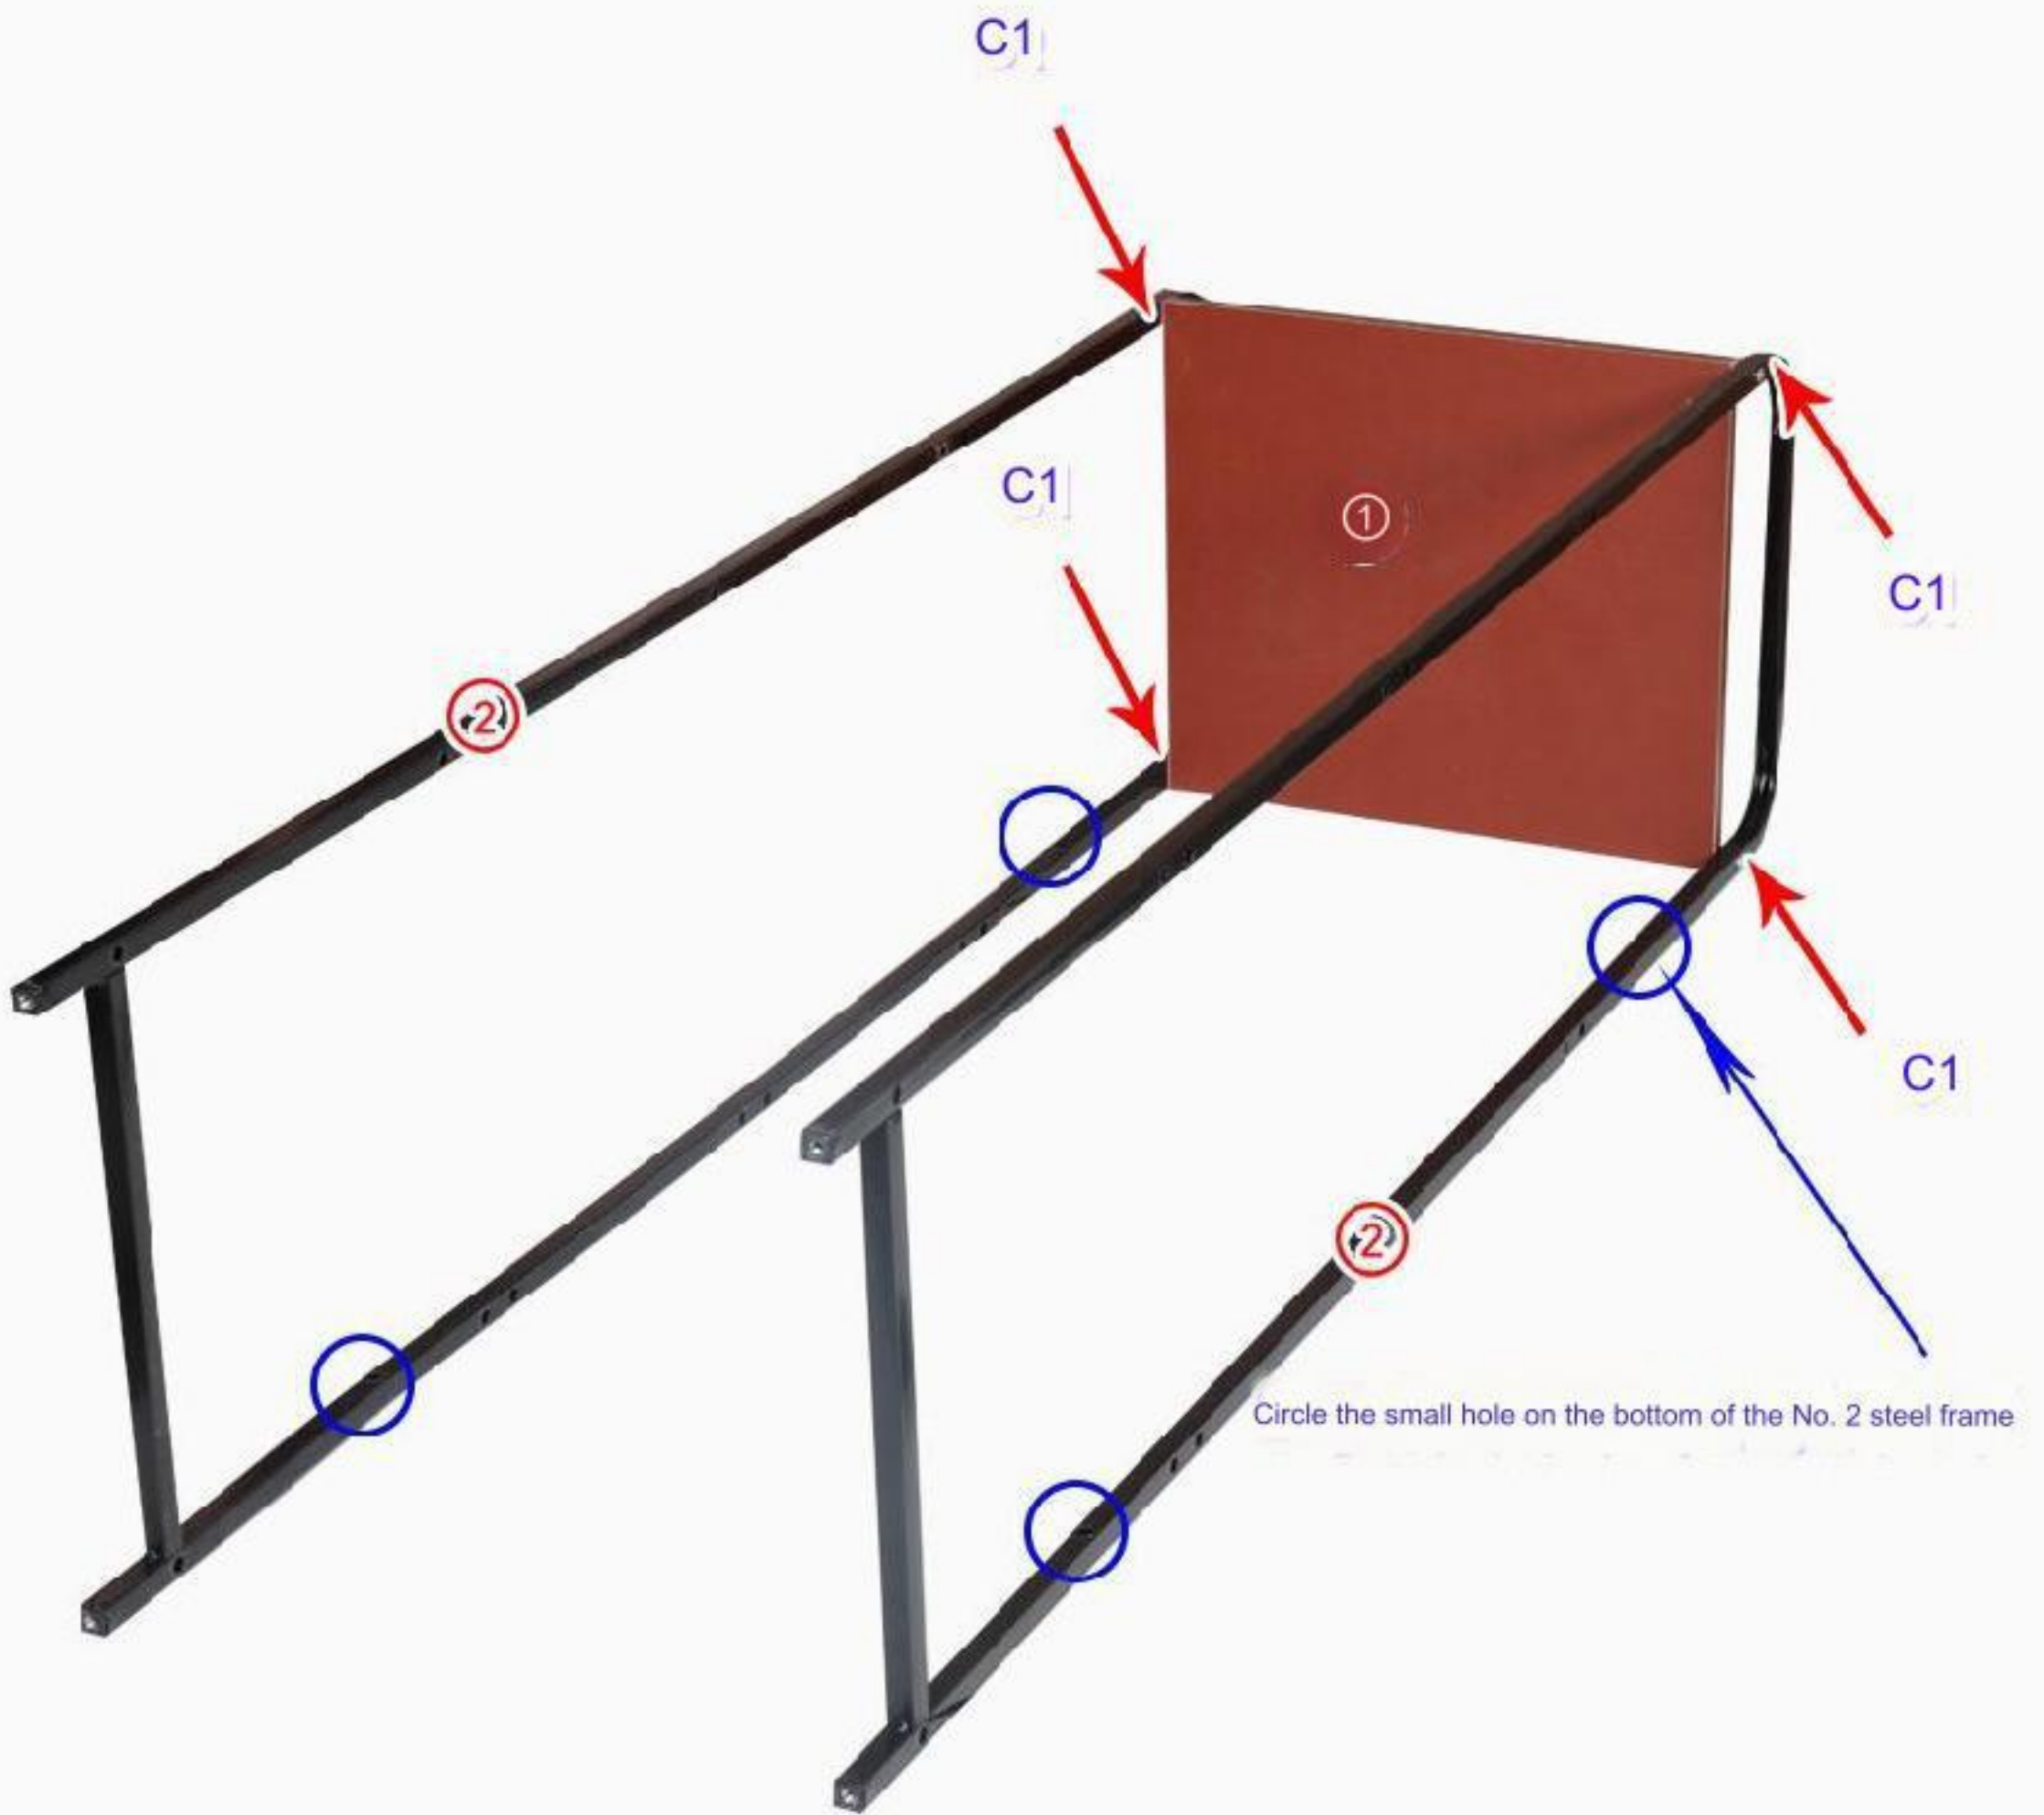

<2>

Install the remaining board No. 1 in the same way.



①Laminate



### Whole flip




		
M6 flange nut	6*10 flat-head-screws	6*25 flat head screws
H2*5	EO*1	E4*4




3 Lajin

The grooves of No. 3 tie bars are opposite and fixed with EO and H2.

Fix No. 3 tie bars with E4 and H2

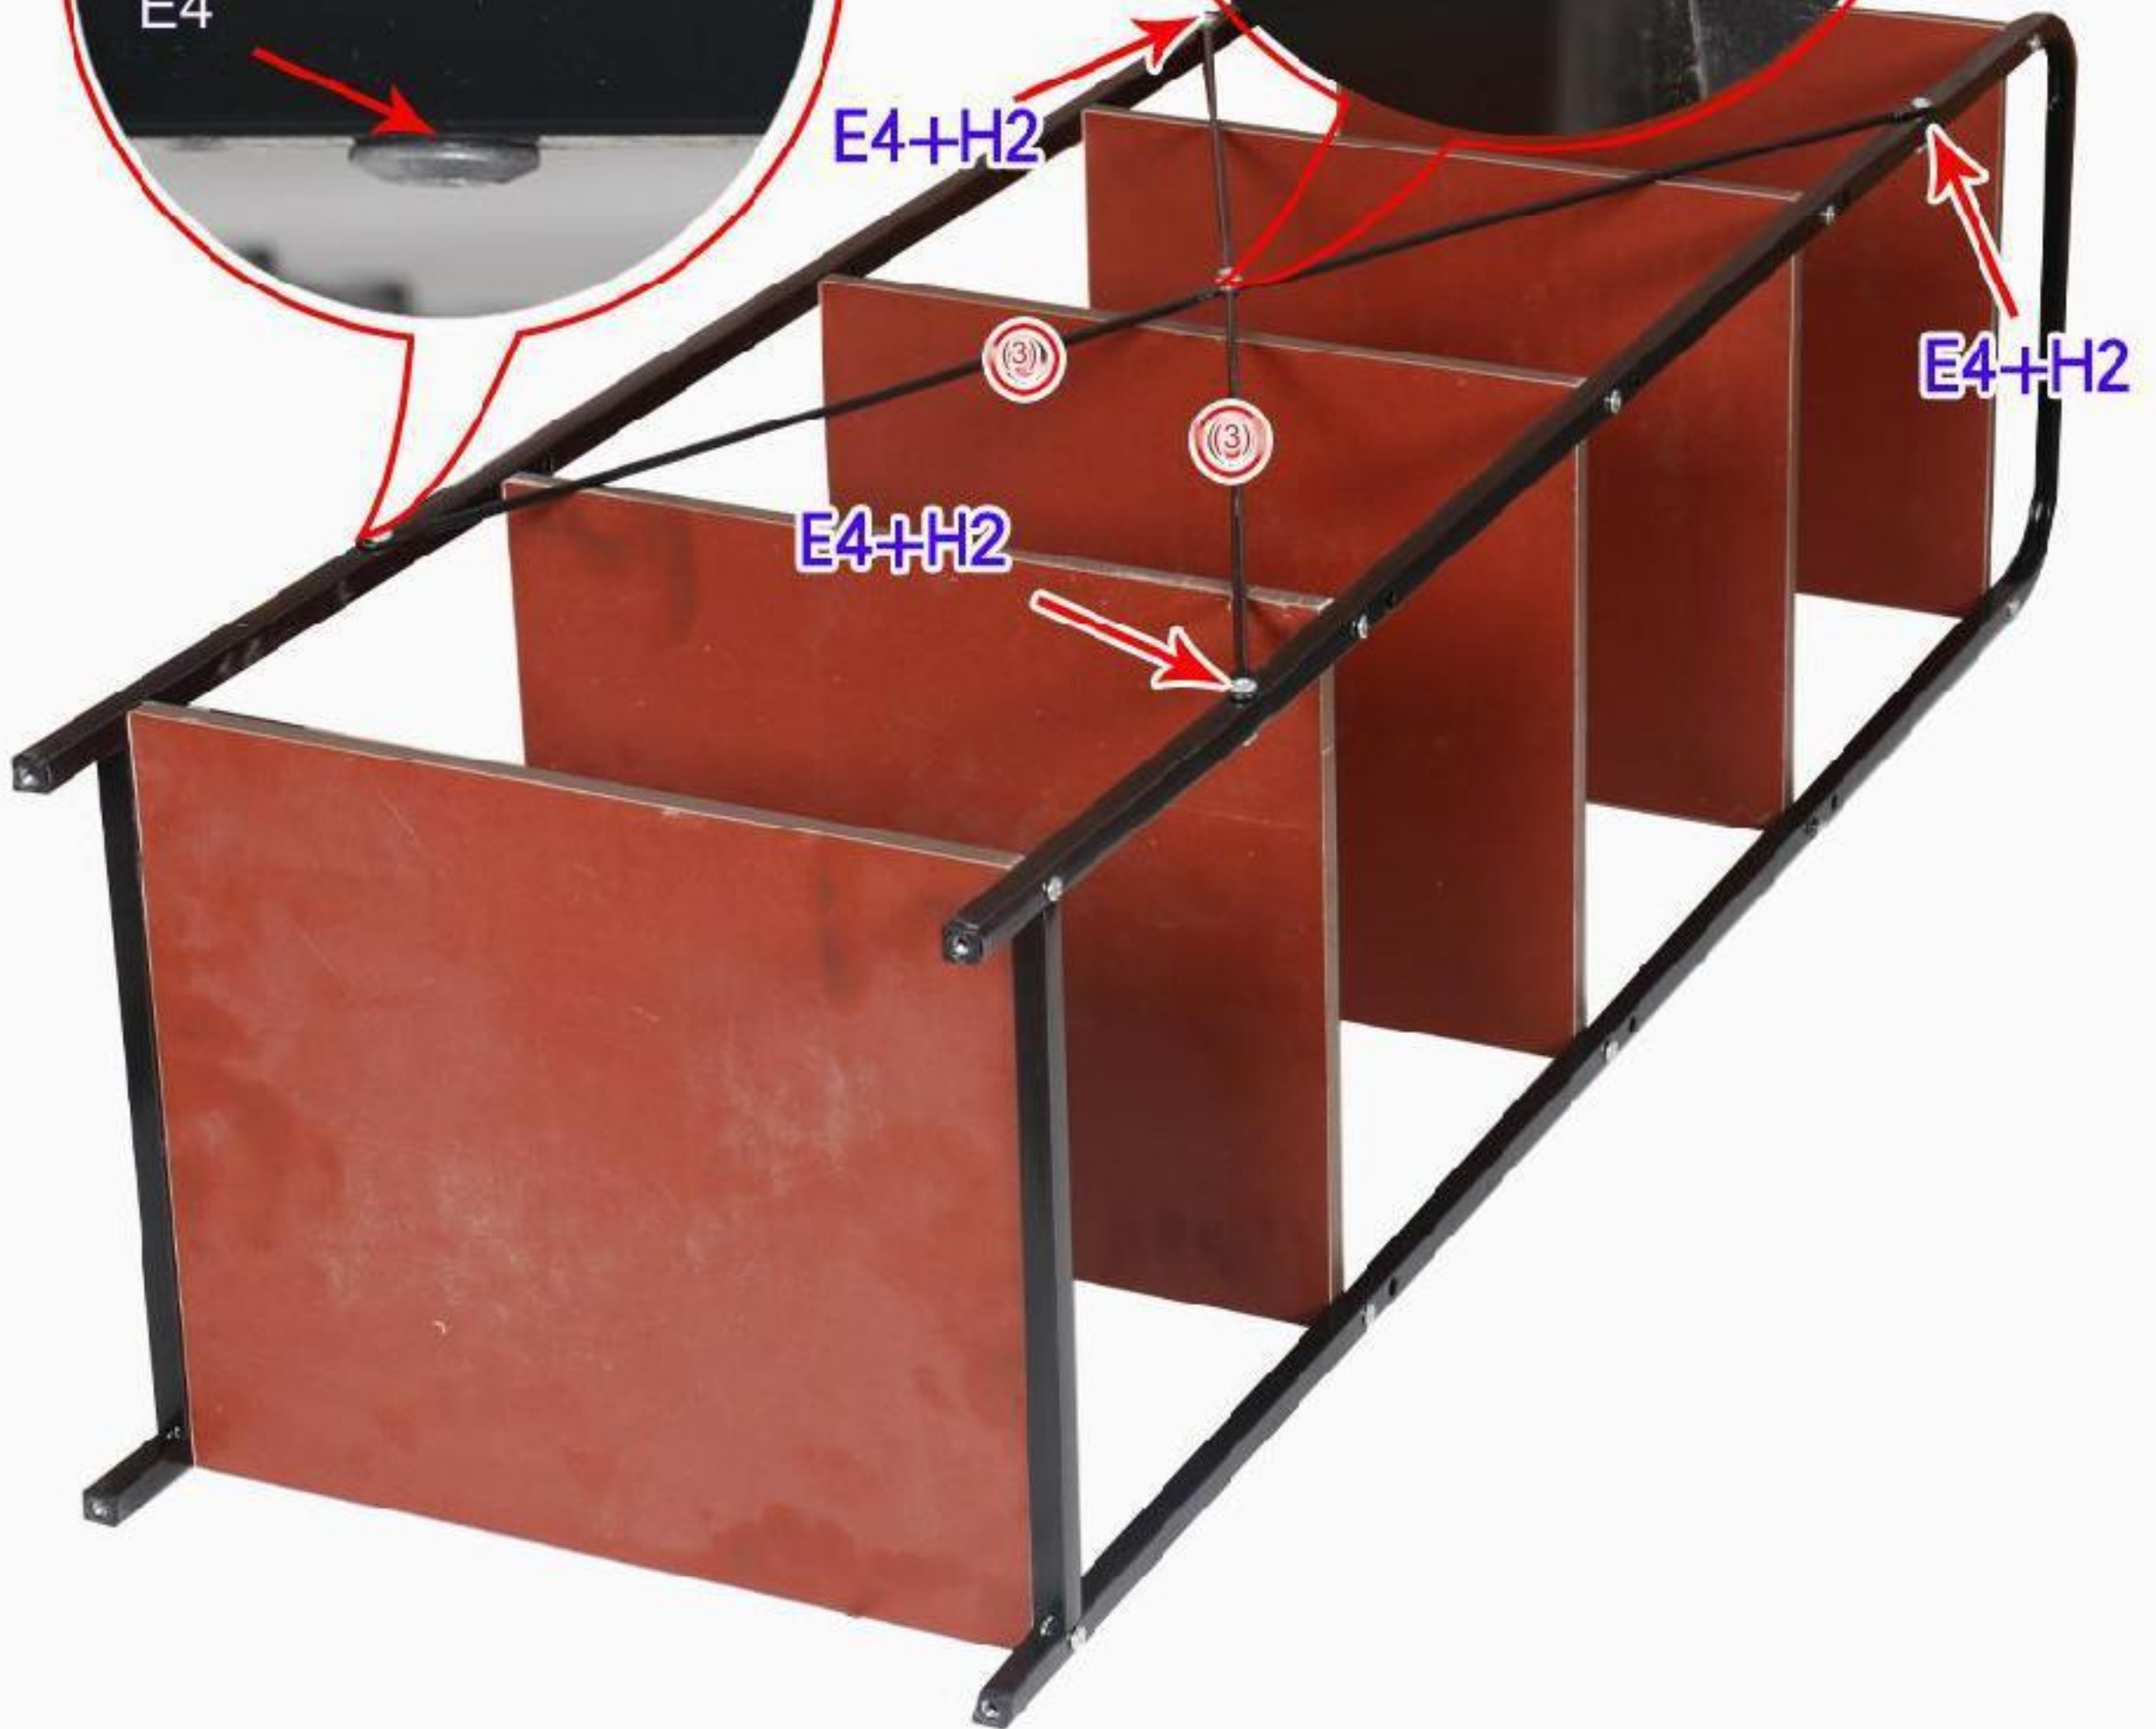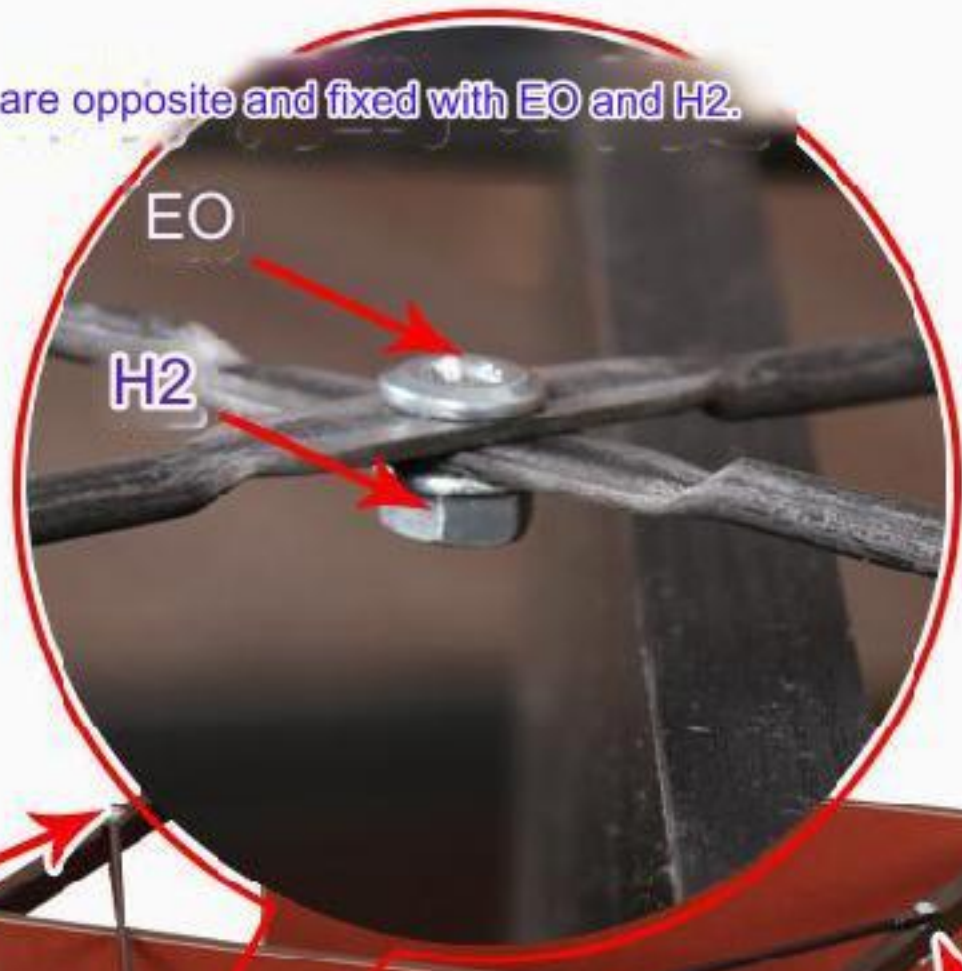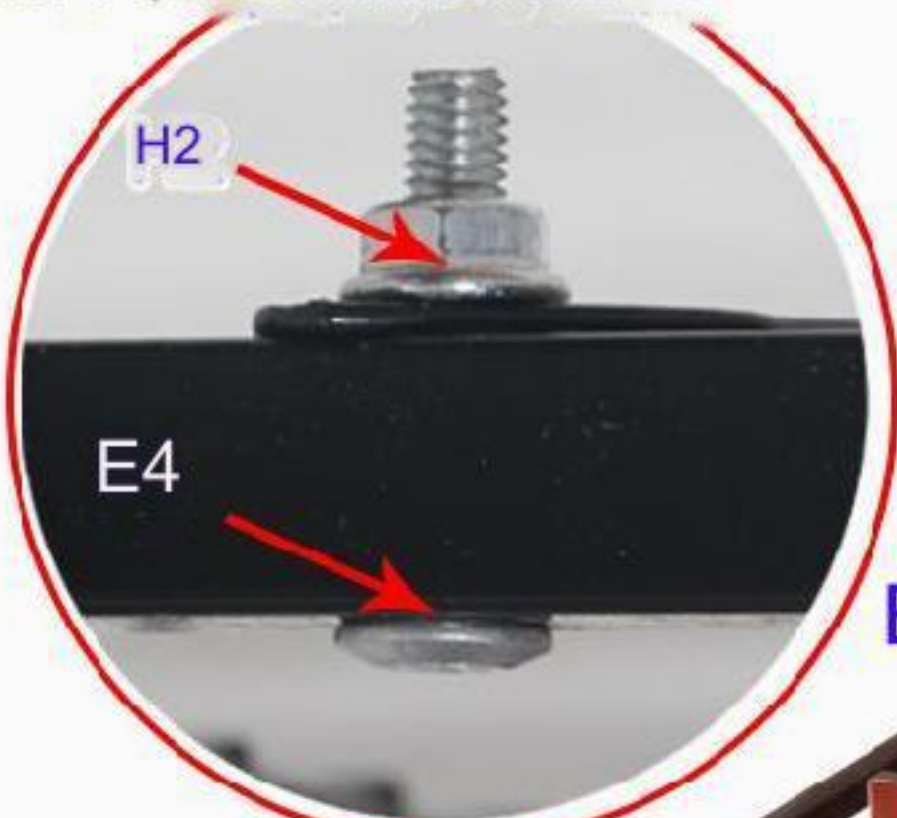

	
Universal wheel without brake	Universal wheel with brake
thread 17*2	thread 16*2



Straighten the whole

Complete the picture

