


GD006 Installation Instruction


Please be sure to use a manual screwdriver and refrain from using an electric drill.

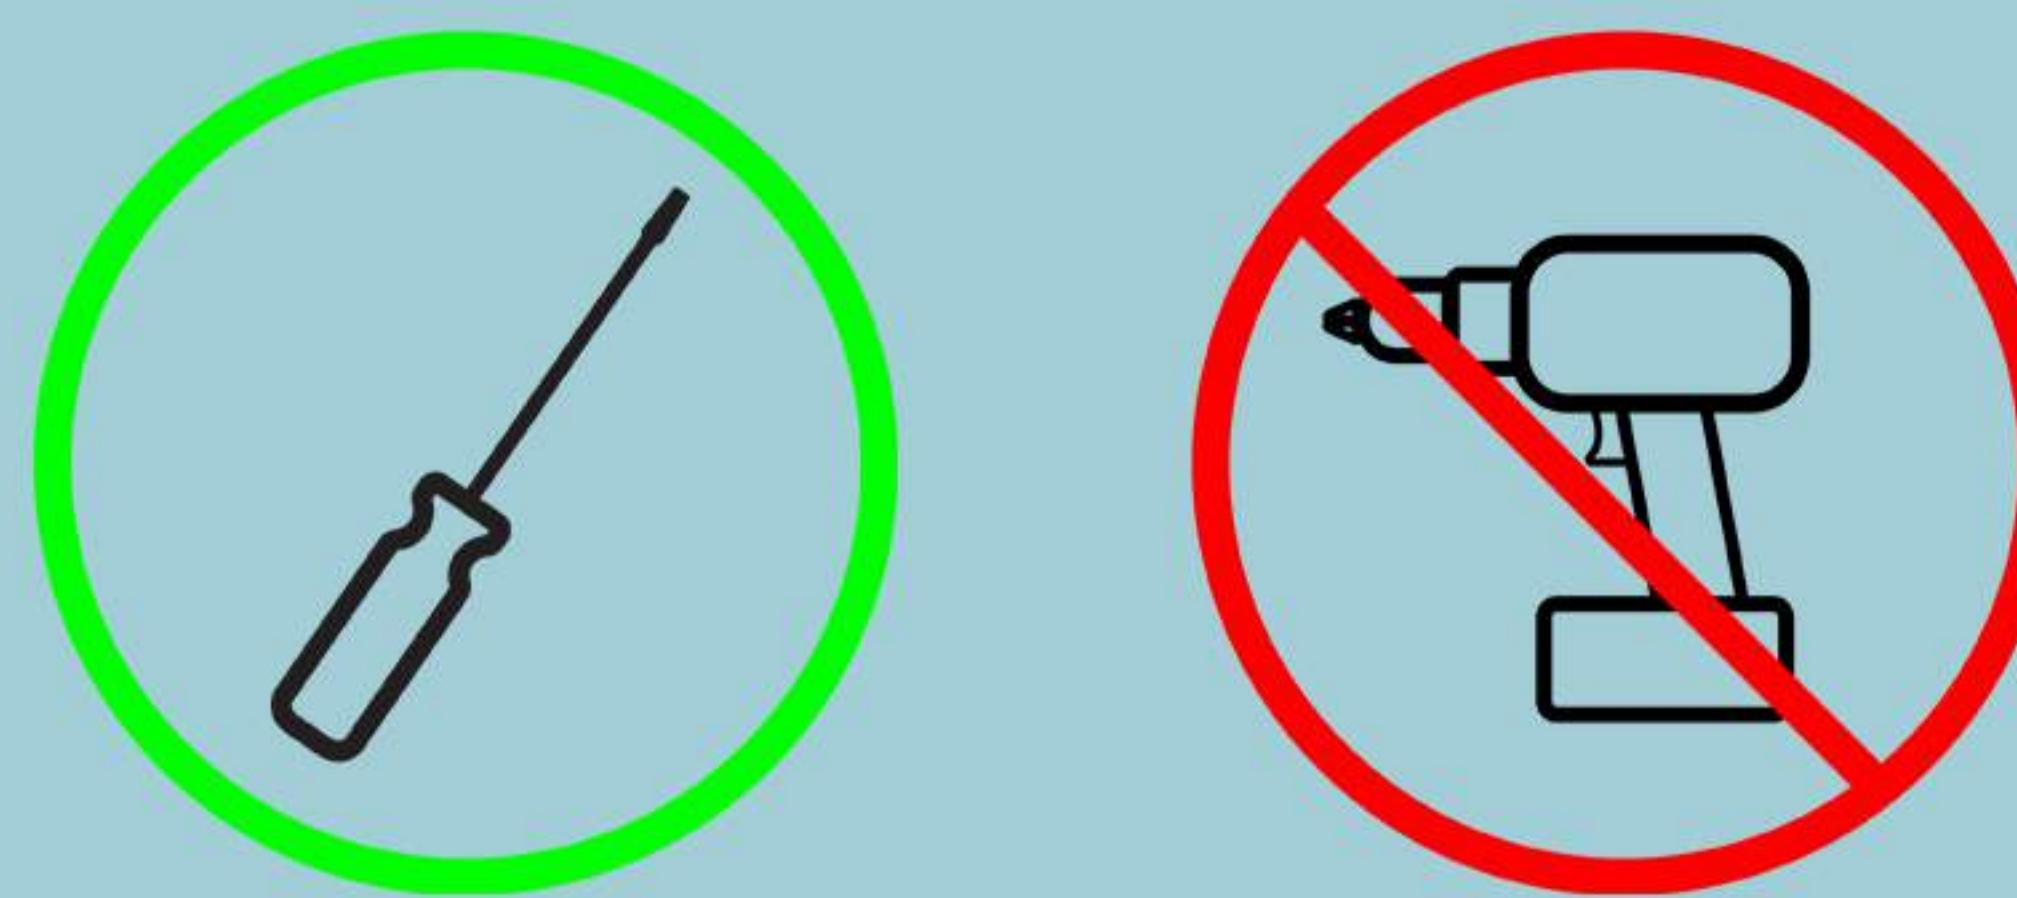


Eccentric screw	Eccentric bolt	3.5CM self-tapping screws	track	small nails	Minimum self-tapping screws	handle	handle screw.
A*52	B*52	C*8	D*2	E*60	F*8	G*1	H*1

Warm reminder: Tighten the screws 70% during installation, and then tighten them again after everything is completed!

Installation principle of eccentric parts:

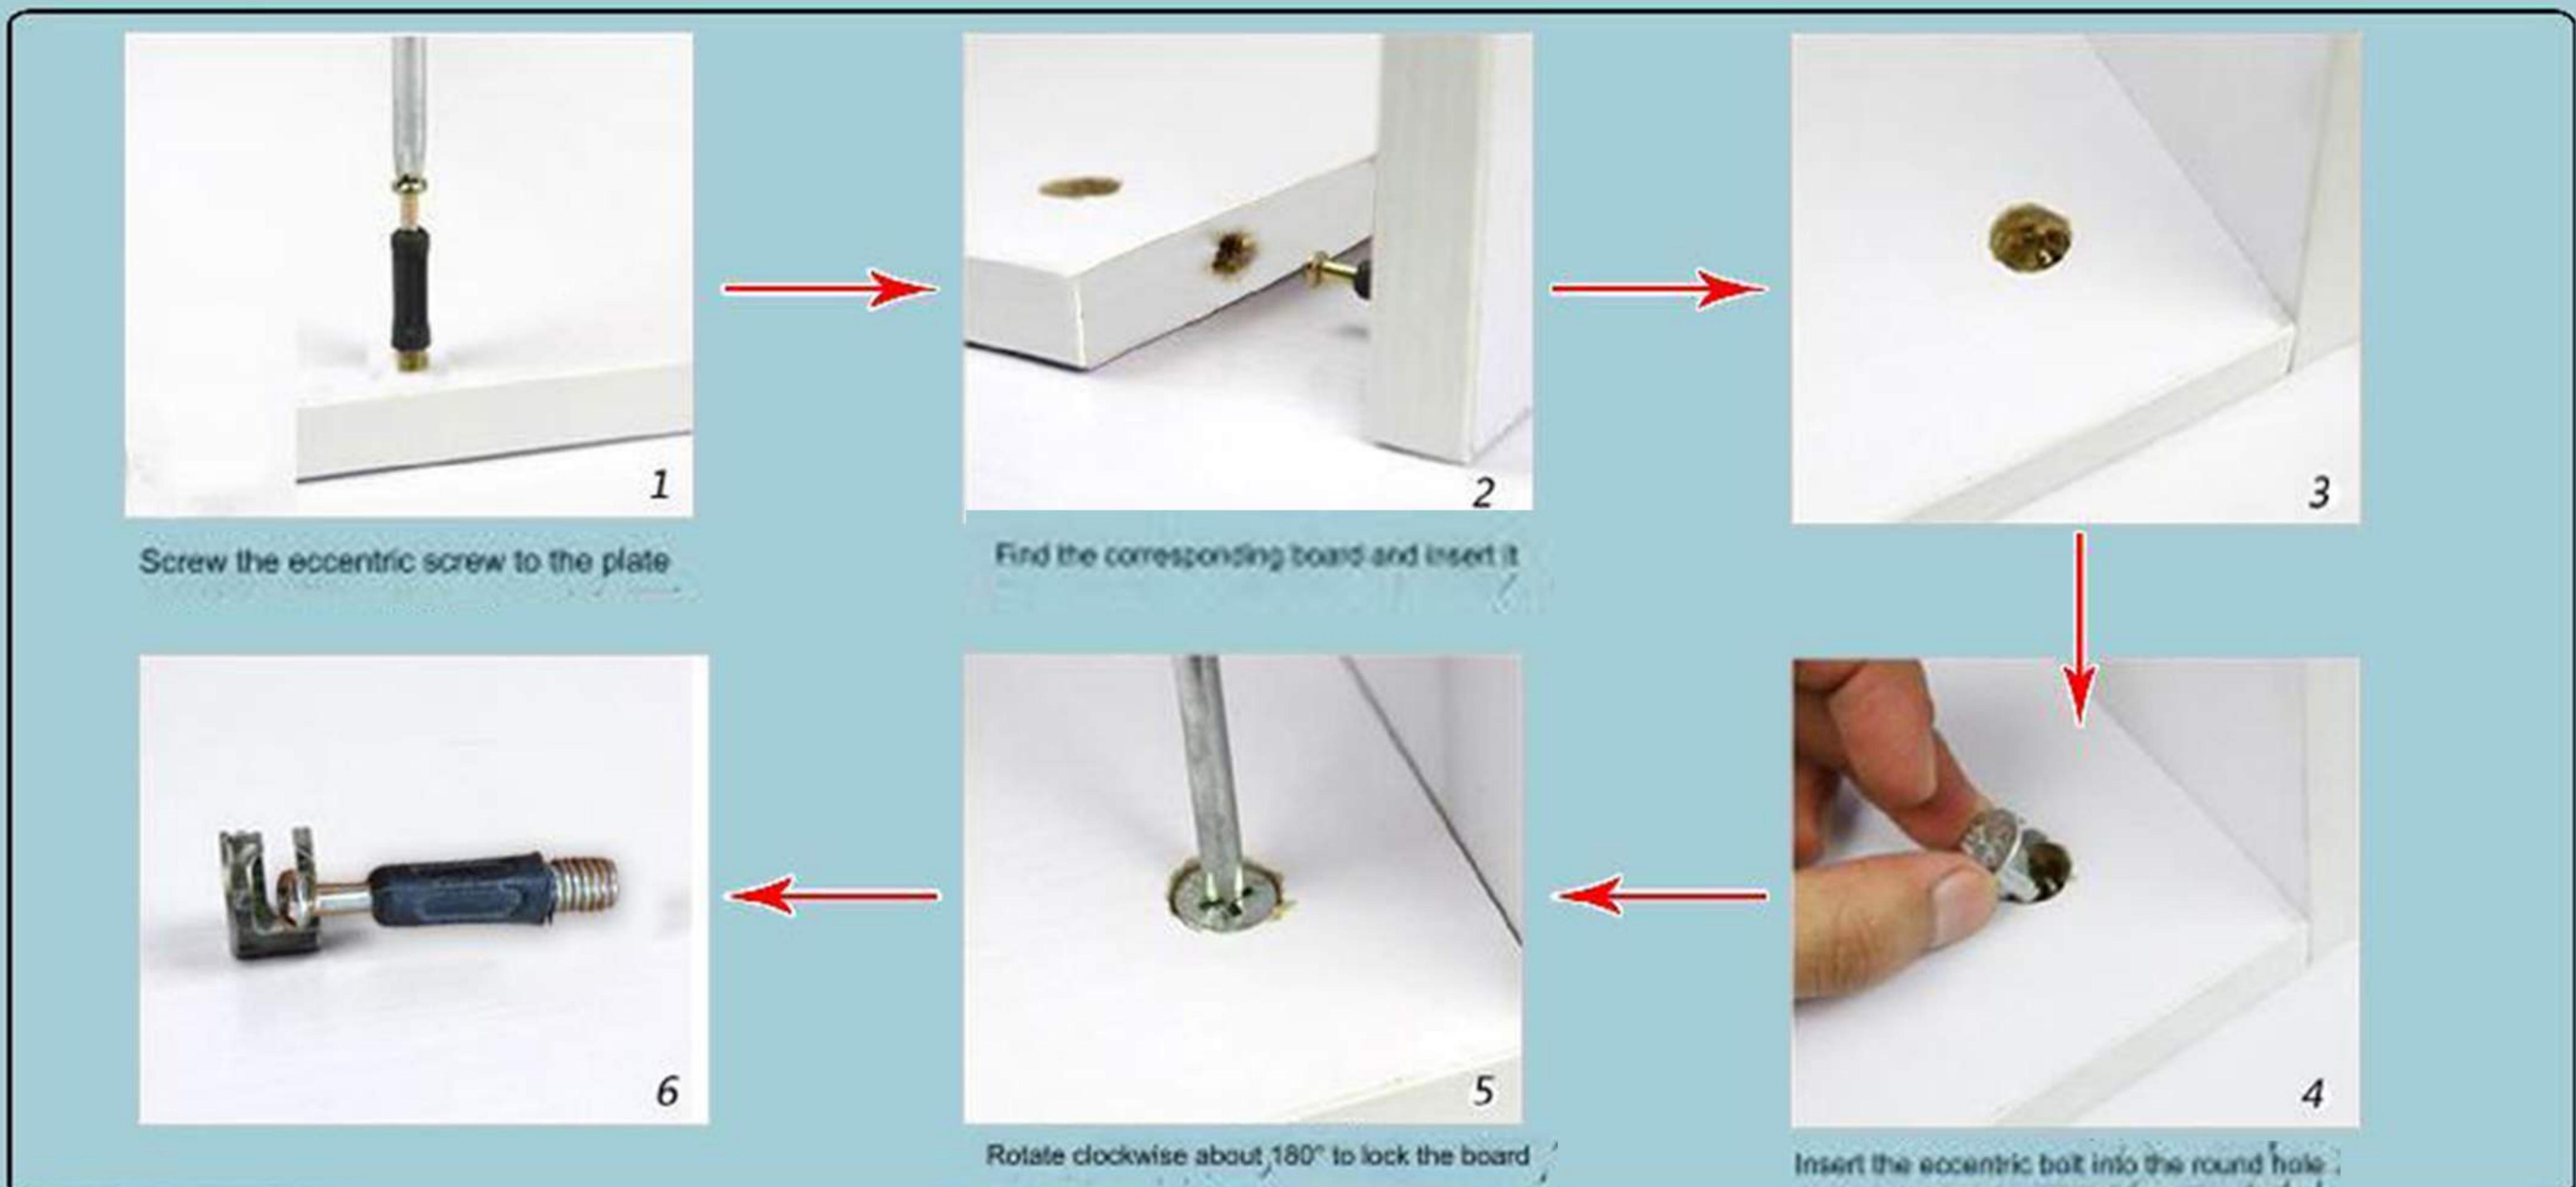

installation steps:


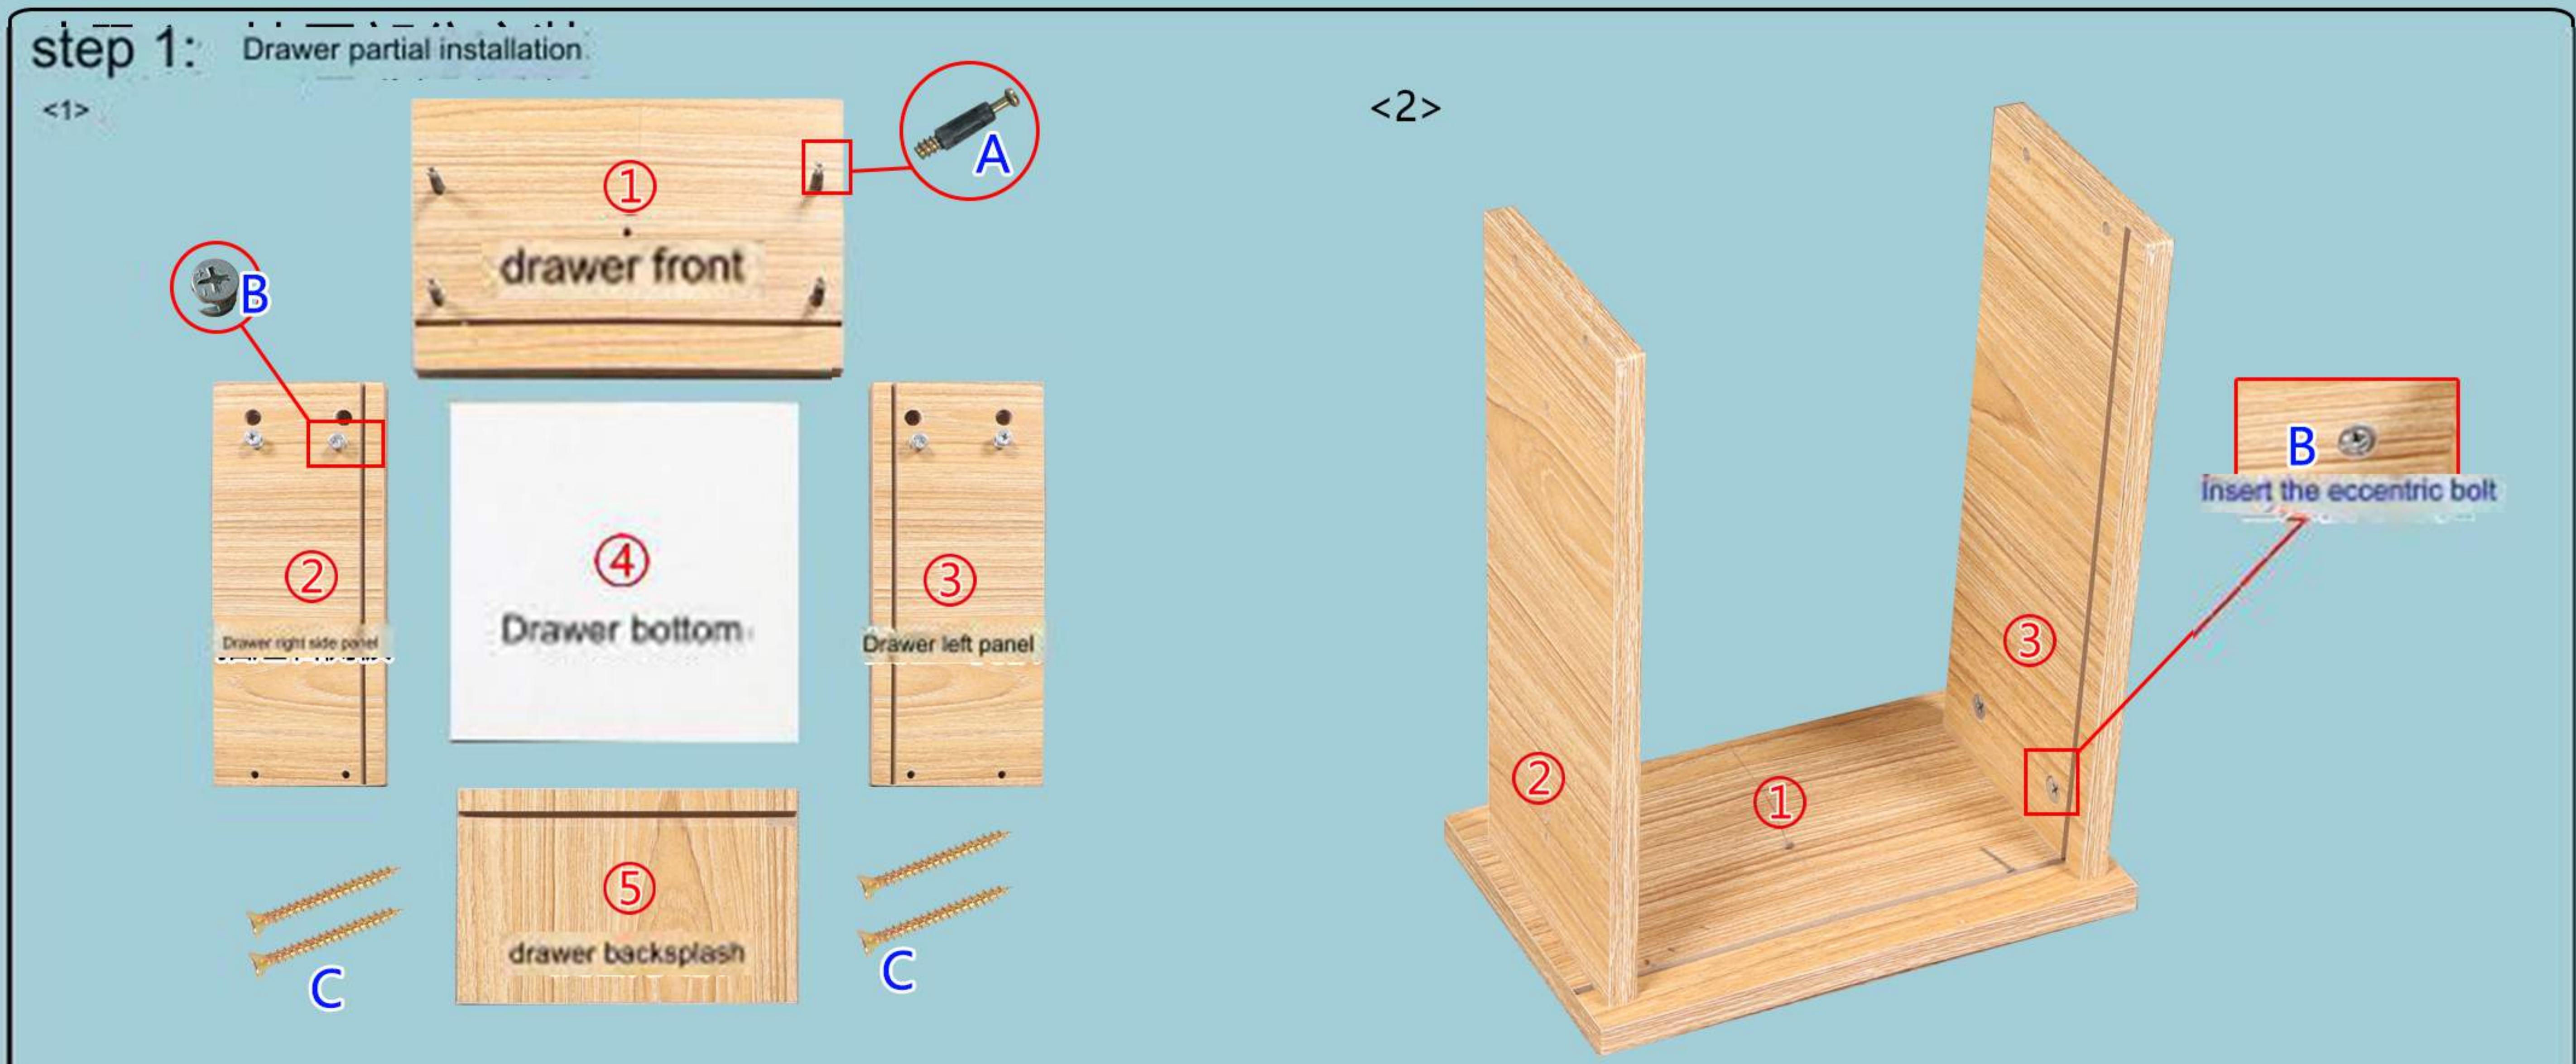


<3> Insert the drawer bottom plate first.


<4>

<5> The position of the installation rail is marked with pinholes on the side panel. Fix the thinner piece of the drawer rail along the edge of the drawer side panel

<6>

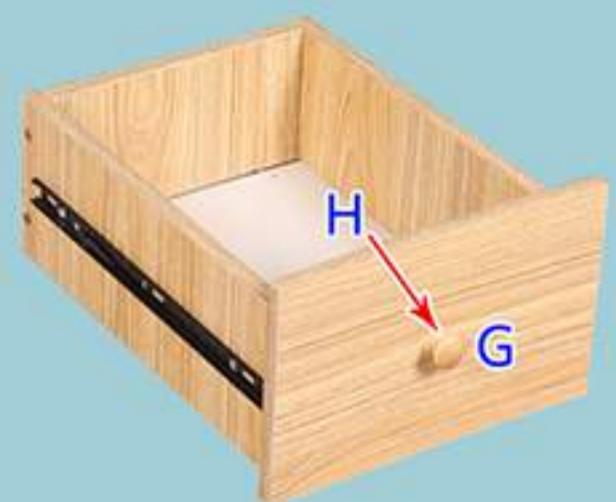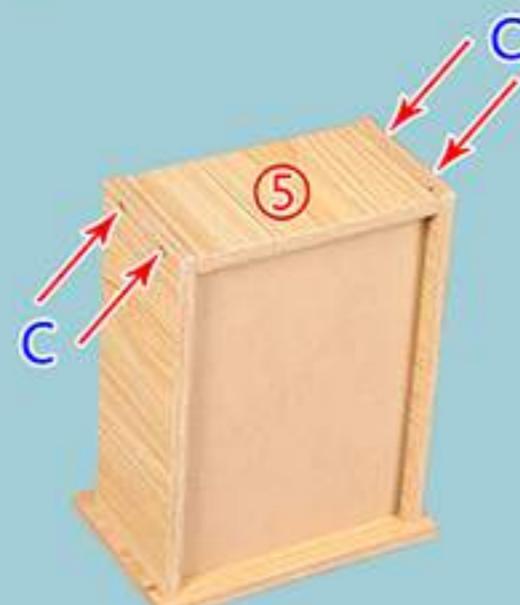

Board name and serial number:

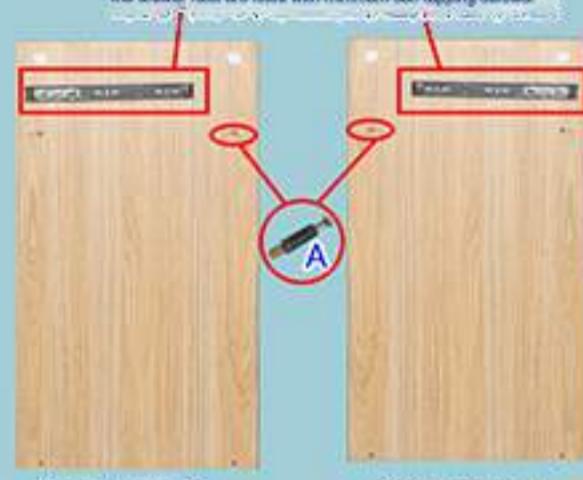

①

②

③

④


⑤

⑥

⑦x2

⑧x3

⑨

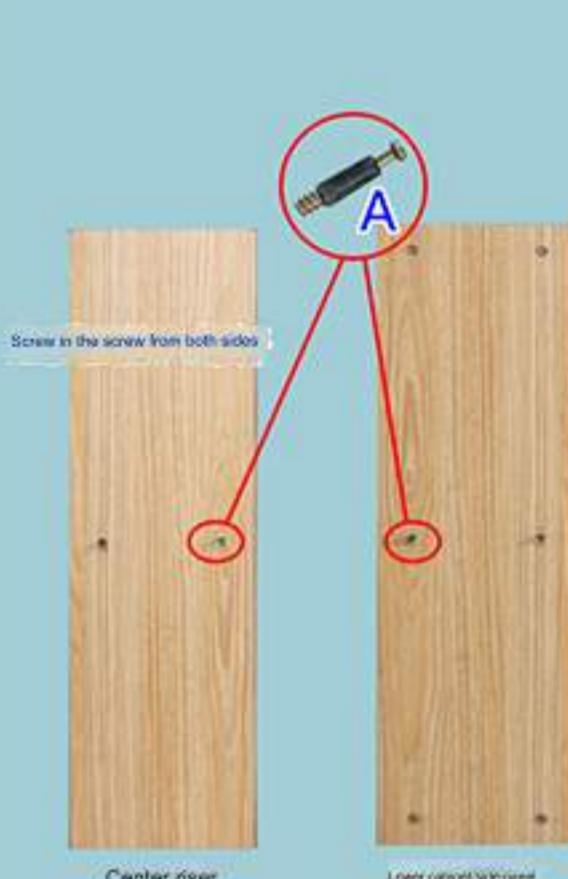


⑩

⑪x2

Riser

⑫x4

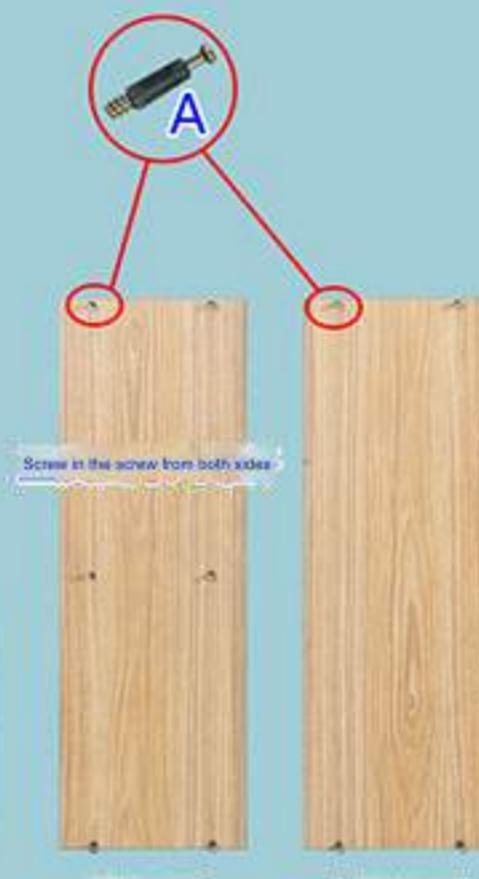


⑬

Connection board

⑭

Upper cabinet cover

⑮x2

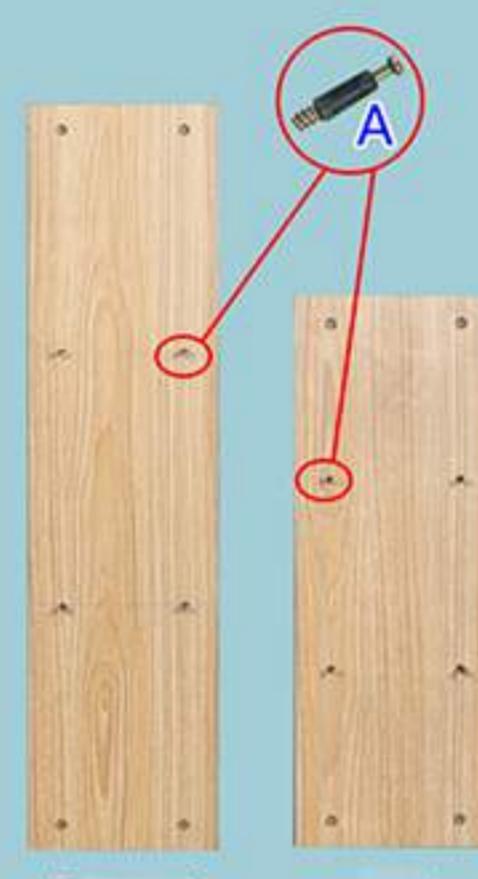


⑯x2


Laminate

Step 2: Cabinet part installation


<1>

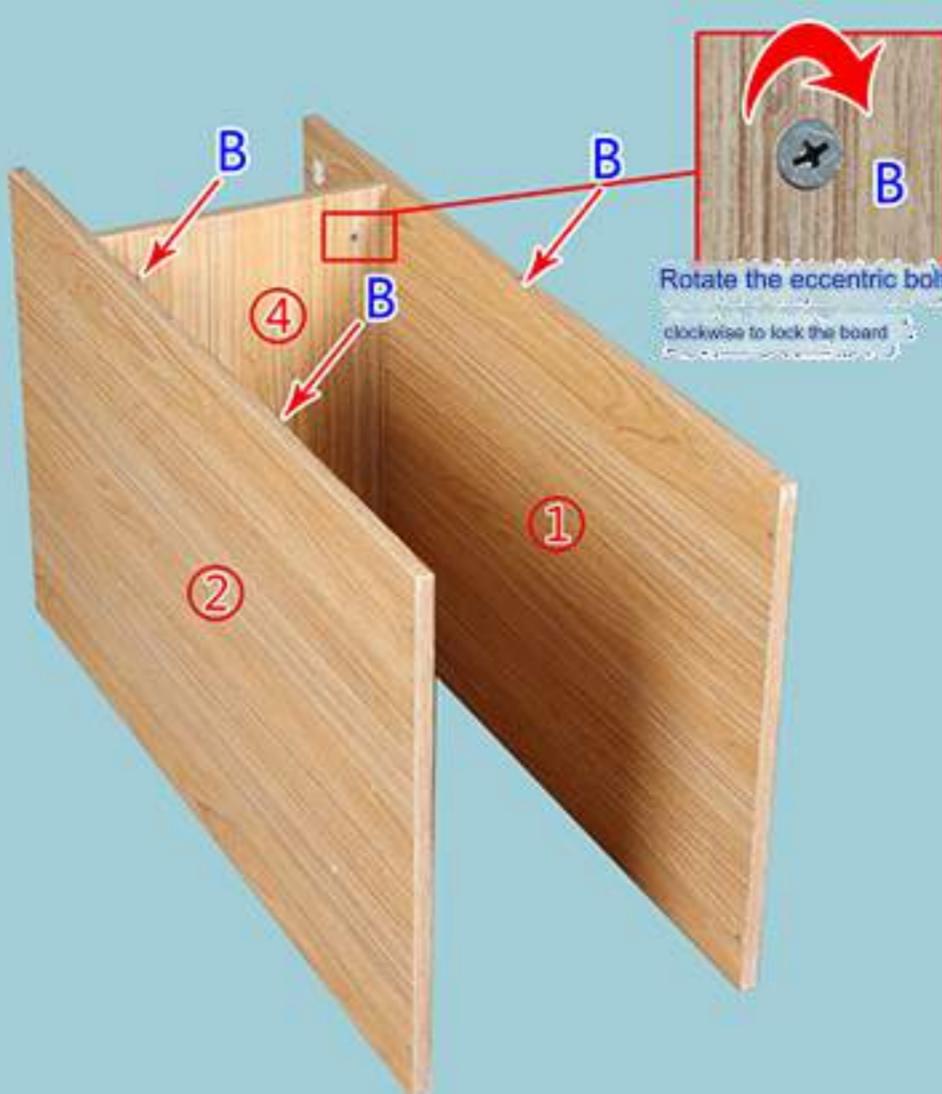

<2>

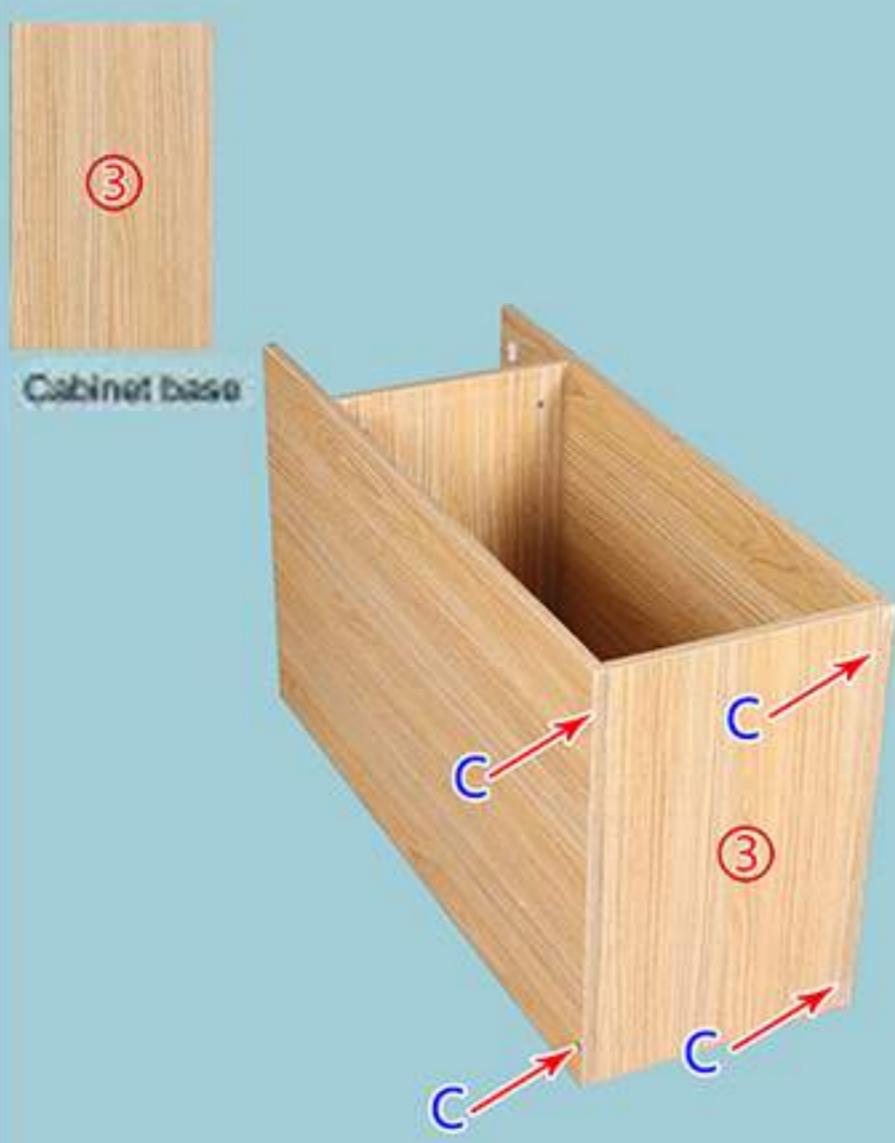


<3>

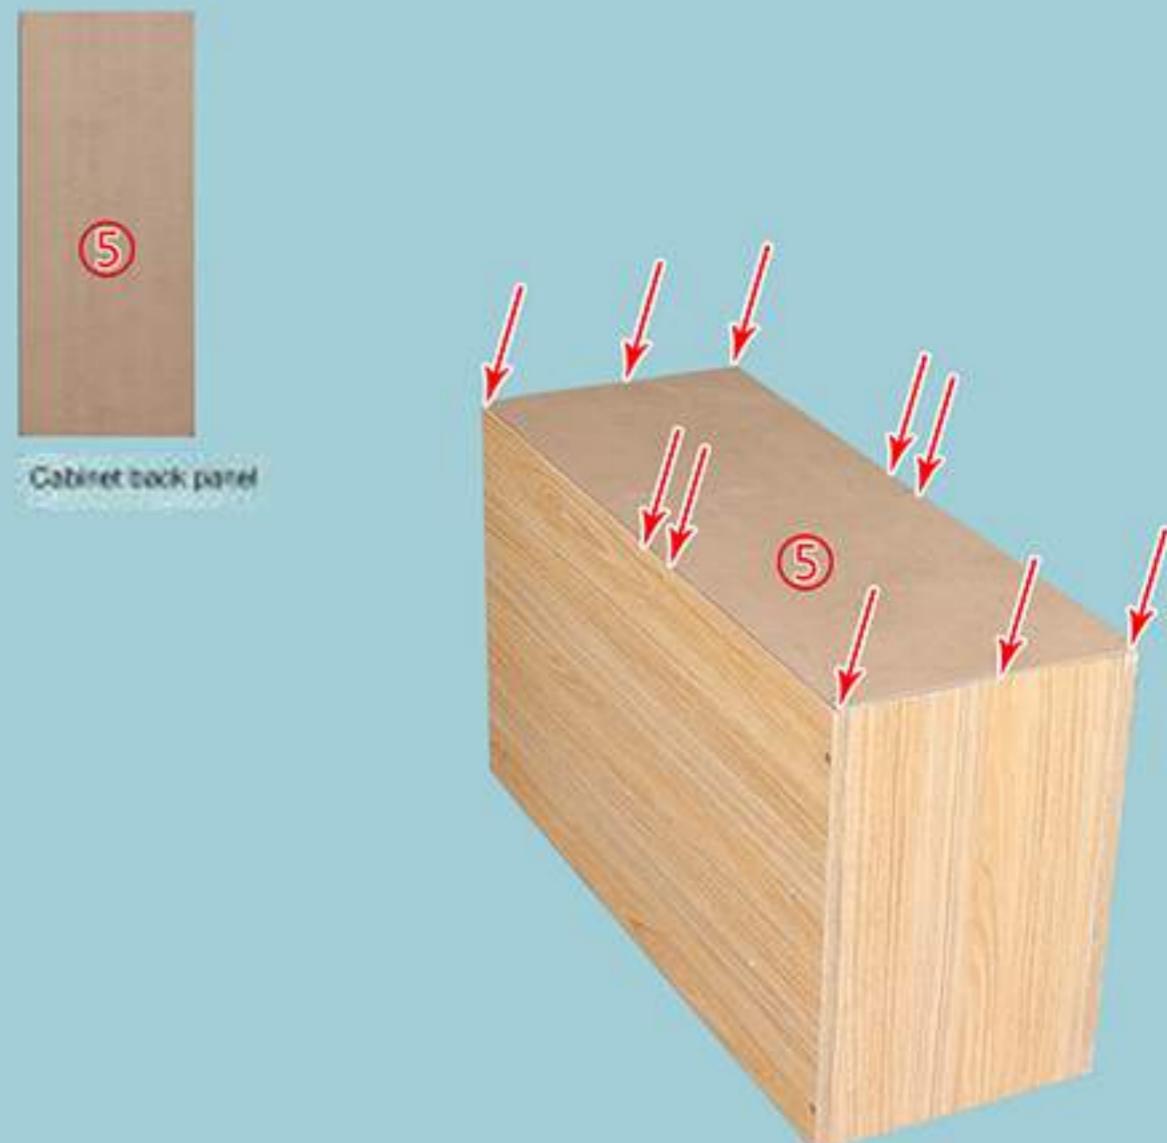


Step 3: Install the upper half of the bookshelf


<1>

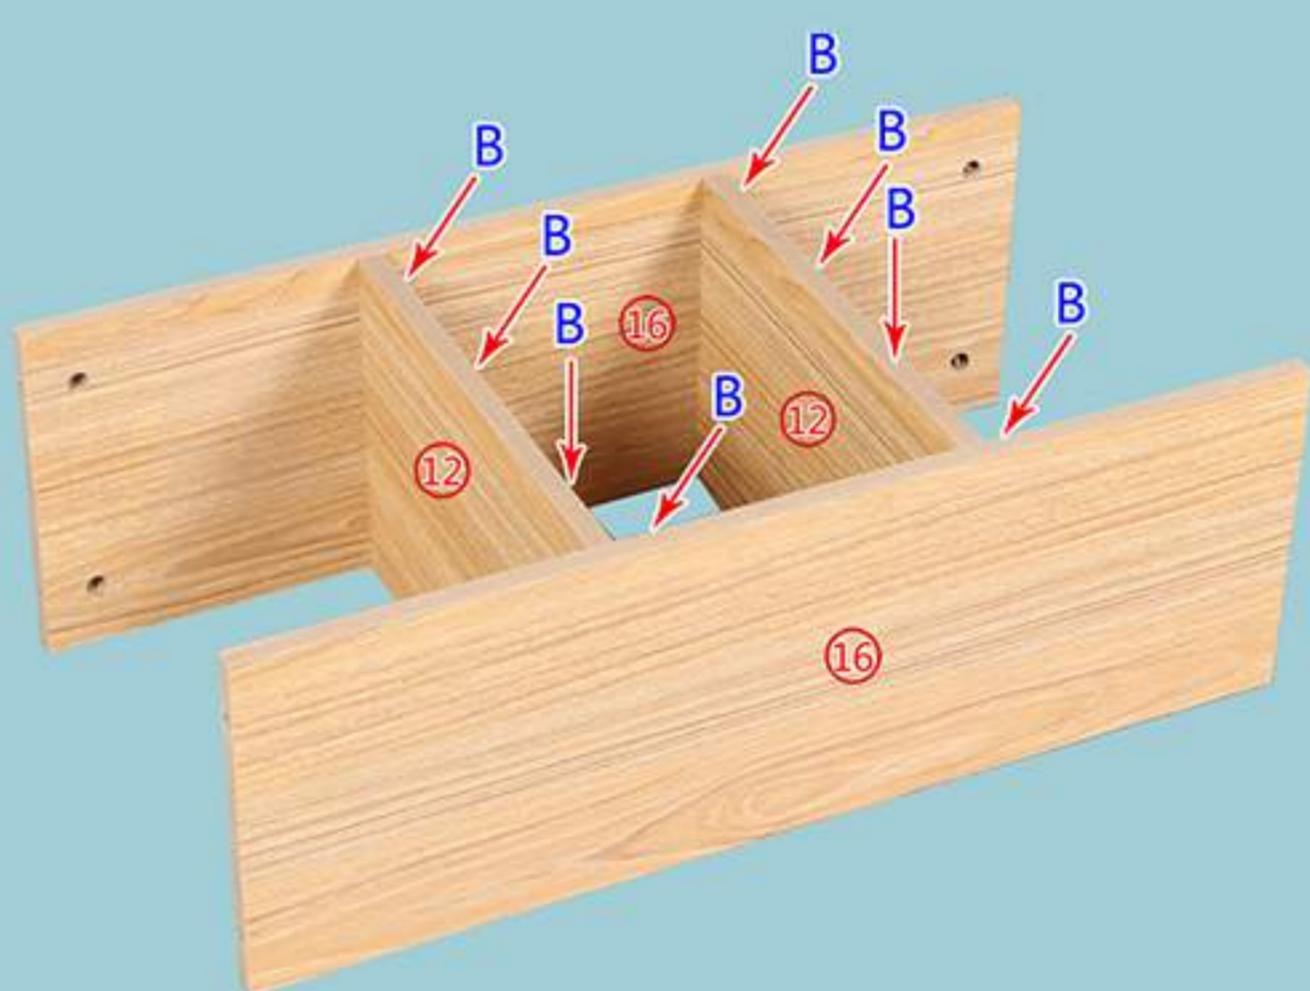

<2>

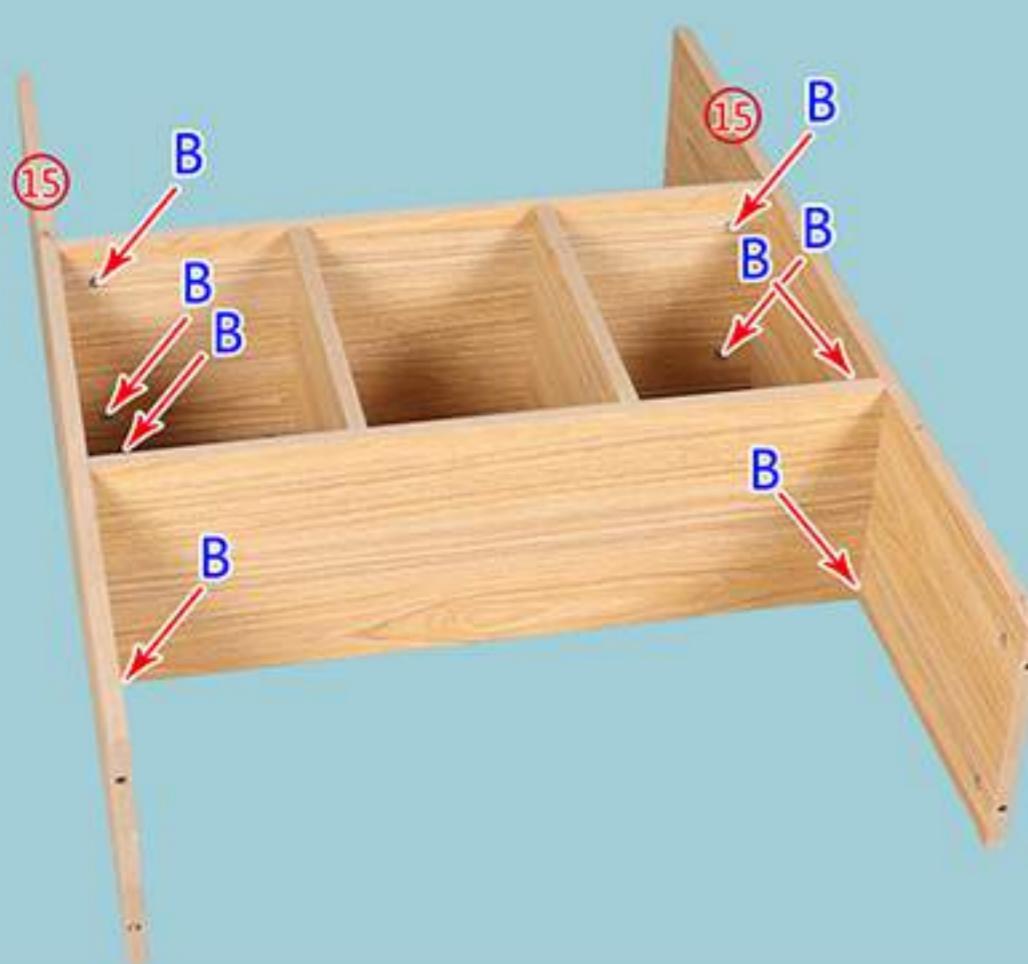


<3>

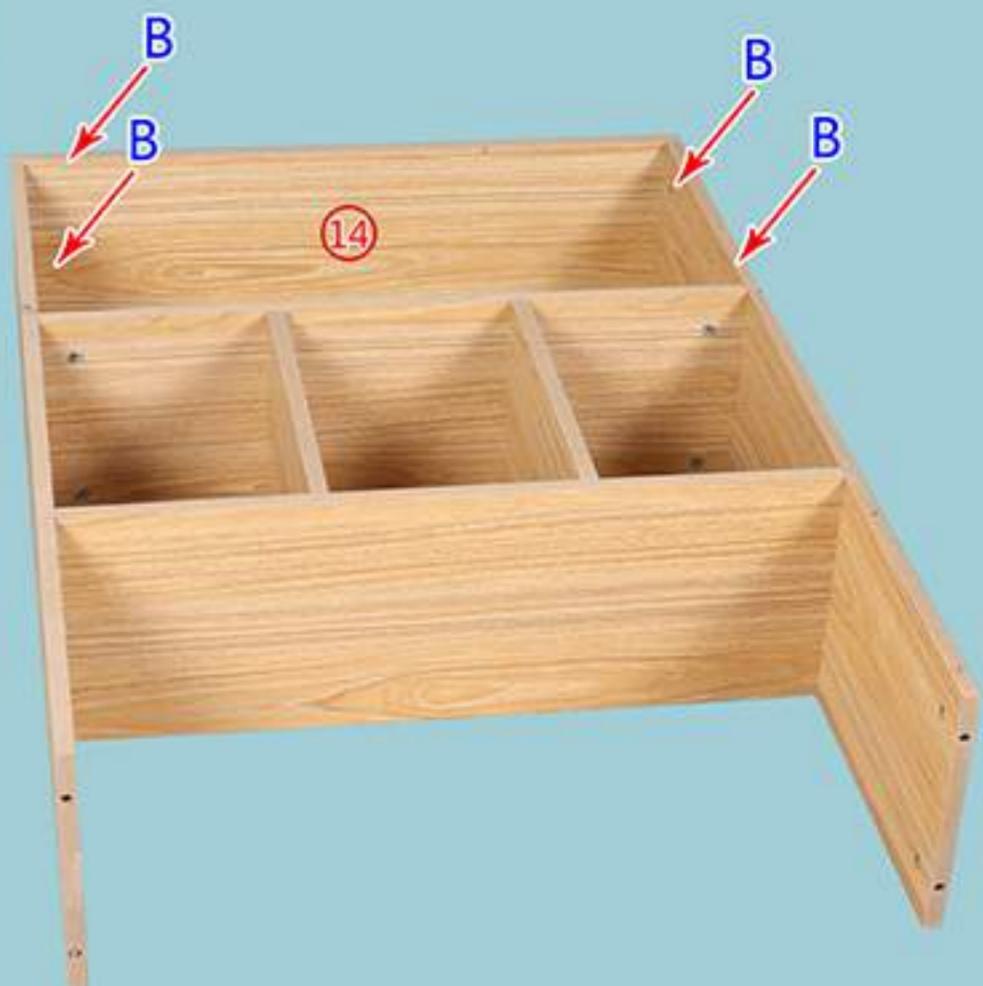


Step 4: Install the lower half of the bookshelf


<1>

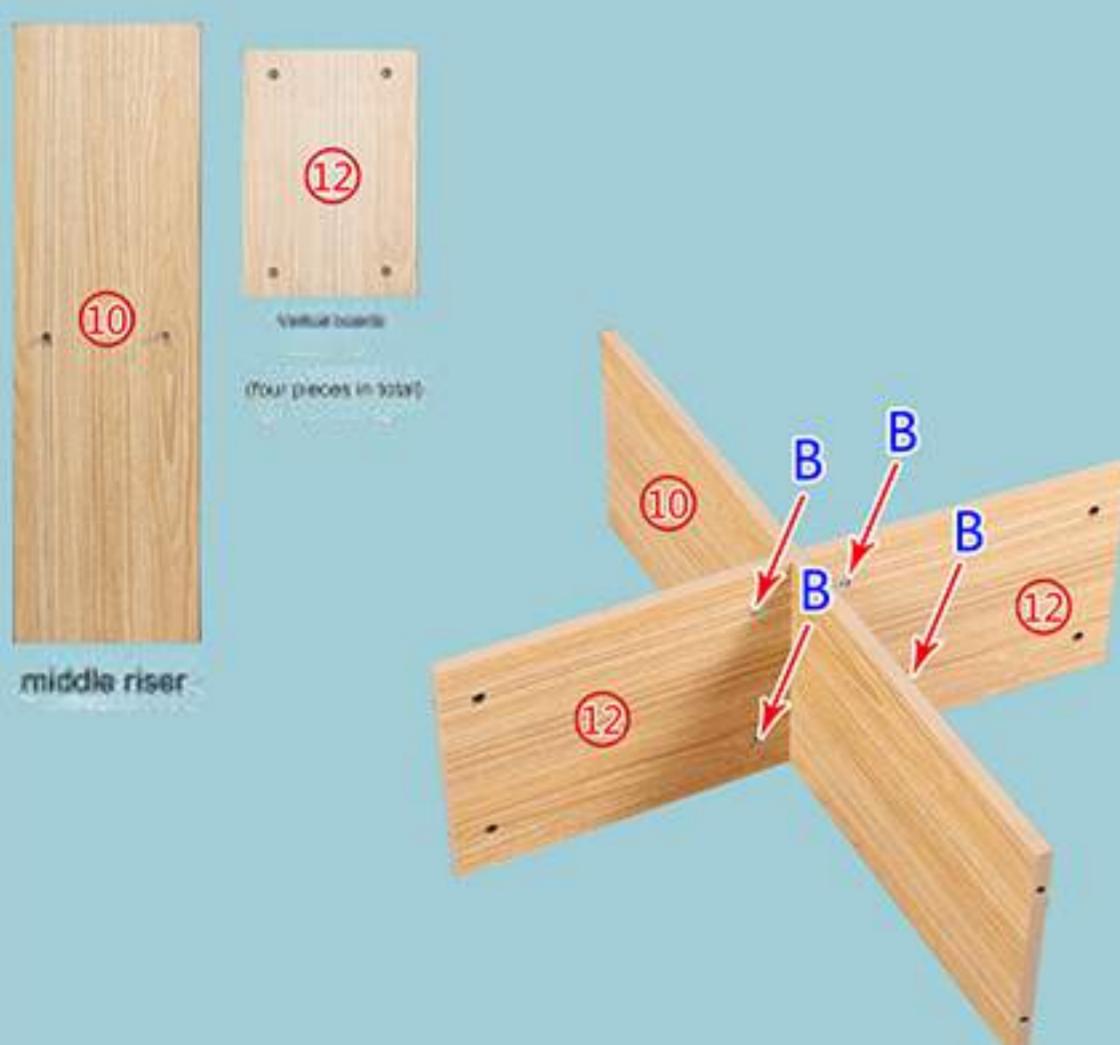


<2>

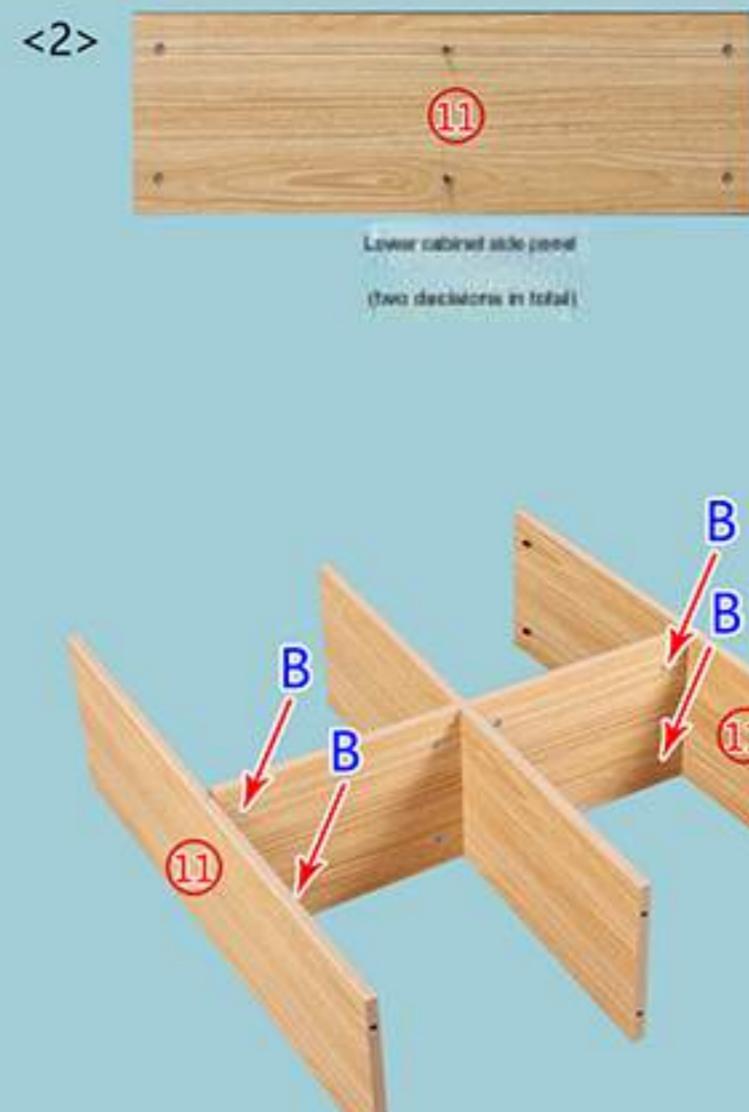


<3>

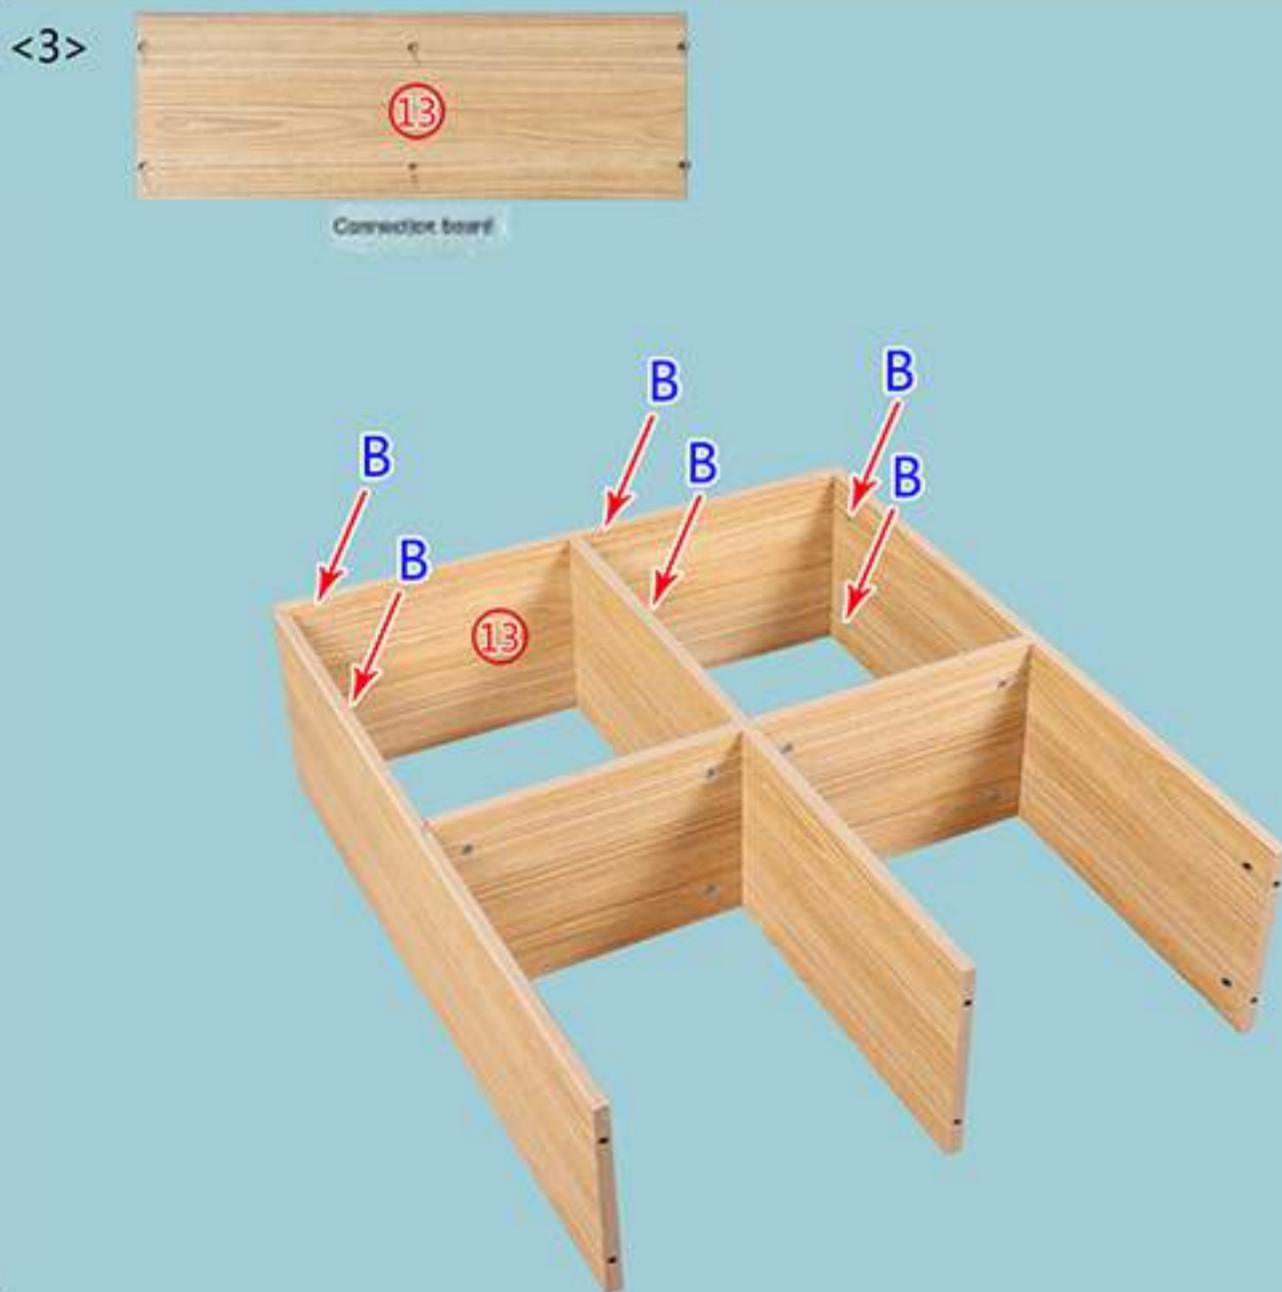


<4>

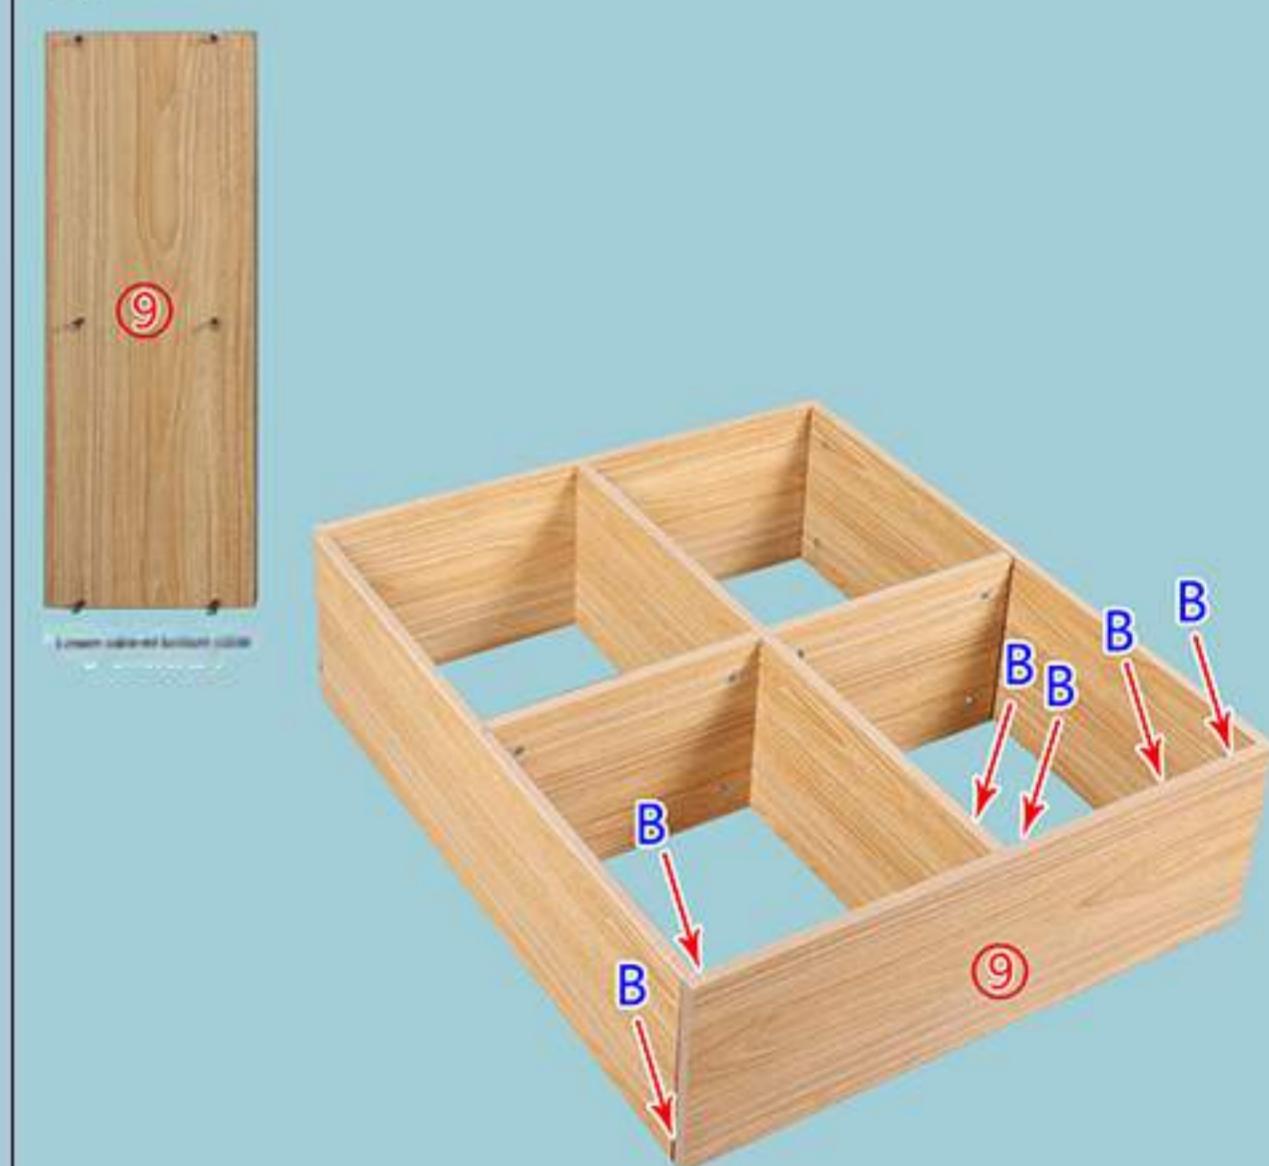

<5> Connect the upper and lower parts of the bookshelf!

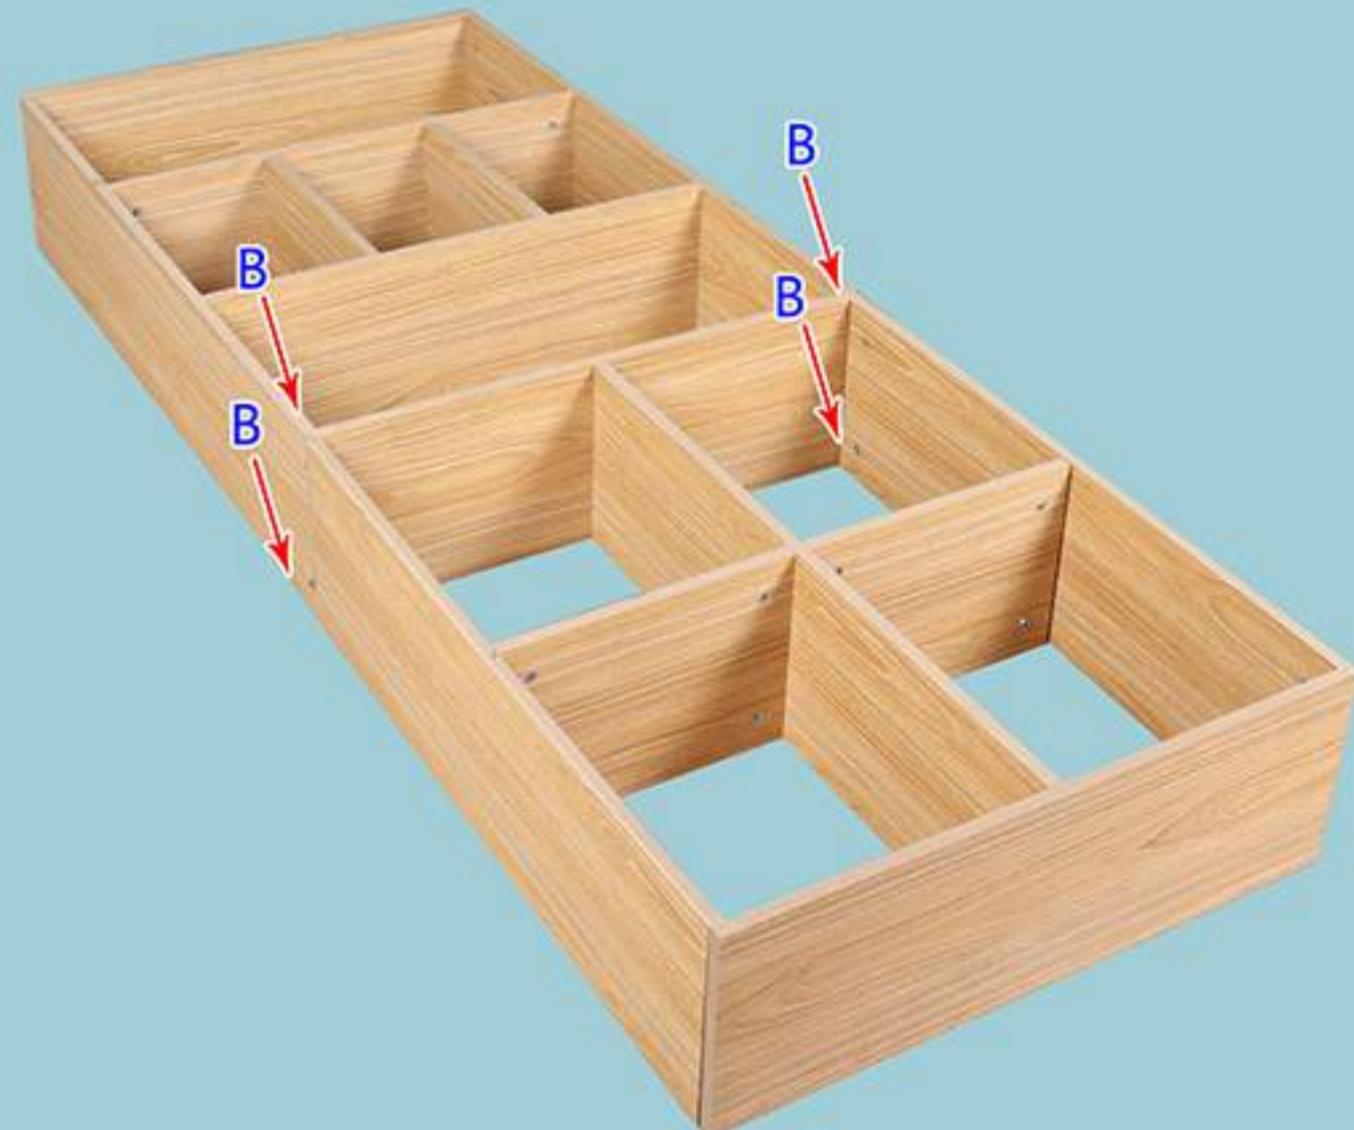

<6>

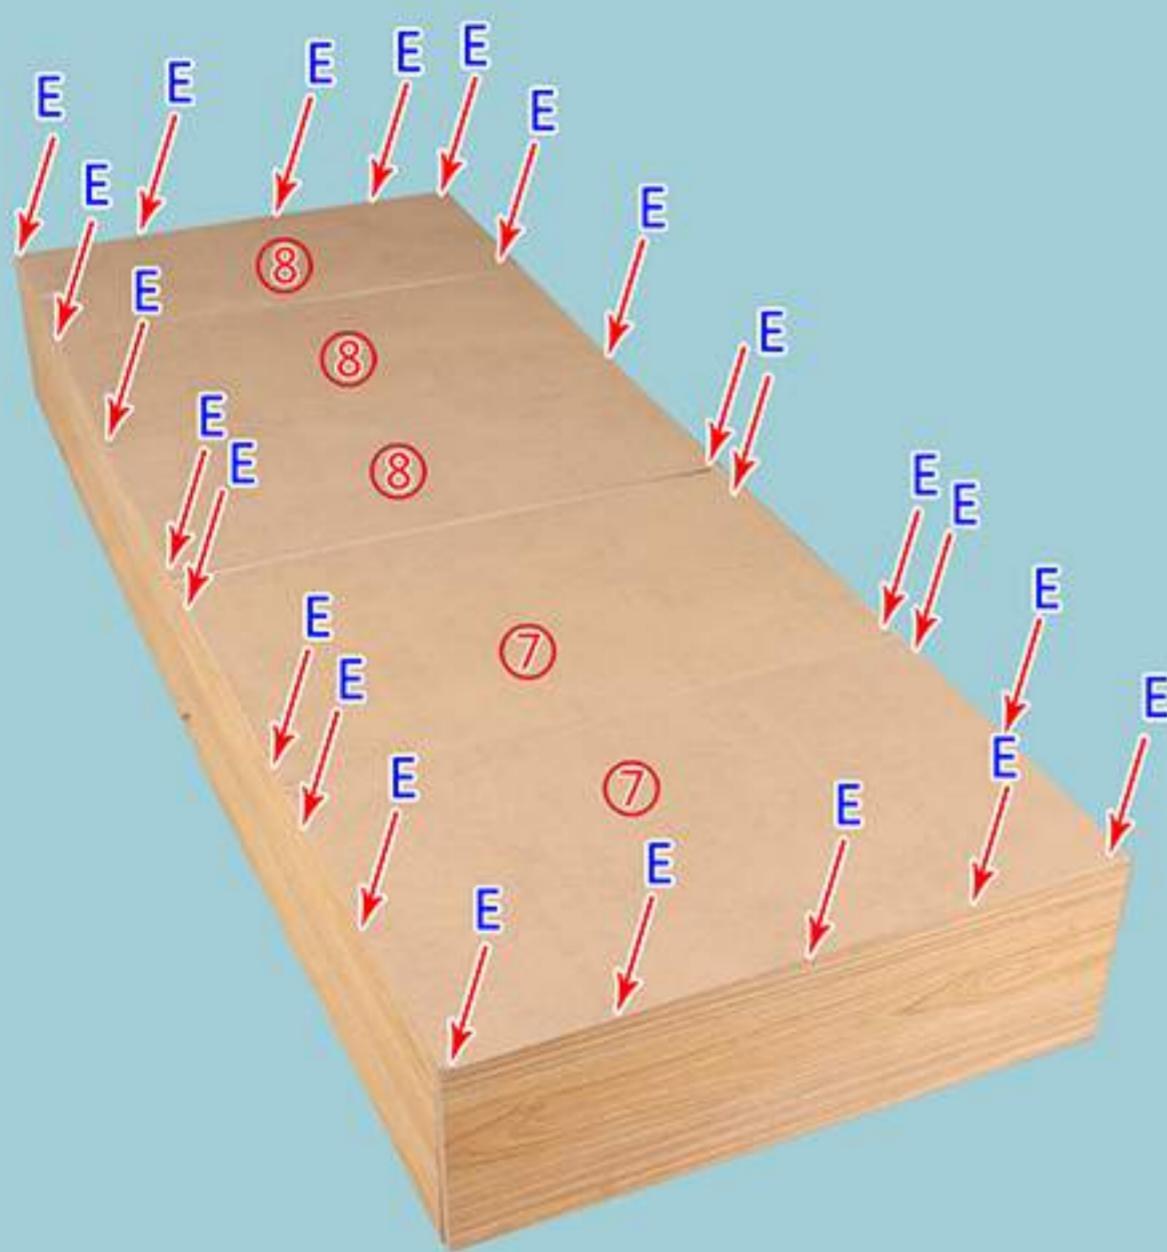

Step 5: Whole part installation

<1>



Complete picture!

