
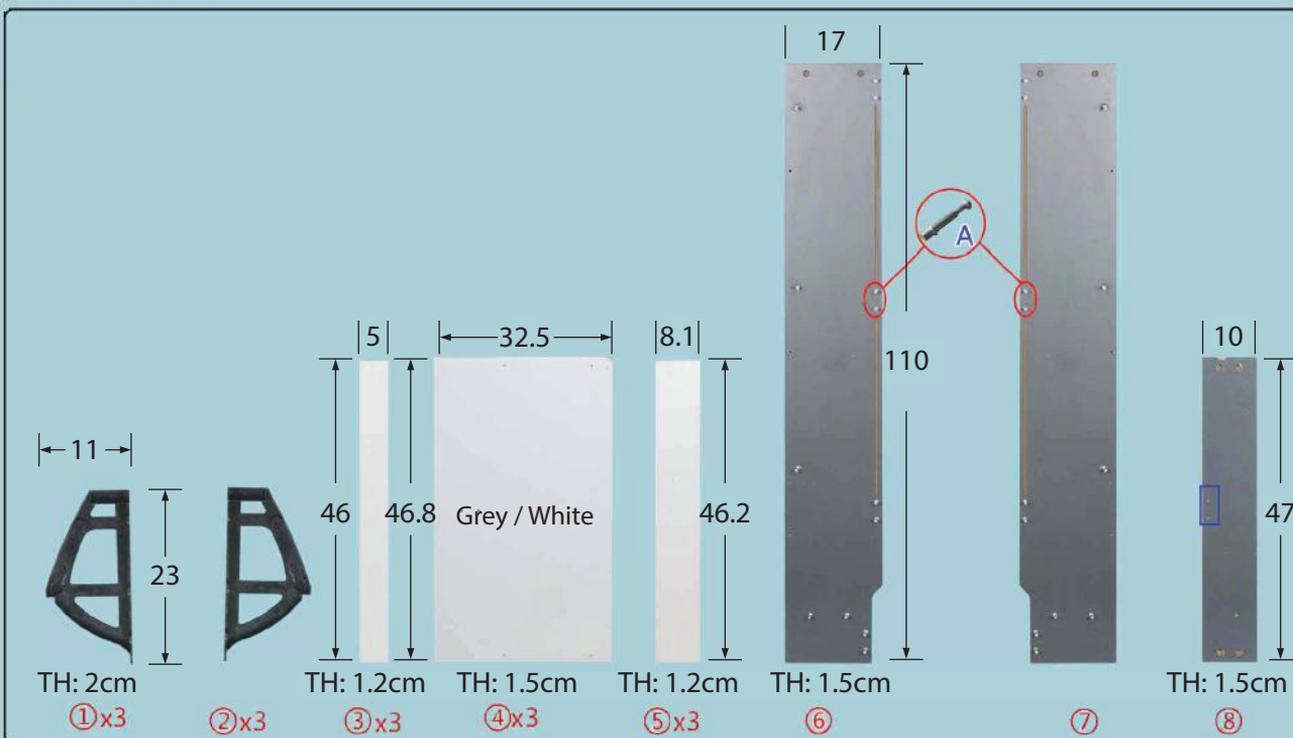




# SOCE013





# 52 X 18cm Installation Instructions


L: 2.7cm H: 0.9cm    H: 0.5cm    L: 3.4cm    L: 2cm    L: 3.5cm    L: 1.4cm  
 D: 0.7cm D: 1.1cm    D: 6.7cm    D: 0.5cm    D: 0.6cm    D: 1cm    D: 0.6cm

							
Eccentric Screw	Eccentric Bolt	Vent Hole	Handle Kit	Handle Screw	Shaft	Micro Self-Tapping Screw	Anti-Tip Device
A*30	B*24	C*2	D*3	E*6	F*6	G*42	H*1

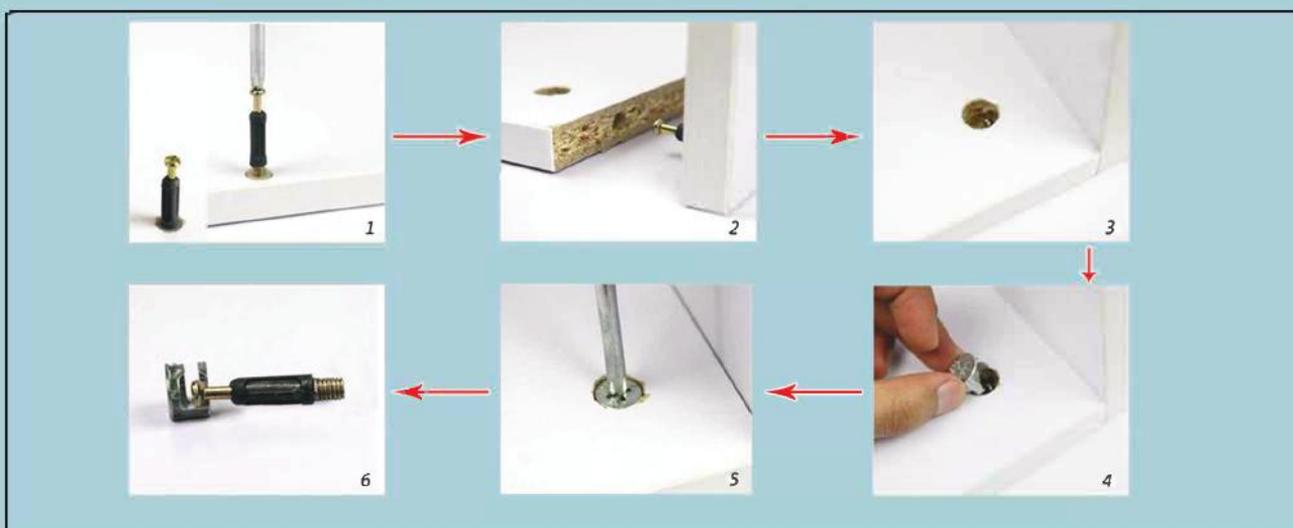

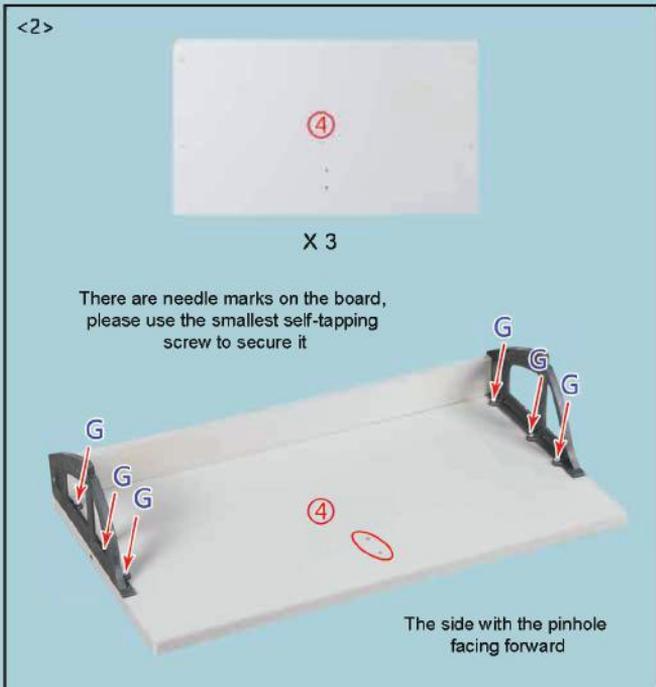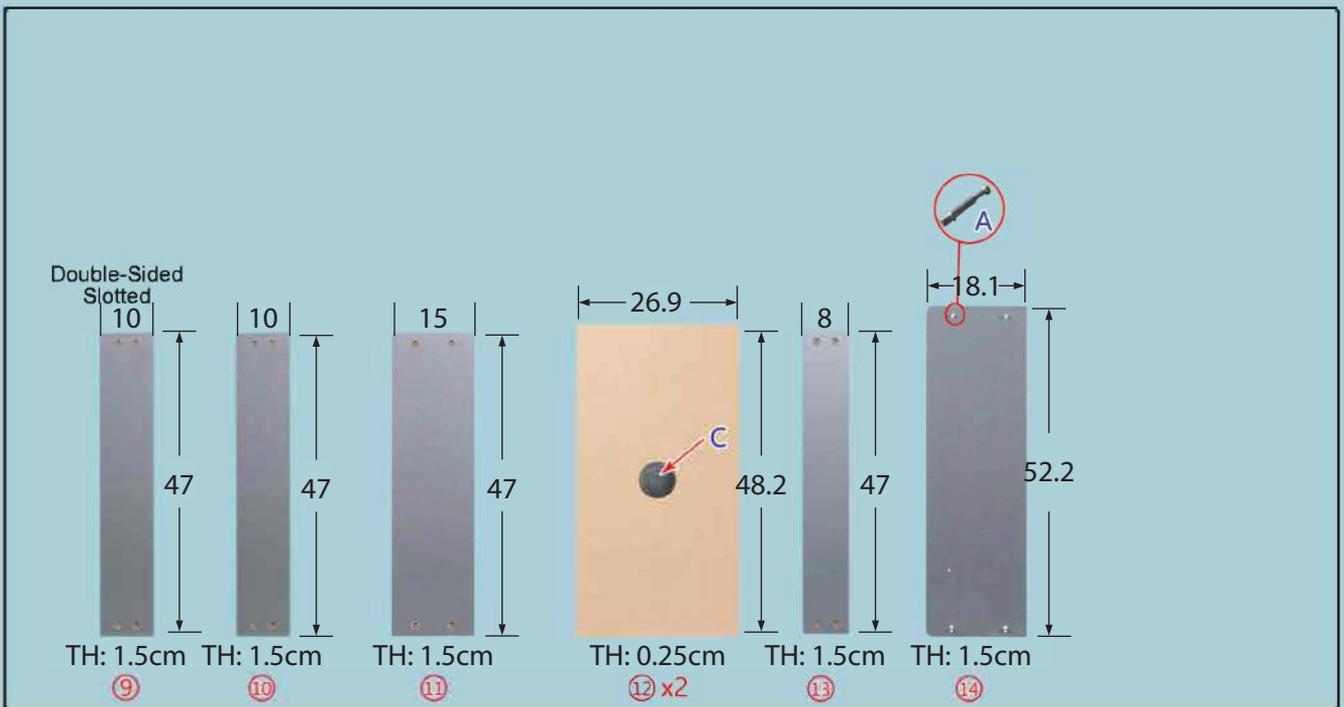

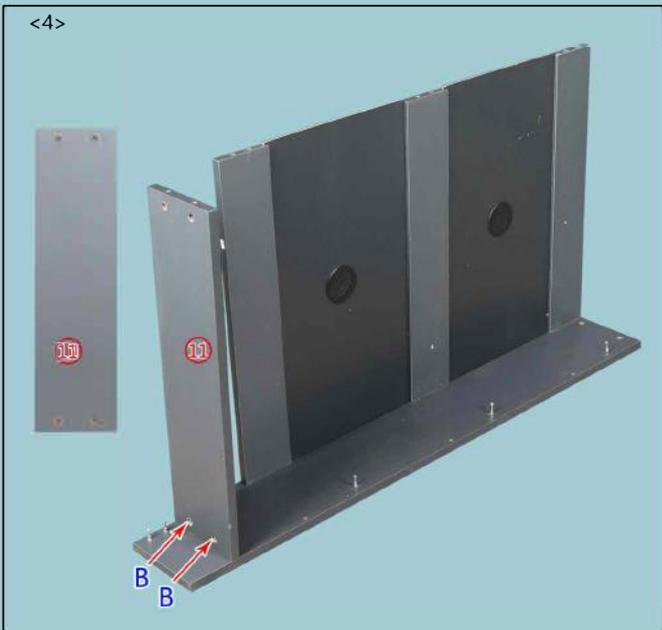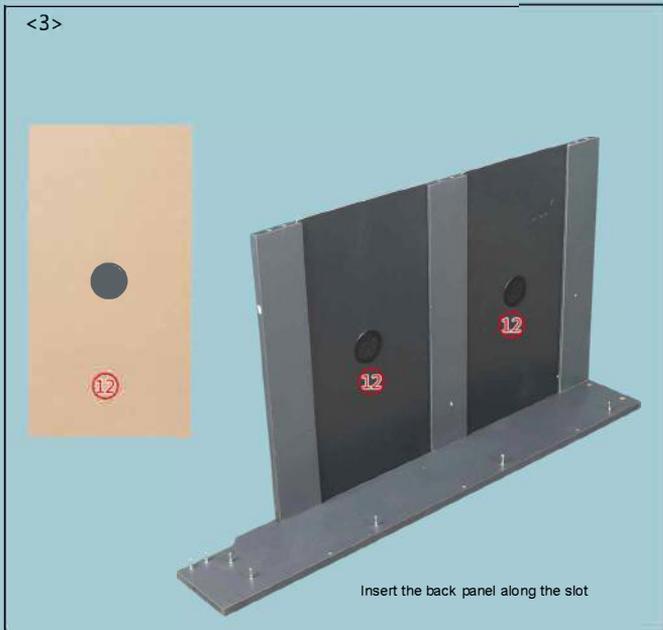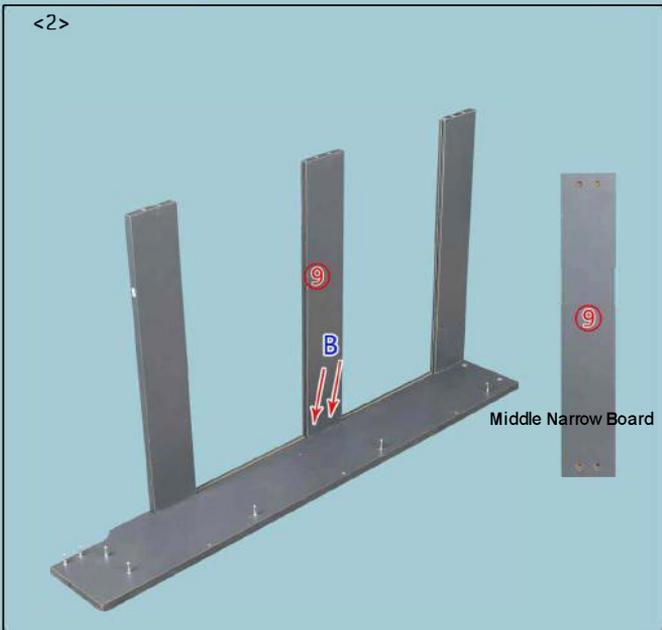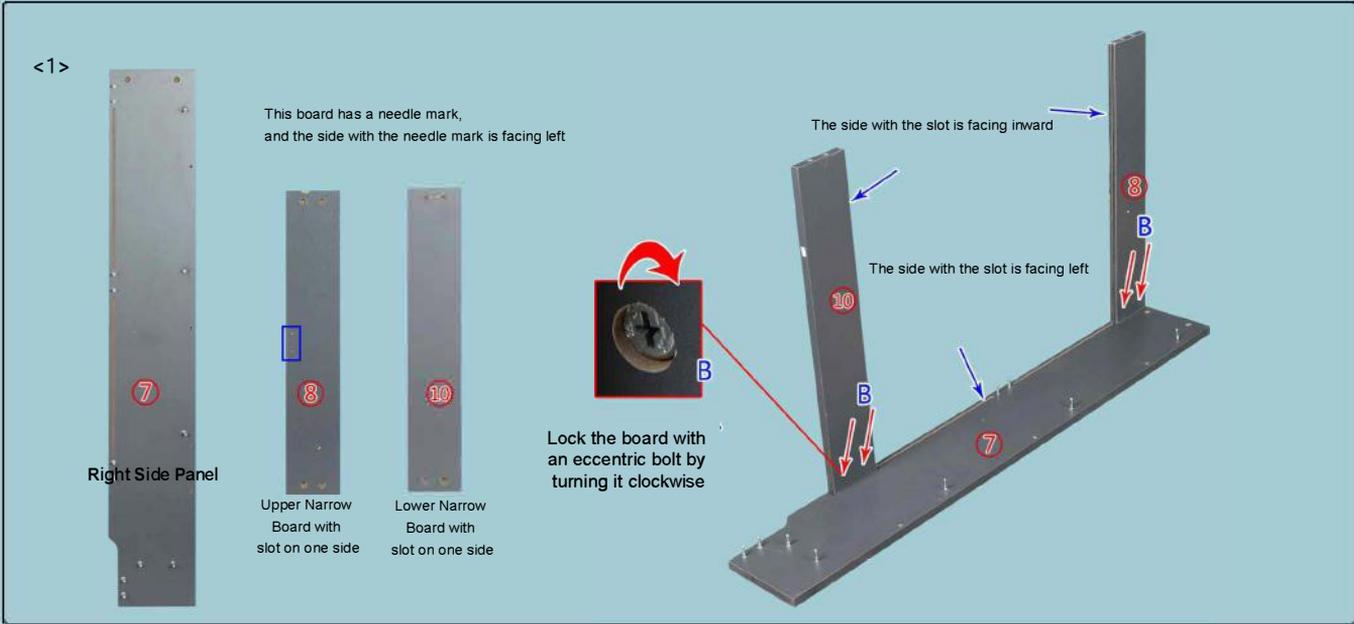

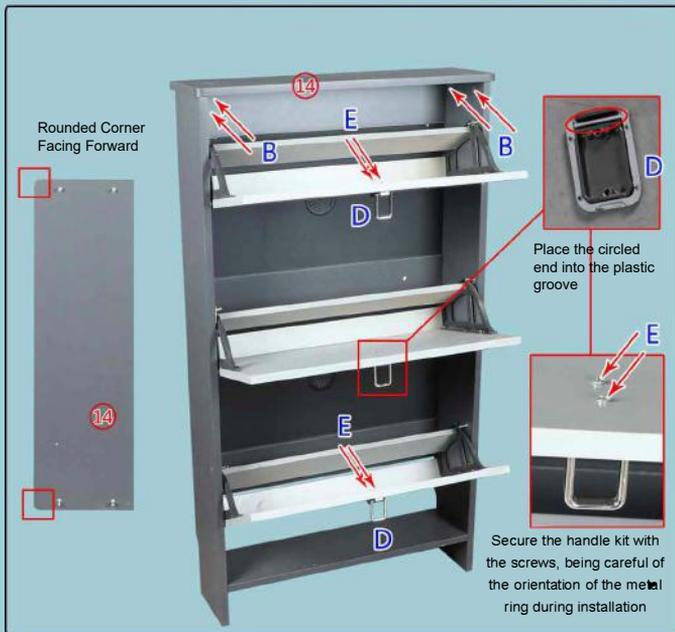

Installation method for the anti-tip device: There are needle marks on the upper narrow board, and the anti-tip device should be installed at the needle marks.

