

CC021-100CM Installation Instruction

A*40	B*40	C*46	D*4	E*8	F*5	G*7	H*40	I*2	J*2
Eccentric screw		Eccentric bolt	Minimum self-tapping screw	handle	handle screw	3CM flat head screw	Hinge	small nails	metal pin

Kind tips : Tighten the screws seven times when installing, Tighten it when you're all done!




Eccentric installation principle:

1	2	3
Screw the eccentric screw onto the board	Find the corresponding board to insert	
4	5	6
Insert the eccentric bolt into the round hole	Rotate 180° clockwise to lock the board	

installation steps:

Step 1: Drawer Part Installation

The diagram illustrates the assembly of the drawer parts. It shows the drawer front (1), two drawer side panels (2), the drawer bottom (3), and the drawer backslash (4). Red circles and arrows indicate the placement of eccentric bolts (A) and eccentric screws (B) into the side panels. A callout box shows an eccentric bolt being inserted into a hole in the side panel with the instruction: "- Insert the eccentric bolt".

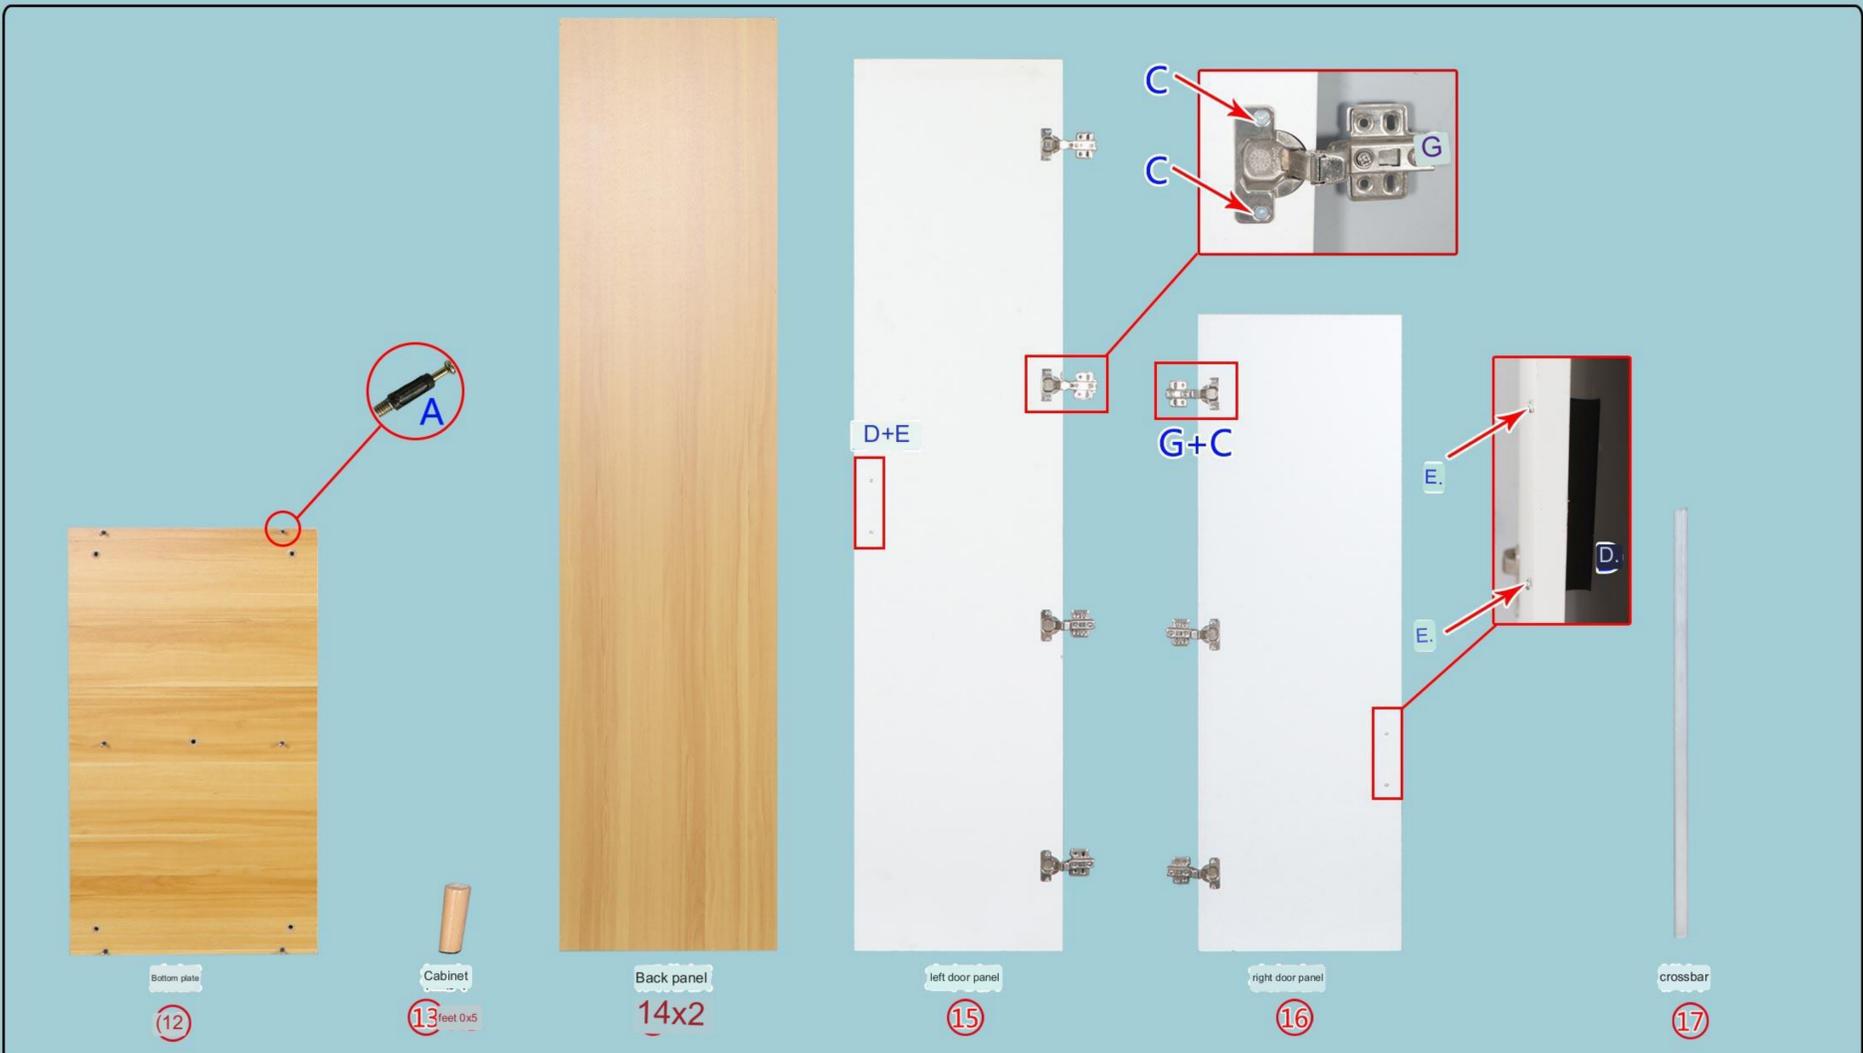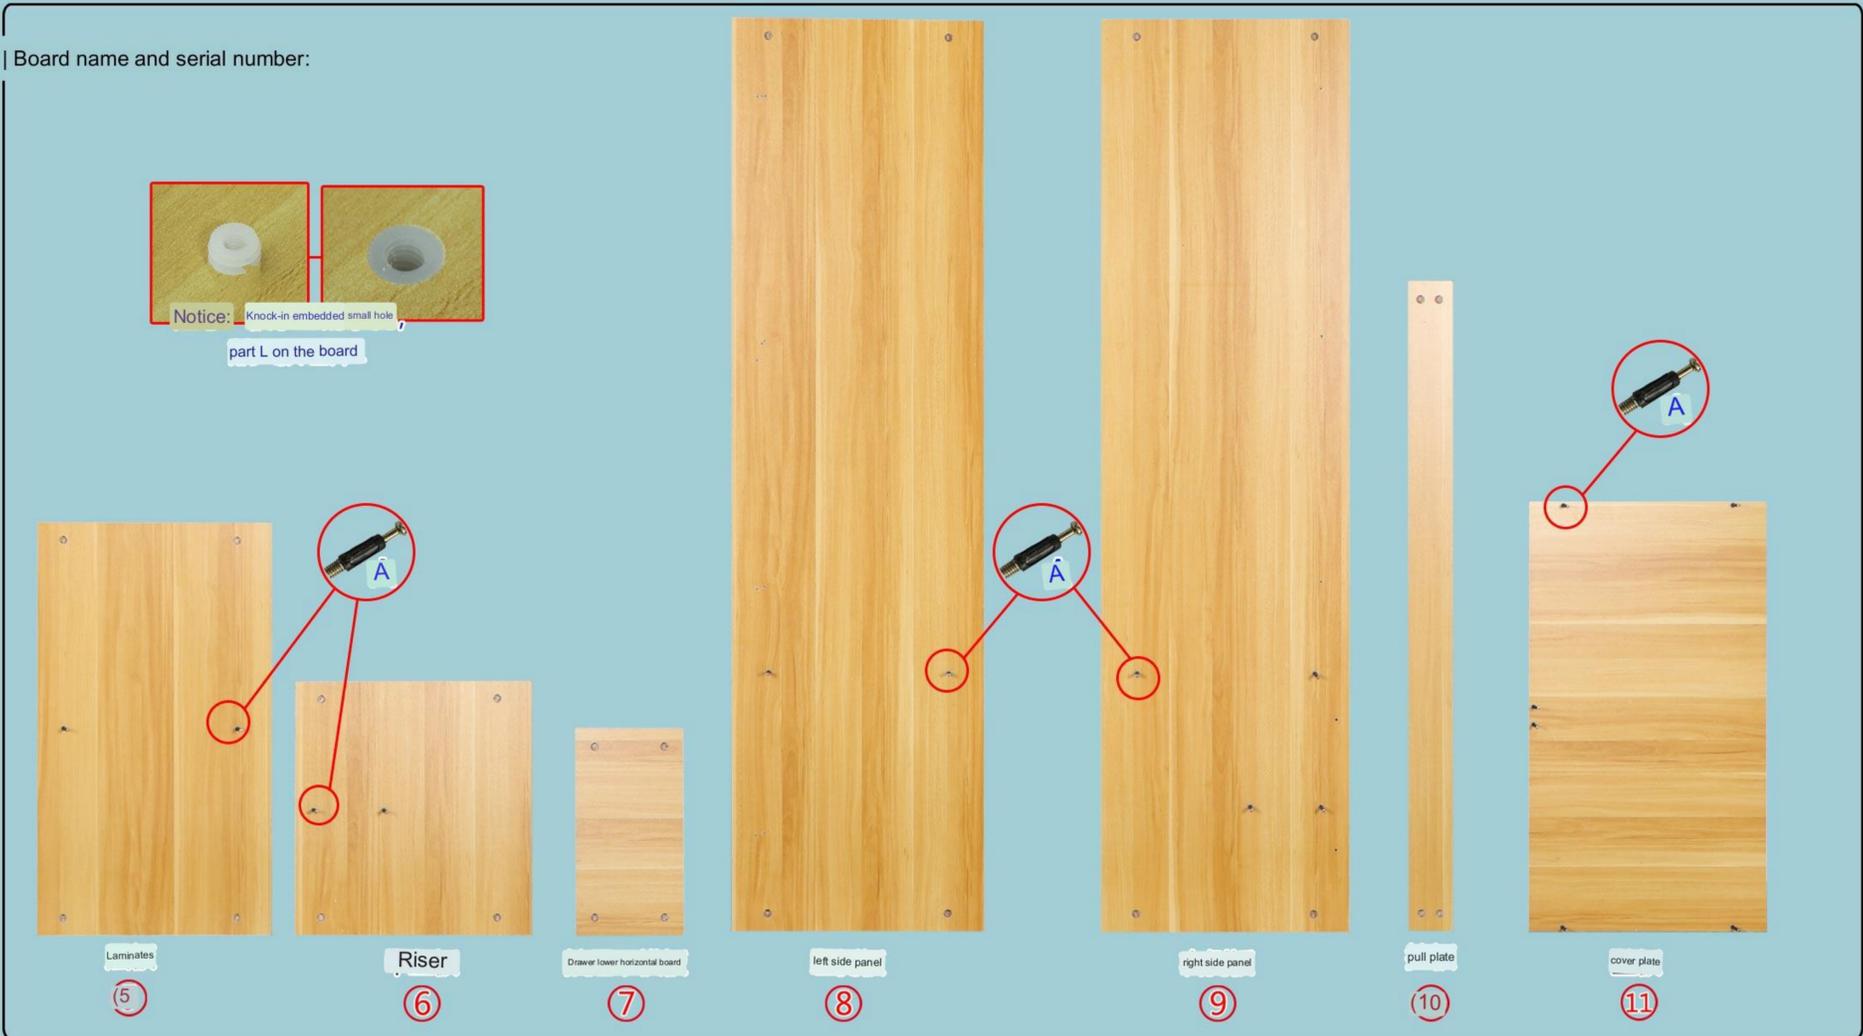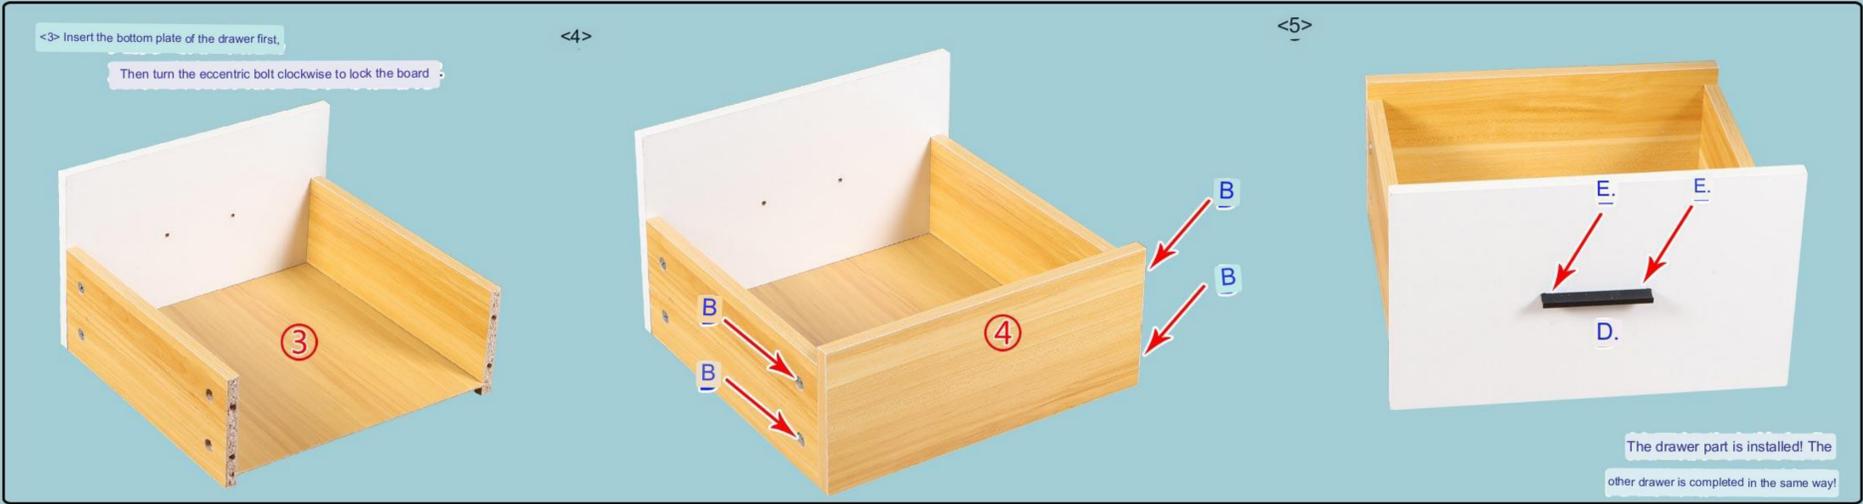

Step 2: Whole Parts Installation


<1>




laminate



Riser

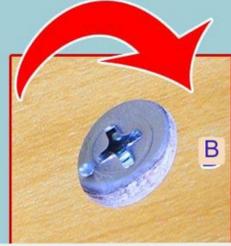

Turn the eccentric bolt clockwise to lock the board

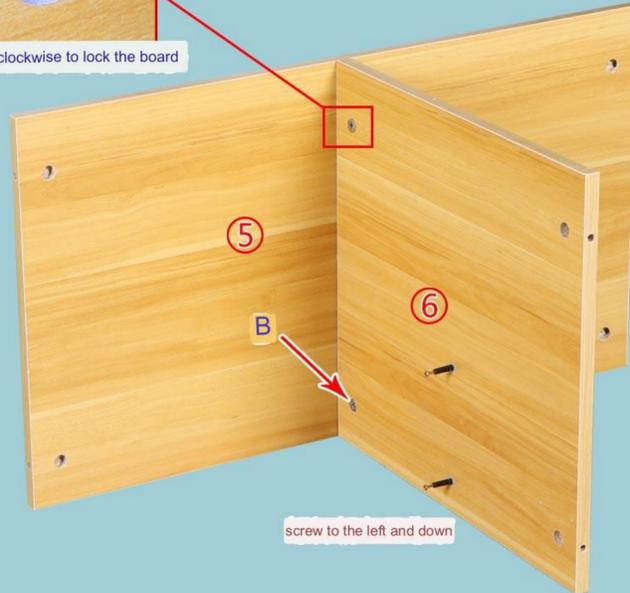

screw to the left and down

<2>



Drawer lower horizontal board



<3>




left side panel



right side panel

Small hole facing right and down front

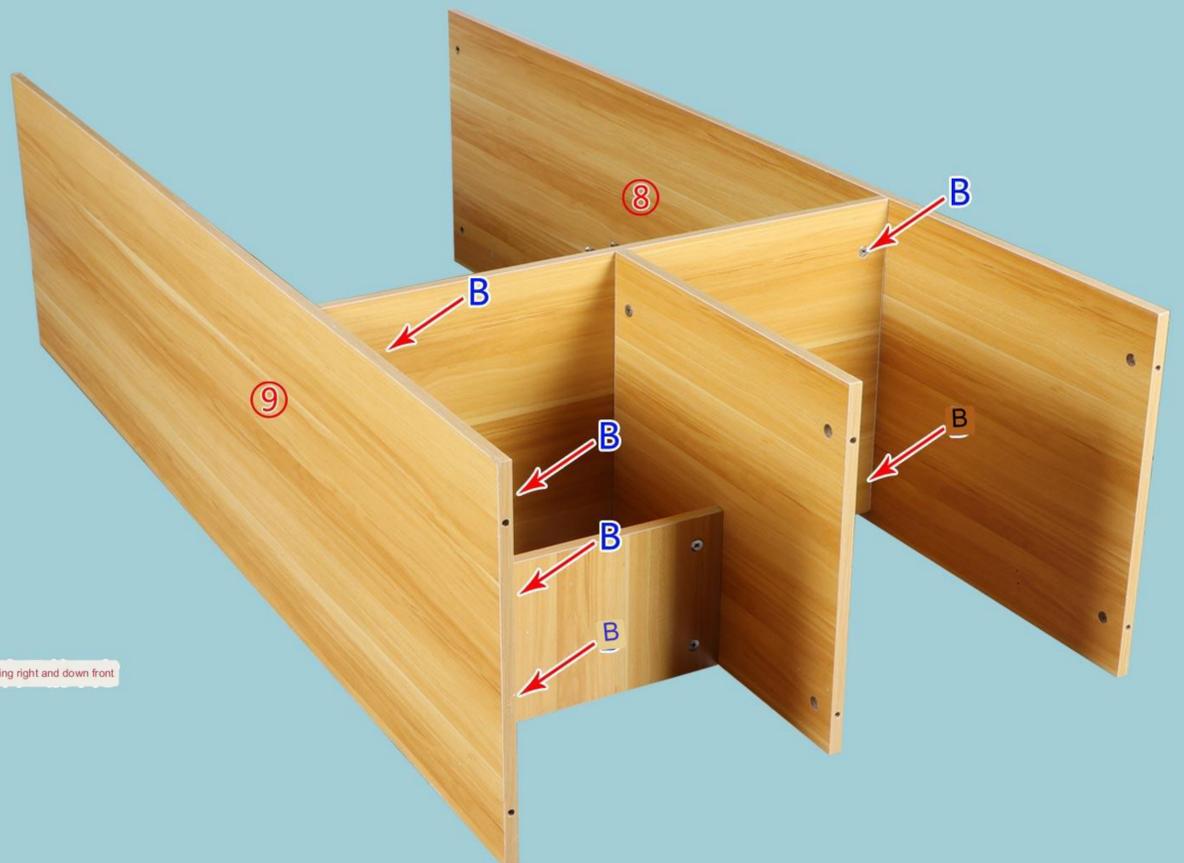


<4>

Pay attention to let your dear friends support you!




pull plate

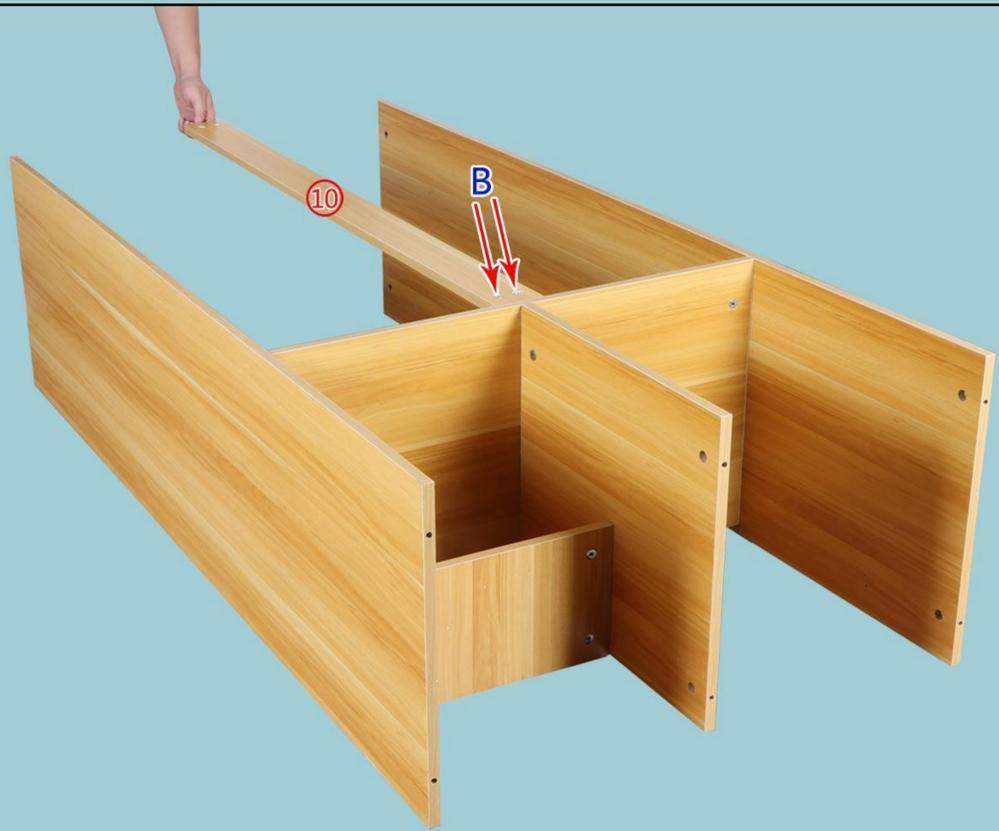

<5>



cover plate

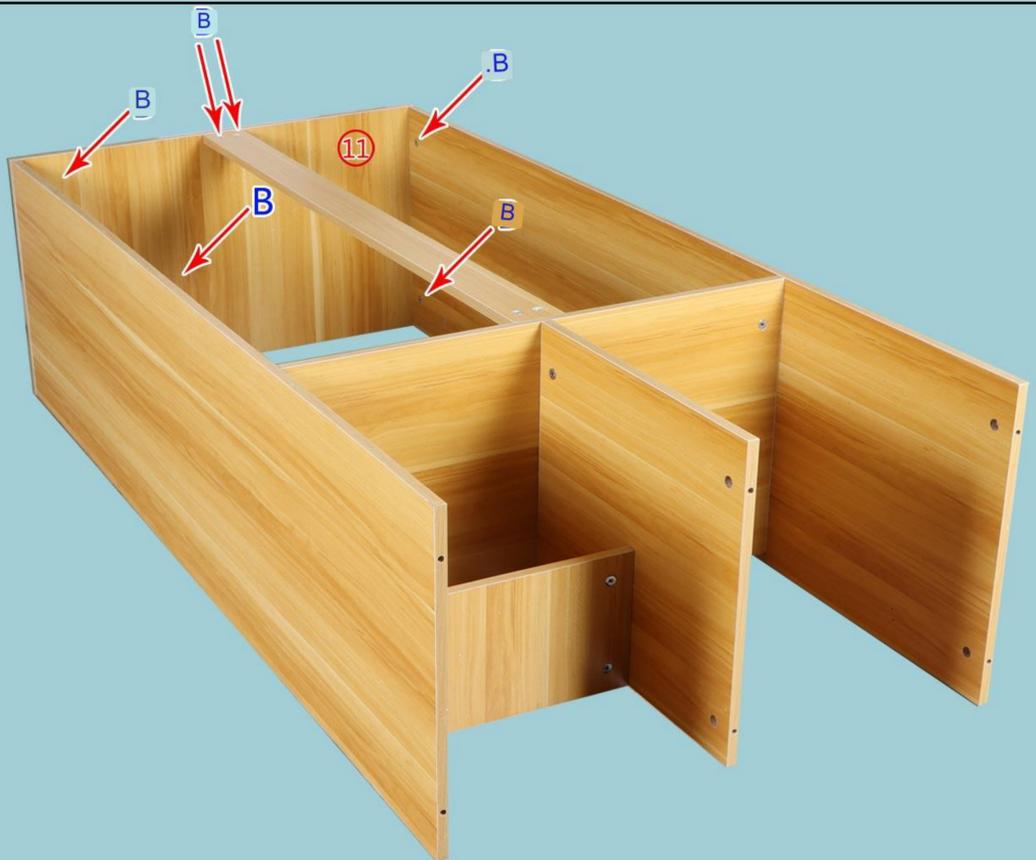

<6>




Bottom plate




Cabinet feet (five in total)

Note that the screws are screwed in from the side of the large hole, and the cabinet feet are eight on the left and right.

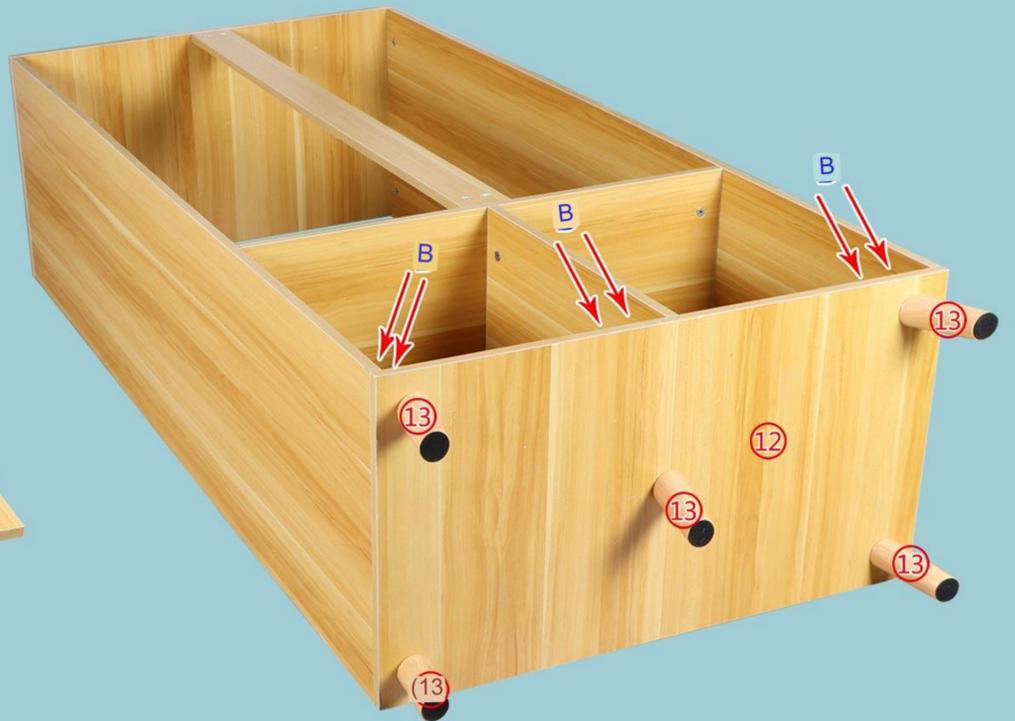


<7>


Before installing the back panel, use a tape measure to measure whether the lengths of the diagonal lines are the same. If the lengths are inconsistent, force the diagonals inward at the same time so that the length of the diagonal lines is consistent and the diagonal lines are equal. After the cabinet is square, install the back panel to avoid large door gaps and products. tilt

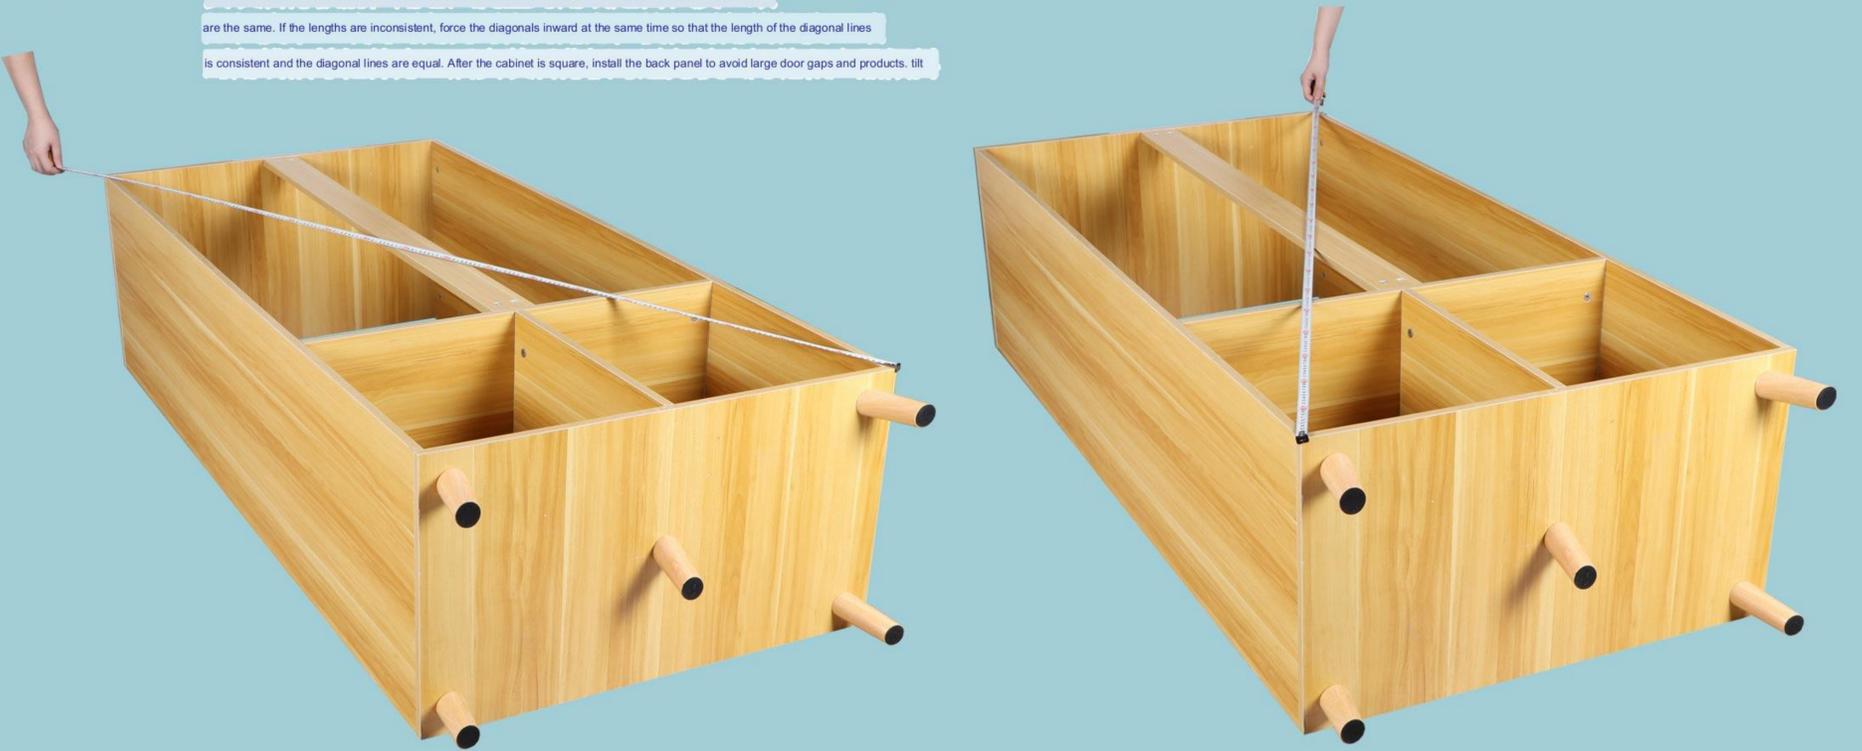

<8>

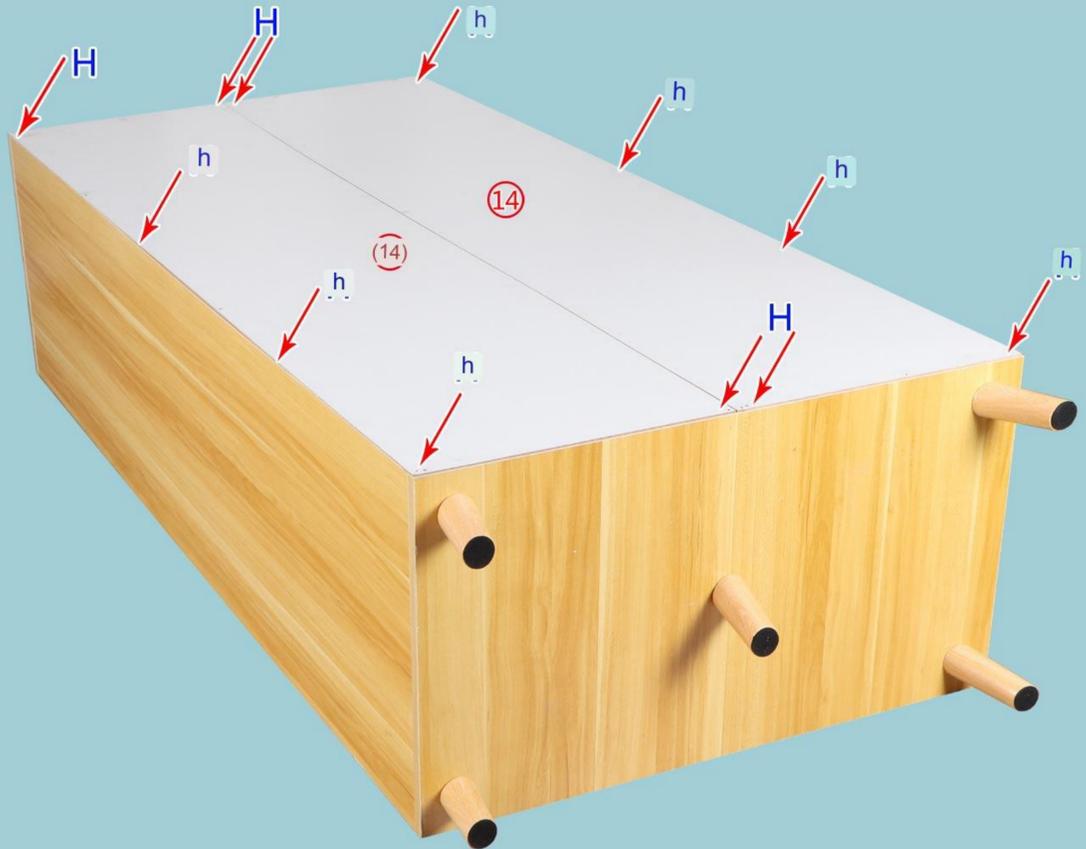

<9> straighten the whole

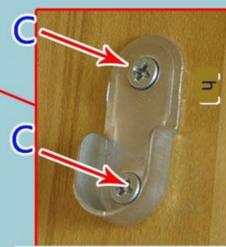

1. Find a suitable position, fix the clothes holder with the smallest self-tapping screw, pay attention to the flushness on both sides




2. Put the crossbar



door adjustment

The door gap is too large

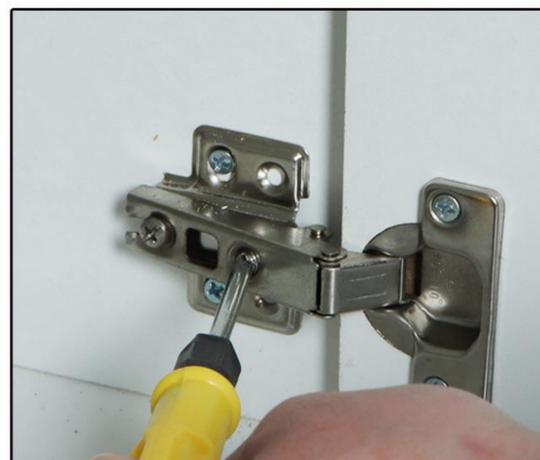


As shown in the figure, the screw that the screwdriver points to,

It is to adjust the left and right movement of the door

panel, and the clockwise rotation is to adjust the door panel to move to the middle.

The gap between the door panel and
the side panel is too large

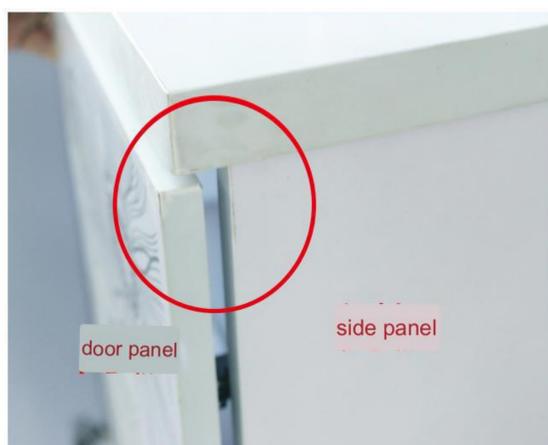




As shown in the picture, loosen the screw pointed by the

screwdriver, push the door panel in or pull it out, and then

tighten it to solve the above problem.

The height of the door

panel is uneven

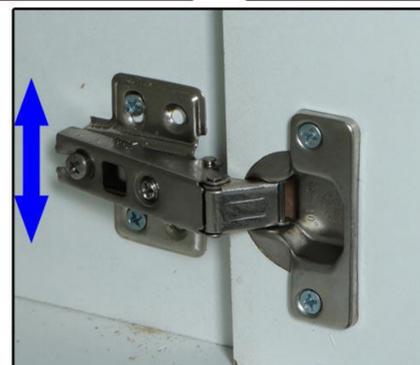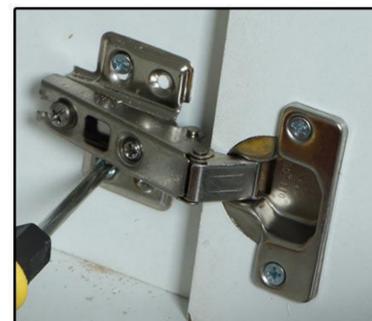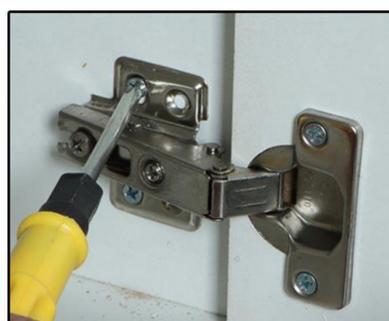

As shown in the picture, loosen the screw pointed

by the screwdriver, push the lower door panel and hinge upward, and then tighten

the screw. Push the higher door panel and hinges down and tighten the screws.